

SE416 METAL TOP



SE416 CANVAS TOP



SE416 5DR

INFORMACION GENERAL

Este Catálogo de Recambios comprende todas las piezas relativas a los vehículos VITARA 3 Puertas, 8 y 16 válvulas y VITARA 5 Puertas, modelos del año '96

Estos modelos tienen varias especificaciones dependiendo del grado de combinación de color, mercado, etc. Todas estas piezas están recogidas en este Catálogo.

Para una más fácil y exacta localización de una determinada pieza consultar el índice de figuras, indice de piezas y notas en columna de observaciones de este Catálogo.

En la columna de observaciones puede también indicarse el número de motor o chasis, a partir del cual tiene efecto una determinada modificación o cambio de pieza. Para una exacta determinación de la pieza, consulte el número de chasis grabado en la placa de características situada en el vehículo según se indica.

1.- SITUACION DE LA PLACA DE CARACTERISTICAS

Placa de Características

2.- INFORMACION EN LA PLACA DE CARACTERISTICAS

Básicamente, existen tres tipos de placas de características para los vehículos VITARA recogidos en este Catálogo:

MODELO TOLDO DE LONA 3 P.16 VAL

| SANTA | NA-MOTO | OR, S | 5.A. |
|---------|---------|-------|------|
| | | | 1 |
| * VSEET | V02001 | | 2 |
| | 1500 | Kg | 3 |
| | 2950 | Kg | 4 |
| 1- | 710 | Kg | 5 |
| 2- | 900 | Kg | 6 |
| | | | |

MODELO TECHO METALICO 3 P.16 VAL

| SANTANA-MOTOF | R, S.A. |
|---------------|---------|
| | 1 |
| * VSEETV02V01 | 2 |
| 1500 Kg | 3 |
| 2950 Kg | 4 |
| 1- 710 Kg | 5 |
| 2- 900 Kg | 6 |

^{*}El octavo dígito pasa a ser «1» en modelos de 8 válvulas.

VSEETVO3VD1/110,006

 
MODELO 5 PUERTAS

| SANTA | NA-MOTOR, | S.A. |
|--------|-----------|------|
| | | 1 |
| VSEETW | /01V01 | 2 |
| | 1650 Kg | 3 |
| | 3150 Kg | 4 |
| 1- | 750 Kg | 5 |
| 2- | 1000 Kg | 6 |

- 1.- Contraseña de Homologación.
- 2.- Número de Identificación Vehículo.
- 3.- Peso Máximo Admisible.
- 4.- Peso Máximo en Conjunto.
- 5.- Peso Máximo en Primer Eje.
- 6.- Peso Máximo en Segundo Eje.

3.- NUMERO DE SERIE DE MOTOR

El número de serie de motor está grabado en la parte baja del mismo, según se indica.



situación de la grabación del nº motor

4.- DIMENSIONES

Las dimensiones de piezas en este Catálogo se indican en milímetros.

5.- ABREVIATURAS

Las abreviaturas usadas en este catálogo son las siguientes:

| A AH AM AR ASSY | : | Amperio Amperio/Hora Amplitud modulada Lo requerido Conjunto Transmision automática | LHD MT N/ ND NGK N° | : | Volante a la izquier. Transmisión manual No NIPPONDENSO Bujia de NGK Numero |
|-----------------------------|---|---|------------------------------------|---|--|
| BRKT | : | Soporte | NT | : | Numero de dientes |
| BS | : | Llanta de BRIDGESTONE | OD | : | Diametro externo |
| COLPS | : | Desmontable | O/D | : | Supermarcha |
| COMB | : | Combinado | OHTSU | : | Llanta de OHTSU |
| CTR | : | Centro | OPNG | : | Apertura |
| D | : | Diámetro | OPT | : | Opcional |
| DF | : | Faro antiniebla | PCV | : | Ventilacion positiva |
| DIFF | : | Diferencial | QTR | : | Cuarto |
| DMR | : | Reductor de intensidad de faros | R | : | Lado derecho |
| DR | : | Puerta | REV | : | Marcha atras |
| E.L.R | : | Levantador del cierre | RH | : | Lado derecho |
| | | para emergencia | RHD | : | Volante a la derecha |
| E.N°. | : | Número de motor | RR | : | Posterior |
| EXC | : | Excepto | RSV | : | Reserva |
| FL | : | Piso | SPNSN | : | Suspensión |
| FLEX | : | Flexible | STD ROOF | : | Techo standard |
| FLTR | : | Filtro | STD | : | Standard |
| ĘΜ | : | Frecuencia modulada | SYNC | : | Sincronizado |
| ∦Ē.Ν° | : | Número de bastidor | T | : | Espesor |
| /FR | : | Delante | TACH | : | Tacometro |
| F5 | : | Cambio de la transmisión en | TEMP | : | Temperatura |
| | | piso; 5 velocidades | US | : | Submedida |
| GAS | : | Gasolina | VIN | : | Num. Identificacion |
| H/BK | : | Puerta trasera | | | del vehículo |
| HR | : | Hora | W | : | Ancho |
| HSG | : | Caja, envoltura | W/ | : | Con |
| ID | : | Diámetro interno ó | & | : | Y |
| - | | identificacion | 1ST | : | Primera |
| INR | : | Interno | 2ND | : | Segunda |
| JX | : | Grado de JX | 3DR | : | 3 Puertas |
| JLX | : | Grado de JLX | 3RD | : | Tercera |
| L | : | Longitud o lado izquierdo | 4TD | : | Cuarta |
| LCD | : | Exhibición de cristal líquido | 5DR | : | 5 Puertas |
| 'H | : | Lado izquierdo | 5TH | :, | Quinta |
| LSD | • | Diferencial autoblocante | . 1 | | |

~VSEETV02C01104521 VSEETV02C01104522~

Hasta el número de chasis VSEETV02C01104521 Desde el número de chasis VSEETV02C01104522

Los números en la columna de «Observaciones» muestran las dimensiones de las piezas como

se indica.

→12345-82001 (Número de pieza): Indica que el número de pieza cambió a 12345-82001 y que la pieza nueva es intercambiable con la vieja, pero la vieja no es intercambiable con la nueva.

← 12345-82001 (Número de pieza): indica que la pieza vieja y nueva son intercambiables mutuamente y ser pueden usar.

6.- PIEZAS INTERNAS DEL CONJUNTO

El número de pieza que se encuentra con una marca (.) antes del número de la misma, significa que la pieza pertenece al conjunto indicado más arriba.

7.- NOTICIA DE MODIFICACION

Remitiremos un boletín de modificación de piezas, incluyendo la intercambiabilidad entre las piezas nuevas y viejas.

8.- **NOTA**

- 8-1 Hay ciertas piezas de Recambios diferentes de aquellas utilizadas en los modelos de producción y que por razones administrativas aconsejan su utilización.
- 8-2 Los manguitos de goma y tubos de vinilo deben cortarse a la longitud indicada en la columna «Observaciones» de este Catálogo.
- 8-3 Los dibujos de las páginas de ilustración son para la rápida localización del número de pieza de recambios, y no para usarlos como manual de reparación o montaje. Para la reparación y montaje, use el MANUAL DE SERVICIO editado para estos modelos de vehículos.

9.- CODIGO DE ESPECIFICACION

Este catálogo contiene las piezas para los modelos codificados bajo las siguientes especificaciones comerciales o códigos de mercados.

Código de especificación: E-02, E-04, E-18, E-19, E-22 E-25,

E-29, E-34, E-39, E-41, E-53.

10.- V.I.N. DE VEHICULOS MODELO AÑO 96

A continuación se especifica el número de VIN de vehículos modelo año 96, para los que es necesario utilizar el presente catálogo de piezas.

VITARA 3 PUERTAS 8 VALVULAS-TECHO DE LONA-

A partir del VIN VSEETVO1C01102765 en adelante.

VITARA 3 PUERTAS 8 VALVULAS -TECHO METALICO-

A partir del VIN VSEETVO1V01101250 en adelante.

VITARA 3 PUERTAS 16 VALVULAS -TECHO DE LONA-

| Desde el VIN | VSEETV02C01104615 al | 104619 |
|--------------|----------------------|---------------------|
| Desde el VIN | 104699 al | 104778 |
| Desde el VIN | 104827 al | 104912 |
| Desde el VIN | 105092 al | 105214 |
| Desde el VIN | 105224 a | 105722 en adelante. |

VITARA 3 PUERTAS 16 VALVULAS-TECHO METALICO-

| Desde el VIN V | VSEETV02V01103941 al | .103943 |
|----------------|----------------------|---------------------|
| Desde el VIN . | 104104 al | 104235 |
| Desde el VIN . | 104261 al | 104287 |
| Desde el VIN | 104379 al | 104416 en adelante. |

Los vehículos con VIN anterior o que no estén comprendidos en los tramos indicados, corresponden a modelos anteriores al modelo 96 para los cúales debe utilizarse el catálogo de piezas 00000A01171.

VITARA 5 PUERTAS

A partir del VIN VSEETWO1V01100000 en adelante.

GENERAL INFORMATION


This Parts Catalogue covers all service parts for VITARA 3 Doors 8-16 valves and VITARA 5 Doors, models year '96.

These models have various specifications with the combination of grade, intended market etc.., and all of those related parts are compiled in this catalogue.

For easier and exact reference of parts required for a certain vehicle, various mark are put in the remarks column of this catalogue.

By referring to this remark, engine serial number of the vehicle and the information given in the model Identification Plate, which is provided for each vehicle in the location as illustrated below, exact parts required can be located.

1.- LOCATION OF THE MODEL IDENTIFICATION PLATE

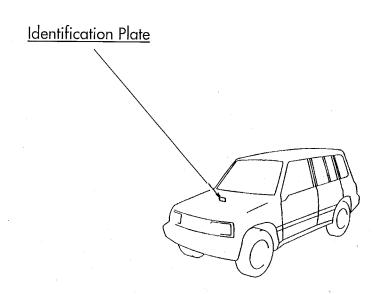

2.- INFORMATION IN THE IDENTIFICATION PLATE

There are the following types of Identification Plate:

CANAVAS TOP MODEL, 3 DR. 16 VAL

| 0.4.5.17.4 | | | - · · | | |
|------------|---------------------|----|-------|--|--|
| SANIA | SANTANA-MOTOR, S.A. | | | | |
| | | | 1 | | |
| * VSEET | V02001. | | 2 | | |
| | 1500 | Kg | 3 | | |
| | 2950 | Kg | 4 | | |
| 1 - | 710 | Kg | 5 | | |
| 2- | 900 | Kg | 6 | | |

METAL TOP MODEL - 3 DR. 16 VAL

| SANTAI | TOM-AP | OR, S | S.A. |
|---------|--------|-------|------|
| | | | 1 |
| * VSEET | /02V01 | | 2 |
| | 1500 | Kg | 3 |
| | 2950 | Kg | 4 |
| 1- | 710 | Kg | 5 |
| 2- | 900 | Kg | 6 |

^{*}The eighth digit becomes "1" in 8 valves model.


5 DOORS MODEL

| SANTA | NA-MO | FOR, S | 3.A. |
|----------------|---------|--------|------|
| | | ,,,,, | 1 |
| VSEET V | V01V01. | | 2 |
| | 1650 | Kg | 3 |
| | 3150 | Kg | 4 |
| 1- | 750 | Kg | 5 |
| 2- | 1000 | Kg | 6 |

- 1.- Homologation countersing.
- 2.- Vehicle Identification Number (17 digits).
- 3.- Maximun Weight.
- 4.- Maximun Weight with tow.
- 5.- Maximun Weight Front axle.
- 6.- Maximun Weight rear axle.

3.- ENGINE SERIAL NUMBER

Engine Serial Number is provided in the location ilustrated below.

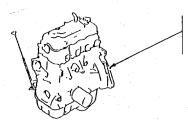

Location of punched engine serial number.

4.- DIMENSIONS

Dimensions of the parts in this catalogue are indicated in unit millimeters.

5.- ABBREVIATIONS

Abbreviations used in this catalogue are as follow:

| Α | : | Ampere | MT | | Manual Transmission |
|-------|-----|---------------------------|-----------|----|-------------------------------|
| AH | : | Ampere/Hour | N/ | | Non |
| AM | : | Amplitude Modulation | ND | | NIPPONDENSO |
| AR | : | As Required | NGK | | NGK spark Plug |
| ASSY | : | Automatic Transmission | N° | | Number |
| BRKT | : | Bracket | NT | | Number of teeth |
| BS | : | BRIDGESTONE tire | OD | • | Outside Diameter |
| COLPS | : | Collapsible | OHTSU | | OHTSU tire & rubber |
| COMB | : | Combination | OPNG | | Opening |
| CTR | : | Center | OPT | | Optional |
| d | : | Diameter of Material | OS | : | Over side |
| DF | : | Defogger | PCV | | Positive Crankase ventilation |
| DIFF | : | Differential | QTR | | Quarter |
| DMR | : | Dimmer | R | • | Right hand side |
| DR | • | Door | REV | | Reverse |
| E.L.R | · | Emergency Lock Retractor | RH | | Right hand side |
| E.N°. | • | Engine Number | RHD | • | Right hand drive |
| EXC | | Except | RR | : | Rear |
| FL | | Floor | RSV | • | |
| FLEX | : | Flexible | SPNSN | ٠ | Reserve |
| FLTR | : | Filter | STD ROOF | : | Suspension |
| FM | | Frecuency Modulation | STD ROOF | • | Standard roof |
| F.N° | | Frame Number | SYNC | : | Standard |
| FR | • | Front | | • | Syncronizer |
| F5 | | Floor shift transmission, | TACH | • | Thickness |
| 10 | • | 5 speeds | TACH | • | Tachometer |
| GAS | | Gasoline | TEMP | : | Temperature |
| H/BK | : | Hatch Back | US | : | Under size |
| HR | • | Hour | VIN | : | Vehicle Identification Number |
| HSG | | Housing | W | : | Wide |
| ID | | Inside Diameter or | W/ | : | With |
| וט | • | Identification | & 1.CT | : | And |
| INR | | Inner | 1ST | : | First |
| JX | • | | 2ND | : | Second |
| JLX | • | JX grade | 3DR | : | 3 door |
| L | • | JLX grade | 3RD | : | Third |
| LCD | • | Length or hand side | 4TH | : | Fourth |
| LCD | : | Liquid Crystal Display | 5DR | : | 5 door |
| | ; | Left hand side | 5TH | :, | Fifth |
| LHD | : ` | Left hand drive | | | |

~VSEETV02C01104521

Up to VIN number VSEETV02C01104521

VSEETV02C01104521~

From VIN number VSEETV02C01104521

Figures in the description column show

the dimensions of parts.

 \rightarrow 12345-82001 (Part N°): Indicates that the part number was changed to 12345-82001 and the new part is interchangeable with the former one, but the former one is not interchangeable with the new one.

←12345-82001 (Part^o): Indicates that the former and new parts are interchangeable with each other and are usables.

6.- INNER PARTS OF ASSEMBLY

Parts number that have a period mark (.) in front of the description on a text, are separately serviced parts of the assembly.

7.- MODIFICATION NOTICE

A part bulletin will be sent to you on all occasions when changes in parts occur, including interchangeable modification between new parts and old ones.

8.- NOTE

- 8-1 There are some different parts from those of production models due to administrative reasons and common use with other models.
- 8-2 Rubber hoses and vinily tubes should be cut to size in accordance with information detailed in the part catalogue.
- 8-3 Note that the drawing on the illustration page are for ready reference of spare parts number and not to be used as an assembly manual.

When assembling, please refer to Suzuki Service Manual.

9.- SPECIFICATION CODE

This catalogue contains the parts for the model designed for the following specifications.

Specification code:

E-02, E-04, E-18, E-19, E-22, E-25, E-29,

E-34, E-39, E-41, E-53.

10.- MODEL YEAR '96 V.I.N. NUMBER

Hereunder VIN number are indicated corresponding to the VITARA model '96 for which this parts catalogue must be used.

VITARA 3 DOORS, 8 VALVES - CANVAS TOP -

From VIN VSEETVO1C01102765 onward

For earlier VIN number, refer to Parts Ctalogue 00000A01171.

VITARA 3 DOORS, 8 VALVES - METAL TOP -

From VIN VSEETVO1V01101250 onward
For earlier VIN number, refer to Parts Catalogue 00000A01171.

VITARA 3 DOORS, 16 VALVES - CANVAS TOP -

| From VIN VSEETV02C | 01104615 to | 104619 |
|--------------------|-------------|----------------|
| From VIN | 104699 to | 104778 |
| From VIN | 104827 to | 104912 |
| From VIN | | |
| From VIN | 105224 to | 105722 onward. |

VITARA 3 DOORS, 16 VALVES - METAL TOP -

| From VIN | VSEETV02V01 | 103941 1 | o | 103943 |
|----------|-------------|----------|----|----------------|
| | | | to | |
| From VIN | | 104261 | to | 104287 |
| From VIN | | 104379 | lo | 104416 onward. |

Those VIN number which are not within the indicated VIN range, correspond to another different models than the model year '96, for which the Parts Catalogue 00000A01171 must be used.

VITARA 5 DOORS

From VIN VSEETW01V01100000 onward.


COLOR CHART


CUADRO DE COLORS


| COLOR Nº. | COLOR DESCRIPTION | COLOR Nº. | COLOR DESCRIPTION |
|-------------|-----------------------|-------------|-----------------------|
| Nº.DE COLOR | DESCRIPCION DE COLOR | Nº.DE COLOR | DESCRIPCION DE CÓLOR |
| | | | |
| D9W | P96,5FE | 0CA | BLACK |
| D9Y | P95,R05,5FE | 0CE | BLACK (FULL GLOSS) |
| D9Z | P96,R04,5FE | 0DG | SATURN BLACK METALLIC |
| E0A | P95,5FE | 0FC | red (print) |
| E0W | P96,5FE | OFT | RED PEARL |
| EOY | P96,R04,5FE | 0PG | CHROME |
| EOZ | P95,R05,5FE | 064 | PURE WHITE |
| G78 | OCA,31R | 2UN | 5TP,064,OFC |
| G79 | 25R,31R | 2WE | 5EF,5ES |
| P47 | DARK CHARCOAL CARPET) | 25R | COOL PALE GRAY (TAPE) |
| P95 | WIND GRAY | 26U | SUPERIOR WHITE |
| P96 | WIND GRAY | 27S | SILVER METALLIC |
| RO4 | RAFFINE BLACK | 281 | black (non-gloss) |
| R05 | RAFFINE BLACK | 31R | SILVER |
| Y27 | URBAN GRAY | 38B | GRAY METALLIC |
| Y28 | SLD.RED | 40U | ADVENTURE BLACK |
| Y29 | PRL.GM SCUBA BLUE | 5EF | LIGHT GRAY |
| Y33 | DARK TURQUOISE | 5EG | LIGHT GRAY |
| Z01 | AQUA GREEN | 5EH | LIGHT GRAY (CLIP) |


| COLOR Nº. | COLOR DESCRIPTION | COLOR Nº. | COLOR DESCRIPTION |
|-------------|------------------------|-------------|---|
| Nº.DE COLOR | DESCRIPCION DE COLOR | Nº.DE COLOR | DESCRIPCION DE COLOR |
| | | | |
| 5EK | DARK CHARCOAL (CARPET) | | e. |
| 5ES | OFF BLACK | | |
| 5EZ | LIGHT GRAY (CARPET) | | |
| 5FB | LIGHT GRAY | | |
| 5FE | OFF BLACK (LEATHER) | | |
| 5FJ | OFF BLACK (BELT) | | |
| SGF | DARK GRAY | | |
| 5PK | BLACK | | |
| STP | BLACK | | |
| 5UN | LIGHT GRAY (FLOCKY) | | · |
| 55M | EXCELLENT BLACK | | |
| 6EP | SUPER WHITE CANVAS | | |
| 6ER | SUPER WHITE CANVAS | | |
| 6MA | LIGHT GRAY | | |
| 6NG | LIGHT GRAY | | |
| . 799 | PRIMARY | | 1 - 1 - 1 - 1 - 1 - 1 - 1 - 1 - 1 - 1 - |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |


INDICE - INDEX

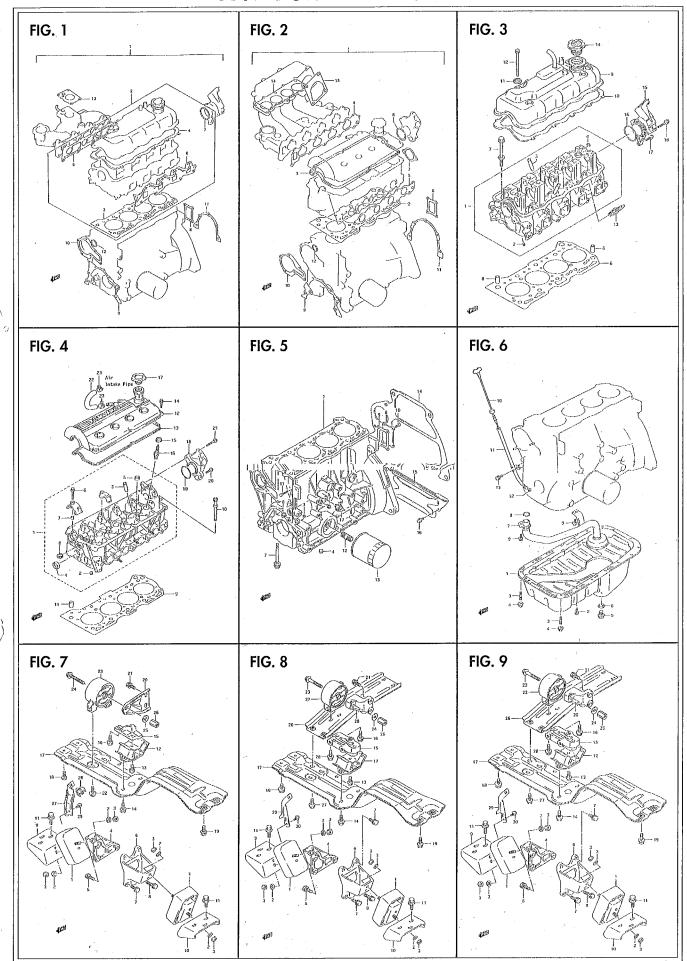


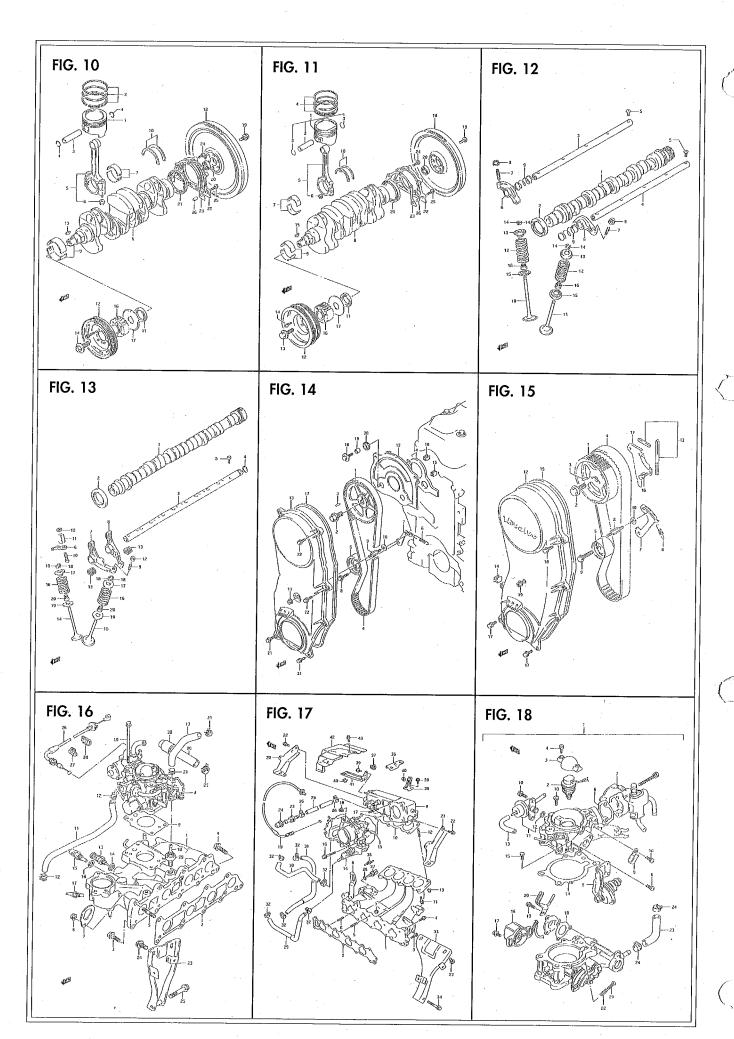


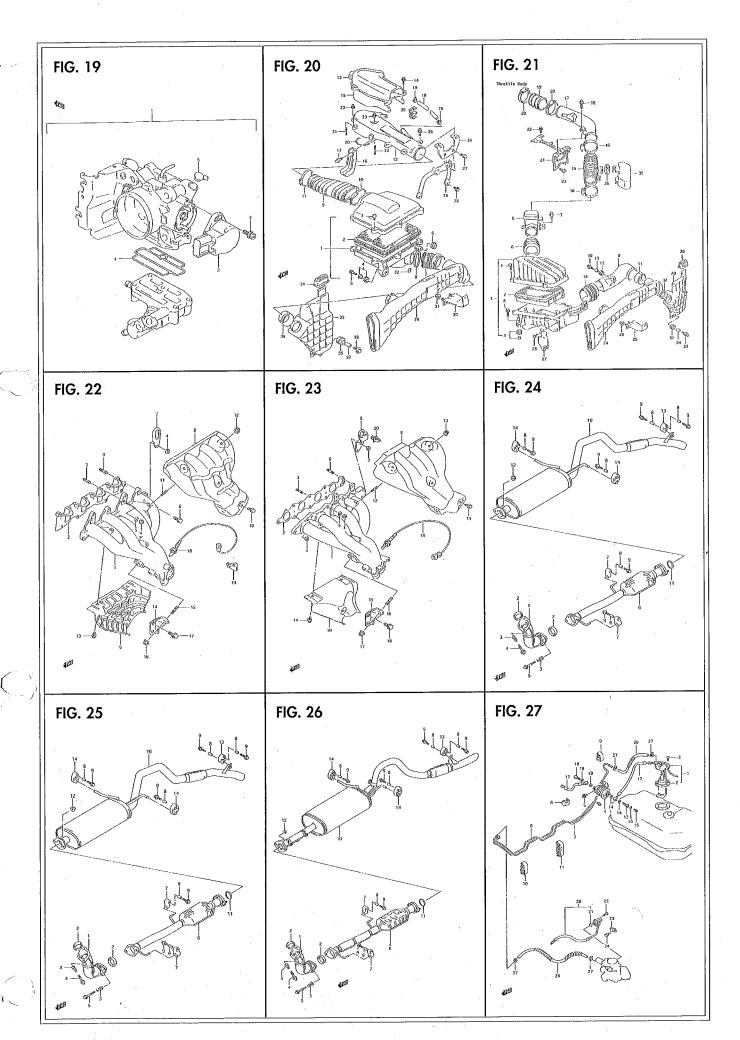


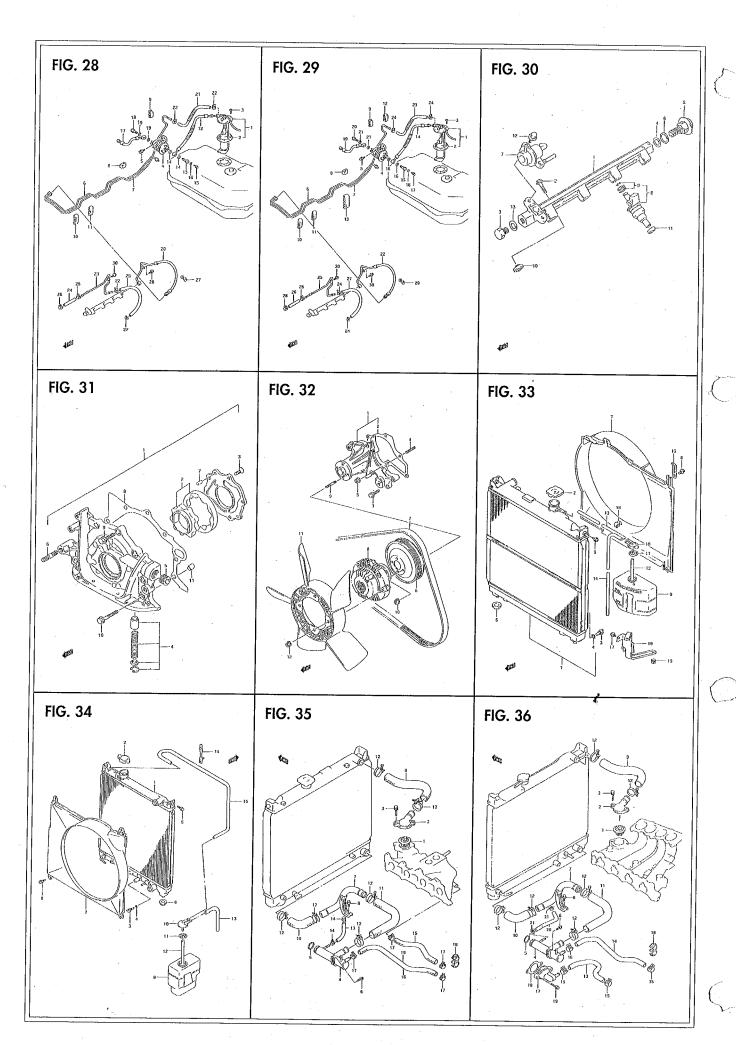


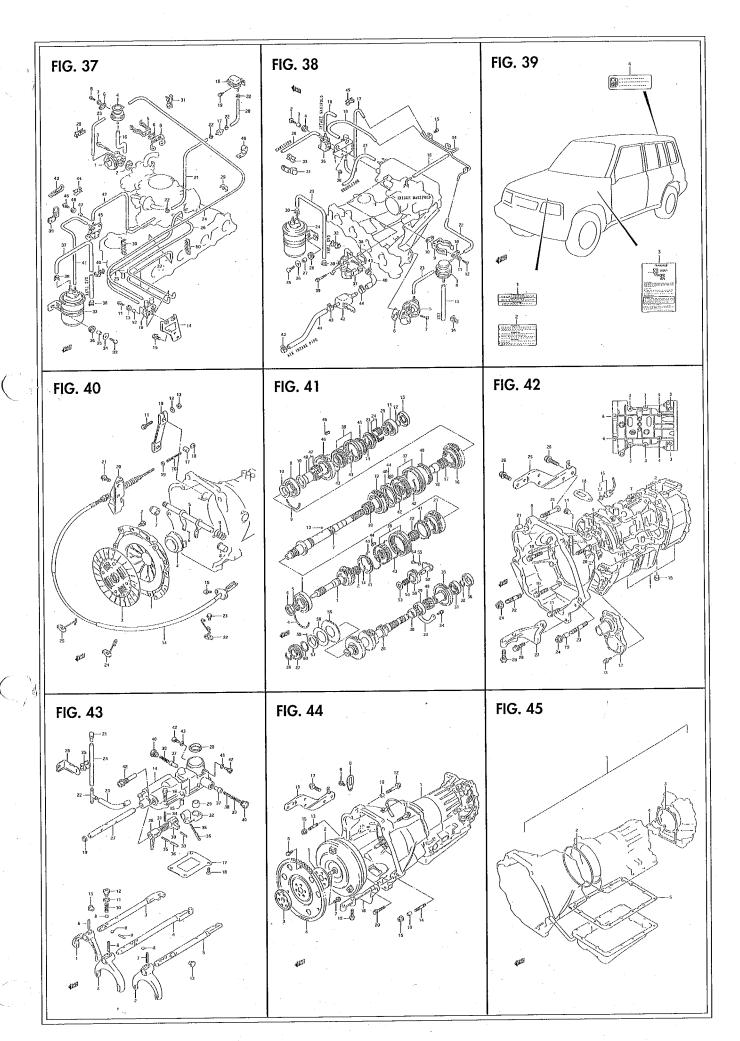


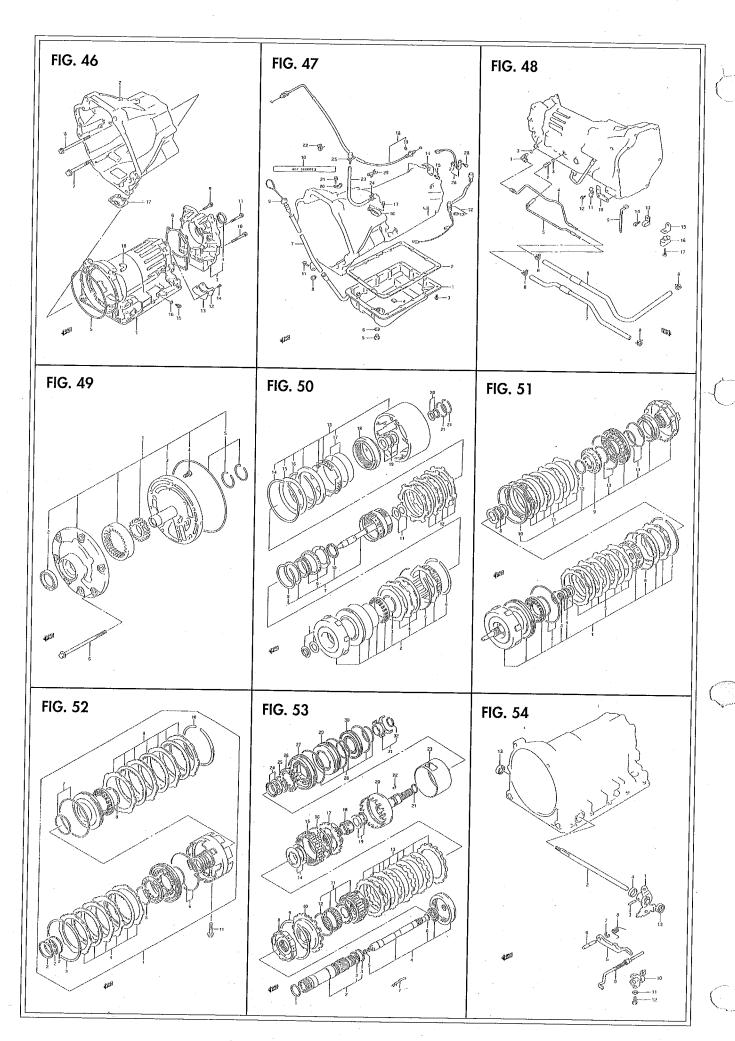


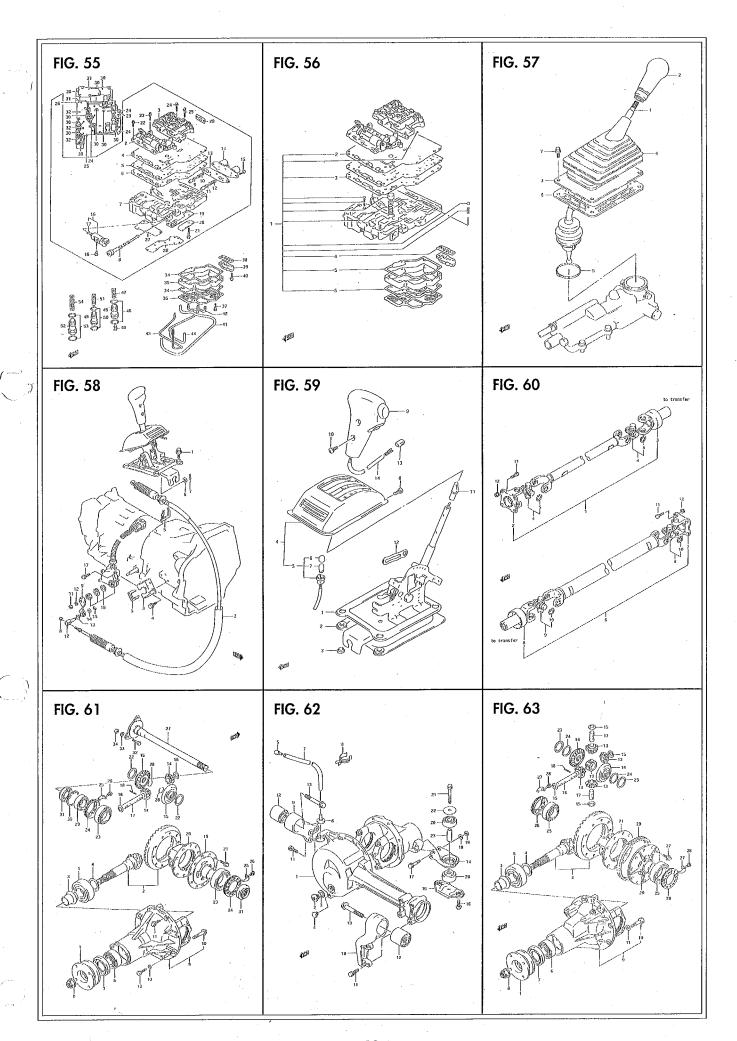


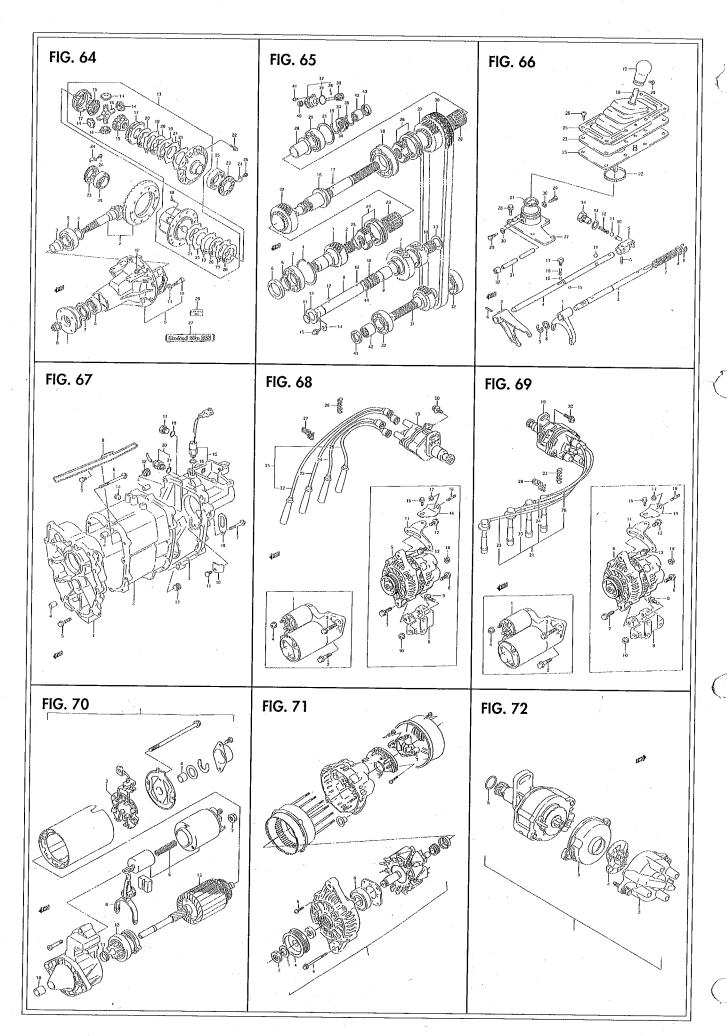


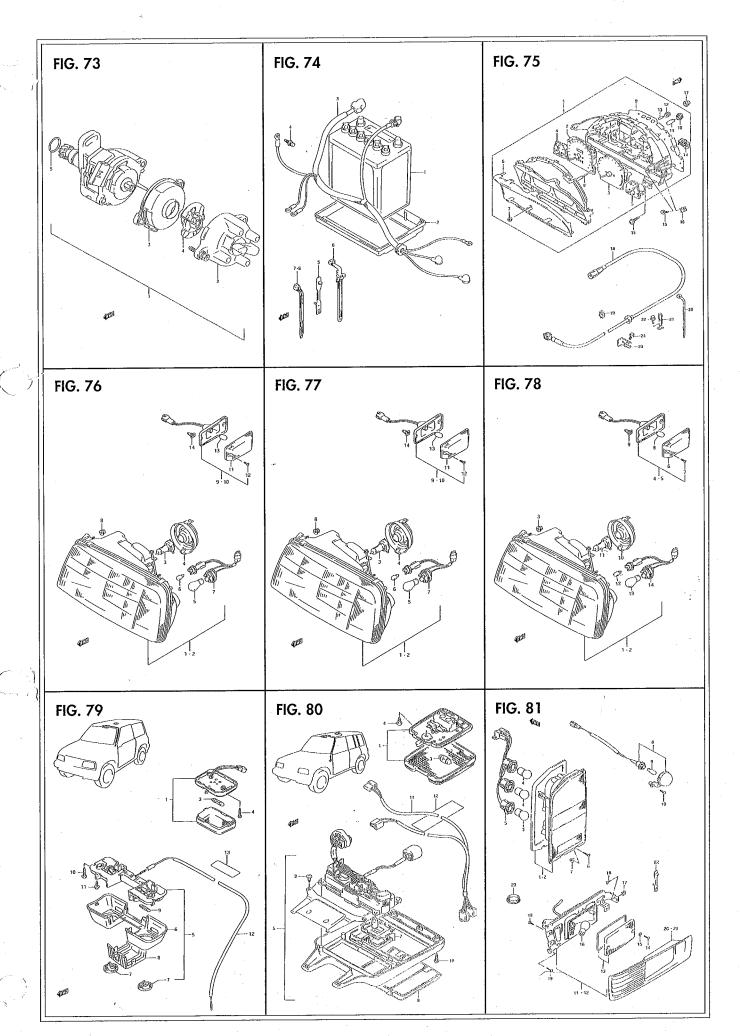


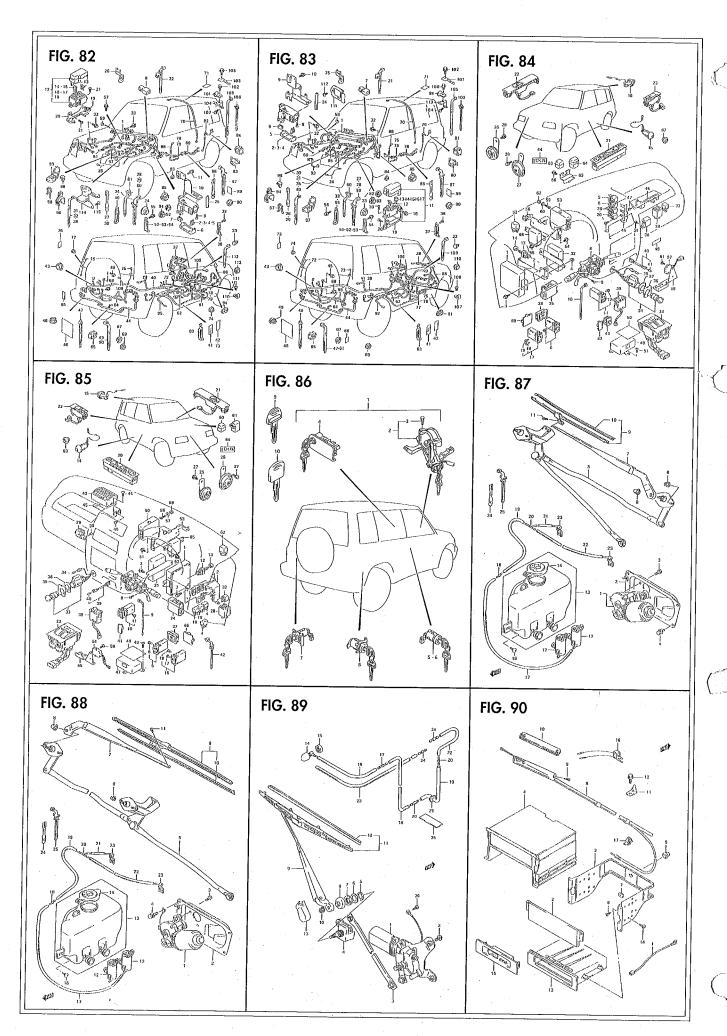


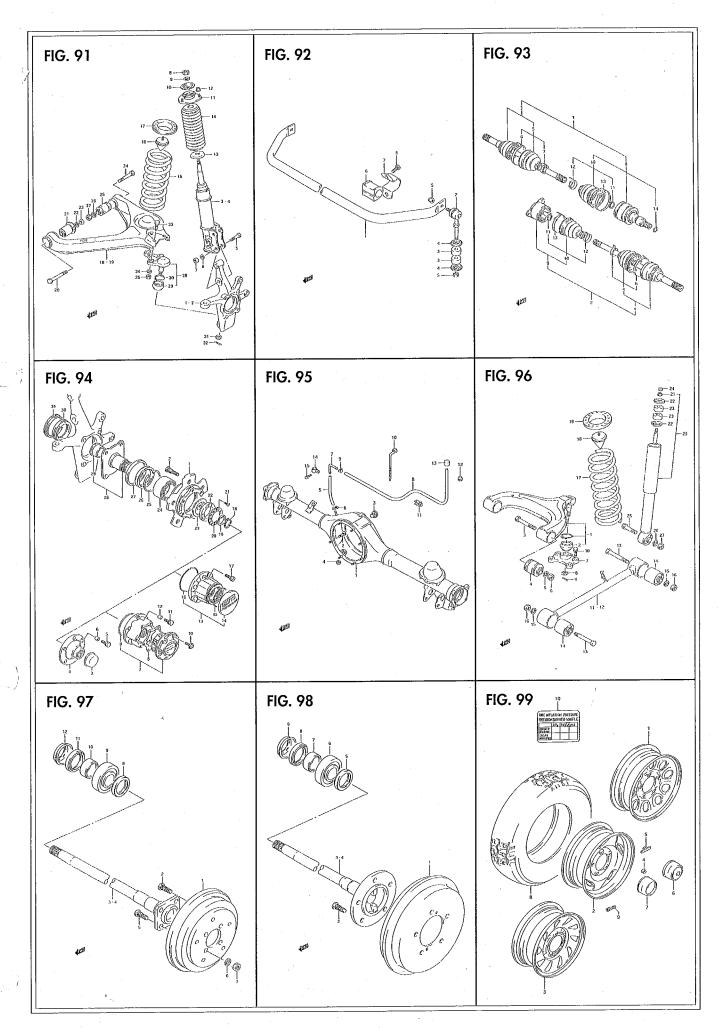


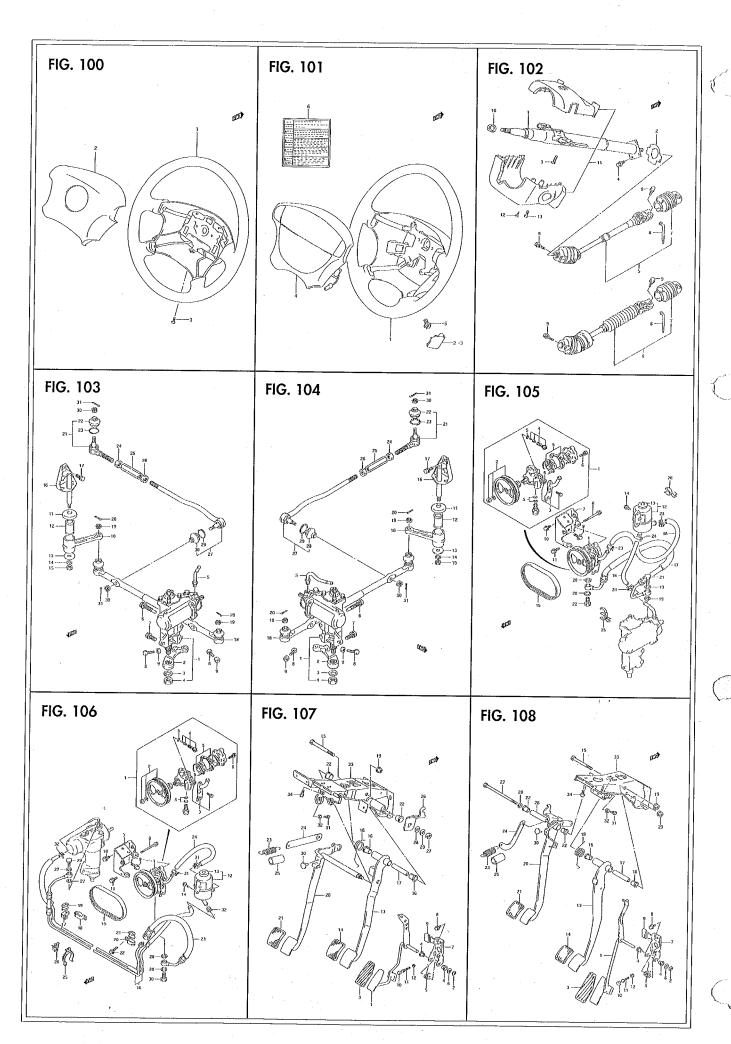


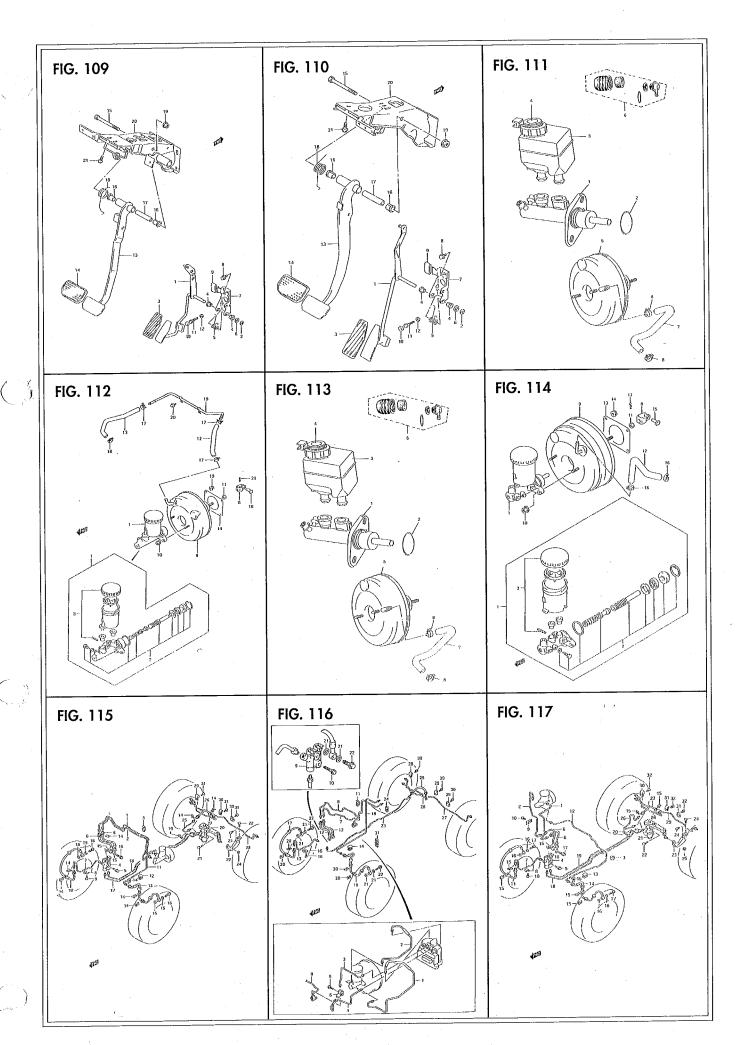


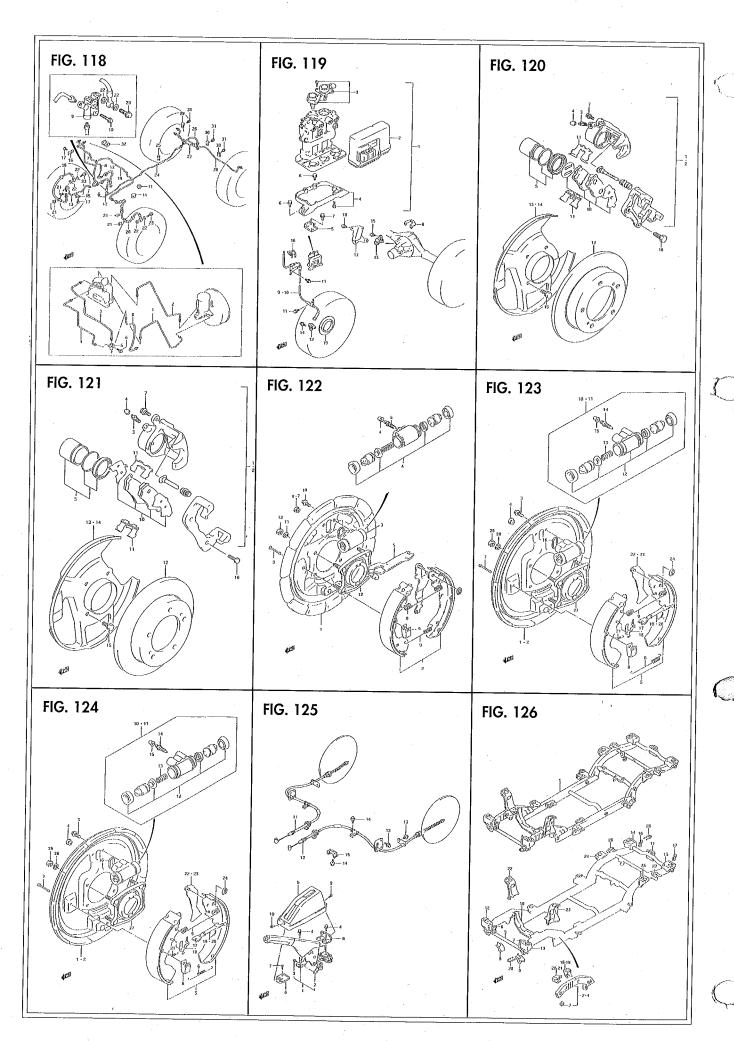


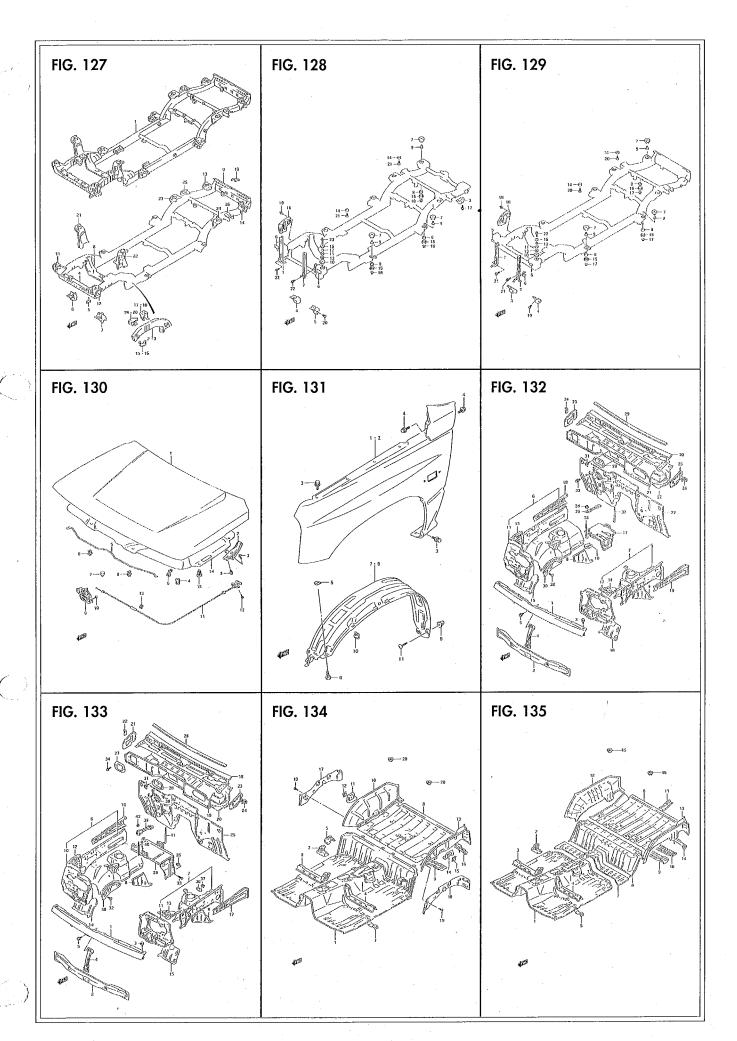


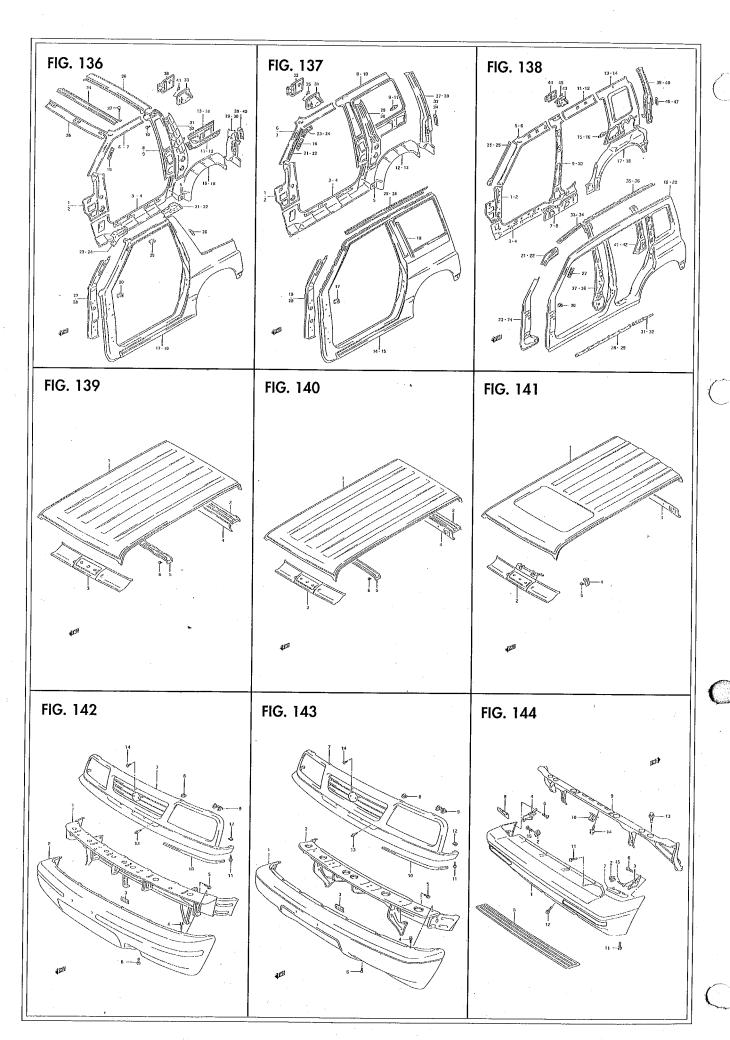


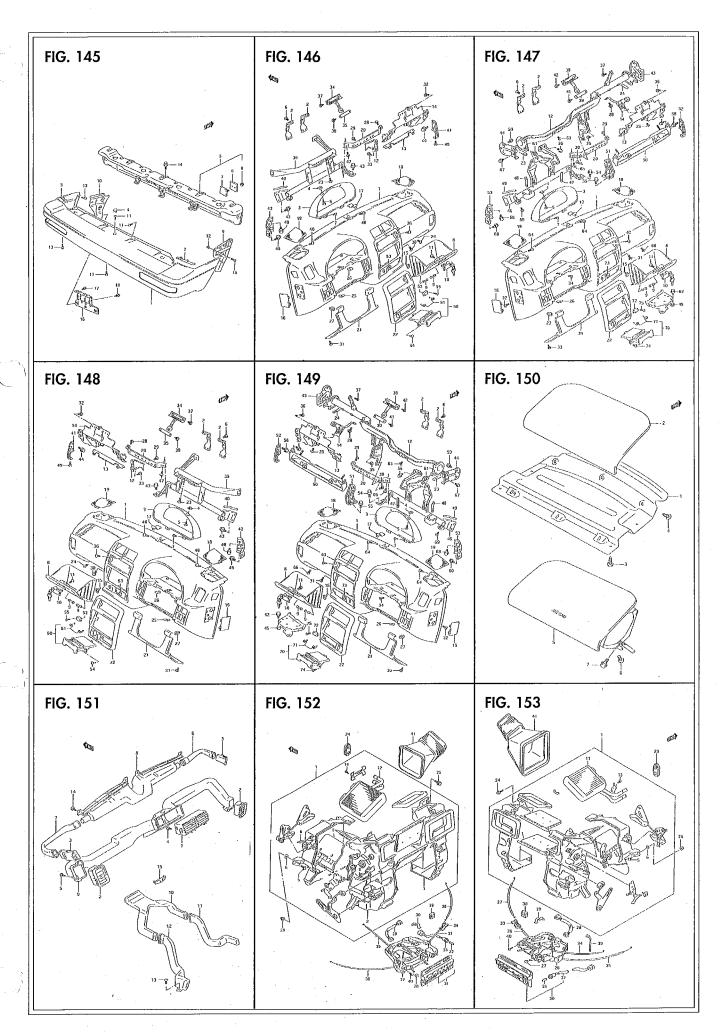


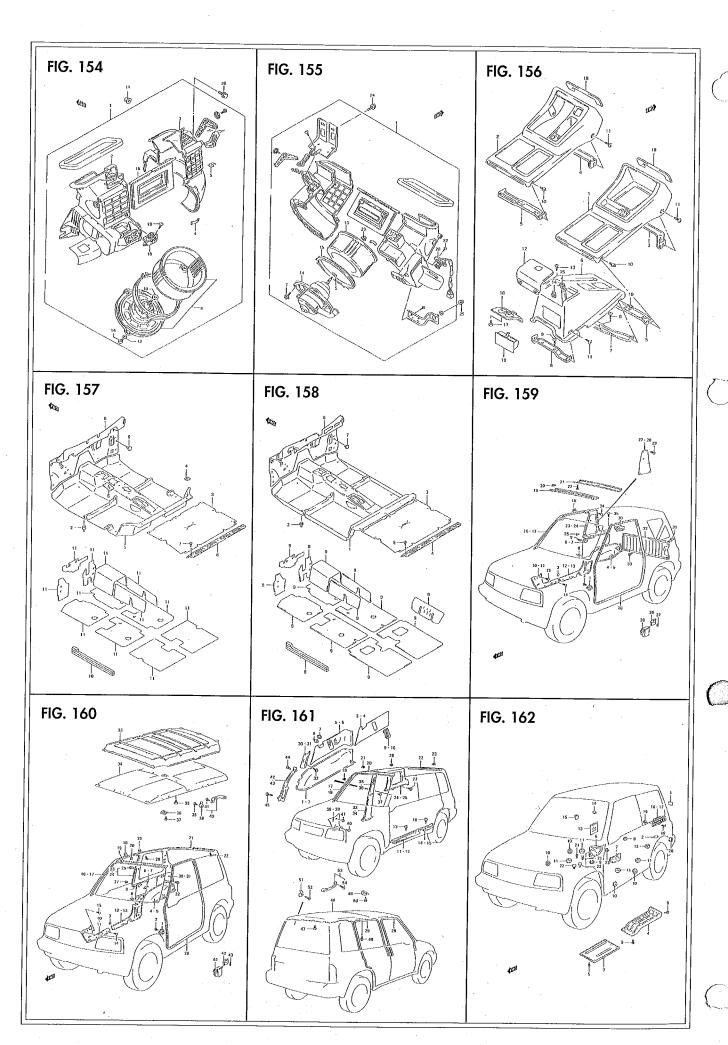

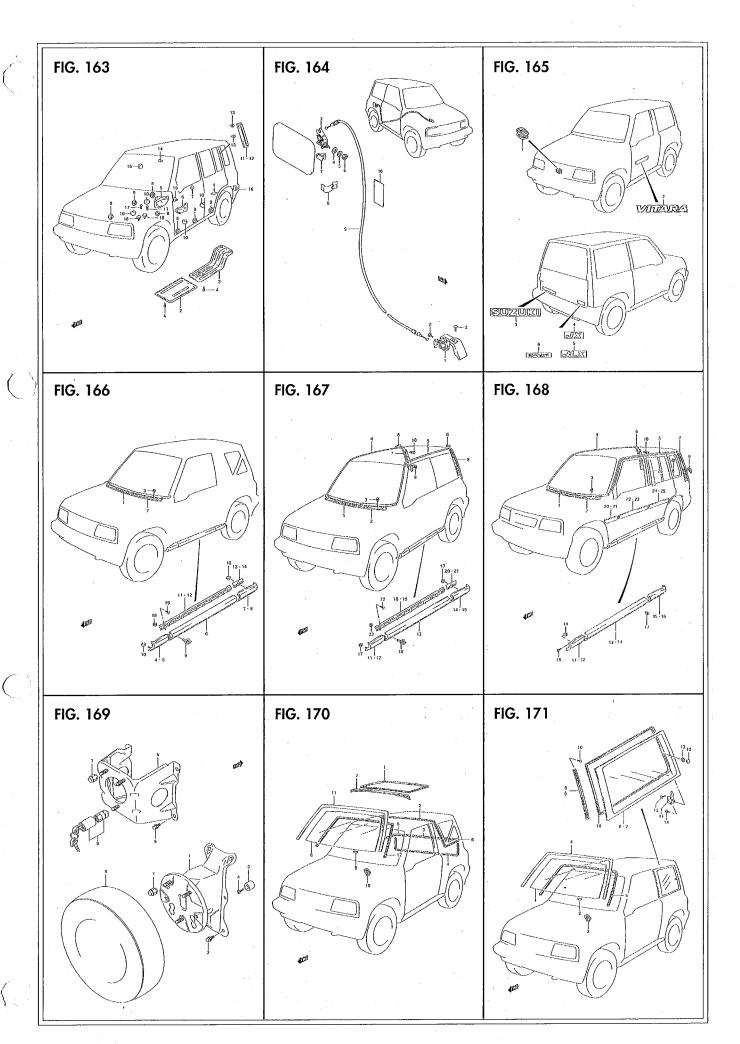

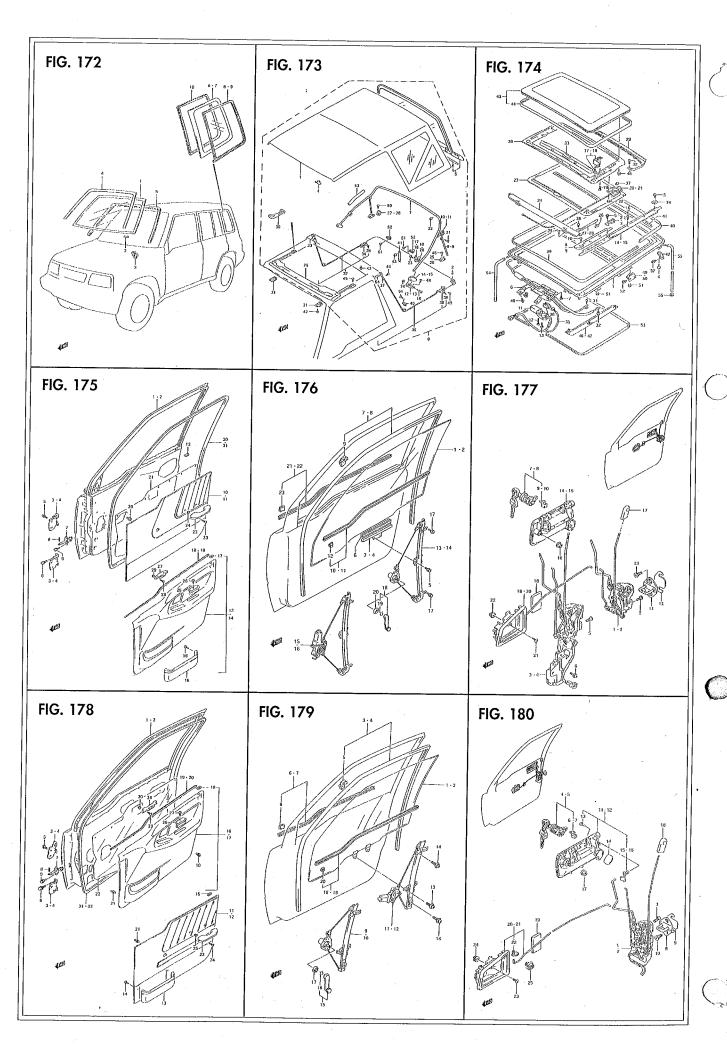

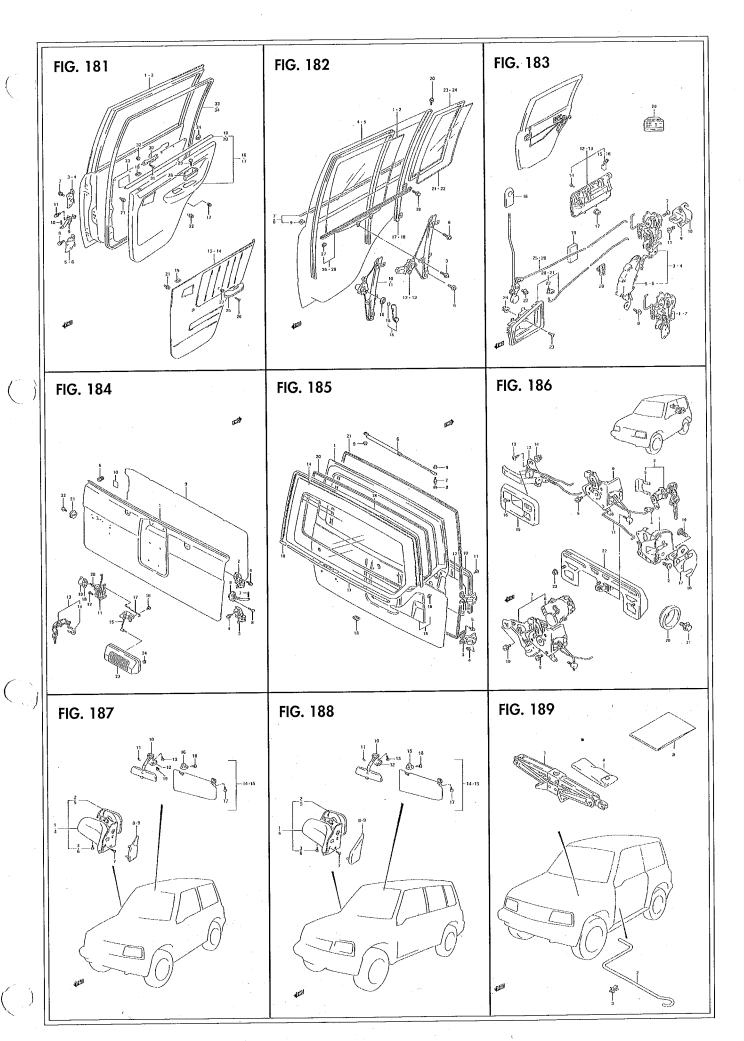

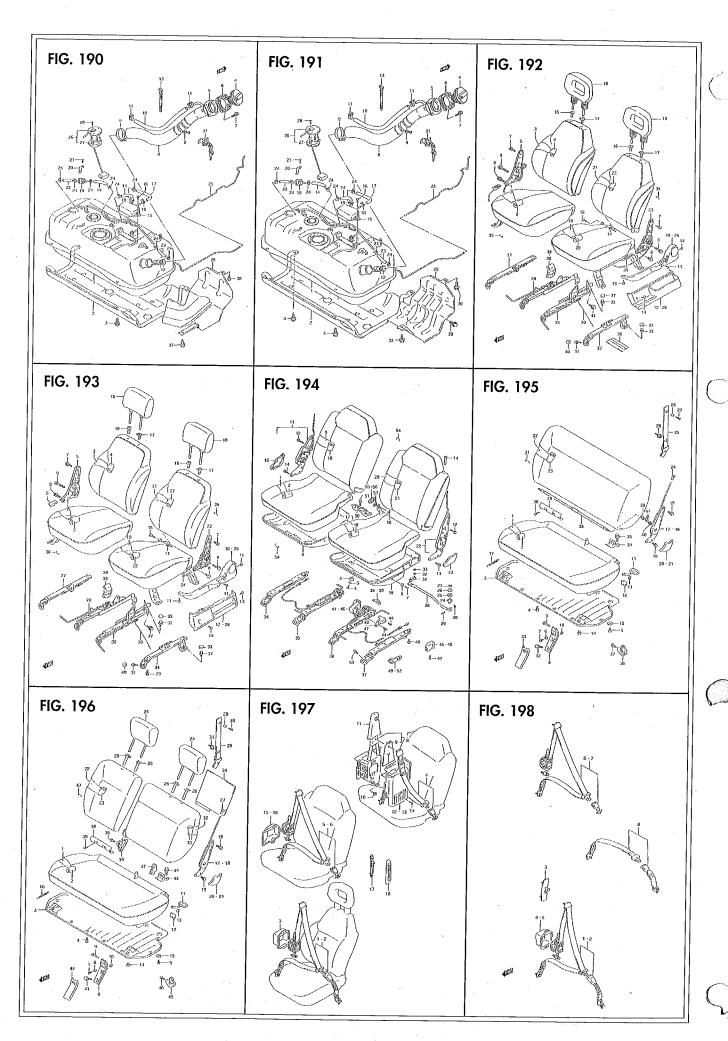

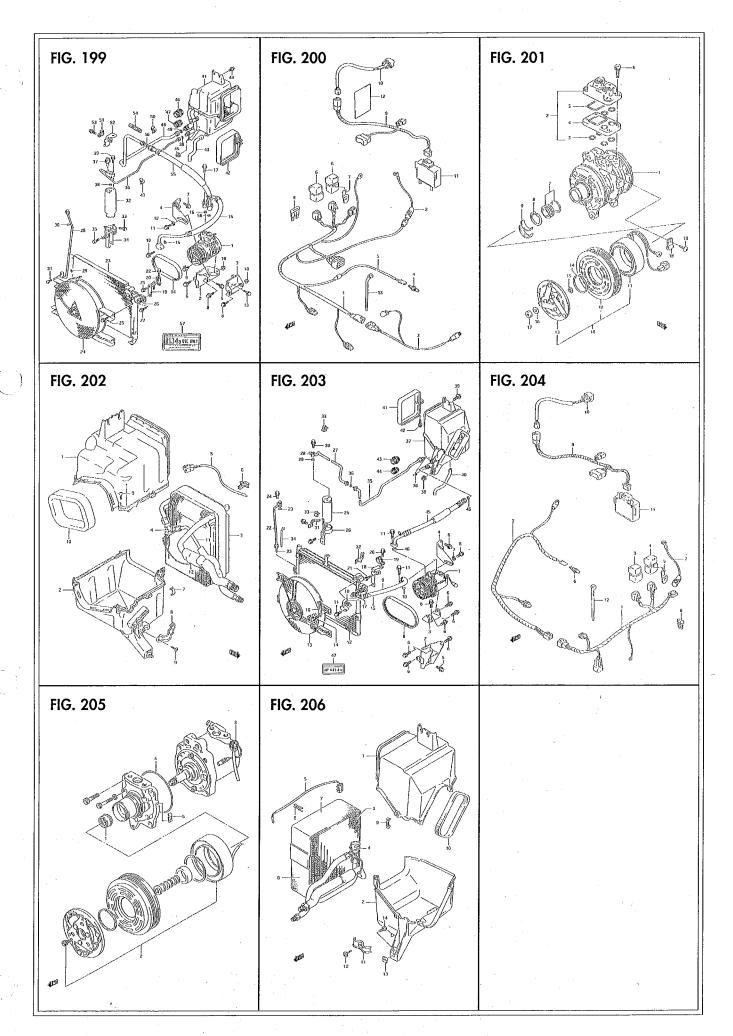


FIG. 1


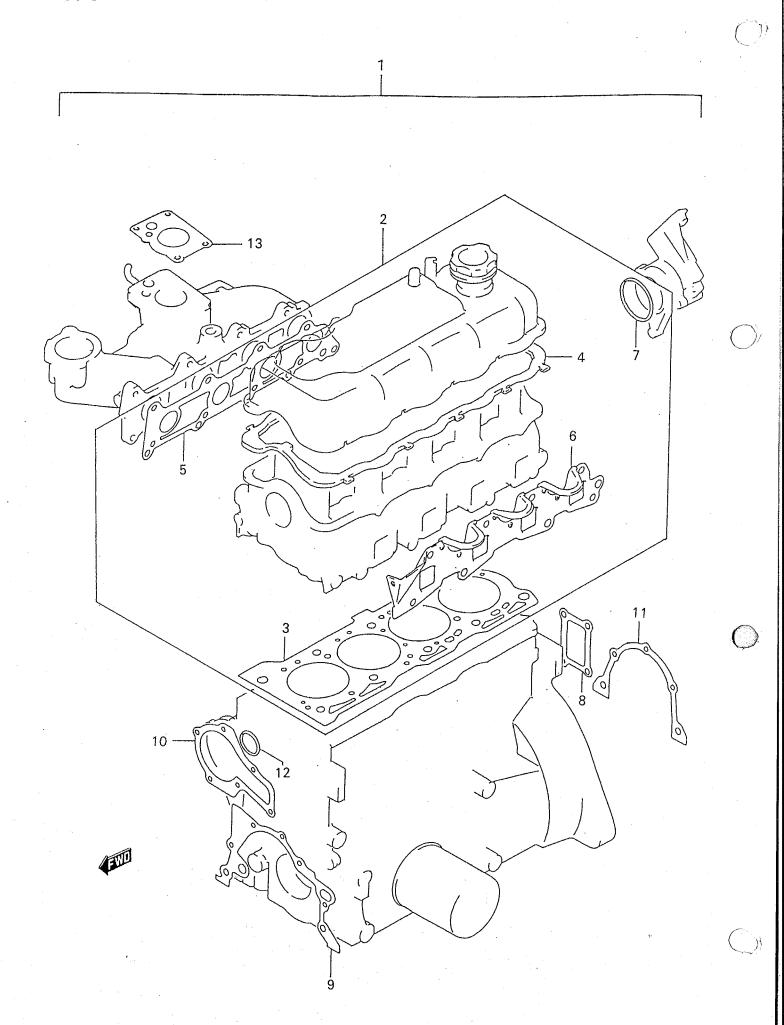


FIG. 001 (1-B-02) ENGINE GASKET SET (2 VALVE)


| REF. | | | Q, TY | | |
|------|-------------|-------------------------------|-------|----|---------|
| N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS |
| | | | | | |
| 1 | 11402-85860 | GASKET SET, ENGINE | 1 | 1 | |
| 2 | 11101-85810 | .GASKET SET, CYLINDER HEAD | 1 | 1 | |
| 3 | 11141-71C00 | GASKET, CYLINDER HEAD | 1 | 1. | |
| 4 | 11189-85C00 | GASKET, CYLINDER HEAD COVER | 1 | 1 | |
| 5 | 13119-85C00 | GASKET, INTAKE MANIFOLD | 1 | 1 | |
| 6 | 14140-85CÓ0 | GASKET, EXHAUST MANIFOLD | 1 | 1 | |
| 7 | 09280-56004 | O RING, DISTRIBUTOR CASE | 1 . | 1 | |
| 8 | 11229-60A00 | .GASKET, CYLINDER BLOCK PLATE | 1 | 1 | |
| 9 | 16119-85C00 | .GASKET, OIL PUMP | 1 | 1 | |
| 10 | 17431-85C00 | .GASKET, WATER PUMP | 1 | 1 | |
| 11 | 11349-85C00 | .GASKET, OIL SEAL HOUSING | 1 | 1 | |
| 12 | 09280-28008 | .O RING, WATER INLET PIPE | 1 | 1 | • |
| 13 | 13421-85C00 | .GASKET, THROTTLE BODY | 1 | 1 | |

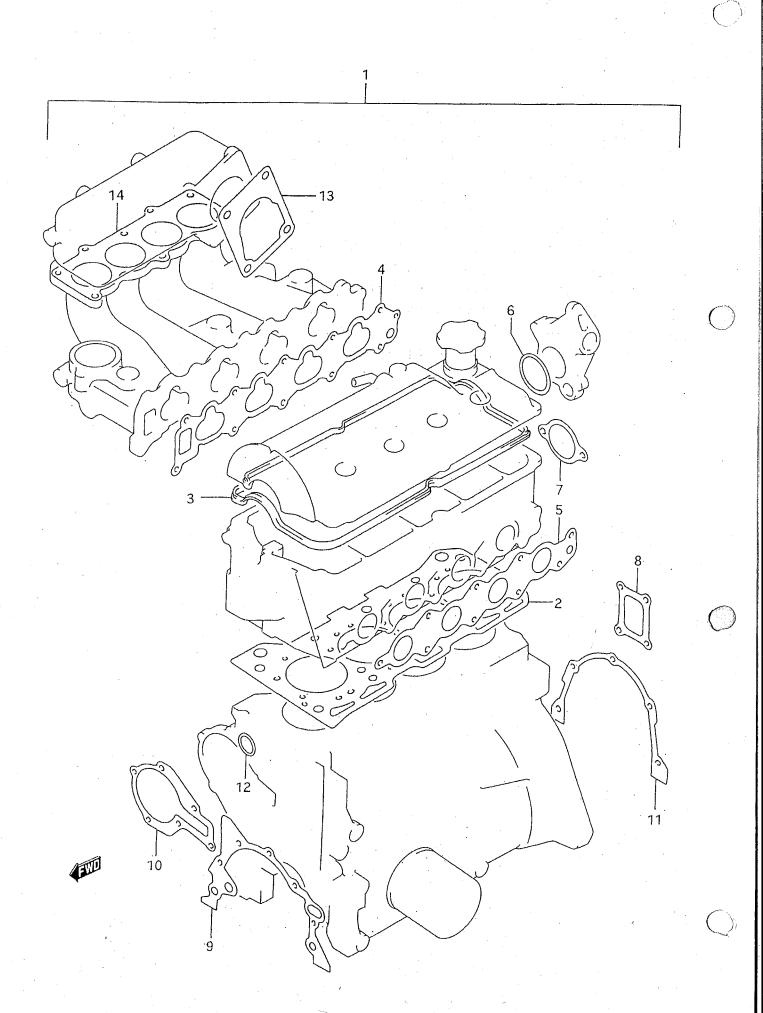


REMARKS

| REF. | | | Q, TY |
|------|----------------------|-------------------------------|-------|
| N.º | PART Nº | DESCRIPTION | C \ |
| | | | |
| -1 | 11402-85881 | GASKET SET, ENGINE | 1 . |
| 2 | 11141-71C00 | .GASKET, CYLINDER HEAD | 1 |
| 3 | 11189-71C00 | .GASKET, CYLINDER HEAD COVER | 1 |
| 4 | 13119- <i>57</i> B00 | .GASKET, INTAKE MANIFOLD | 1 |
| 5 | 14140-58B01 | .GASKET, EXHAUST MANIFOLD | 1 . |
| 6 | 11162-71C00 | .O RING, DISTRIBUTOR CASE | 1 |
| 7 | 17699-60B02 | .GASKET, THERMOSTAT CASE | 1 |
| 8 | 11229-60A00 | .GASKET, CYLINDER BLOCK PLATE | 1 |
| 9 | 16119-85C00 | .GASKET, OIL PUMP | 1 |
| 10 | 17431-85C00 | .gasket, water pump | 1 |
| 11 | 11349-85C00 | .GASKET, OIL SEAL HOUSING | 1 |
| 12 | 09280-28008 | O RING, WATER INLET PIPE | 1 |
| 13 | 13421-58B00 | .GASKET, THROTTLE BODY | 1 |
| 14 | 13122-58B00 | .GASKET. SÜRGE TANK | 1 |

FIG. 3

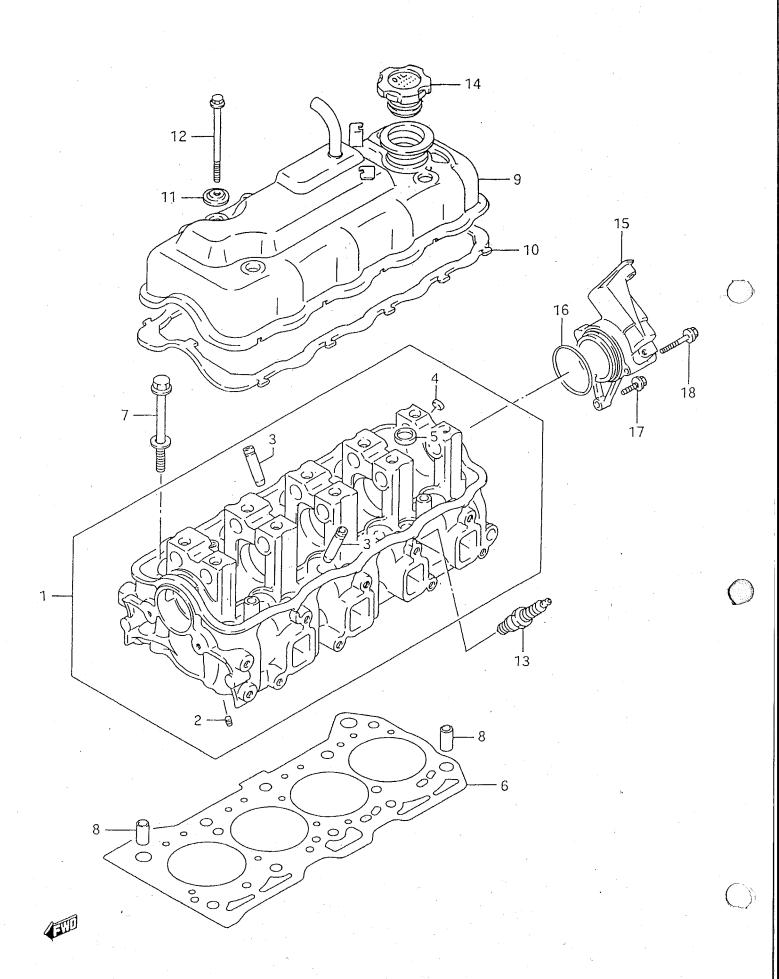


| REF. | | | _ Q, | TY | | |
|------|-------------------------------|-----------------------------|------|----|---------|--|
| N.º | PART Nº | DESCRIPTION | C | ٧ | REMARKS | |
| | | | | | | |
| 1 | 11110-61A00 | HEAD, CYLINDER | 1 | 1 | | |
| 2 | 11112-73001 | .PLUG, OIL VENTURE | 1 | 1 | | |
| 3 | 11115-82000-001 | .GUIDE, VALVE | 8 | 8 | | |
| 4 | 09241-12002 | .PLUG (OD:12,H:4) | 1 | 1 | | |
| 5 | 09241-20006 | .PLUG (OD:20,H:6) | 4 | 4 | | |
| 6 | 11141-71C00 | GASKET, CYLINDER HEAD | 1 | 1 | | |
| 7 | 11119-85C00 | BOLT, CYLINDER HEAD | 10 | 10 | | |
| 8 | 04211-13189 | PIN | 2 | 2 | | |
| 9 | 111 <i>7</i> 0-61X50 | COVER, CYLINDER HEAD | 1 | 1 | | |
| 10 | 11189-85C00 | GASKET, CYLINDER HEAD COVER | 1 | 1 | | |
| 11 | 11180-82010 | WASHER, HEAD COVER SEAL | 4 | 4 | | |
| 12 | 01550-06803 | BOLT | 4 | 4 | | |
| 13-1 | 09482-00155 | PLUG, SPARK (NGK,BPR5ES) | 4 | 4. | | |
| 13-2 | 09482-00167 | PLUG, SPARK (ND,W16EXR-U) | 4 | 4 | | |
| 13-3 | 09482-00506 | PLUG, SPARK (BOSCH, WR8DC) | 4 | 4 | | |
| 14 | 16920-85C00 | CAP, OIL FILLER | 1 | 1 | | |
| 15 | 11161-60A00 | CASE, DISTRIBUTOR | 1 | 1 | | |
| 16 | 09280-56004 | O RING, DISTRIBUTOR CASE | 1 | 1 | • | |
| 17 | 01 <i>55</i> 0-06253 | BOLT | 2 | 2 | | |
| 18 | 01 <i>55</i> 0-06 <i>5</i> 03 | BOLT | 1 | 1 | | |

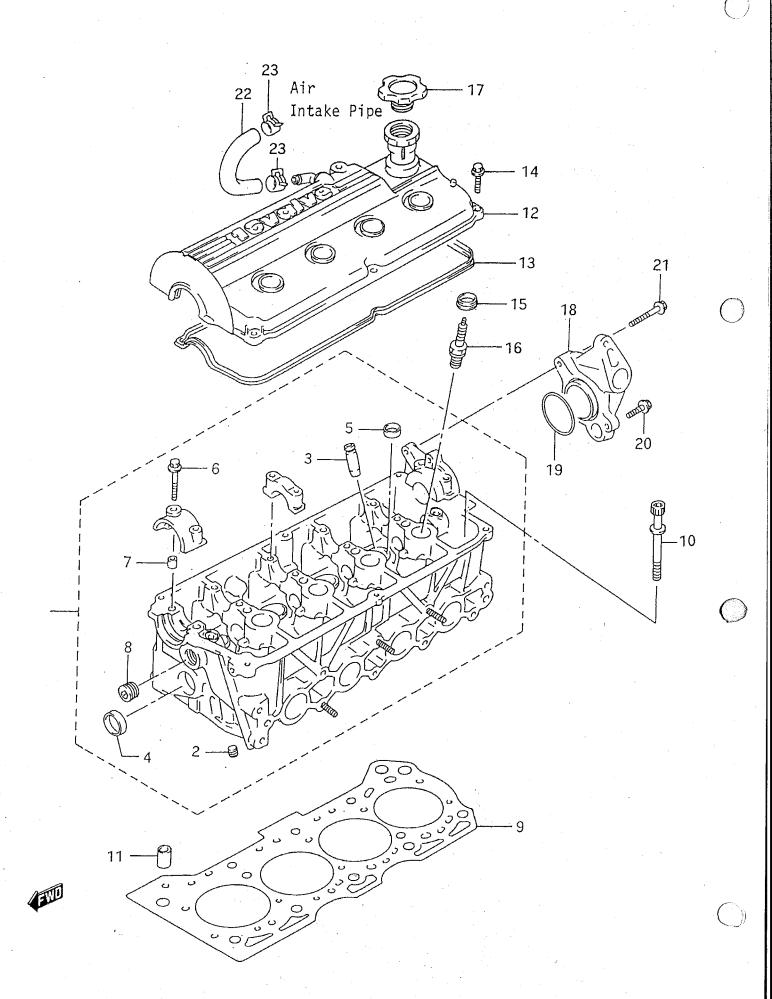

| REF. | | | | | TY | <u>, , , , , , , , , , , , , , , , , , , </u> |
|------|------------|----------------------|-----------------------------|-----|---------|---|
| N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS | |
| • | | | | | | |
| | 1 | 11100-57B02 | HEAD ASSY, CYLINDER | 1 | 1 | |
| | 2 | 11112-73001 | .PLUG, OIL VENTURI | 1 | 1 | |
| | 3 | 11115-60B11-001 | .GUIDE, VALVE | 16 | 16 | |
| | 4 | 09241-30009 | .PLUG | 1 | 1 | |
| | 5 | 09241-20006 | .PLUG | 3 | 3 | |
| | 6 | 09103-06132 | .BOLT (6X41) | 12 | 12 | |
| | 7 | 09206-08001 | .PIN (8X11) | 12 | 12 | |
| | 8 | 09246-16012 | PLUG | 1 | 1 | |
| | 9 | 11141-71C00 | GASKET, CYLINDER HEAD | 1 | 1 | |
| | 10 | 1111 <i>7-7</i> 1C00 | BOLT, CYLINDER HEAD | 10 | 10 | |
| | 11 | 04211-13189 | PIN | 2 | 2 | |
| | 12 | 11170-57B03 | COVER, CYLINDER HEAD | 1 | 1 | |
| | 13 | 11189-71C00 | GASKET, CYLINDER HEAD COVER | 1 | 1 | |
| | 14 | 11178-71C00 | BOLT, CYLINDER HEAD COVER | 6 | 6 | |
| | 15 | 11179-71C01 | O RING, SPARK PLUG | 4 | 4 | |
| | 16-1 | 09482-00427 | PLUG, SPARK (NGK,BKR6E) | 4 | 4 | |
| | 16-2 | 09482-00429 | PLUG, SPARK (ND,K20PR-U) | 4 | 4 | |
| | 16-3 | 09482-00505 | PLUG, SPARK (BOSCH,FR7DC) | 4 | 4 | |
| | 1 <i>7</i> | 16920-86502 | CAP, OIL FILLER | 1 | 1 | |
| | 18 | 11161-57B01 | CASE, DISTRIBUTOR | :1 | 1 | 7 N |
| | 19 | 11162-71C00 | O RING, DISTRIBUTOR CASE | 1 | 1 | |
| | 20 | 01550-06303 | BOLT | 2 | 2 | |
| | 21 | 01550-06453 | BOLT | 1 | 1 | |
| | 22 | 11191-58B00 | HOSE, BREATHER | . 1 | 1 . | |
| | 23 | 11196-85C00 | CLAMP | 2 | 2 | |
| | | | | | | |

FIG. 5

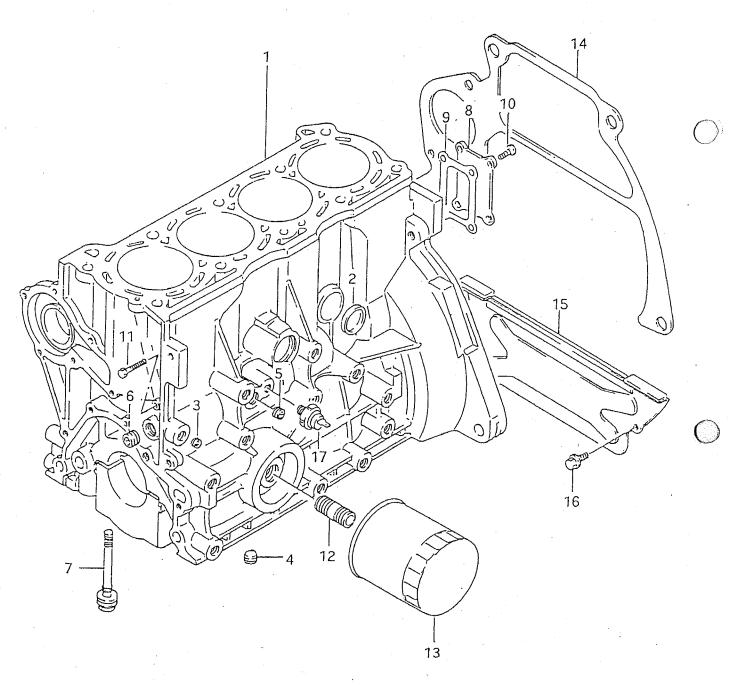


FI

REMARKS

| REF. | | | Q, TY | | |
|------------|----------------------|-------------------------------|-------|----|--|
| N.º | PART Nº | DESCRIPTION | С | ٧ | |
| | 11 200-6040 | SUSE 11029-85COO | | | |
| 1 | 11200-62G04 | BLOCK ASSY, CYLINDER | 1 | 1 | |
| 2 | 09241-30009 | .PLUG | 4 | 4 | |
| 3 | 09246-05006 | .PLUG, OIL GALLERY | 1 | 1 | |
| 4 | 09246-06002 | .PLUG, OIL GALLERY INNER | 1 | 1 | |
| 5 | 09246-06002 | .PLUG, OIL GALLERY OUTER | 1 | 1 | |
| . 6 | 09246-08002 | .PLUG, OIL GALLERY | 2 | 1 | |
| 7 | 11260-60A00 | .BOLT, CRANK BEARING CAP | 10 | 10 | |
| 8 | 11221-60A00 | .PLATE, CYLINDER BLOCK | 1 | 1 | |
| 9 | 11229-60A00 | .GASKET, CYLINDER BLOCK PLATE | 1 | 1 | |
| 10 | 02122-06103 | .SCREW | 4 | 4 | |
| . 11 | 01500-06253 | .BOLT, TENSIONER SPRING | 1 | 1 | |
| 12 | 11241-73003 | STAND, OIL FILTER | 1 | 1 | |
| 13 | 16510-85C00 | FILTER ASSY, OIL | 1 | 1 | |
| 14 | 11311-60A10 | PLATE, CLUTCH HOUSING UPPER | 1 | 1 | |
| 15 | 11320- <i>57</i> B00 | PLATE, CLUTCH HOUSING LOWER | 1 | 1 | |
| 16 | 01550-06103 | BOLT | 2 | 2 | |
| 1 <i>7</i> | 37820-85C00 | SWITCH ASSY, OIL PRESSURE | 1 | 1 | |

FIG. 6

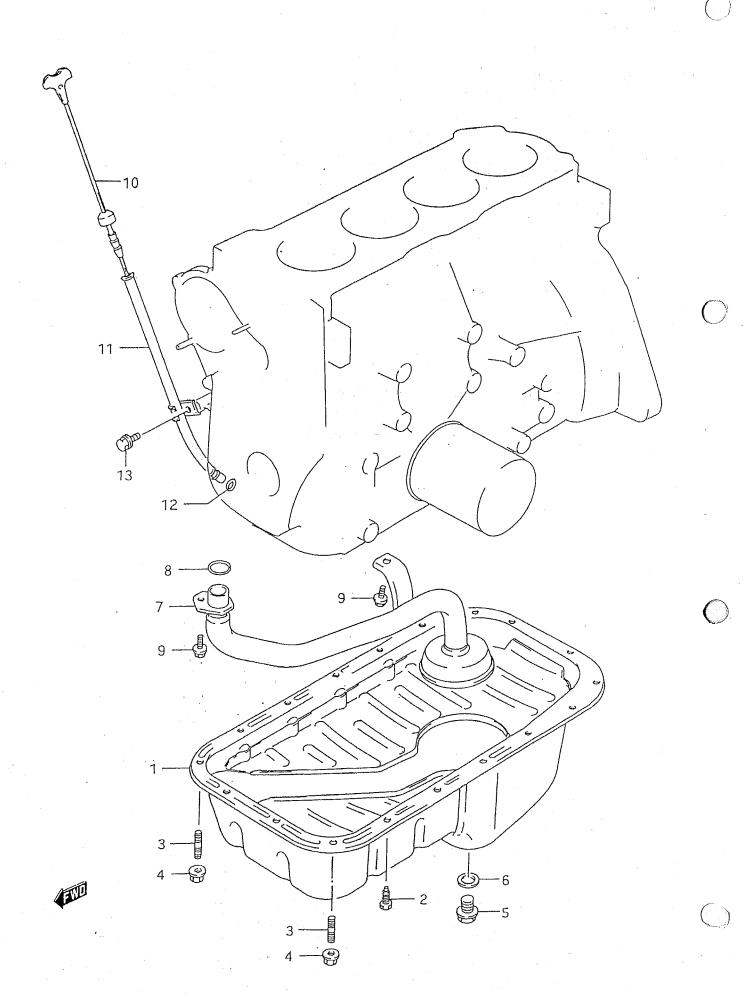

| REF. N.º | PART Nº | DESCRIPTION | Q, TY C V | REMARKS |
|-------------|-------------|------------------------|--------------|---------|
| | | | | |
| 1 | 11510-60A01 | PAN, OIL | 1 1 | |
| 2 | 09117A06033 | BOLT | 16 16 | |
| 3 | 01411-06123 | STUD BOLT | 2 2 | |
| 4 | 08316-10063 | NUT | 2 2 | |
| 5 | 09247-14027 | PLUG, OIL DRAIN | 1 1 | |
| 6 | 09168-14012 | GASKET, OIL DRAIN PLUG | 1 1 | |
| 7 | 16520-60A00 | STRAINER, OIL PUMP | 1 1 | |
| 8 | 09280-17005 | O RING | 1 1 | |
| 9 | 07120-06123 | BOLT | 2 2 | |
| 10 | 16910-85C00 | GAUGE, OIL LEVEL | 1 1 | - |
| 11 | 16930-82001 | GUIDE, OIL LEVEL GAUGE | 1 1 | |
| 12 | 09280-10015 | O RING | 1 1 | |
| 13 | 01550-06103 | BOLT | 1 1 | |

FIG. 7

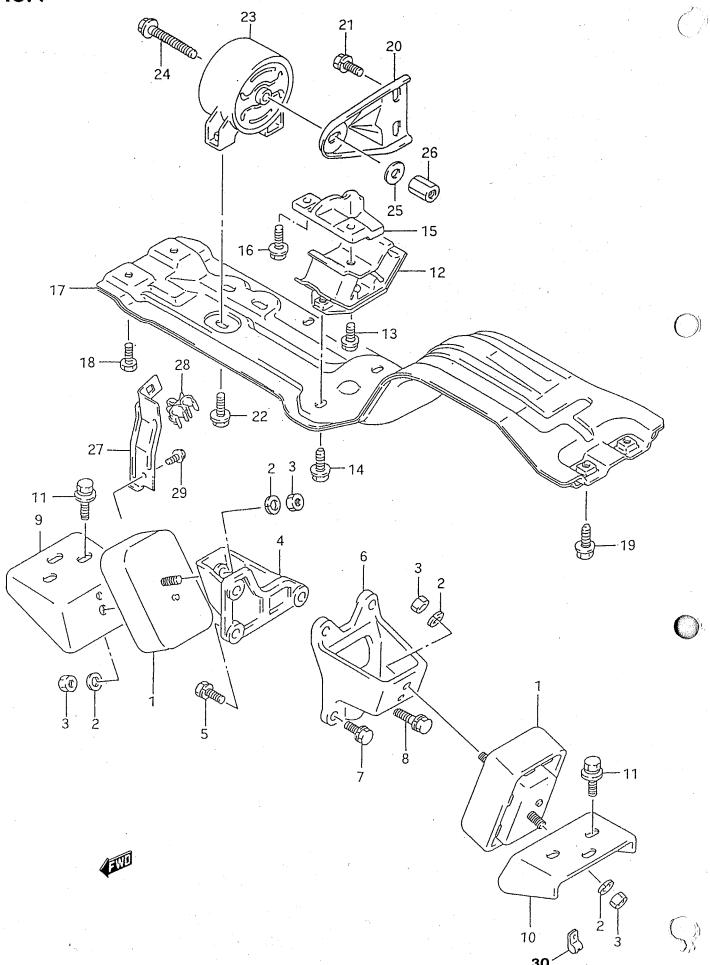


FIG. 007 (1-B-08) ENGINE MOUNTING (MT)

| REF. | | | | TY | | |
|-------|----------------------|----------------------------|-----|-----|---------------------------------------|--|
| N.º | PART Nº | DESCRIPTION | C | ٧ | REMARKS | |
| | | | | | | |
| 1-1 | 11610-58B01 | MOUNTING, ENGINE FRONT | 2 | 2 | | |
| 1 - 2 | 11610-86CA0 | MOUNTING, ENGINE FRONT | 1 | 1 | 1.9 DIESEL | |
| | 00046-86CA0 | BOLT BRACKET FRONT RH | 1 | 1 | 1.9 DIESEL | |
| 2 | 08321-01103 | LOCK WASHER | 4 | 4 | | |
| 3 | 08310-00103 | NUT | 4 | 4 | | |
| 4-1 | 11641-56B02 | BRACKET, FRONT MOUNTING RH | 1 | 1 | | |
| 4-2 | 11641-86CA0 | BRACKET, FRONT MOUNTING RH | 1 | 1 | 1.9 DIESEL | |
| 5-1 | 01500-10303 | BOLT | 3 | 3 | | |
| | 02019-00000 | SPRING WASHER | 3 | 3 | No. | |
| 5-2 | 00056-86CA0 | BOLT | 4 | 4 | 1.9 DIESEL | |
| | 02040-86CA0 | PLANE WASHER | 4 | 4 | 1.9 DIESEL | |
| | 08321A31103 | SPRING WASHER | 4 | 4 | 1.9 DIESEL | |
| 6-1 | 11651-57B00 | BRACKET, FRONT MOUNTING LH | 1. | 1 | | |
| 6-2 | 11651-86CA0 | BRACKET, FRONT MOUNTING LH | 1 | 1 | 1.9 DIESEL | |
| 7-1 | 01500-10303 | BOLT | 3 | 3 | | |
| | 02019-00000 | SPRING WASHER | 3 | 3 | | |
| 7-2 | 01 <i>57</i> 0-08203 | BOLT | 4 | 4 | 1.9 DIESEL | |
| | 02042-86CA0 | PLANE WASHER | 4 | 4 | 1.9 DIESEL | |
| 8 | 01107-10403 | BOLT | 1 | 1 | | |
| | 02019-00000 | SPRING WASHER | 1 | 1 | | |
| 9 | 11661-56B00 | BRACKET, FRONT MOUNTING RH | 1 | 1 | | |
| 10 | 11661-57B00 | BRACKET, FRONT MOUNTING LH | 1 | 1 | | |
| 11 | 09118-10052 | BOLT (10X30) | 6 | 6 | | |
| 12 | 11710-85C00 | MOUNTING, ENGINE REAR | 1 | 1 | | |
| 13 | 01500-10203 | BOLT | 1 | · 1 | | |
| , 0 | 09160-10119 | WASHER | 1 | 1 | | |
| 14 | 01500-10163 | BOLT | 2 | 2 | | |
| | 09160-10001 | WASHER | 2 | 2 | | |
| 15 | 11741-60A01 | BRACKET, REAR MOUNTING | 1 | 1 | | |
| 16 | 01500-10303 | BOLT | 2 | 2 | | |
| 10 | 09160-10119 | WASHER | 2 | 2 | | |
| 17-1 | 11730-58B21 | MEMBER, REAR MOUNTING | 1 | 1 | | |
| 17-2 | 11730-86CA0 | MEMBER, REAR MOUNTING | 1 | 1 | 1.9 DIESEL | |
| 18 | 01707-10253 | BOLT | 2 | 2 | | |
| | 08321-01103 | SPRING WASHER | 2 | 2 | | |
| ** | 08322-21103 | WASHER | 2 | 2 | | |
| 19 | 01707-10253 | BOLT | 2 | 2 | | |
| ., | 08321-01103 | SPRING WASHER | . 2 | 2 | | |
| | 08322-21103 | WASHER | 2 | 2 | · · · · · · · · · · · · · · · · · · · | |
| 20 | 11755-60A01 | BRACKET, TORQUE STOPPER | . 1 | 1 | | |
| | • | | | | | |

FIG. 7


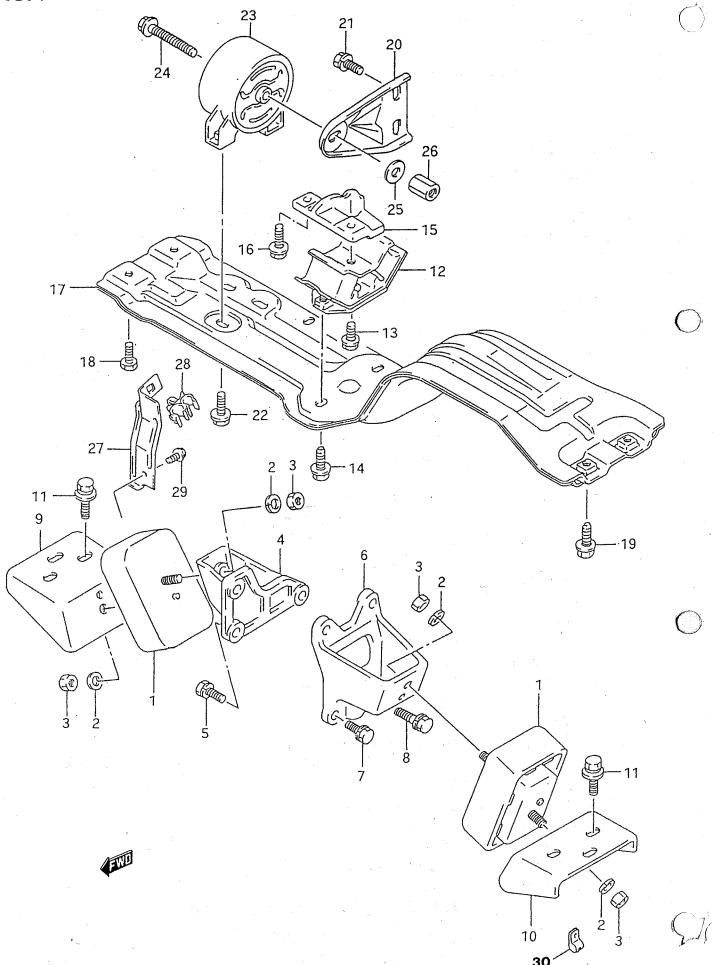


FIG. 007 (1-B-08) ENGINE MOUNTING (MT)

| REF. | | | | TY | • |
|------|-------------|------------------------------|---|-----|------------|
| N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS |
| | | | | | |
| 21 | 01500-10203 | BOLT | 2 | 2 | |
| | 09160-10119 | WASHER | 2 | 2 | |
| 22 | 01500-10163 | BOLT | 3 | 3 | |
| | 09160-10001 | WASHER | 3 | 3 | |
| 23 | 11910-85C00 | BUSH, TORQUE STOPPER | 1 | 1 | |
| 24 | 01500-10803 | BOLT | 1 | 1 | |
| | 09160-10119 | WASHER | 1 | 1 | |
| 25 | 09160-10119 | WASHER | 1 | . 1 | |
| 26 | 09140-10040 | NUT | 1 | 1 | |
| 27 | 18568-56B01 | BRACKET, CANISTER HOSE CLAMP | 1 | 1 | |
| 28 | 18119-85C30 | CLAMP | 1 | 1 | |
| 29 | 01550-06123 | BOLT | 1 | 1 | |
| 30 | 18569-86CA0 | CLIP | 5 | 5 | 1.9 DIESEL |

 $(\)$

FIG. 8

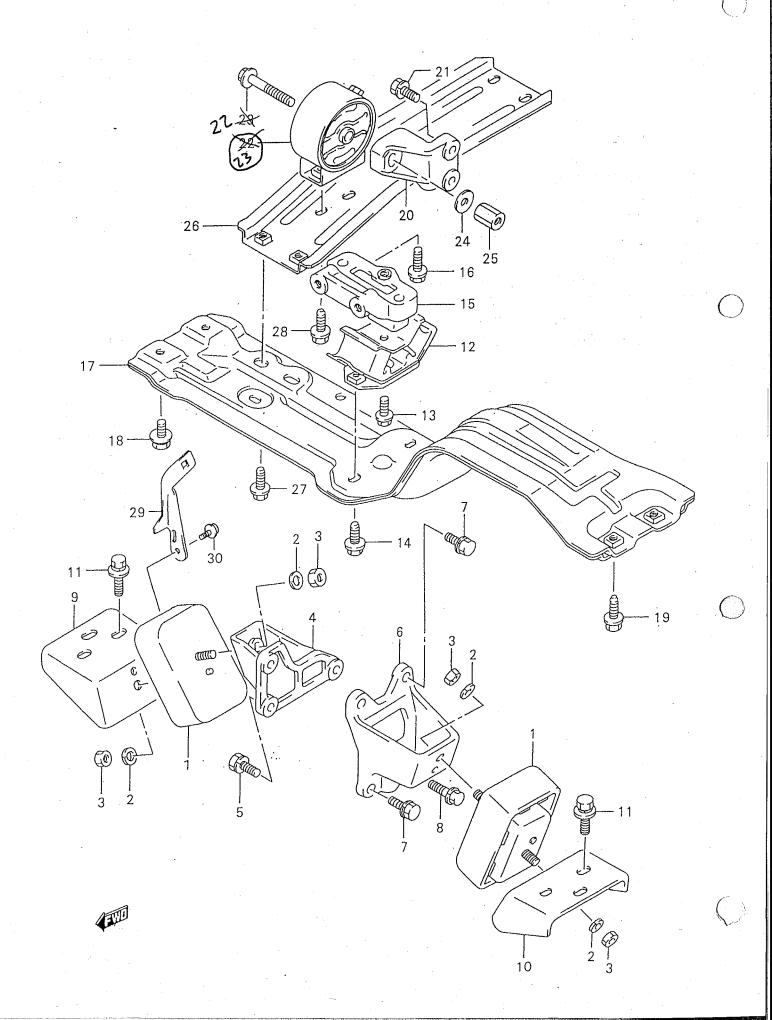

| REF. N.º | PART Nº | DESCRIPTION | Q, TY C V | REMARKS |
|-------------|--------------|------------------------------|--------------------------------|---------------|
| | | | | |
| 1 | 11610-58B01 | MOUNTING, ENGINE FRONT | 2 2 | |
| 2 | 08321-01103 | LOCK WASHER | 4 4 | |
| 3 | 08310-00103 | NUT | 4 4 | |
| 4 | 11641-56B02 | BRACKET, FRONT MOUNTING RH | 1 11 | / . |
| 5 | 01500-10303 | BOLT | 3 3 1/ | \nearrow |
| | 02019-00000 | SPRING WASHER | N3 3) | , ·/ |
| 6 | 11651-57B00 | BRACKET, FRONT MOUNTING LH | $\backslash 1 \hookrightarrow$ | |
| 7 | 01500-10303 | BOLT | / 3 3 | (9 |
| | 02019-00000 | SPRING WASHER | 3 3 | $\overline{}$ |
| 8 | 01107-10403 | BOLT | ·) 1 1 | |
| | 02019-00000 | SPRING-VVASHER | / 1 1 | \sim |
| 9 | 11661-56B00 | BRACKET, FRONT MOUNTING RH | 1 1 | |
| 10 | 11661-57B00 | BRACKET, FRONT MOUNTING LH | 1 1 | |
| 11 | 09118-10052 | BOLT (10X30) | 6 6 | |
| 12 | 11710-85C00 | MOUNTING, ENGINE REAR | 1 1 | |
| 13 | 01500-10203 | BOLT / | 1 1 | |
| , 10 | 09160-10119 | \ WASHER | 1 1 | |
| 14 | 01500-10163 | BOLT | 2 2 | (Υ) |
| 14 | 09160-10001 | WASHER | 2 2 | |
| 15 | 11741-60AØ1 | BRACKET, REAR MOUNTING | 1 1 \ | |
| 16 | 01500-10303 | BOLT | 2 2 | 7 |
| 10 | 09160-10119 | WASHER | 2 2 | |
| 1 <i>7</i> | 11730-58B21\ | MEMBER, REAR MOUNTING | 1 1 | |
| 18 | 01707-10253 | BOLT | 2 2 | |
| | 08/321-01103 | SPRING WASHER | 2 2 | |
| | 08322-21103 | WASHER | 2 2 | |
| 19 | 01707-10253 | BOLT | 2 2 | |
| 1 / | 08321-01103 | SPRING WASHER | 2 2 | • |
| | 08322-21103 | WASHER | 2 2 | |
| 20 | 11755-60A01 | BRACKET, TORQUE STOPPER | 1 1 | |
| 21 | 01500-10203 | BOLT | 2 2 | |
| Z 1 | 09160-10119 | WASHER | 2 2 | |
| 22 | 01500-10163 | BOLT | 3 3 | |
| 22 | 09160-10001 | WASHER | 3 3 | |
| 23 | 11910-85C00 | BUSH, TORQUE STOPPER | 1 1 | |
| 24 | 01500-10803 | BOLT | 1 1 | |
| 24 | 09160-10119 | WASHER | 1 1 | |
| 25 | 09160-10119 | WASHER | 1 1 | |
| 25 | 09140-10119 | NUT | 1 1 | |
| 26 27 | 18568-56B01 | BRACKET, CANISTER HOSE CLAMP | 1 1 | |
| | 18119-85C30 | CLAMP | 1 1 | |
| 28 | | BOLT | 1 1 | |
| 29 | 01550-06123 | DOLI | , 1 | |


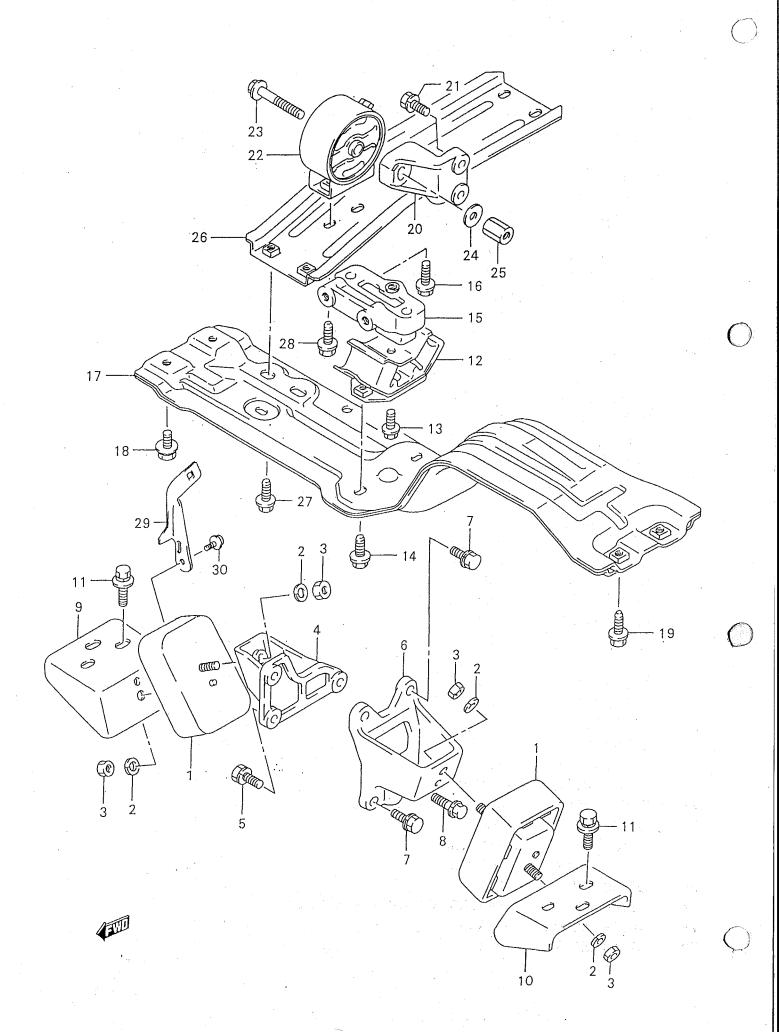


FIG. 008 (1-B-09) ENGINE MOUNTING (3DR:AT)

| REF. | | | Q, | TY | , , | |
|------|-------------------------------|------------------------------|-----|--------|---------|--|
| N.º | PART Nº | DESCRIPTION | C . | V , | REMARKS | |
| , | 11/10 50001 | MOUNTING FAIGINE EDONIT | 2 | 2 | | |
| 1 | 11610-58B01 | MOUNTING, ENGINE FRONT | 4 | 4 | | |
| 2 | 08321-01103 | LOCK WASHER | | 4 | | |
| 3 | 08310-00103 | NUT | 4 | | | |
| 4 | 11641-56B02 | BRACKET, FRONT MOUNTING RH |] | 1 3 | | |
| 5 | 01570-10303 | BOLT | 3 | | | |
| 6 | 11651-57B00 | BRACKET, FRONT MOUNTING LH | 1 | 1 | | |
| 7 | 01 <i>57</i> 0-10303 | BOLT | 3 | 3 | | |
| 8 | 01 <i>57</i> 0-10403 | BOLT | |] | | |
| 9 | 11661-56B00 | BRACKET, FRONT MOUNTING SIDE | l | ! | | |
| 10 | 11661-57B00 | BRACKET, FRONT MOUNTING SIDE | l . | | | |
| 11 | 09118-10052 | BOLT (10X30) | 6, | 6 | | |
| 12 | 11710-85C00 | MOUNTING, ENGINE REAR | . 1 | 1 | | |
| 13 | 01500-10203 | BOLT | 1 | 1 | | |
| | 09160-10119 | WASHER | 1 | 1 | | |
| 14 | 01000-10163 | BOLT | 2 | 2 | | |
| | 09160-10001 | WASHER | 2 | 2 | | |
| 15 | 11 <i>74</i> 1- <i>57</i> B02 | BRACKET, REAR MOUNTING | 1 | 1 . | | |
| 16 | 01500-10403 | BOLT | 2 | 2 | | |
| | 09160-10119 | WASHER | 2 | 2 | | |
| 17 | 11730-58B21 | MEMBER, REAR MOUNTING | 1 | 1 | | |
| 18 | 01580-10253 | BOLT | 2 | 2 | | |
| 19 | 01580-10253 | BOLT | 2 | 2 | | |
| 20 | 11755-57B01 | BRACKET, TORQUE STOPPER | 1 | 1 | | |
| 21 | 01500-10303 | BOLT | 2 | 2 | | |
| | 09160-10119 | WASHER | 2 | 2 | | |
| 22 | 11910- <i>57</i> B01 | BUSH, TORQUE STOPPER | . 1 | 1 | ν | |
| 23 | 01500-10803 | BOLT | 1 | 1 | | |
| | 09160-10119 | WASHER | 1 | 1 | | |
| 24 | 09160-10119 | WASHER | 1 | 1 | | |
| 25 | 09140-10040 | NUT | 1 | 1 | | |
| 26 | 11 <i>7</i> 61 <i>-57</i> B10 | MEMBER, TORQUE STOPPER | 1 | 1 | | |
| 27 | 01580-10253 | BOLT | 4 | 4 | | |
| 28 | 01500-10163 | BOLT | 2 | 2 | | |
| === | 09160-10001 | WASHER | 2 | 2 | | |
| 29 | 18568-56B01 | BRACKET, CANISTER HOSE CLAMP | 1 | 1 | | |
| 30 | 02162-06123 | BOLT | 1 | 1 | | |

NO USAR ESTA PAGINA PARA MERCADO ESPAÑOL DO NOT USE THIS PAGE FOR SPANISH MARKET




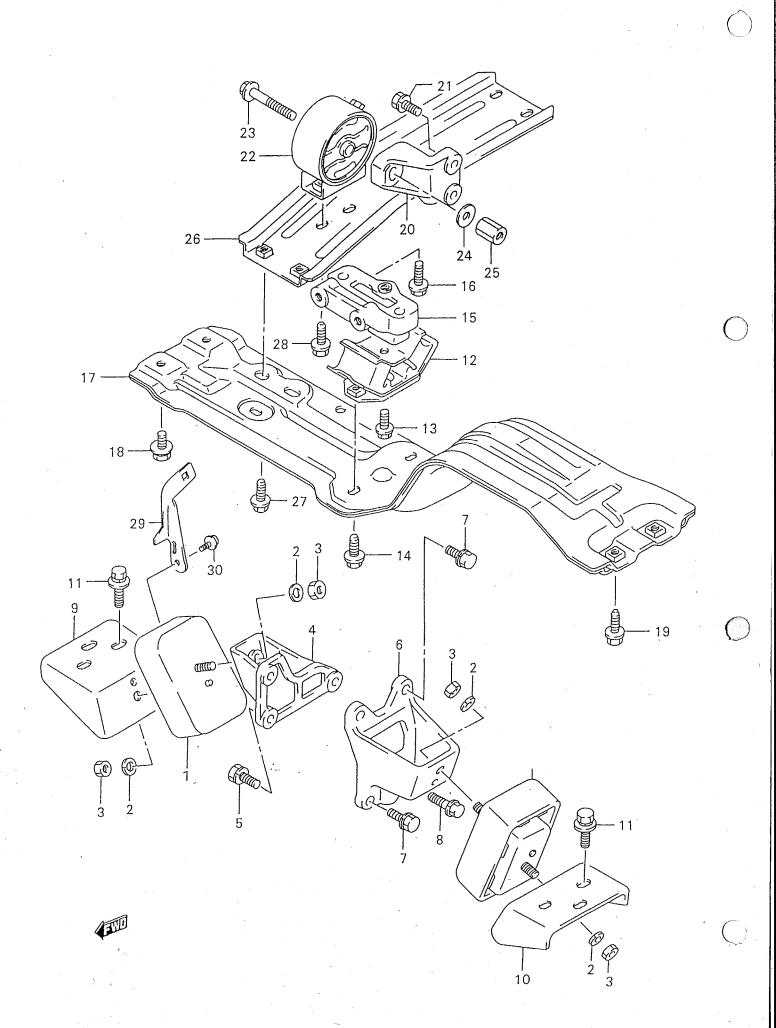

| DEE | | | Q, TY | | | |
|--------------|----------------------|---------------------------------------|-------|-----|-----|-------|
| REF. N.º | PART Nº | DESCRIPTION | С | V | REM | VARKS |
| 1 | 11610-58B01 | MOUNTING, ENGINE FRONT | | 2 | | |
| 2 | 08321-01103 | LOCK WASHER | | 4 | | |
| 3 | 08310-00103 | NUT | | 4 | | |
| 4 | 11641-56B02 | BRACKET, FRONT MOUNTING RH | | 1 | | |
| 5 | 01 <i>57</i> 0-10303 | BOLT | | 3 | 1 | |
| 6 | 11651-57B00 | BRACKET, FRONT MOUNTING LH | | 1 | | |
| 7 | 01 <i>57</i> 0-10303 | BOLT | | 3 | | |
| 8 | 01 <i>57</i> 0-10403 | BOLT | | 1 | | |
| 9 | 11661-56B00 | BRACKET, FRONT MOUNTING SIDE | | 1 | | |
| 10 | 11661-57B00 | BRACKET, FRONT MOUNTING SIDE | | 1 | | |
| <u>) 11 </u> | 09118-10052 | BOLT (10X30) | | 6 | | |
| 12 | 11710-85C00 | MOUNTING, ENGINE REAR | | 1 | | |
| 13 | 01500-10203 | BOLT | | 1 | | |
| | 09160-10119 | WASHER | , . | 1 | | |
| 14 | 01500-10163 | BOLT | | 2 | | |
| | 09160-10001 | WASHER | | 2 | | |
| 15 | 11741-57B02 | BRACKET, REAR MOUNTING | | 1. | | |
| 16 | 01500-10403 | BOLT | | 2 | | |
| | 09160-10119 | WASHER | | 2 | | |
| 17 | 11730-58B21 | MEMBER, REAR MOUNTING | | 1 . | | |
| 18 | 01580-10253 | BOLT | | 2 | | |
| 19 | 01580-10253 | BOLT | | 2 | | |
| 20 | 11 <i>755-57</i> B01 | BRACKET, TORQUE STOPPER | | 1 | * | |
| 21 | 01500-10303 | BOLT | | 2 | | |
| | 09160-10119 | WASHER | | 2 | | |
| 22 | 11910- <i>57</i> B01 | BUSH, TORQUE STOPPER | | 1 | | |
| 23 | 01500-10803 | BOLT | | 1 | | |
| | 09160-10119 | WASHER | | 1 | | |
| 24 | 09160-10119 | WASHER | | 1 | | |
| 25 | 09140-10040 | NUT . | | 1 | | |
| 26 | 11761-57B00 | MEMBER, TORQUE STOPPER | | 1 | | |
| 27 | 01580-10253 | BOLT | | 4 | | *p. |
| 28 | 01500-10163 | BOLT | | 2 | | |
| | 09160-10001 | WASHER | | 2 | | |
| 29 | 18568-56B01 | BRACKET, CANISTER HOSE CLAMP | | 1.1 | | |
| 30 | 02162-06123 | BOLT | | 1 | | |
| | | · · · · · · · · · · · · · · · · · · · | · · | | | |

NO USAR ESTA PAGINA PARA MERCADO ESPAÑOL DO NOT USE THIS PAGE FOR SPANISH MARKET

FIG. 10

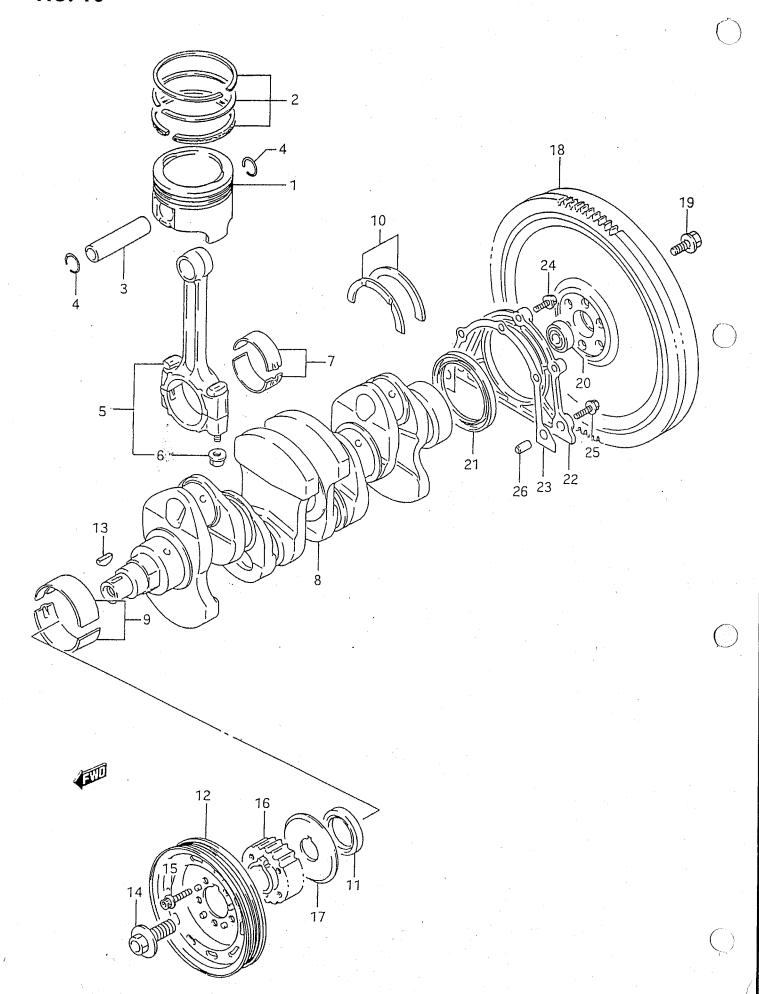

REMARKS

| REF. | • | | | Q, | TY | | |
|------|--|-------------------------------------|---|-----|-----|--|--|
| N.º | PART Nº | DESCRIPTION | | С | ٧ | | |
| | | DIOTONI JOTO JALADIK 11 | | 4 | 4 | | |
| 1 -1 | 12111-85C00-0A0 | PISTON (STD,MARK 1) | | 4 | 4 | | |
| 1 -2 | 12111-85C00-0B0 | PISTON (STD,MARK 2) | | 4 | 4 | | |
| 1 -3 | 12111-85C00-025 | PISTON (OS:0.25) | | 4 | 4 | | |
| 1 -4 | 12111-85C00-050 | PISTON (OS:0.5) | | 4 | 4 | | |
| 2-1 | 12140-60A50 | RING SET, PISTON (STD) | | 4 | 4 | | |
| 2-2 | 12140-60A50-025 | RING SET, PISTON (OS:0.25) | | 4 | 4 | | |
| 2-3 | 12140-60A50-050 | RING SET, PISTON (OS:0.5) | | 4 | 4 | | |
| 3 | 12151-85C00 | PIN, PISTON | | 4 | 4 | | |
| 4 | 12153-85C00 | CIRCLIP | | 8 | 8 | | |
| 5 | 12160-71C10 | CONNROD ASSY | | 4 | 4 | | |
| 6 | 091 <i>5</i> 9-08033 | .NUT | | 8 | 8 | | |
| 7-1 | 12100-60821-0A0 | BEARING SET, CONNROD (STD,T:1.5) | | 4 | 4 | | |
| 7-2 | 12100-60821-025 | BEARING SET, CONNROD | | 4 | 4 | | |
| | | (US:0.25,T:1.625) | | | | | |
| 8 | 12221-71C10 | CRANKSHAFT | | 1 | 1 | | |
| 9-1 | 12340-85C00-0A0 | BEARING SET, CRANKSHAFT | | 5 | 5 | | |
| | | (STD,T:2,GREEN) | | | | | |
| 9-2 | 12340-85C00-0B0 | BEARING SET, CRANKSHAFT | | 5 | 5 | | |
| | | (STD,T:2,BLACK) | | | | | |
| 9-3 | 12340-85C00-0C0 | BEARING SET, CRANKSHAFT | | 5 | 5 | | |
| | | (STD,T:2,NON) | | | | | |
| 9-4 | 12340-85C00-0D0 | BEARING SET, CRANKSHAFT | | 5 | 5 | | |
| | | (STD,T:2,YELLOW) | | | | | |
| 9-5 | 12340-85C00-0E0 | BEARING SET, CRANKSHAFT | | 5 | 5 | | |
| | | (STD,T:2,BLUE) | | | | | |
| 9-6 | 12300-85820-0AA | BEARING SET, CRANKSHAFT | | 5 | 5 | | |
| | | (US:0.25,T:2.125,RED/GREEN) | | | | | |
| 9-7 | 12300-85820-0BA | BEARING SET, CRANKSHAFT | | 5 | 5 | | |
| , , | | (US:0.25,T:2.125,RED/BLACK) | | | | | |
| 9-8 | 12300-85820-0CA | BEARING SET, CRANKSHAFT | | 5 | 5 | | |
| , 0 | 12000 00020 001 | (US:0.25,T:2.125,RED/NON) | | | | | |
| 9-9 | 12300-85820-0DA | BEARING SET, CRANKSHAFT | | 5 | 5 | | |
| | , 2000 00020 0DA | (US:0.25,T:2.125,RED/YELLOW) | | - | - | | |
| 9-10 | 12300-85820-0EA | BEARING SET, CRANKSHAFT | | 5 | 5 | | |
| , 10 | 12000 00020 012 | (US:0.25,T:2.125,RED/BLUE) | • | . • | · . | | |
| | en e | (00.0.20)1.2.120,1120/1020/ | | | | | |

FIG. 10


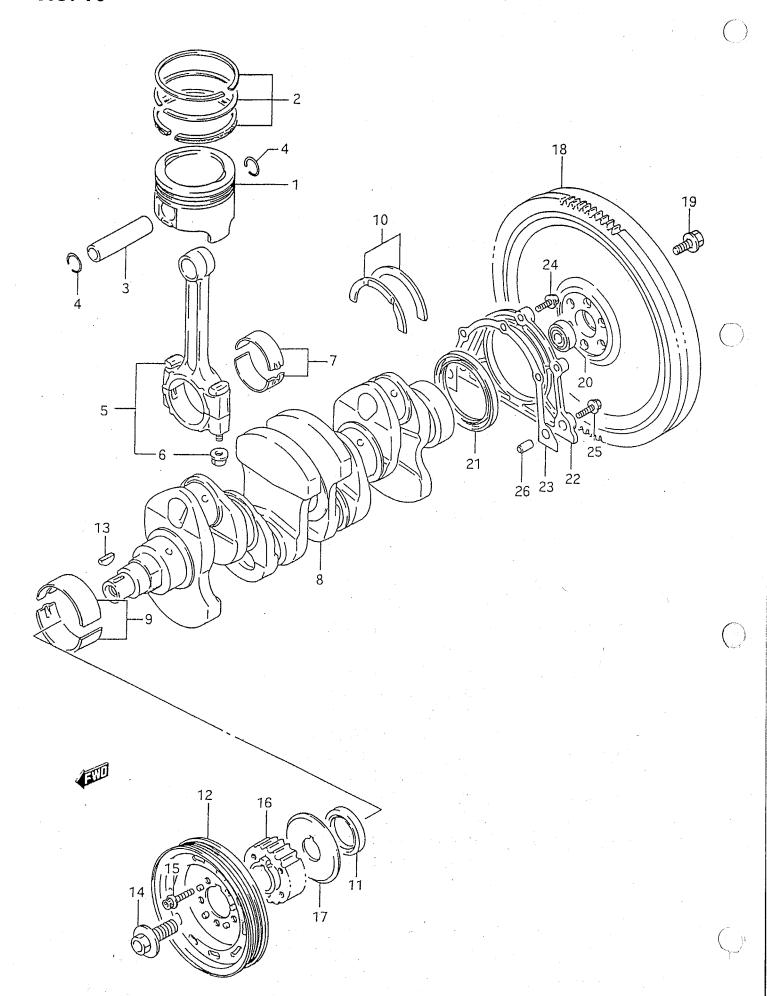


FIG. 010 (1-B-12) CRANKSHAFT (2 VALVE)

| REF. | | | | Q, | TY | | |
|------|------|-----------------|---|-------|----|-------------|---|
| | N.º | PART Nº | DESCRIPTION | С | ٧ | remarks | |
| | 10-1 | 12300-85810 | BEARING SET, CRANK THRUST (STD,T:2.5) | 1 | 1 | | |
| | 10-2 | 12300-85810-012 | BEARING SET, CRANK THRUST (OS:0.125,T:2.563) | 1 | 1 | | |
| | 11 | 09283-32038 | SEAL, FRONT OIL (32X47X6) | 1 | 1 | | |
| | 12 | 12610-71C11 | PULLEY, CRANKSHAFT | 1 | 1 | | |
| | 13 | 08341-31059 | KEY | 1 | 1 | | |
| | 14 | 12619-85C00 | BOLT | 1 | 1 | | |
| | 15 | 09103-06185 | BOLT (6X20) | 5 | 5 | | 4 |
| | 16 | 12631-86500 | PULLEY, CRANK TIMING BELT | 1 | 1 | | |
| | 17 | 12635-78401 | GUIDE, TIMING BELT | 1 | 1 | | |
| 1 | 18 | 12620-85C00 | FLYWHEEL | 1 | 1 | | |
| | 19 | 09103-10200 | BOLT | 6 | 6 | | |
| | 20 | 12623-60A00 | BEARING, INPUT SHAFT | 1 | 1 | | |
| | 21 | 09283-68002 | SEAL, REAR OIL (68X86X8) | 1 | 1 | | |
| | 22 | 11341-82000 | HOUSING, OIL SEAL | 1 , | 1 | | |
| | 23 | 11349-85C00 | GASKET, OIL SEAL HOUSING | 1 | 1 | | |
| | 24 | 01550-06203 | BOLT | 3 | 3 | | |
| | 25 | 01550-06253 | BOLT | 2 | 2 | | |
| | 26 | 04211-09109 | PIN | 2 | 2 | | |

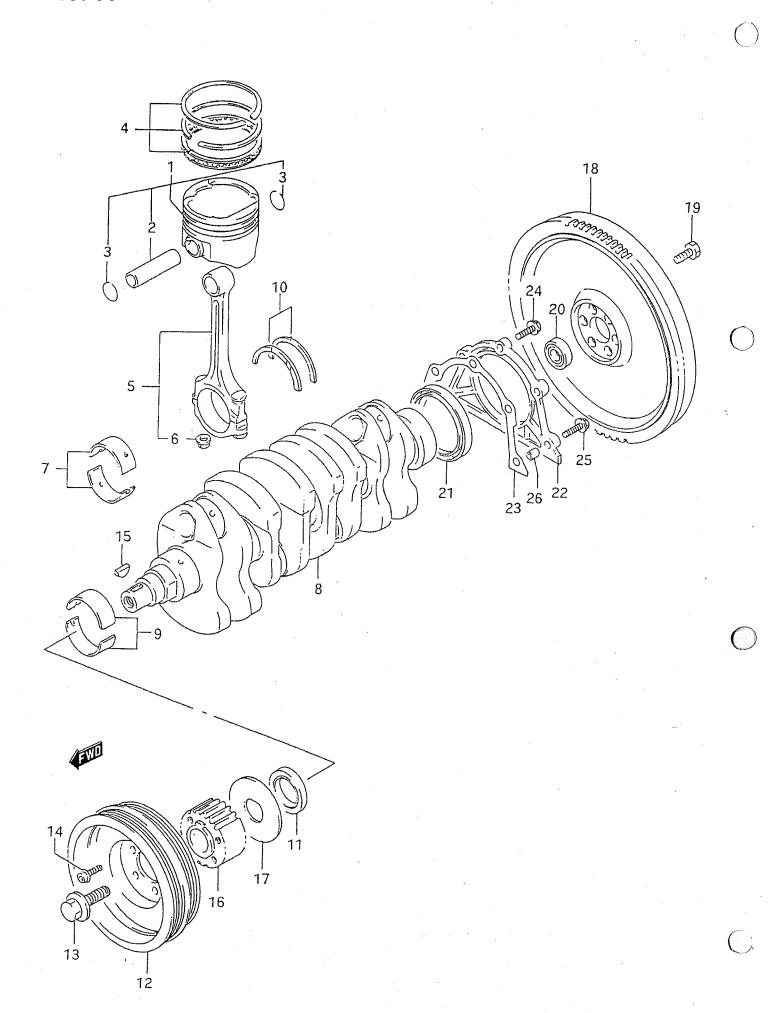

| REF. | | | (| Q, TY | | | |
|------|-----------------|---|---|-------------------|--------|------------|--|
| N.º | PART Nº | DESCRIPTION | |) | ٧ | REMARKS | |
| | | DISTON SET (STD MADIC 1) | ^ | | 1. | | |
| 1-1 | 12100-71820-0A0 | PISTON SET (STD, MARK 1) | | 4 4 | 4 4 | | |
| 1-2 | 12100-71820-0B0 | PISTON SET (STD, MARK 2) | | 4 4 | 4 | | |
| 1-3 | 12100-71820-025 | PISTON SET (OS:0.25) | | 1 4 | 4 | | |
| 1-4 | 12100-71820-050 | PISTON SET (OS:0.5) | | | | | |
| 2 | 12151-85C00 | .PIN, PISTON | | 4 3 | 4 8 | | |
| 3 | 12153-85C00 | .CIRCLIP | | | 8 4 | | |
| 4-1 | 12140-60A50 | RING SET, PISTON (STD) | | 4 | | | |
| 4-2 | 12140-60A50-025 | RING SET, PISTON (OS:0.25) | | 4 . | 4 | | |
| 4-3 | 12140-60A50-050 | RING SET, PISTON (OS:0.5) | | 4 | 4 | | |
| 5 | 12160-71C10 | CONNROD ASSY | | 4 | 4 | | |
| 6 | 09159-08033 | NUT | | 3 | . 8 | | |
| 7-1 | 12100-85810-0A0 | BEARING SET, CONNROD (STD,T:1.5) | | 4 | 4 | | |
| 7-2 | 12100-85810-025 | BEARING SET, CONNROD | 4 | 4 | 4 | | |
| | | (US:0.25,T:1.625) | | | | | |
| 8 | 12221-71C10 | CRANKSHAFT | | ľ | 1 | | |
| 9-1 | 12340-85C00-0A0 | BEARING SET, CRANKSHAFT | | 5 | 5 | | |
| | | (STD,T:2,GREEN) | | | | | |
| 9-2 | 12340-85C00-0B0 | BEARING SET, CRANKSHAFT (STD,T:2,BLACK) | 3 | 5 | 5 | | |
| 9-3 | 12340-85C00-0C0 | BEARING SET, CRANKSHAFT | | 5 | 5 | | |
| 9-3 | 12340-83000-000 | (STD,T:2,NON) | • | , | | | |
| 9-4 | 12340-85C00-0D0 | BEARING SET, CRANKSHAFT (STD,T:2,YELLOW) | 3 | 5 | 5 | | |
| 9-5 | 12340-85C00-0E0 | BEARING SET, CRANKSHAFT | | 5 | 5 | | |
| | | (STD,T:2,BLUE) | | | | | |
| 9-6 | 12300-85820-0AA | BEARING SET, CRANKSHAFT | | 5 | 5 | | |
| | | (US:0.25,T:2.125,RED/GREEN) | | | | | |
| 9-7 | 12300-85820-0BA | BEARING SET, CRANKSHAFT | : | 5 | 5 | | |
| | | (US:0.25,T:2.125,RED/BLACK) | | | | ⇒ 1 | |
| 9-8 | 12300-85820-0CA | BEARING SET, CRANKSHAFT | ; | 5 | 5 | | |
| | , | (US:0.25,T:2.125,RED/NON) | | | | · . | |
| 9-9 | 12300-85820-0DA | BEARING SET, CRANKSHAFT | | 5 | 5 | | |
| | | (US:0.25,T:2.125,RED/YELLOW) | • | | | | |
| 9-10 | 12300-85820-0EA | BEARING SET, CRANKSHAFT | | 5 | 5 | | |
| | | (US:0.25,T:2.125,RED/BLUE) | | | | <i>r</i> | |
| 10-1 | 12300-85810 | BEARING SET, CRANK THRUST | | 1 | 1 | | |
| | | (STD,T:2.5) | | | | | |
| 10-2 | 12300-85810-012 | BEARING SET, CRANK THRUST | | 1 | 1 | | |
| | | (OS:0.125,T:2.5) | | | | | |

FIG. 11


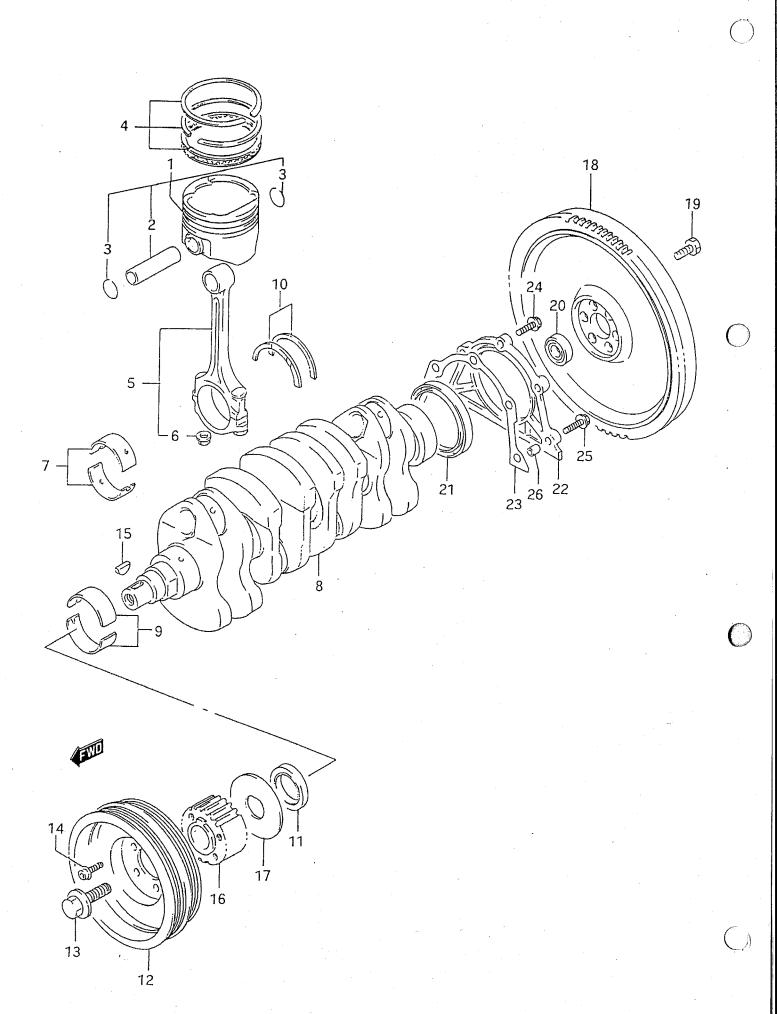



FIG. 011 (1-B-14) CRANKSHAFT (4 VALVE)

| REF. | PART Nº | DESCRIPTION | Q, | ΤΥ | | |
|------------|-------------|---------------------------|----|-----|---------|--|
| N.º | | | C | V | REMARKS | |
| | | · | | | | |
| 11 | 09283-32038 | SEAL, FRONT OIL | 1 | 1 | | |
| 12 | 12610-71C11 | PULLEY, CRANKSHAFT | 1 | 1 | | |
| 13 | 12619-53B01 | BOLT, CRANK PULLEY | 1 | 1 | | |
| 14 | 09103-06185 | BOLT (6X20) | 5 | 5 | | |
| 15 | 08341-31059 | KEY | 1 | 1 | | |
| 16 | 12631-53B00 | PULLEY, CRANK TIMING BELT | 1 | 1 | | |
| 1 <i>7</i> | 12635-78401 | GUIDE, TIMING BELT | 1 | 1 | | |
| 18 | 12620-85C00 | FLYWHEEL | 1 | 1 . | MT | |
| 19 | 09103-10200 | BOLT (10X18.5) | 6 | 6 | MT | |
| 20 | 12623-60A00 | BEARING, INPUT SHAFT | 1 | 1 | MT | |
| 21 | 09283-68002 | SEAL, REAR OIL | 1 | 1 | | |
| 22 | 11341-82000 | HOUSING, OIL SEAL | 1 | 1 | | |
| 23 | 11349-85C00 | GASKET, OIL SEAL HOUSING | 1 | 1 | | |
| 24 | 01550-06203 | BOLT | 3 | 3 | | |
| 25 | 01550-06253 | BOLT | 2 | 2 | | |
| 26 | 4211-09109 | PIN | 2 | 2 | | |

FIG. 12

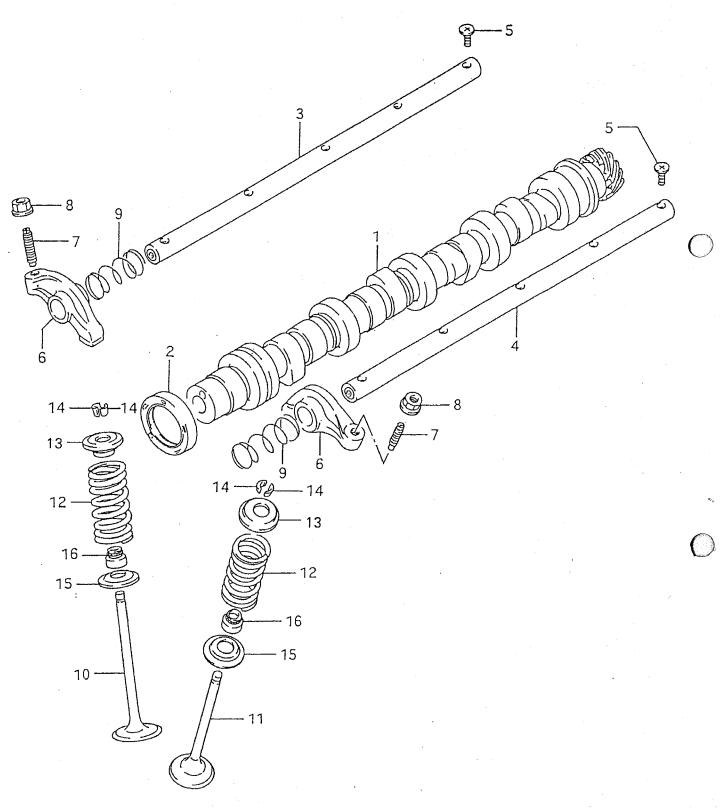


| REF. | | | Q, | TY | | |
|------|-------------|------------------------------|-----|----|---------|---|
| N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS | |
| | | | | | | _ |
| 1. | 12710-56B11 | CAMSHAFT | 1 | 1 | | |
| 2 | 09283-32038 | SEAL, CAMSHAFT OIL (32X47X6) | 1 | 1 | | |
| 3 | 12860-85C00 | SHAFT, INTAKE ROCKER ARM | 1 | 1 | | |
| 4 | 12870-85C00 | SHAFT, EXHAUST ROCKER ARM | 1 | 7 | | |
| 5 | 02122-06123 | SCREW | 10 | 10 | | |
| 6 | 12841-60A01 | ARM, VALVE ROCKER | 8 | 8 | | |
| 7 | 12848-85C00 | SCREW, VALVE ADJUSTING | 8 | 8 | | |
| 8 | 12849-85C00 | NUT | 8 | 8 | | |
| 9 | 12891-82001 | SPRING, ROCKER ARM | 8 | 8 | | |
| 10 | 12911-60A10 | VALVE, INTAKE | 4 | 4 | | |
| 11 | 12915-60A10 | VALVE, EXHAUST | 4 | 4 | | |
| 12 | 12921-85C00 | SPRING, VALVE | 8 | 8 | , | |
| 13 | 12931-85C00 | RETAINER, COTTER VALVE | . 8 | 8 | | |
| 14 | 12932-82000 | COTTER, VALVE | 16 | 16 | | |
| 15 | 12933-73000 | SEAT, VALVE SPRING | 8 | 8 | | |
| 16 | 09289-07005 | SEAL, VALVE STEM | 8 | 8 | | |

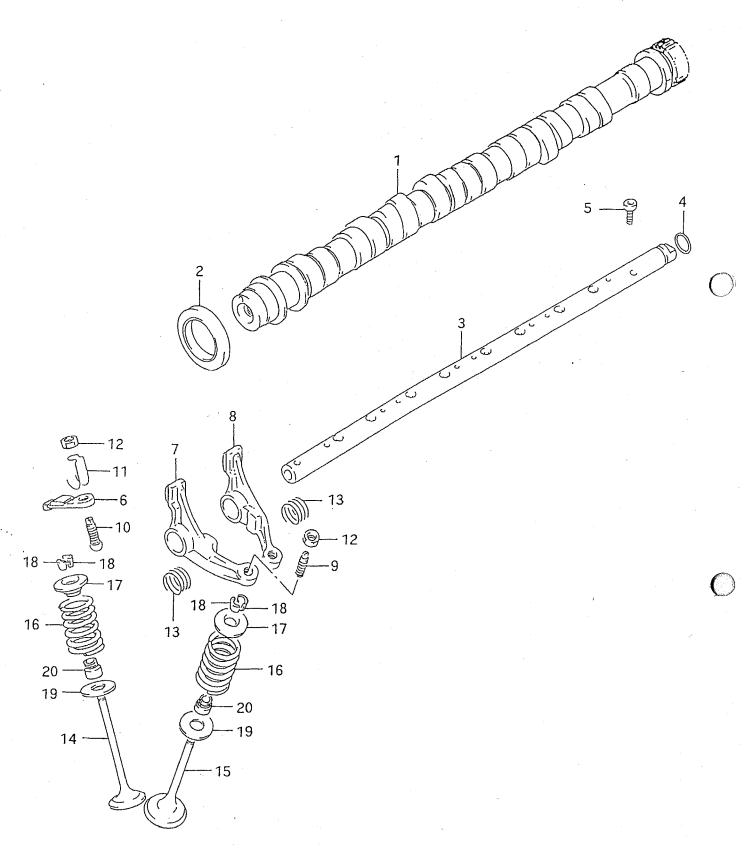

1300

| . 7 | REF. N.º | | DESCRIPTION | Q, | TY | |
|------|-------------|-------------|----------------------------|-----|----|---------|
| | | | | C | V | REMARKS |
| | 1 | 12710-58B00 | CAM SHAFT | 1 | 1 | |
| | 2 | 09283-32038 | SEAL, CAMSHAFT OIL | 1 | 1 | |
| | 3 | 12860-71C00 | SHAFT, ROCKER ARM | 1 | 1 | |
| | 4 | 09280-12009 | O RING | 1 | 1 | |
| | 5 | 07130-06163 | BOLT | · 6 | 6 | |
| | 6 | 12841-71C00 | ARM, VALVE ROCKER INTAKE | . 8 | 8 | |
| | 7 | 12844-71C01 | ARM, VALVE ROCKER EXH NO.1 | 4 | 4 | |
| | 8 | 12845-71C01 | ARM, VALVE ROCKER EXH NO.2 | 4 | 4 | |
| | 9 | 12842-32411 | SCREW, ADJUSTING | . 8 | 8 | |
| | 10 | 12846-61D00 | SCREW, VALVE ADJUSTING | 8 | 8 | |
| ٠. ۲ | 11 | 12849-71C01 | CLAMP, ROCKER ARM | 8 | 8 | |
| - 1 | 12 | 12843-32400 | NUT | 16 | 16 | |
| | 13 | 12891-71C00 | SPRING | 5 | 5 | |
| | 14 | 12911-71C00 | VALVE, INTAKE | 8 | 8 | |
| | 15 | 12915-71C50 | VALVE, EXHAUST | 8 | 8 | |
| | 16 | 12921-71C01 | SPRING, VALVE | 16 | 16 | |
| | 1 <i>7</i> | 12931-71C10 | RETAINER, VALVE SPRING | 16 | 16 | |
| | 18 | 12932-24400 | COTTER, VALVE | 32 | 32 | |
| | 19 | 12933-71C00 | SEAT, VALVE SPRING | 16 | 16 | |
| | 20 | 09289-05012 | SEAL, VALVE STEM | 16 | 16 | |

FIG. 14

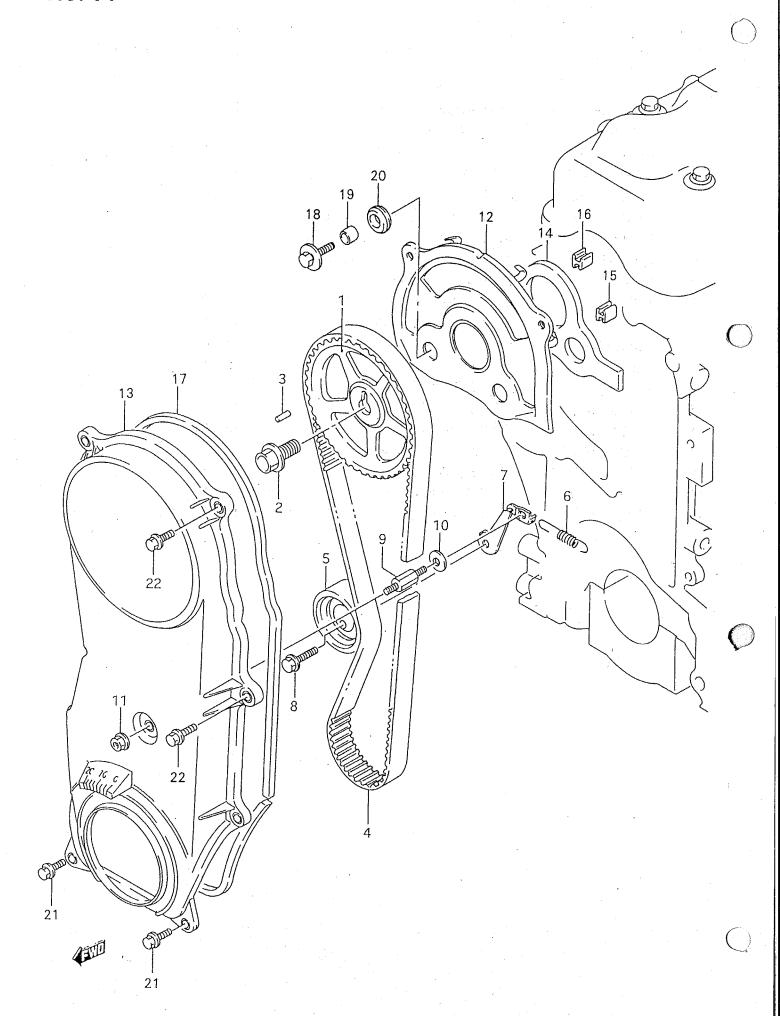

| | REF. | | DESCRIPTION | Q, TY | | |
|---|------------|-------------|-----------------------------|-------|------|-------------|
| | N.º | PART Nº | | С | V | REMARKS |
| | 1 | 12741-60A01 | GEAR, CAMSHAFT TIMING | 1 | 1 | |
| | 2 | 01550-12253 | BOLT | 1 | 1 | |
| | 3 | 04221-05109 | PIN | 1 | 1 | |
| | 4 | 12761-85C00 | BELT, TIMING | 1 | 1 | |
| | 5 | 12810-82003 | TENSIONER ASSY, TIMING BELT | 1 | 1 | |
| | 6 | 12821-60A01 | SPRING, TENSIONER | 1 | 1 | |
| | 7. | 12830-60A00 | PLATE, TENSIONER | 1 | 1 | |
| | 8. | 01550-08353 | BOLT | 1 | 1 | |
| | 9 | 09108-06056 | STUD BOLT | 1 | 1 | |
| | 10 | 09160-06057 | WASHER (6.5X18X1.6) | 1 | 1 | |
| | 11 | 08316A16063 | NUT | 1 | 1 | |
| j | 12 | 11360-82001 | COVER, TIMING BELT INSIDE | 1 | 1. | |
| | 13 | 11390-60A11 | COVER, TIMING BELT OUTSIDE | 1 | 1 | |
| | 14 | 11383-82000 | SEAL, INSIDE COVER | 1 | 1 | |
| | 15 | 11394-70B00 | SEAL, WATER PUMP & OIL PUMP | 1 | 1 | L:28>18.5 |
| | 16 | 11394-70B00 | SEAL, WATER PUMP & HEAD | 1 | 1 | L:28>12.5 |
| | 1 <i>7</i> | 11396-71C00 | SEAL, OUTSIDE COVER | 1 | 1, , | L:1070>1050 |
| | 18 | 01107-06206 | BOLT (6X20) | 2 | 2 | |
| | 19 | 09180-06106 | SPACER (6.8X10X7) | 2 | 2 | * * |
| | 20 | 09308-10004 | GROMMET | 2 | 2 | |
| | 21 | 01550-06163 | BOLT | 4 | 4 | |
| | 22 | 01550-06203 | BOLT | 4 | 4 | |
| | | | | | | |

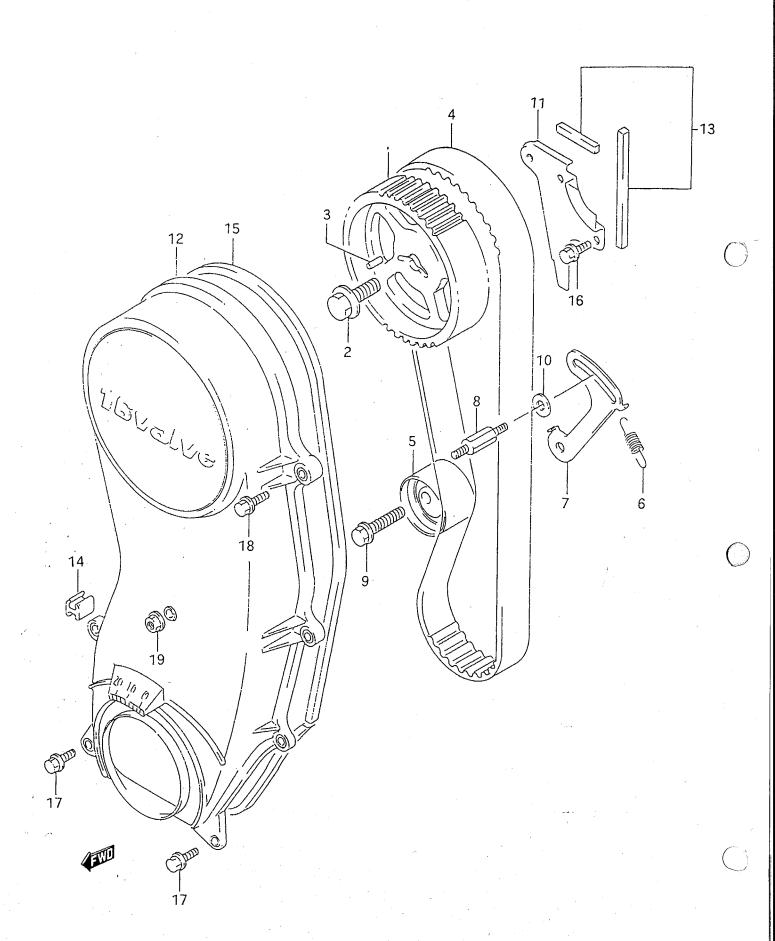


FIG. 015 (1-C-04) TIMING BELT (4 VALVE)

| REF. | PART Nº | DESCRIPTION | Q, TY | | |
|------------|-------------|-----------------------------|-------|---|-----------|
| N.º | | | С | ٧ | REMARKS |
| 1 | 10741 52001 | | 1 | 1 | |
| 1 | 12741-53B01 | PULLEY, CAM SHAFT TIMING | 1 | 1 | |
| 2 | 01550-12253 | BOLT | 1 | - | |
| 3 | 04221-05109 | PIN | 1 | ı | |
| 4 | 12761-71C00 | BELT, TIMING | 1 | 1 | |
| 5 | 12810-71C02 | TENSIONER ASSY, TIMING BELT | 1 | 1 | |
| 6 | 12821-71C00 | SPRING, TENSIONER | 1 | 1 | · · |
| 7 | 12822-70C00 | PLATE, TENSIONER | 1 | 1 | |
| 8 | 12825-71C00 | BOLT, TENSIONER PLATE | 1 | 1 | |
| 9 | 01550-08353 | BOLT | Ĩ | 1 | |
| 10 | 09160-06057 | WASHER (6.5X18X1.6) | 1 | 1 | |
| 11. | 11360-71C00 | COVER, TIMING BELT INSIDE | 1 | 1 | |
| 12 | 11390-71C00 | COVER, TIMING BELT OUTSIDE | 1 | 1 | • |
| 13 | 11480-71C00 | SEAL SET, INSIDE COVER | 1 | 1 | |
| 14 | 11394-70B00 | SEAL, WATER PUMP | 1 | 1 | L:28>18.5 |
| 15 | 11396-71C00 | SEAL, OUTSIDE COVER | 1 | 1 | |
| 16 | 09103-06083 | BOLT | 2 | 2 | |
| 1 <i>7</i> | 01550-06163 | BOLT | 2 | 2 | |
| 18 | 01550-06203 | BOLT | 6 | 6 | |
| 19 | 08316-10063 | NUT | 1 . | 1 | |
| | | | | | |

FIG. 16

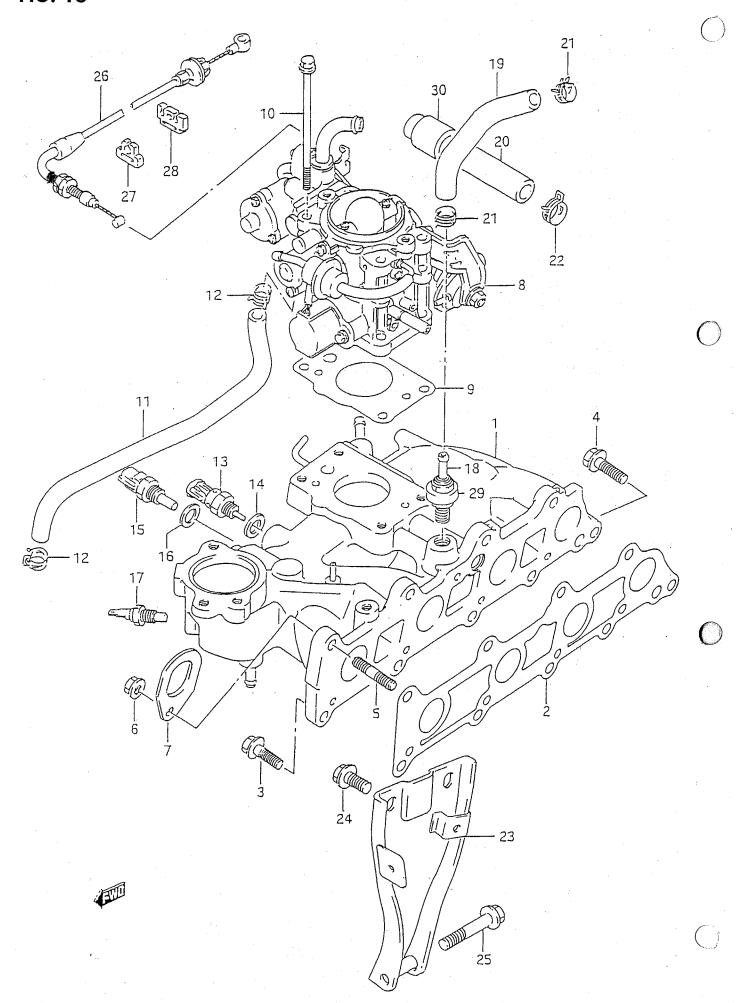


FIG. 016 (1-C-05) INTAKE MANIFOLD AND THROTTLE BODY (2 VALVE)

| REF. | | • | | Q, | TY | |
|------|----------------------|-------------------------------|----|-----|-----|---------|
| N.º | PART Nº | DESCRIPTION | _ | С | ٧ | REMARKS |
| | | | | | | |
| 1 | 13110-58B01 | MANIFOLD, INTAKE | | 1 | 1 | |
| 2 | 13119-8 <i>5</i> C00 | GASKET, INTAKE MANIFOLD | | 1 | 1 | |
| 3 | 01550-08253 | BOLT | | 5 | 5 | |
| 4 | 01550-08253 | BOLT | | 1 | 1 . | • |
| 5 | 01421-08253 | BOLT | | 3 | 3 | |
| 6 | 08316-10083 | NUT | | 3 | 3 | |
| 7 | 11851-73000 | HOOK, ENGINE | | 1 | 1 | |
| 8 | 13400-56B30 | BODY ASSY, THROTTLE | | 1 | 1 | |
| 9 | 13421-85C00 | GASKET, THROTTLE BODY | | 1 | 1 | |
| 10 | 09103-08230 | BOLT (8X100) | | 4 | 4 | |
| 11 | 13492-56B01 | HOSE | | 1 | 1 | |
| 12 | 17879-85C00 | CLIP | | 2 | 2 | |
| 13 | 13650-56B00 | SENSOR, INLET AIR TEMP | | 1 | 1 , | |
| 14 | 09168-12016 | GASKET, INLET AIR TEMP SENSOR | | 1 | 1 | |
| 15 | 13650-61B00 | SENSOR, WATER TEMP | | 1 | 1 | |
| 16 | 09168-12016 | GASKET, WATER TEMP SENSOR | | 1 | 1 | |
| 17 | 34850-82012 | GAUGE ASSY, WATER TEMP | | -1 | 1 | |
| 18 | 18118-80010 | VALVE, PCV | | 1., | 1 | |
| 19 | 09354-70153-600 | HOSE, PCV (L:600>120) | | 1 | 1 | |
| 20 | 09354-13203-600 | HOSE, BREATHER (L:600>120) | | 1 | 1 | |
| 21 | 11195-85C00 | CLAMP, PCV HOSE | | 2 | 2 | |
| 22 | 11196-85C00 | CLAMP, BREATHER HOSE | | 1 | 1 | |
| 23 | 13620-56B01 | STIFFENER, INTAKE MANIFOLD | | 1 | . 1 | |
| 24 | 01550-10203 | BOLT | | 2 | 2 | |
| 25 | 01550-10603 | BOLT | | 1 | 1 | |
| 26-1 | 15910-85C20 | CABLE ASSY, ACCEL | ,; | 1 | 1 | LHD' |
| 26-2 | 15910A61A02 | CABLE ASSY, ACCEL | | 1 | 1 | RHD |
| 27 | 15991-61A02 | CLAMP | | 1 | 1 | LHD |
| 28 | 15991-83000 | CLAMP | | 1 | 1 | LHD |
| 29 | 09354-13203-600 | PROTECTOR (L:600>330) | | 1 . | 1 | |
| 30 | 11194-80C00 | PROTECTOR (L:120>60) | | 1 | 1 | |
| | | | | | | |

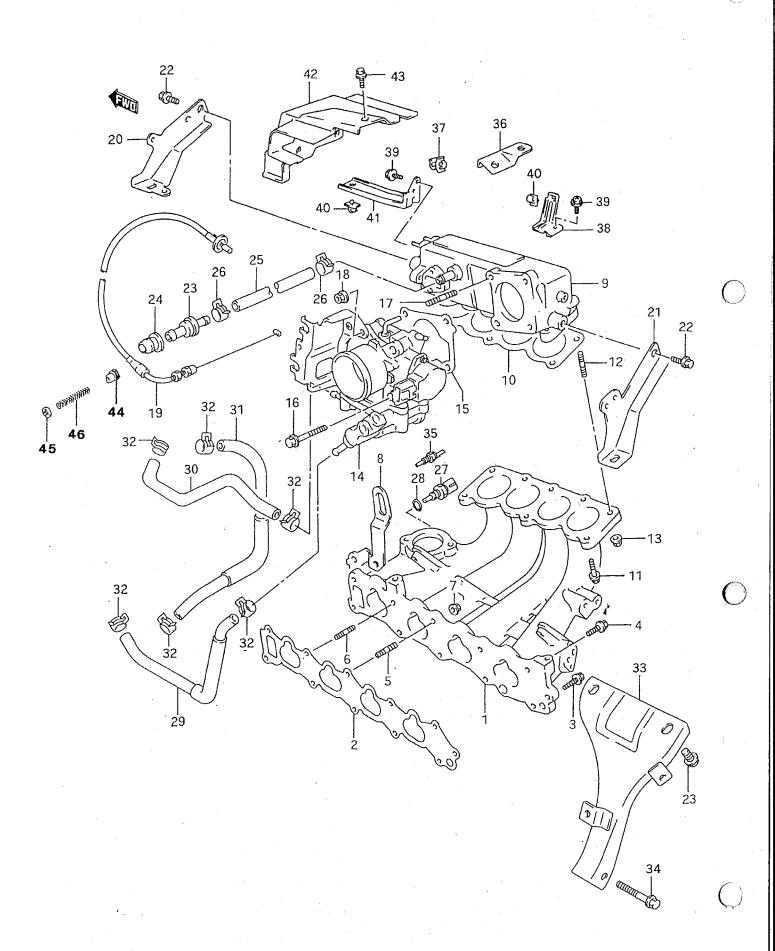


FIG. 017 (1-C-06) INTAKE MANIFOLD AND THROTTLE BODY (4 VALVE)

| REF. | | | | Q, TY | | | |
|------|-----------------|-----------------------------|-----|-------|-----|--|--|
| N.º | PART Nº | DESCRIPTION | | С | ٧ | REMARKS | |
| 1 | 13110-58B01 | MANIFOLD, INTAKE | | 1 | 1 | | |
| 2 | 13119-57B00 | GASKET, INTAKE MANIFOLD | | 1 | 1 | | |
| 3 | 01550-08253 | BOLT | | 1 | 1 | * | |
| 4 | 01550-08253 | BOLT | | 2 | 2 | | |
| 5 | 01421-08253 | STUD BOLT | | 7 | 7 | * | |
| 6 | 01421-08253 | STUD BOLT | 1.5 | 1 | 1 | * . | |
| 7 | 08316-10083 | NUT | | 8 | 8 | | |
| 8 | 11852-57B01 | HOOK, ENGINE | | 1 | 1 | • | |
| 9 | 13140-58B00 | TANK, SURGE INTAKE | | 1 | 1 | | |
| 10 | 13122-58B00 | GASKET, SURGE TANK | | 1 | 1 | | |
| 11 | 01550-08253 | BOLT | | 5 | 5 | | |
| 12 | 01421-08203 | STUD BOLT | | 3 | 3 | , | |
| 13 | 08316-10083 | NUT | | 3 | 3 | | |
| 14-1 | 13400-58B00 | BODY ASSY, THROTTLE | | 1 | 1 | MT | |
| 14-2 | 13400-58B10 | BODY ASSY, THROTTLE | | 1 | 1 | AT | |
| 15 | 13421-58B00 | GASKET, THROTTLE BODY | | 1 | 1 | | |
| 16 | 01550-08553 | BOLT | | 2 | 2 | A Company | |
| 17 | 01421-08553 | STUD BOLT | | 2 | 2 | ************************************** | |
| 18 | 08316-10083 | NUT | | 2 | 2 | | |
| 19-1 | 15910-57B11 | CABLE ASSY, ACCEL | | 1 | 1 | LHD | |
| 19-2 | 15910-57B02 | CABLE ASSY, ACCEL | | 1 | 1 | RHD | |
| 19-3 | 15910-86CA0 | CABLE ASSY, ACCEL | - | 1 | 1 | 1.9 DIESEL | |
| 20 | 13626-58B00 | STIFFENER, MANIFOLD NO.1 | | 1 | 1 | | |
| 21 | 13627-58B00 | STIFFENER, MANIFOLD NO.2 | | 1 | 1 | | |
| 22 | 01550-10203 | BOLT | | 6 | - 6 | V | |
| 23 | 18118-58B00 | VALVE, PCV | | · 1 | 1 | · · · · · · · · · · · · · · · · · · · | |
| 24 | 11198-58B00 | SEAL, PCV VALVE | * | 1 | 1 | | |
| 25 | 09354-80153-600 | HOSE, PCV | | 1 | 1 | L:600>150 | |
| 26 | 11195-85C00 | CLIP | | 2 | 2 | | |
| 27 | 13650-57F00 | SENSOR, WATER TEMP | | 1 | 1 | | |
| 28 | 09168-12016 | GASKET (12.2X21X0.8) | | 1 | 1 | | |
| 29 | 13491-58B00 | HOSE, WATER THROTTLE INLET | | 1 | 1 | | |
| 30 | 09352-70131-600 | HOSE, WATER THROTTLE OUTLET | | 1 | 1 | L:600>190 | |
| 31 | 13494-58B00 | HOSE, ISC OUTLET | | 1 | 1 | | |
| 32 | 09401-12404 | CLIP | | - 6 | 6 | | |



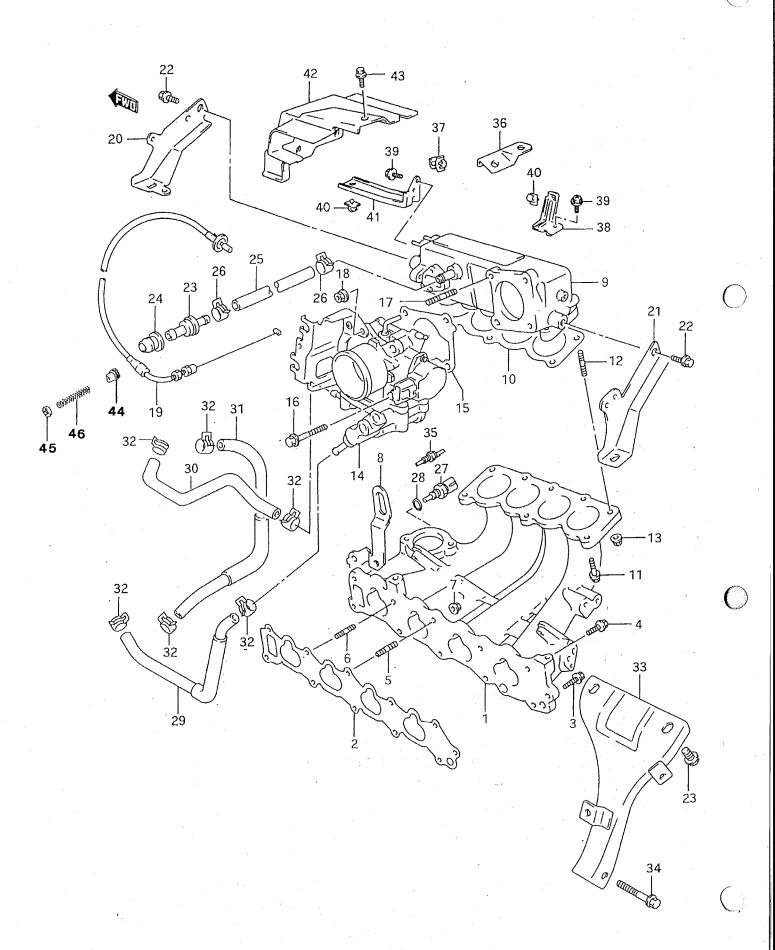


FIG. 017 (1-C-07) INTAKE MANIFOLD AND THROTTLE BODY (4 VALVE)

| REF. | | | | TY | | |
|------------|-------------------------------|-------------------------------|---|----|-------------|--|
| N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS | |
| | | · | | | | |
| 33 | 13620- <i>57</i> B01 | STIFFENER | 1 | 1 | | |
| 34 | 01550-10603 | BOLT | 1 | 1 | | |
| 35 | 34850-82012 | GAUGE ASSY, WATER TEMPERATURE | 1 | 1 | | |
| 36 | 1 <i>5</i> 91 <i>9-57</i> B11 | BRACKET, ACCEL CABLE CLAMP | 1 | 1 | LHD | |
| 37 | 09403-06318 | CLAMP | 1 | 1 | LHD | |
| - 38 | 15918-58B00 | BRACKET, ACCEL CABLE | 1 | 1 | RHD | |
| 39 | 02162-06123 | BOLT | 3 | 3 | RHD | |
| 40 | 09403-05313 | CLAMP | 2 | 2 | RHD | |
| 4 1 | 15919-58B10 | BRACKET | 1 | 1 | RHD | |
| 42 | 13471-58B00 | COVER, THROTTLE | 1 | 1 | | |
| 43 | 09103-06168 | BOLT (6X10) | 3 | 3 | | |
| 44 | 30026-86CA0 | GROMMET | 1 | 1 | 1.9 DIESEL | |
| 45 | 02036-86CA0 | PLANE WASHER, STOPPER | 1 | 1 | 1.9 DIESEL | |
| 46 | 30027-86CA0 | SPRING, SITUATION BUSH | 1 | 1 | 1.9 DIESEL | |

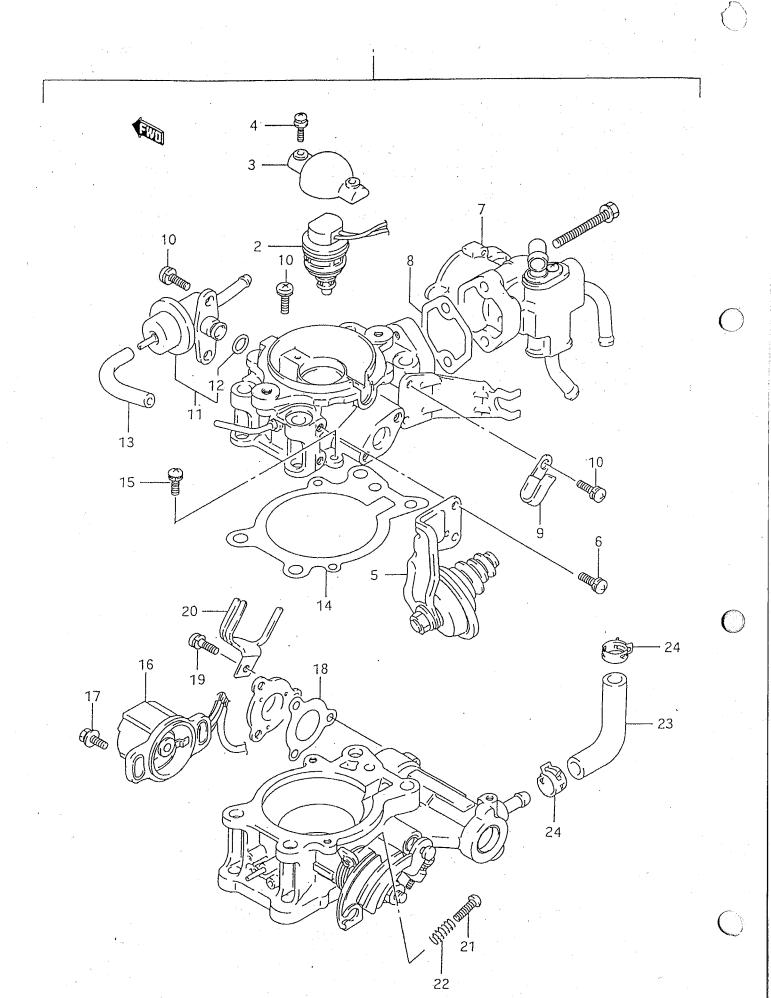

| REF. | | | Q, | TY | |
|------------|-------------------------------|------------------------------|------|-----|-----------|
| N.º | PART Nº | DESCRIPTION | C | ٧ | REMARKS |
| 1 | 13400-56B30 | BODY ASSY, THROTTLE | 1 | 1 | |
| 2 | 1 <i>57</i> 10- <i>5</i> 6B00 | .INJECTOR ASSY | 1 | 1 | |
| 3 | 13431-61A00 | .COVER | 1 | 1 | |
| 4 | 13439-61A00 | .SCREW, COVER | 2 | 2 | |
| 5 | 13432-61A00 | .BRACKET ASSY, DEPRESSION | 1 | 1 | |
| 6 | 02112-35123 | .SCREW, DEPRESSION BRACKET | 2 | 2 | |
| 7 | 18117-56B00 | SOLENOID ASSY | 1 | 1 | |
| 8 | 13441-56B00 | .GASKET, SOLENOID | 1 | 1 | |
| 9 | 09404-06206 | .CLIP, SOLENOID | 1 | 1 | |
| 10 | 02112-35123 | .SCREW | 5 | 5 | |
| , 11. | 15160-56B00 | .regulator assy | 1 | 1 | |
| 12 | 15167-61A00 | SEAL, REGULATOR | 1 | 1 | |
| 13 | 13687-72B00 | .HOSE | 1 | 1 . | L:275>70 |
| 14 | 13441-61A00 | .GASKET | 1 | 1 | |
| 15 | 02112-35253 | .SCREW | 1 | 1 | |
| 16 | 13420-56B00 | .SENSOR, THROTTLE | . 1 | 1 | |
| 1 <i>7</i> | 13428-58B00 | .BOLT | 2 | 2 | |
| 18 | 13442-61A00 | .GASKET | . 1 | 1 | |
| 19 | 02112-35123 | .SCREW | s. 3 | 3 | |
| 20 | 13445-61A00 | .CLIP | 1 | 1 | |
| 21 | 13443-61A00 | .SCREW, ADJUST | 1 | 1 | |
| 22 | 13444-61A00 | .SPRING, ADJUST SCREW | 1 | 1 | |
| 23 | 13491-56B00 | .HOSE | 1 | 1 | |
| 24 | 09401-12404 | CLIP | 2 | 2 | |
| 25 | 13403-56B00 | .GASKET SET, THROTTLE BODY | · 1 | 1 | NOT SHOWN |
| | | (INC.REF.NO.8,12,14 AND 18.) | | | |

 


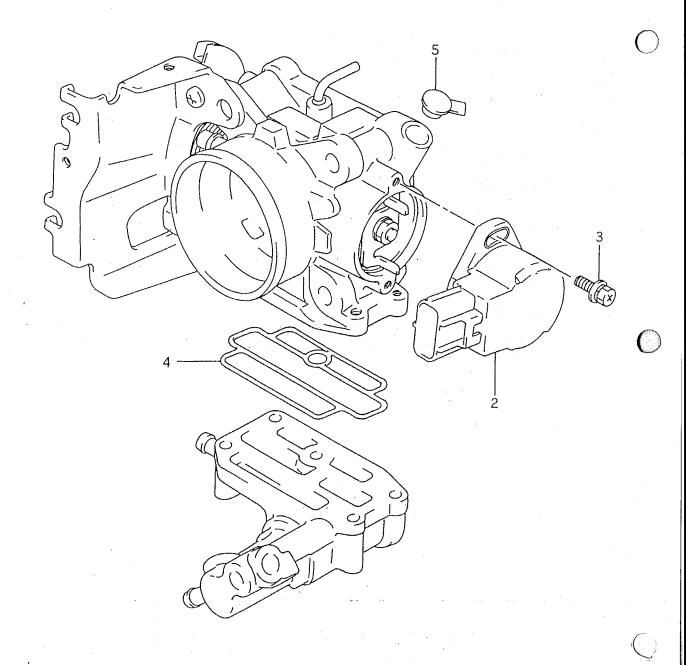


FIG. 019 (1-C-09) THROTTLE BODY (4 VALVE)

| REF. | PART Nº | | Q, | TY | | |
|------|-------------|---------------------|-----|----|---------|--|
| N.º | | DESCRIPTION | С | ٧ | REMARKS | |
| | | | | | 1 | |
| 1 -1 | 13400-58B00 | BODY ASSY, THROTTLE | 1. | 1 | MT | |
| 1 -2 | 13400-58B10 | BODY ASSY, THROTTLE | 1 | 1 | AT | |
| 2 | 13420-58B00 | .SENSOR, THROTTLE | 1 | 1 | | |
| 3 | 13428-58B00 | .BOLT | 2 | 2 | | |
| . 4 | 18138-58B00 | .O RING | - 1 | 1 | | |
| 5 | 13416-58B00 | .CAP | . 1 | 1 | | |

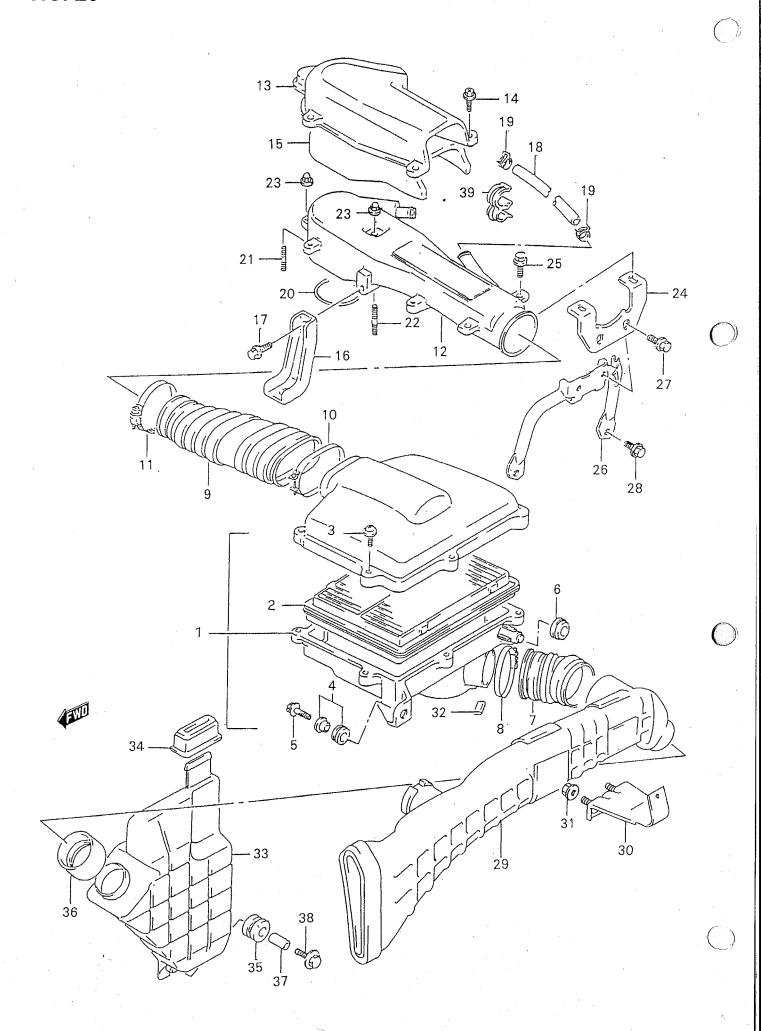

| | REF. | | | C | Ω, TY | |
|---------|----------------|-----------------|----------------------------|-----|-------|------------------|
| | N.º | PART Nº | DESCRIPTION | C | ٧ | REMARKS |
| | | | | | | |
| | 1 | 13700-61A01 | CLEANER ASSY, AIR | 1 | 1 | |
| | 2 | 13780-61A00 | .FILTER, AIR CLEANER | 1 | 1 | |
| | 3 | 02112-16203 | SCREW | 6 | 6 | |
| | 4 | 13813-61AT0 | .GROMMET SET | 2 | 2 | |
| | 5 | 01550-06253 | BOLT | 2 | 2 | |
| | 6 | 09308-15006 | GROMMET | 1 | 1 | |
| | 7 | 13871-56B00 | HOSE, AIR CLEANER INLET | 1 | 1 | |
| | 8 | 09402-68202 | CLAMP | 1 | 1 | |
| | 9-1 | 13880-61A00 | HOSE ASSY, OUTLET | 1 | 1 | |
| · · · · | -92 | 13880-86CA0 | HOSE ASSY, OUTLET | | | 1.9-DIESEL - MAL |
| () | 10 | 13891-61A00 | CLAMP | 1 | 1 | 13880-86CBO |
| | 11 | 09402-82511 | CLAMP | 1 | 1 | BUENO |
| | 12 | 13830-56B00 | CASE, AIR INTAKE | 1 | 1 | |
| | 13 | 13840-56B00 | COVER, INTAKE AIR CASE | 1 | 1 | |
| | 14 | 02142-06123 | SCREW | 4 | 4 | |
| | 15 | 13845-56B00 | INSULATOR, AIR INTAKE CASE | . 1 | 1 | |
| | 16 | 13850-56B00 | STIFFENER, CASE | 1 | 1 | |
| | 17 | 01550-08163 | BOLT | 2 | 2 | |
| | 18 | 09354-90143-600 | HOSE, ISC (L:600>340) | 1 | 1 | |
| | 19 | 18119-85C50 | CLIP, ISC HOSE | ^ 2 | 2 | |
| | 20 | 13879-81050 | SEAL, AIR INTAKE CASE | 1 | 1 | |
| | 21 | 01421-06303 | BOLT | 1 | 1 | |
| | 22 | 01421-06653 | BOLT | 1 | 1 | |
| | 23 | 08316-10063 | NUT | 2 | 2 | |
| | 24 | 13861-61A01 | PLATE, AIR INTAKE CASE | 1 | . 1 | |
| | 25 | 01550-08163 | BOLT | 2 | 2 | |
| | 26 | 13850-61A02 | BRACKET, AIR INTAKE CASE | 1 | 1 | |
| | 27 | 01550-08123 | BOLT | 2 | 2 | • |
| | 28 | 01550-08163 | BOLT | 2 | 2 | |
| | 29 | 13820-56B00 | CASE, AIR CLEANER SUCTION | 1 | 1 | |
| | 30 | 13829-56B01 | CLAMP, SUCTION CASE | 2 | 2 | |
| | 31 | 08316-10063 | NUT | 4 | 4 | |
| | 32 | 13814-61A00 | CUSHION, AIR CLEANER | 1 | 1 | |



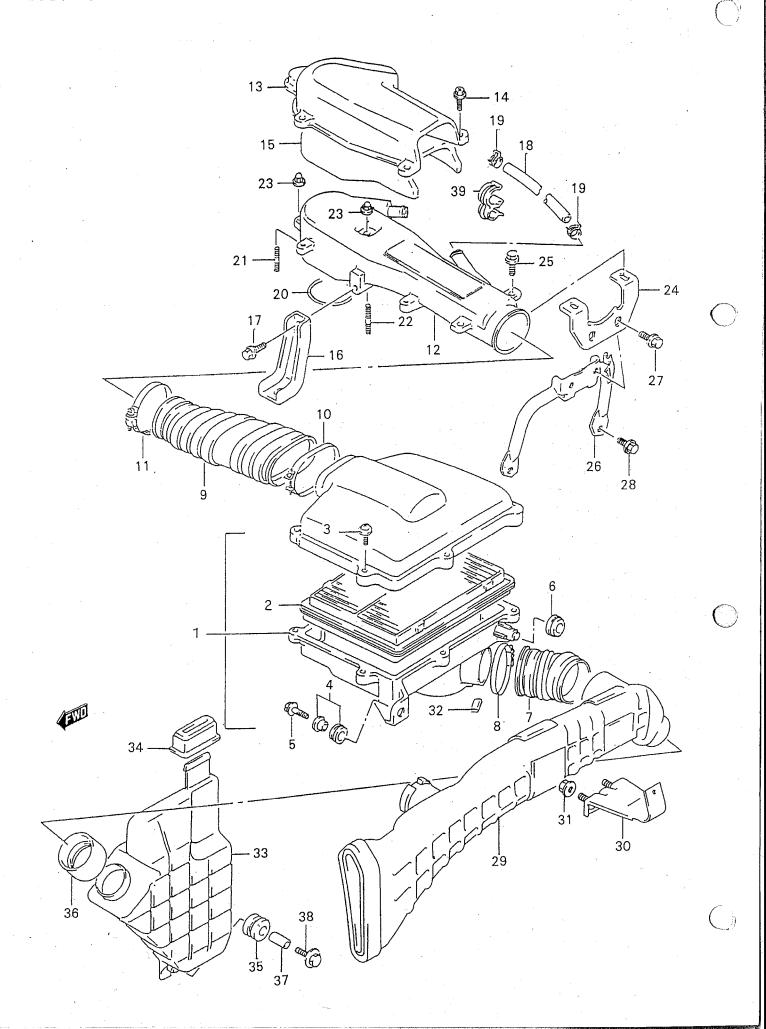


FIG. 020 (1-C-11) AIR CLEANER (2 VALVE)

| REF. | PART Nº | DESCRIPTION | Q, TY | | |
|------|---------------------|---------------------|-------|---------|--|
| N.º | | | C V | REMARKS | |
| | | | | | |
| 33 | 13760-56B01 | RESONATOR | 1 1 | | |
| 34 | 13765-56B01 | CUSHION, UPPER | 1 1 | * | |
| 35 | 13766-56B00 | CUSHION, LOWER | 1 1 | | |
| 36 | 13767-56B00 | JOINT, RESONATOR | 1 1 | | |
| 37 | 09180A08129 | COLLAR, RESONATOR | 1 1 | | |
| 38 | 09116-06155 | BOLT (6X35) | 1 1 | | |
| 39 | 09408-001 <i>57</i> | CLIP, BREATHER HOSE | 1 1 | | |
| | | · · | | | |

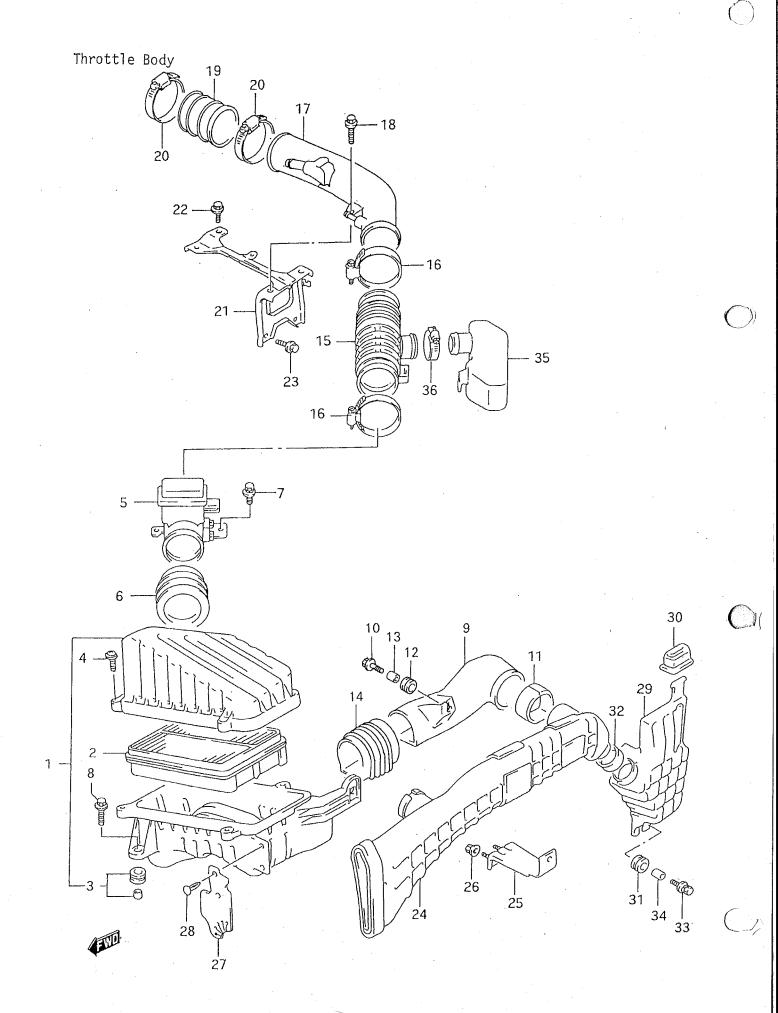


| | REF. | | | Q, TY | | |
|---|------|----------------------|--------------------------------|----------|---|---------|
| | N.º | PART Nº | DESCRIPTION | C | V | REMARKS |
| | 1 | 13700-58B00 | CLEANER ASSY, AIR | 1 | 1 | |
| | 1 | | ELEMENT | ' 1 | 1 | |
| | 2 | 13780-58B00 | .GROMMET SET | 3 | 3 | |
| | 3 | 13813-58BT0 | | 4 | 4 | |
| | 4 | 02112-16203 | .SCREW METER ASSY, AIR FLOW | 1 | 1 | |
| | 5 | 13800-58B00 | PACKING | 1 | 1 | |
| | 6 | 13809-58B00 | | 2 | 2 | |
| | 7 | 01550-06163 | BOLT | 3 | 3 | |
| ſ | 8 | 01550-06253 | BOLT | 1 | 1 | |
| | 9 | 13871-58B00 | PIPE, AIR CLEANER INLET | 1 | 1 | |
| | 10 | 01550-06253 | BOLT ALD SLICTION | 1 1 | 1 | |
|) | 11 | 13873-57B00 | JOINT, AIR SUCTION | · 1 | 1 | |
| | 12 | 09320-08021 | CUSHION | 1 | 1 | |
| | 13 | 09169-06065 | SPACER | i T | 1 | |
| | 14 | 13872-57B00 | HOSE, AIR CLEANER INLET | 1 | 1 | |
| | 15 | 13881-58B00 | HOSE, AIR CLEANER OUTLET | 1 | 1 | • |
| | 16 | 09402-82511 | CLAMP | 2 | 2 | |
| | 17 | 13830-58B11 | PIPE, AIR INTAKE | 1 | 1 | |
| | 18 | 01550-08253 | BOLT | 3 | 3 | |
| | 19 | 13882-58B00 | HOSE, AIR PIPE | 1 | 1 | |
| | 20 | 09402-82511 | CLAMP | 2 | 2 | |
| | 21 | 13850-58B01 | BRACKET, AIR INTAKE PIPE | 1 | 1 | |
| | 22 | | BOLT | .] | 1 | |
| | 23 | 01 <i>55</i> 0-08163 | BOLT | 2 | 2 | |
| | 24 | 13820-56B40 | CASE, AIR CLEANER SUCTION | . 1 | 1 | |
| | 25 | 13829-56B01 | CLAMP, SUCTION CASE NO.2 | 2 | 2 | |
| | 26 | 08316-10063 | NUT | 4 | 4 | 4 |
| | 27 | 13887-58B00 | FLAP, AIR CLEANER SIDE | 1 | 1 | |
| | 28 | 09409-10301-5ES | CLIP | 2 | 2 | |
| | 29 | 13760-56B01 | resonator | 1 | 1 | |
| | 30 | 13765-56B01 | CUSHION, RESONATOR | 1 | 1 | |
| | 31 | 13766-56B00 | CUSHION, RESONATOR | 1 | 1 | |
| | 32 | 13767-56B00 | JOINT, RESONATOR | . 1 | 1 | |
| | 33 | 09116-06155 | BOLT | 1 | 1 | |
| | 34 | 09180-08129 | SPACER | 1 | 1 | |
| | 35 | 13761-58B00 | resonator, no.2 | 1 | 1 | |
| | 36 | 09402-46511 | CLAMP | . 1 | 1 | |
| | | | | \ | | |

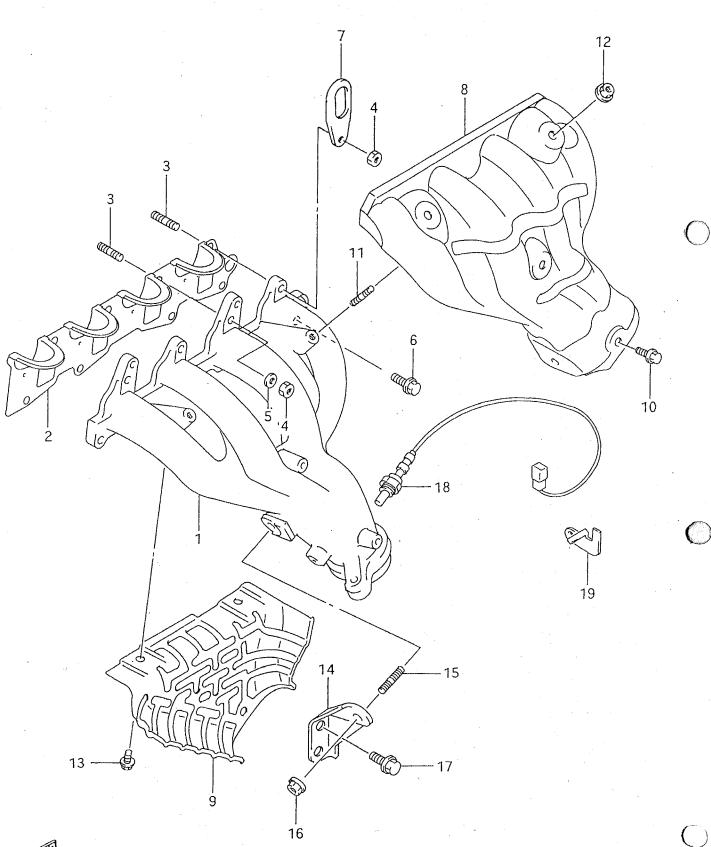

4300

| REF. | | | Q, TY | | | |
|------|-------------|--------------------------|-------|-----|---------|---|
| N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS | |
| | | | | | | |
| 1 | 14111-58B20 | MANIFOLD, EXHAUST | 1. | 1 | | |
| 2 | 14140-60A20 | GASKET, EXHAUST MANIFOLD | 1 | 1 | | |
| 3 | 01421-08253 | STUD BOLT | 7 | 7 | | |
| 4 | 08310-00083 | NUT | 7 | 7 | | |
| . 5 | 08322-01083 | WASHER | 6 | 6 | | |
| 6 | 01550-08353 | BOLT | 1 | 1 | | |
| 7 | 11851-73001 | HOOK, ENGINE | 1 | 1 | | |
| 8 | 14120-58B20 | COVER, MANIFOLD UPPER | 1 | 1 | | |
| 9 | 14131-58B20 | COVER, MANIFOLD LOWER | 1 | 1 | | |
| 10 | 09103-06168 | BOLT (6X10) | 3 | 3 | | |
|) 11 | 01411-06123 | STUD BOLT | 2 | 2 | | |
| 12 | 08316-10063 | NUT | 2 | 2 | | × |
| 13 | 09103-06168 | BOLT (6X10) | 3 | 3 | | |
| 14 | 14270-58B00 | STIFFENER, MANIFOLD | 1 | 1 | | |
| 15 | 01411-10163 | STUD BOLT | 1 | 1 | | |
| 16 | 08316-10103 | NUT | . 1 | . 1 | | |
| 17 | 01550-10203 | BOLT | 2 | 2 | | |
| 18 | 18213-56B00 | SENSOR, OXYGEN | 1 | 1 | | |
| 19 | 18214-58B20 | BRACKET, SENSOR | 1 | 1 | | |


FIG. 23

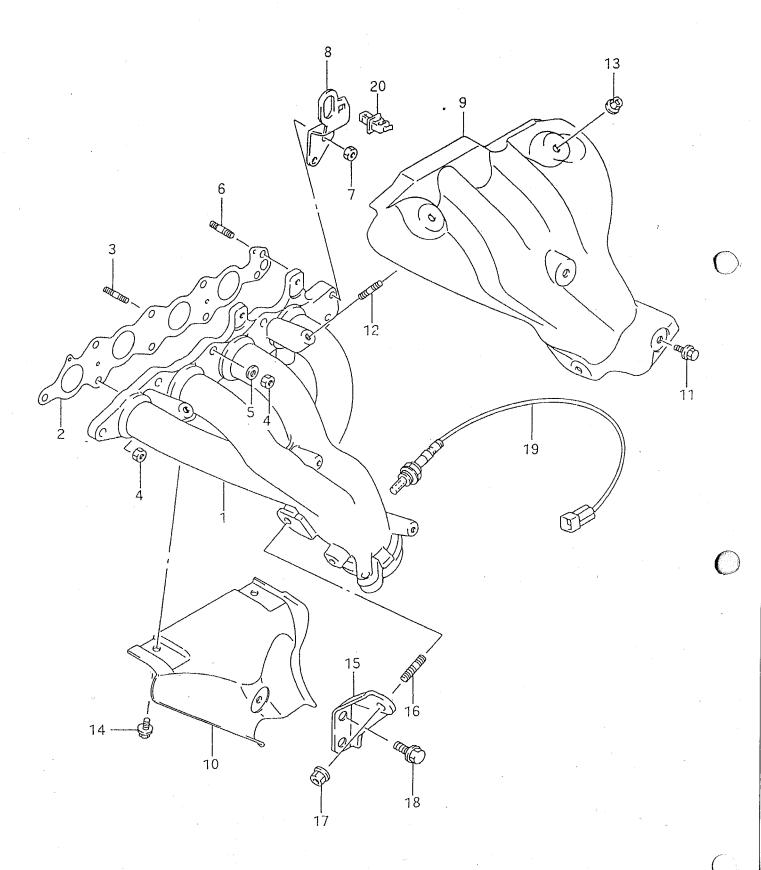

13111

FIG. 023 (1-C-14) EXHAUST MANIFOLD (4 VALVE)

| REF. | | | Q, | TY | |
|------------|-------------|--------------------------|----|----|---------|
| N.º | PART Nº | DESCRIPTION | С | V | REMARKS |
| | | | ર | | |
| 1 | 14111-58B01 | MANIFOLD, EXHAUST | 1 | 1 | |
| 2 | 14140-58B01 | GASKET, EXHAUST MANIFOLD | 1 | 1 | |
| 3 | 01421-08253 | STUD BOLT | 7 | 7 | |
| 4 | 08310-00083 | NUT | 7 | 7 | |
| 5 | 08322-01083 | WASHER | 6 | 6 | |
| 6 | 01421-08353 | STUD BOLT | 2 | 2 | |
| 7 | 08310-00083 | NUT | 2 | 2 | |
| 8 | 11851-57B02 | HOOK, ENGINE | 1 | 1 | |
| 9 | 14120-58B01 | COVER, MANIFOLD UPPER | 1 | 1 | |
| 10 | 14130-58B00 | COVER, MANIFOLD LOWER | 1 | 1 | |
| 11. | 09103-06168 | BOLT (6X10) | 3 | 3 | |
| 12 | 01411-06123 | STUD BOLT | 2 | 2 | |
| 13 | 08316-10063 | NUT | 2 | 2 | |
| 14 | 09103-06168 | BOLT (6X10) | 3 | 3 | |
| 15 | 14270-58B00 | STIFFENER, MANIFOLD | 1 | 1 | |
| 16 | 01411-10163 | STUD BOLT | 1 | 1 | |
| 1 <i>7</i> | 08316-10103 | NUT | 1 | 1 | |
| 18 | 01550-10203 | BOLT | 2 | 2 | |
| 19 | 18213-58B20 | SENSOR, OXYGEN | 1 | 1 | |
| 20 | 18214-57B00 | CLAMP | 1 | 1 | |

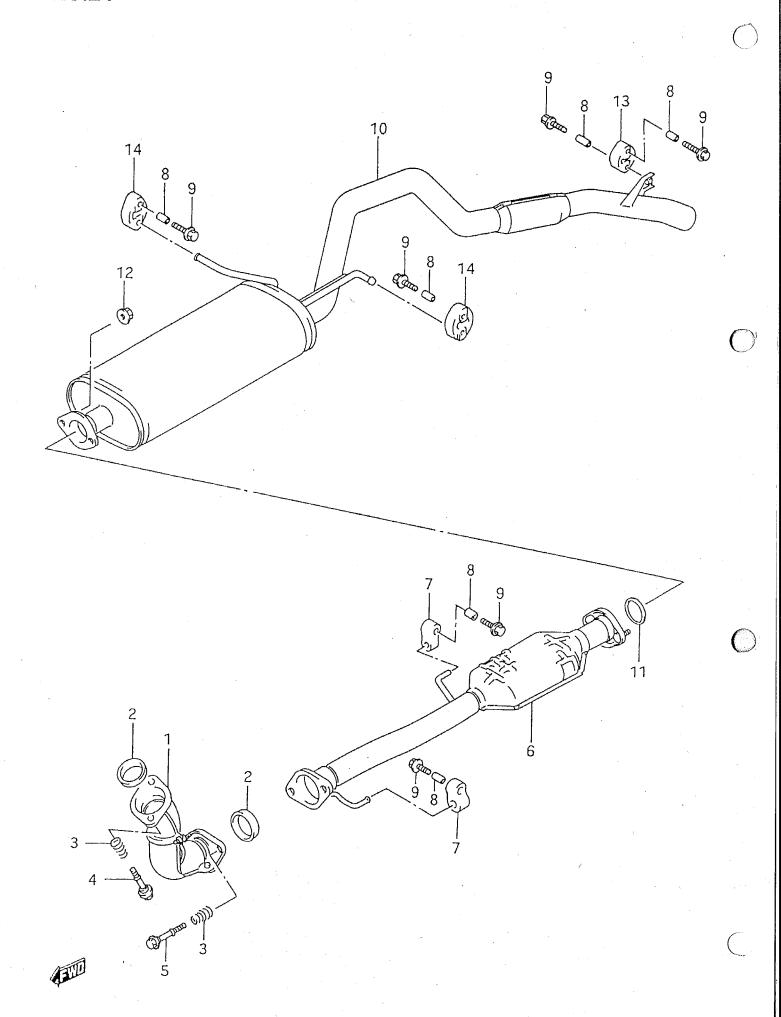

| REF. | DADT NO | | Q, TY | | |
|------|-------------|------------------------|-------|---|---------|
| N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS |
| | | • | | | |
| 1 | 14190-58B01 | PIPE, EXHAUST NO.1 | 1 | 1 | |
| 2 | 14183-58B02 | RING, SEAL | 2 | 2 | |
| 3 | 14492-85C00 | SPRING | 4 | 4 | |
| 4 | 09119-10041 | BOLT | 2 | 2 | |
| 5 | 14493-85C00 | BOLT | 2 | 2 | 4 1 |
| 6 | 14250-58B20 | PIPE, EXHAUST NO.2 | 1 | 1 | |
| 7 | 14281-71C00 | MOUNTING, MUFFLER | 2 | 2 | |
| 8 | 09180-08057 | SPACER (8.2X12.5X23.5) | 6 | 6 | |
| 9 | 01550-08353 | BOLT | 6 | 6 | |
| 10 | 14300-58B10 | MUFFLER | 1 | 1 | |
| 11 | 14182-58B10 | GASKET, MUFFLER | 1 | 1 | |
| 12 | 14494-85C00 | NUT | 2 | 2 | • |
| 13 | 14281-78010 | MOUNTING, MUFFLER | 1 | 1 | |
| 14 | 14281-58B00 | MOUNTING, MUFFLER | 2 | 2 | |

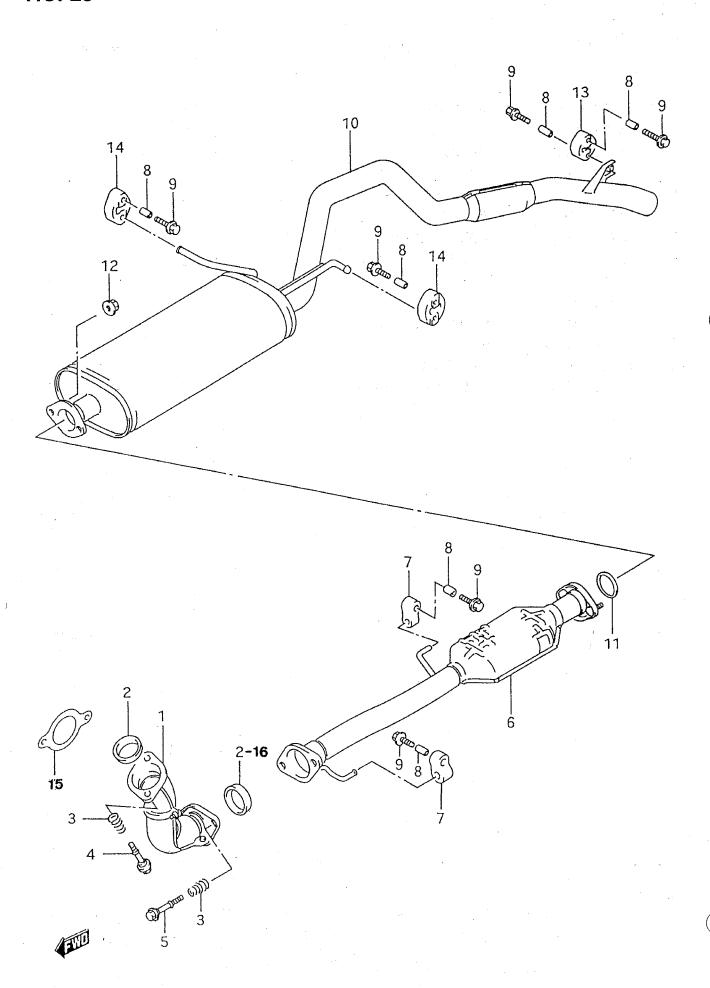


FIG. 025

(1-D-02)

MUFFLER (4 VALVE: 3DR)

| REF. | | | • | Q, | Q, TY | | |
|------|------|--------------------------|------------------------|-----|-------|------------|--|
| | N.º | PART Nº | DESCRIPTION | C | ٧ | REMARKS | |
| | | | | | | | |
| | 1 -1 | 14190-58B01 | PIPE, EXHAUST NO.1 | 1 . | 1 | | |
| | 1-2 | 14190-86CA0 | PIPE, EXHAUST NO.1 | 1 | 1 | 1.9 DIESEL | |
| | 2 | 14183-58B02 | RING, SEAL | 2 | 2 | | |
| | 3-1 | 14492-85C00 | SPRING | 4 | 4 | | |
| | 3-2 | 14492-82600 | SPRING, EXH. PIPE | 2 | 2 | 1.9 DIESEL | |
| | 4-1 | 09119-10041 | BOLT (10X65) | 2 | 2 | | |
| | 4-2 | 09119-10042 | BOLT, EXH. PIPE | 2 | 2 | 1.9 DIESEL | |
| | 5 | 14493-85C00 | BOLT | 2 | 2 | | |
| | 6-1 | 14250-58B20 | PIPE, EXHAUST NO.2 | 1 | 1 | | |
| | 6-2 | 14250-86CA0 | PIPE, EXHAUST NO.2 | 1 | 1 | 1.9 DIESEL | |
| | 7 | 14281-71C00 | MOUNTING, MUFFLER | - 2 | 2 | | |
| | 8-1 | 09180-08057 | SPACER (8.2X12.5X23.5) | 6 | 6 | | |
| | 8-2 | 09180-08095 | SPACER MUFF. MOUNTING | 2 | 2 | 1.9 DIESEL | |
| | 9 | 01550-08353 | BOLT | 6 | 6 | | |
| | 10 | 14300-58B10 | MUFFLER | 1 | 1 | | |
| | 11 | 14182-58B10 ⁻ | GASKET, MUFFLER | 1 | . 1 | | |
| | 12 | 14494-85C00 | NUT | 2 | 2 | | |
| | 13 | 14281-78010 | MOUNTING, MUFFLER | 1 | . 1 | | |
| | 14 | 14281-58B00 | MOUNTING, MUFFLER | 2 | 2 | | |
| | 15 | 14183-86CA0 | RING, SEAL | 1 | 1. | 1.9 DIESEL | |
| | 16 | 14183-58B02 | RING, SEAL | 1 | 1 | 1.9 DIESEL | |
| | | | | | | | |

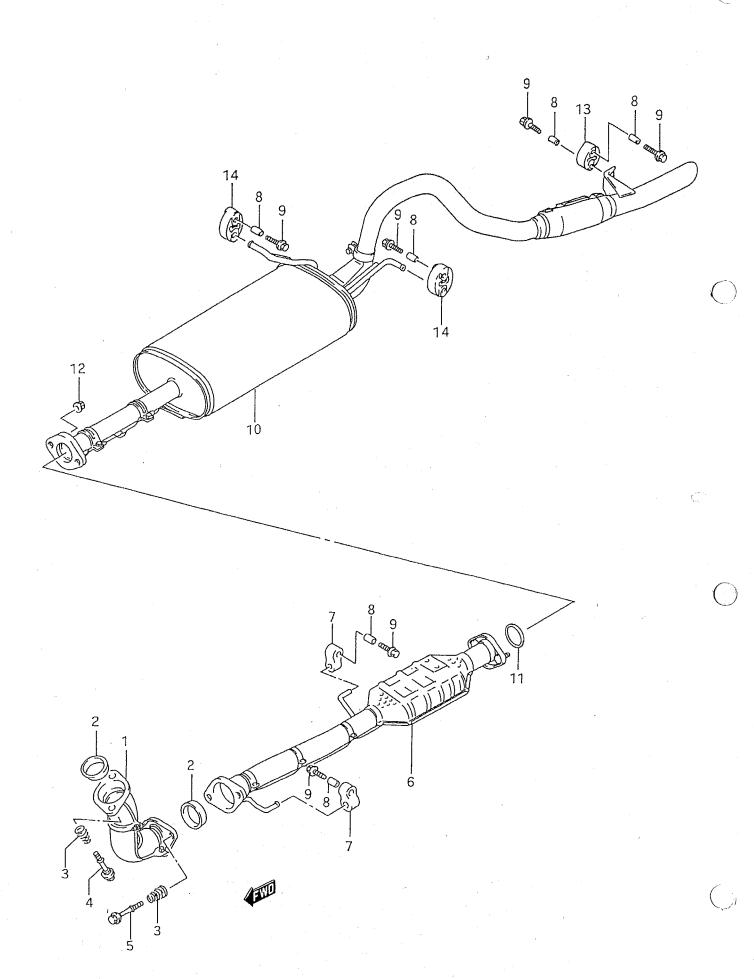


FIG. 026 (1-D-03) MUFFLER (4 VALVE: 5DR)

| REF. | | PART N° DESCRIPTION $\frac{Q, TY}{C V}$ | | | |
|------|-------------|--|-----|---------|---|
| N.º | PART Nº | | CV | REMARKS | |
| | | | | | _ |
| 1 | 14190-58B01 | PIPE, EXHAUST NO.1 | 1 | | |
| 2 | 14183-58B02 | RING, SEAL | 2 | | |
| 3 | 14492-85C00 | SPRING | 4 | | |
| 4 | 09119-10041 | BOLT (10X65) | 2 | | |
| 5 | 14493-85C00 | BOLT | 2 | | |
| 6 | 14250-58B20 | PIPE, EXHAUST NO.2 | . 1 | | |
| 7 | 14281-71C00 | MOUNTING, MUFFLER | 2 | | |
| 8 | 09180-08057 | SPACER (8.2X12.5X23.5) | 6 | | |
| 9 | 01550-08353 | BOLT | 6 | | |
| 10 | 14300-58B51 | MUFFLER | . 1 | | |
| . 11 | 14182-58B10 | GASKET, MUFFLER | 1 | | |
| 12 | 14494-85C00 | NUT | 2 | | |
| 13 | 14281-78010 | MOUNTING, MUFFLER | 1 | | |
| 14 | 14281-58B00 | MOUNTING, MUFFLER | 2 | | |

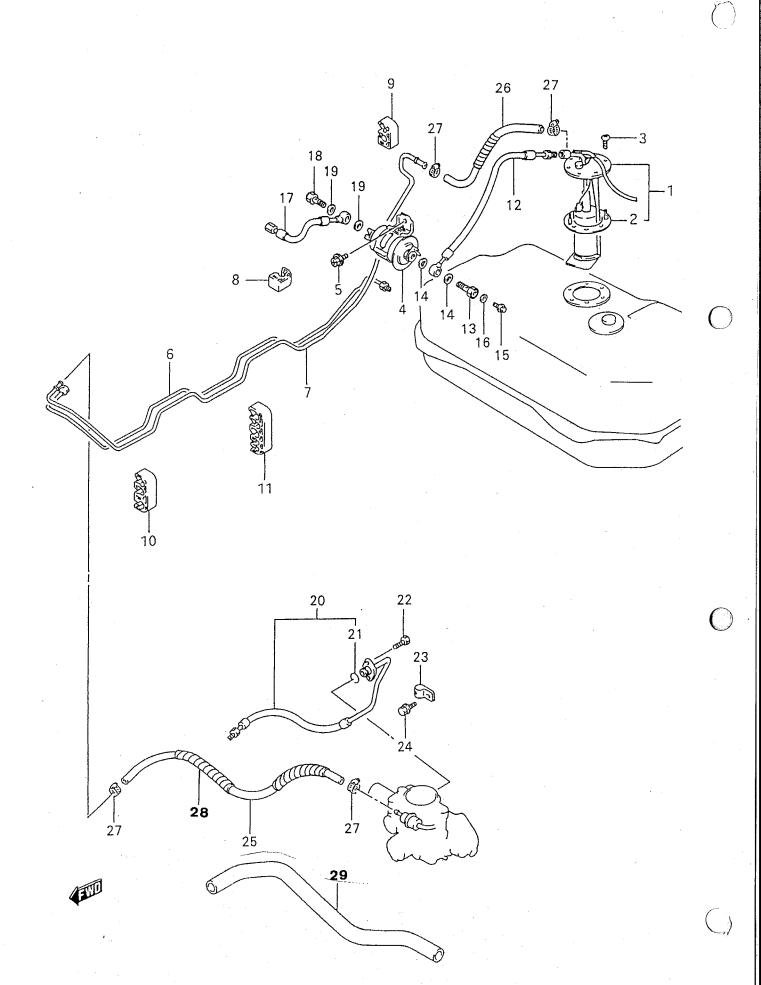


FIG. 027 (1-D-04) FUEL PUMP (2 VALVE)

| REF. | | | Q, TY | | | |
|---------------|---|------------------------------------|-------|-----|------------|--|
| N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS | |
| | | · | | | | |
| 1 | 15100-61A02 | PUMP ASSY, FUEL | 1 | 1 | | |
| 2 | 15111-61A00 | .GASKET, FUEL PUMP | 1 | 1 | | |
| 3 | 15329-85C00 | SCREW | 6 | 6 | | |
| 4 | 15410-61A00 | FILTER, FUEL | 1 | 1 | | |
| 5 | 01514-06123 | BOLT | 2 | 2 | | |
| 6-1 | 15820-61A22 | PIPE, FUEL | 1 | 1 | | |
| 6-2 | 15820-86CA0 | PIPE, FUEL | 1 |] | 1.9 DIESEL | |
| <i>7-</i> 1 | 15861-60A20 | PIPE, FUEL RETURN | 1 | 1 | | |
| 7-2 | 15861-86CA0 | PIPE, FUEL RETURN | 1 | 1 | 1.9 DIESEL | |
| 8 | 15893-67B00 | CLAMP, FUEL PIPE | -] | 1 | | |
| 9 | 15892-60A00 | CLAMP, FUEL PIPE | 3 | 3 | | |
| 10-1 | 15893-60A00 | CLAMP, FUEL PIPE | 3 | 3 | | |
| 10-2 | 15893-86CA0 | CLAMP, FUEL PIPE | 5 | 5 | 1.9 DIESEL | |
| 11-1 | 15895-60A00 | CLAMP, FUEL PIPE | 4 | 4 | | |
| 11-2 | 15895-86CA0 | CLAMP, FUEL PIPE | 4 | 4 | 1.9 DIESEL | |
| 12-1 | 15810-61A01 | HOSE, FUEL TANK TO FILTER | 1 | 1 | | |
| 12-2 | 15810-86CA0 | HOSE, FUEL | 1 | 1 | 1.9 DIESEL | |
| 13 | 13923-85551 | BOLT, FUEL UNION | 1 | 1 | | |
| 14 | 13925-85553 | GASKET, UNION BOLT | 2 | 2 | | |
| 15 | 17568-50F00 | PLUG, UNION | 1 | . 1 | | |
| 16 | 09168-06023 | GASKET | 1 | 1 | | |
| 1 <i>7-</i> 1 | 15840-61A01 | HOSE, FULTER TO PIPE | 1 | 1 | | |
| 17-2 | 15840-86CA0 | HOSE, PIPE TANK TO PIPE COMP. | 1 | 1 | 1.9 DIESEL | |
| 18 | 09360-12008 | BOLT, FUEL UNION | 1 | 1 | | |
| 19 | 13925-85553 | GASKET, UNION BOLT | 2 | 2 | | |
| 20-1 | 15830-61A00 | HOSE, PIPE TO THROTTLE BODY | 1 | 1 | | |
| 20-2 | 15870-86CA0 | HOSE, PIPE FUEL RET. TO PIPE COMP. | 1 | 1 | 1.9 DIESEL | |
| 21 | 1 <i>5</i> 710-09300 | .O RING | 1 | 1 | | |
| 22 | 01 <i>57</i> 0-06163 | BOLT | 2 | 2 | | |
| | 08321A31063 | SPRING WASHER | 2 | 2 | | |
| 23 | 09403-08404 | CLAMP, HOSE | 1 | 1 | | |
| 24 | 01 <i>5</i> 1 <i>7</i> -06102 | BOLT | 1 | 1 | | |
| 25-1 | 1 <i>5</i> 870-61A00 | HOSE, BODY TO RETURN PIPE | 1 | 1 | | |
| 25-2 | 15870-86CB0 | HOSE, FUEL RETURN | 1 | 1 | 1.9 DIESEL | |
| 26-1 | 1 <i>5</i> 8 <i>5</i> 0 <i>-77</i> X <i>5</i> 0 | HOSE, RETURN PIPE TO TANK | 1 | 1 | L:440>360 | |
| 26-2 | 15864-86CA0 | HOSE, RETURN PIPE TO TANK | 1 | 1. | 1.9 DIESEL | |
| 27 | 15899-85C00 | CLAMP, HOSE | 4 | 4 | | |
| 28 | 15870-86CC0 | PROTECTOR, FUEL RETURN HOSE | . 1 | 1 | 1.9 DIESEL | |
| 29 | 15840-86CB0 | HOSE, PIPE INLET FILTER | 1 | 1 | 1.9 DIESEL | |
| 30 | 08011-86CA0 | CLAMP, PIPE RETURN HOSE/AIR | | | | |
| | | DIVIDER DRAIN HOSE | 1 | 1 | 1.9 DIESEL | |

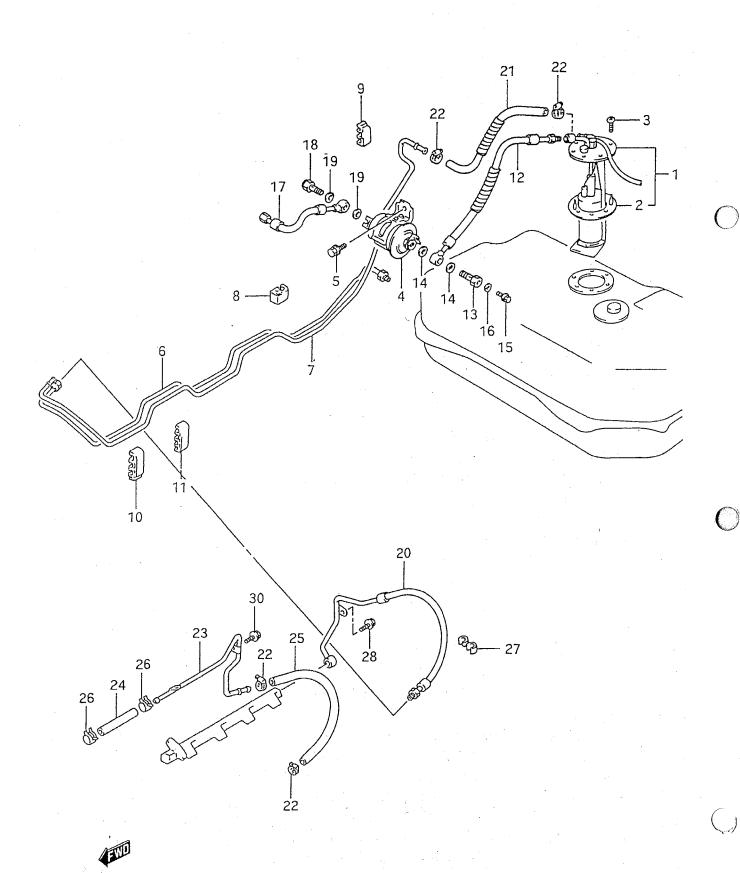


FIG. 028 (1-D-05) FUEL PUMP (4 VALVE: 3DR)

| REF. | | | Q, TY | | | |
|------|-------------------------------|----------------------------|-------|--------|-----------|--|
| N.º | PART Nº | DESCRIPTION | С | V | REMARKS | |
| | | DUMP ACCY FUEL | 1 | 7 | | |
| 1 | 15100-61A02 | PUMP ASSY, FUEL | 1 | 1 | | |
| 2 | 15111-61A00 | .GASKET, FUEL PUMP | 1 | 1 | | |
| 3 | 15329-85C00 | SCREW | 6 | 6 | | |
| 4 | 15410-61A00 | FILTER, FUEL | 1 | 1 2 | | |
| 5 | 01550-06123 | BOLT | 2 | | | |
| 6 | 15820-61A22 | PIPE, FUEL |] | 1 | | |
| 7 | 15861-60A20 | PIPE, FUEL RETURN | 1 | 1 | | |
| 8 | 15893-67B00 | CLAMP, FUEL PIPE | 1 | 1 | | |
| 9 | 15892-60A00 | CLAMP, FUEL PIPE | 3 | 3 3 | | |
| 10 | 15893-60A00 | CLAMP, FUEL PIPE | 3 | 3 | | |
| 11 | 15895-60A00 | CLAMP, FUEL PIPE | 4 | | | |
| 12 | 15810-61A01 | HOSE, FUEL | 1 | 1 | | |
| 13 | 13923-85551 | BOLT, UNION | 1 | 1 | | |
| 14 | 13925-85553 | GASKET, UNION BOLT | 2 | 2 | | |
| 15 | 17568-50F00 | PLUG, UNION BOLT | 1 | 1 | | |
| 16 | 09168-06023 | GASKET (5.8X13X1.2) | 1 | 1 | | |
| 17 | 15840-61A01 | HOSE, FULTER FILTER OUTLET | 1 | 1 | | |
| 18 | 09360-12008 | BOLT, UNION FUEL FILTER | 1 | 1 | | |
| 19 | 13925-85553 | GASKET, UNION BOLT | 2 | 2 | | |
| 20 | 15830-58B00 | HOSE, FUEL | 1 |] | 1 440 240 | |
| 21 | 15850-77X50 | HOUSE, RETURN | 1 | 1 | L:440>360 | |
| 22 | 1 <i>5</i> 899-8 <i>5</i> C00 | CLAMP | 4 | 4 | | |
| 23 | 15850-57B01 | PIPE, FUEL RETURN | 1 | 1 | 1 (00 (5 | |
| 24 | 09356-55117-600 | HOSE | 1 | 1 | L:600>65 | |
| 25 | 09356-58127-600 | HOSE | 1 | 1 | L:600>260 | |
| 26 | 09401-11411 | CLIP | 2 | 2 | - 1 | |
| 27 | 09408-00121 | CLAMP | 1 | 1 | | |
| 28 | 01550-06123 | BOLT | 2 | 2 | | |


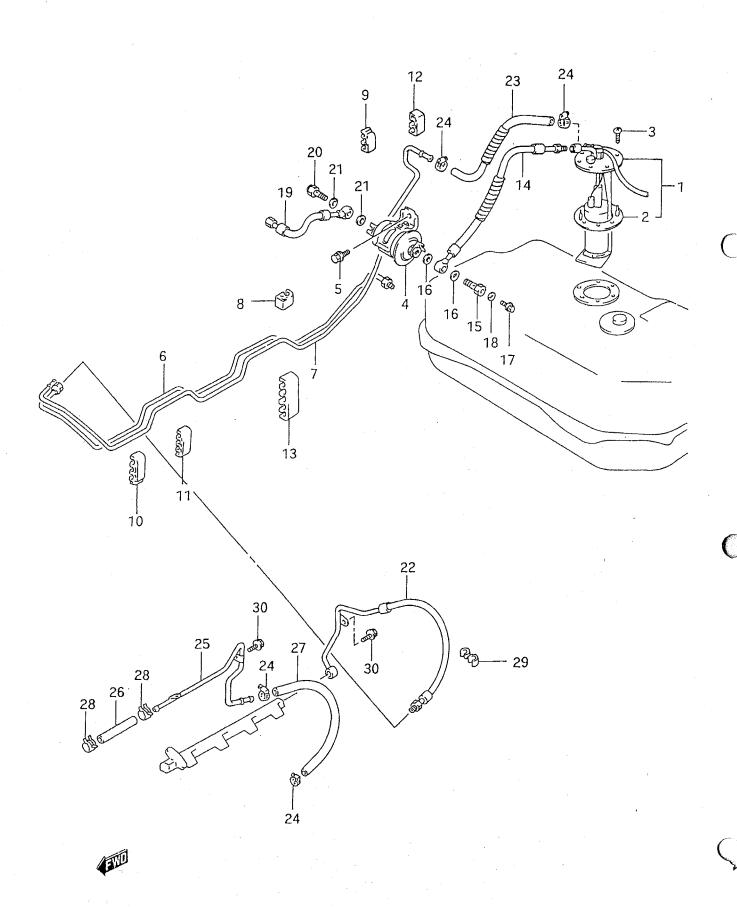


FIG. 029 (1-D-06) FUEL PUMP (4 VALVE: 5DR)


| | REF. | PART Nº | DESCRIPTION | Q, TY | | • | |
|---|------------|--|----------------------------|-------|----|-----------|--|
| | N.º | | | С | V | REMARKS | |
| | - | 15100 57010 | DIMAR A 000 / FIJE! | | , | | |
| | 1 | 1 <i>5</i> 100- <i>57</i> B10 | PUMP ASSY, FUEL | | | | |
| | 2 | 15111-61A00 | .GASKET, FUEL PUMP | | l | | |
| | 3 | 15329-85C00 | SCREW | | 6 | | |
| | 4 | 15410-61A00 | FILTER, FUEL | | ı | | |
| | 5 | 01550-06123 | BOLT | | 2 | | |
| | 6 | 15820-57B01 | PIPE, FUEL | | 1 | | |
| | 7 | 15861-57B00 | PIPE, FUEL RETURN | | | | |
| | 8 | 15893-67B00 | CLAMP, FUEL PIPE | | | | |
| | 9 | 15892-60A00 | CLAMP, FUEL PIPE | | 2 | | |
| | 10 | 1 <i>5</i> 893-60A00 | CLAMP, FUEL PIPE | | 3 | | |
|) | 11 | 15895-60A00 | CLAMP, FUEL PIPE | | 4 | | |
| | 12 | 15893-56B00 | CLAMP, FUEL PIPE | | 1. | | |
| | 13 | 1 <i>5</i> 89 <i>5</i> - <i>5</i> 6B00 | CLAMP, FUEL PIPE | | 1 | | |
| | 14 | 15810-57B00 | HOSE, FUEL | | 1 | | |
| | 15 | 13923-85551 | BOLT, UNION | | 1 | | |
| | 16 | 13925-85553 | GASKET, UNION BOLT | | 2 | | |
| | 1 <i>7</i> | 17568-50F00 | PLUG, UNION BOLT | | 1. | | |
| | 18 | 09168-06023 | GASKET (5.8X13X1.2) | | 1 | | |
| | 19 | 15840-61A01 | HOSE, FULTER FILTER OUTLET | | 1 | | |
| | 20 | 09360-12008 | BOLT, UNION FUEL FILTER | | 1 | | |
| | 21 | 13925-85553 | GASKET, UNION BOLT | | 2 | | |
| | 22 | 15830-58B00 | HOSE, FUEL | | 1 | | |
| | 23 | 15850-77X50 | HOUSE, RETURN | | 1 | L:440>410 | |
| | 24 | 15899-85C00 | CLAMP | | 4 | | |
| | 25 | 1 <i>5</i> 850-57B01 | PIPE, FUEL RETURN | | 1 | | |
| | 26 | 09356-55117-600 | HOSE | | 1 | L:600>65 | |
| | 27 | 09356-58127-600 | HOSE | | 1 | L:600>260 | |
| | 28 | 09401-11411 | CLIP | | 2 | | |
| | 29 | 09408-00121 | CLAMP | | 1 | | |
| | 30 | 01550-06123 | BOLT | | 2 | | |

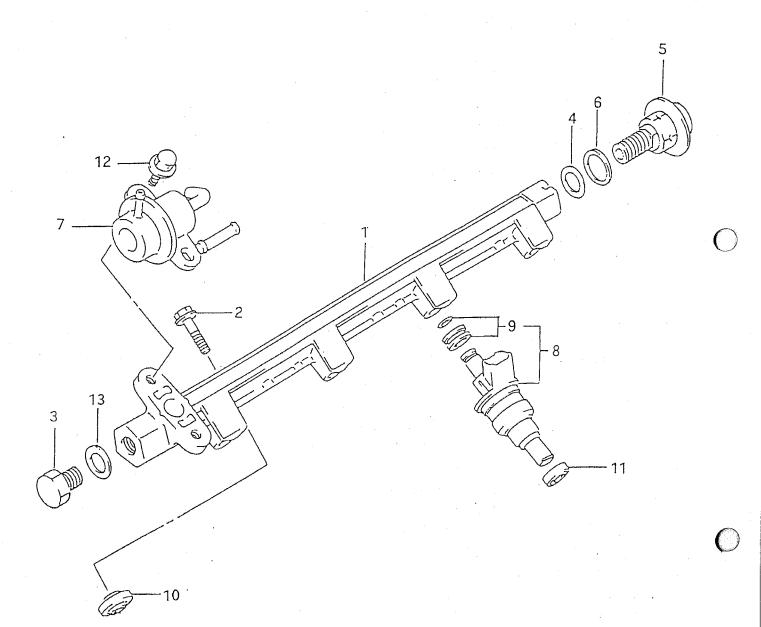

1300

FIG. 030 (1-D-07) DELIVERY PIPE (4 VALVE)

| REF. | | Q, 7 | | TY | e e |
|------|-------------------------------|------------------------|----|----|---------|
| N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS |
| | | | | | |
| 1 | 1 <i>57</i> 31- <i>57</i> B00 | PIPE, DELIVERY | 1 | 1 | |
| 2 | 01550-08453 | BOLT | 3 | 3 | |
| 3 | 09247-14029 | PLUG | 1 | 1 | |
| 4 | 1 <i>5</i> 762-61B00 | GASKET (14X19X0.84) | 1 | 1 | |
| 5 | 15750-82400 | DAMPER ASSY, PULSATION | 1 | 1 | |
| 6 | 1 <i>57</i> 63-61B00 | GASKET (17X22X0.84) | 1 | 1 | |
| 7 | 15160-58B00 | REGULATOR, PRESSURE | 1 | 1 | |
| 8 | 1 <i>57</i> 10- <i>5</i> 8B00 | INJECTOR ASSY, FUEL | 4 | 4 | |
| 9 | 15716-58BTO | .GROMMET SET | 4 | 4 | |
| 10 | 1 <i>57</i> 35-58B00 | INSULATOR, DELIVERY | 3 | 3 | |
| 11 | 09320-08062 | CUSHION | 4 | 4 | |
| 12 | 01550-06123 | BOLT (6X10) | 2 | 2 | |
| 13 | 09168-14012 | GASKET | -1 | 1 | |

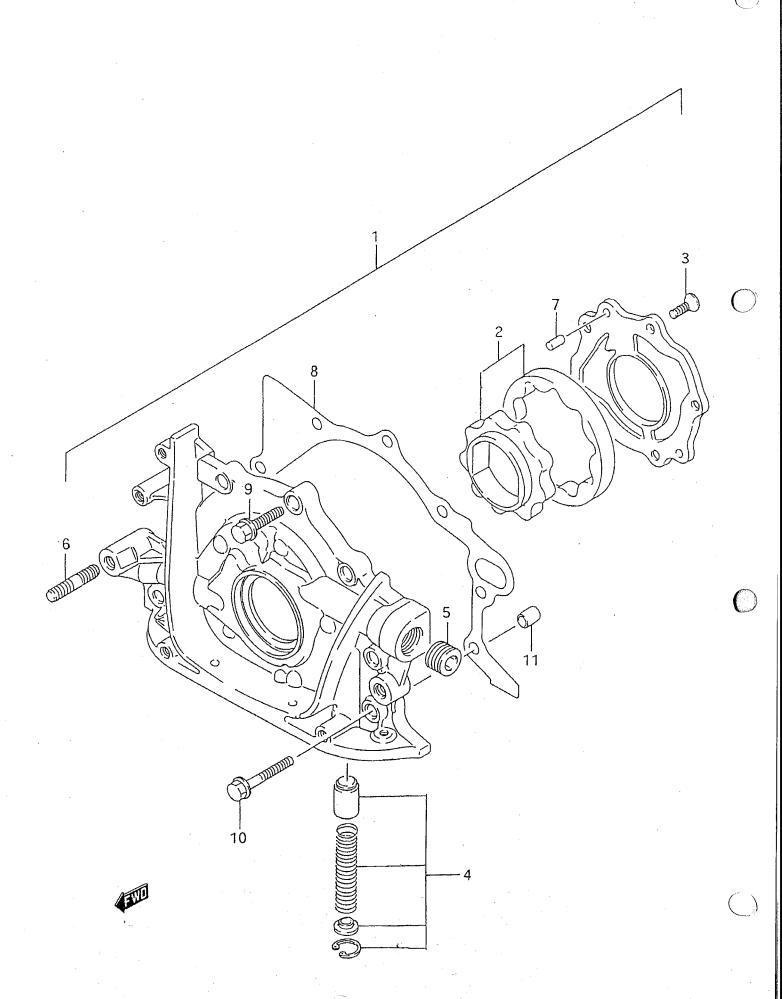

| REF. | | | , Q, | TY | |
|------|-------------|-----------------------------|------|----|---------|
| N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS |
| | | | | | |
| 1 | 16100-85C00 | PUMP SET, OIL | 1 | 1 | |
| 2 | 16130-60A00 | .ROTOR SET, OIL PUMP | 1 | 1 | |
| 3 | 09126-06007 | .SCREW | 5 | 5 | |
| 4 | 16150-60A00 | .VALVE SET, OIL PUMP RELIEF | 1 | 1 | |
| 5 | 09246-08002 | .PLUG | 2 | 2 | |
| 6 | 01411-08203 | STUD BOLT | 1 | 1 | |
| 7 | 04221-06129 | .PIN | 2 | 2 | |
| 8 | 16119-85C00 | .GASKET, OIL PUMP | 1 | 1 | |
| 9 | 01550-06253 | BOLT | 4 | 4 | |
| 10 | 01550-06353 | BOLT | 3 | 3 | |
| 11 | 04211-09109 | PIN | 2 | 2 | |


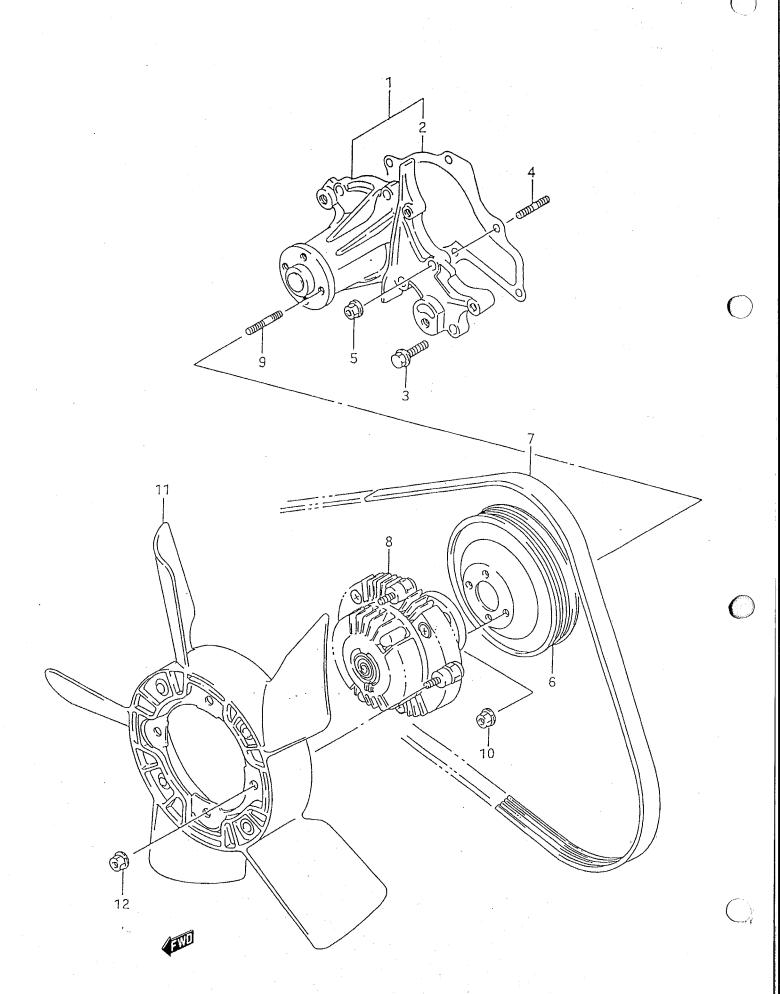



FIG. 032 (1-D-09) WATER PUMP AND COOLING FAN

| REF | | | Q, TY | | |
|-----|-------------------------------|---------------------|-------|----|---------|
| N.º | PART Nº | DESCRIPTION | C - | γ. | REMARKS |
| | | | | | |
| 1 | 17400-60813 | PUMP SET, WATER | 1 | 1 | |
| 2 | 17431-85C00 | .GASKET, WATER PUMP | 1 | 1 | |
| 3 | 09103-06066 | BOLT (6X23) | 4 | 4 | |
| 4 | 01421-06203 | STUD BOLT | 2 | 2 | |
| 5 | 08316-10063 | NUT | 2 | 2 | |
| 6-1 | 1 <i>75</i> 11-61A00 | PULLEY, WATER PUMP | 1 | 1 | 2 VALVE |
| 6-2 | 1 <i>75</i> 11- <i>57</i> B00 | PULLEY, WATER PUMP | 1 | 1 | 4 VALVE |
| 7 | 1 <i>75</i> 21-61A00 | BELT, WATER PUMP | 1 | 1 | |
| 8 | 17120-57B00 | CLUTCH ASSY, FAN | 1 | 1 | |
| 9 | 01411-06203 | STUD BOLT | 4 | 4 | |
| 10 | 08310-11066 | NUT | 4 | 4 | |
| | 08321A31066 | SPRING WASHER | 4 | 4 | |
| 11 | 17110-60A00 | FAN, ENGINE COOLING | 1 | 1 | |
| 12 | 08361-35063 | NUT | 4 | 4 | |

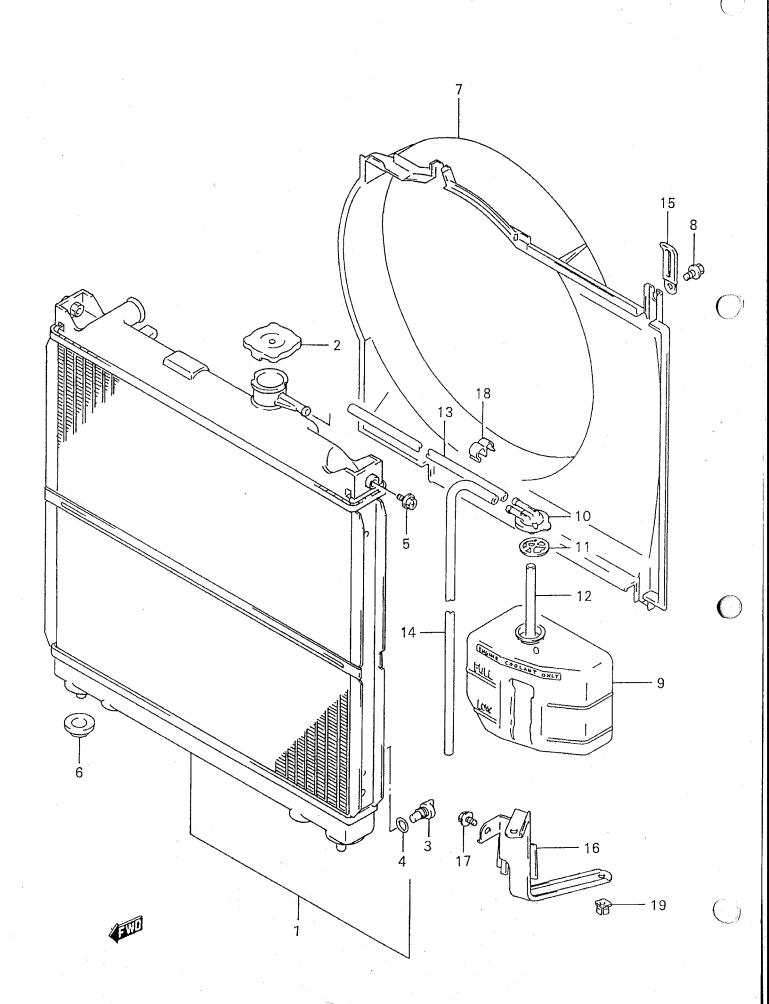

| REF. | PART Nºº | | Q, TY | | ž. | |
|------------|----------------------|-----------------------------|-------|---|-----------|---|
| N.º | | DESCRIPTION | С | ٧ | REMARKS | |
| | | | | | | |
| 1 | 1 <i>77</i> 00-85C01 | RADIATOR ASSY | 1, | 1 | | |
| 2 | 17920-85C00 | .CAP, RADIATOR | 1 | 1 | | |
| 3 | 00000A00715 | .PLUG, DRAIN | 1 | 1 | | |
| 4 | 17759-85C00 | O RING, DRAIN PLUG | 1 | 1 | | |
| 5 | 01550-06203 | BOLT | 2 | 2 | | |
| 6 | 17812-82000 | BUSH, RADIATOR SUPPORT | 2 | 2 | | |
| 7 | 17761-60A01 | SHROUD, FAN (ND) | 1 | 1 | | |
| 8 | 01550-06123 | BOLT | 4 | 4 | | |
| 9 | 17931-60A10 | TANK, WATER RESERVOIR | 1 | 1 | | |
| 10 | 17932-60A00 | CAP, WATER RESERVOIR TANK | 1 | 1 | | |
| 11 | 17933-60B00 | RUBBER, WATER RSVR TANK CAP | . 1 | 1 | | |
| 12 | 09352-70111-600 | HOSE, WATER RESERVOIR TANK | 1 | 1 | L:600>115 | |
| 13 | 09352-70121-600 | HOSE, WATER RESERVOIR TANK | . 1 | 1 | L:600>390 | |
| 14 | 17938-58B20 | HOSE, RESERVOIR TANK DRAIN | 1 | 1 | | |
| 15 | 09404-06429 | CLAMP | . 1 | 1 | | |
| 16 | 17937-60A11 | BRACKET, RESERVOIR TANK | 1 | 1 | | |
| 1 <i>7</i> | 01550-06103 | BOLT | 3 | 3 | | |
| 18 | 09408-00100 | CLIP | 1 | 1 | | |
| . 19 | 09148-06006 | NUT | 1 | 1 | , | - |

FIG. 34

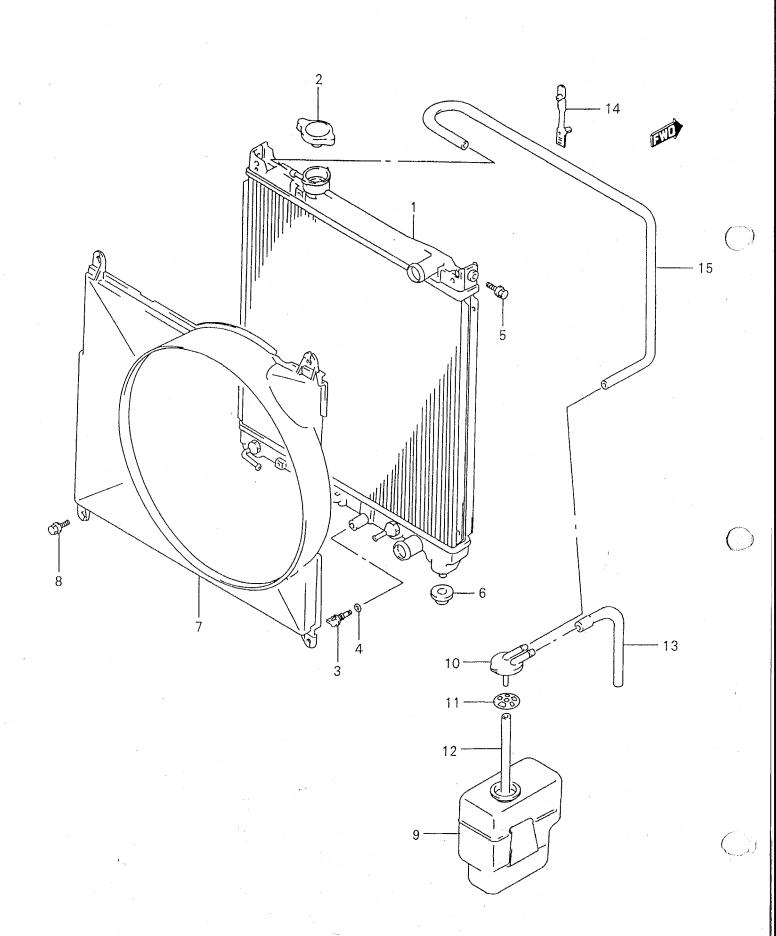

| REF. | | | Q, | TY | • |
|-------|-------------------------------|------------------------------|-----|----|------------|
| N.º | PART Nº | DESCRIPTION | C | ٧ | REMARKS |
| | · | · | | | |
| 1 - 1 | 1 <i>77</i> 00-85C01 | RADIATOR ASSY | 1 | 1 | 3DR:MT |
| 1-2 | 1 <i>77</i> 00-60A12 | RADIATOR ASSY | 1 | 1 | 3DR:AT |
| 1 -3 | 17700-85C10 | RADIATOR ASSY | - | 1 | 5DR:MT |
| 1-4 | 17700-56B11 | RADIATOR ASSY | - | 1 | 5DR:AT |
| 1 -5 | 1 <i>77</i> 00-86CA∜ | RADIATOR ASSY | - | 1 | 1.9 DIESEL |
| 2-1 | 17920-85C00 | .CAP | 1 | 1 | 3DR:MT |
| 2-2 | 17920-66F00 | .CAP | 1 | 1 | 3DR:AT |
| 2-3 | 17920-66F00 | .CAP | - | 1 | 5DR |
| 3-1 | 1 <i>775</i> 1-85C00 | .PLUG, DRAIN | 1 | 1 | 3DR:MT |
| 3-2 | 1 <i>775</i> 1-61A00 | .PLUG, DRAIN | 1 | 1 | 3DR:AT |
| 3-3 | 1 <i>775</i> 1-61A00 | .PLUG, DRAIN | - | 1 | 5DR |
| 4-1 | 1 <i>775</i> 9-8 <i>5</i> C00 | .O RING | 1 | 1 | 3DR:MT |
| 4-2 | 1 <i>775</i> 9-72010 | .O RING | 1 | 1 | 3DR:AT |
| 4-3 | 1 <i>775</i> 9-72010 | O RING | - | 1 | 5DR |
| 5 | 01550-06203 | BOLT | 2 | 2 | • |
| 6 | 17812-82000 | BUSH, RADIATOR SUPPORT | 2 | 2 | • |
| 7-1 | 1 <i>77</i> 61-60A01 | SHROUD, FAN | 1 | 1 | 3DR |
| 7-2 | 1 <i>77</i> 61-56B00 | SHROUD, FAN | - | 1 | 5DR |
| 8 - | 01550-06123 | BOLT | 4 | 4 | |
| 9 | 1 <i>7</i> 931-58B00 | TANK, WATER RESERVE | 1 | 1 | |
| 10 | 17932-60A10 | CAP, WATER RESERVE TANK | 1 | 1 | |
| 11 | 17933-60B00 | RUBBER, TANK CAP | 1 | 1 | |
| 12 | 09352-70111-600 | HOSE, WATER RESERVE TANK CAP | 1 | 1 | L:600>150 |
| 13 | 17938-58B00 | HOSE, RESERVE TANK VENT PIPE | - 1 | 1 | |
| 14 | 09407-05406 | CLAMP | 1 | 1 | |
| 15 | 17939-58B00 | HOSE, RADIATOR TO TANK | 1 | 1 | |


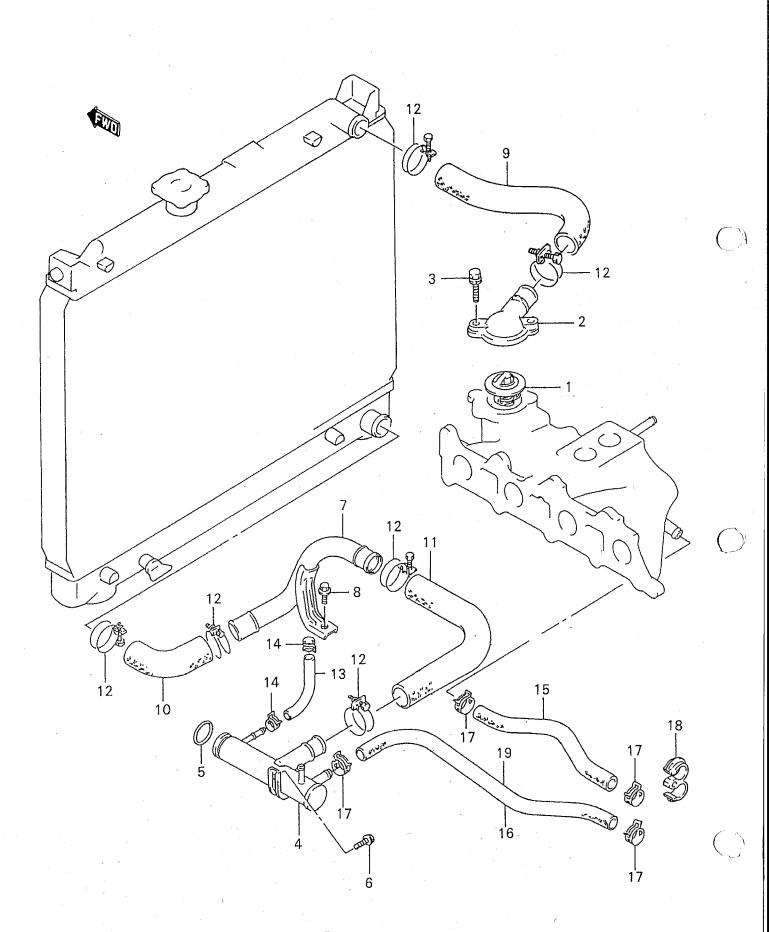


FIG. 035 (1-D-12) WATER HOSE (2 VALVE)


| REF. | | | Q, | TY | | |
|------|-------------|-------------------------------|-----|----|---------|---|
| N.º | PART Nº | DESCRIPTION | C | ٧ | REMARKS | |
| | | | | | | |
| 1 | 17670-85C00 | THERMOSTAT ASSY, WATER (82 C) | 1 | 1 | | |
| 2 | 17561-73000 | CAP, THERMOSTAT | 1 | 1 | | |
| 3 | 09103-08341 | BOLT | 2 | 2 | | |
| 4 | 17550-60A20 | PIPE, WATER INLET | 1 | 1 | | |
| 5 | 09280-28008 | O RING | 1 | 1 | | |
| 6 | 01550-06103 | BOLT | 1 | 1 | | |
| 7 | 17860-60A10 | PIPE, RADIATOR OUTLET | 1 | 1 | | |
| 8 | 01550-08123 | BOLT | 1 | 1 | | |
| 9 | 17841-85C00 | HOSE, RADIATOR INLET | 1 | 1 | | |
| 10 | 17851-85C00 | HOSE, RADIATOR OUTLET NO.1 | . 1 | 1 | | |
| 11 | 17852-85C00 | HOSE, RADIATOR OUTLET NO.2 | 1 | 1 | | |
| 12 | 09400-36312 | CLAMP, RADIATOR HOSE | 6 | 6 | | |
| 13 | 17859-85C00 | HOSE, WATER BYPASS | 1 | 1 | | |
| 14 | 17879-85C00 | CLIP, BYPASS HOSE | 2 | 2 | | |
| 15 | 17871-85C00 | HOSE, HEATER INLET | 1 | 1 | | |
| 16 | 17872-85C00 | HOSE, HEATER OUTLET | 1 | 1 | | |
| 17 | 11196-85C00 | CLIP, HEATER HOSE | 4 | 4 | | * |
| 18 | 09408-00117 | CLIP, HEATER HOSE | 1 | 1 | | |

FIG. 36

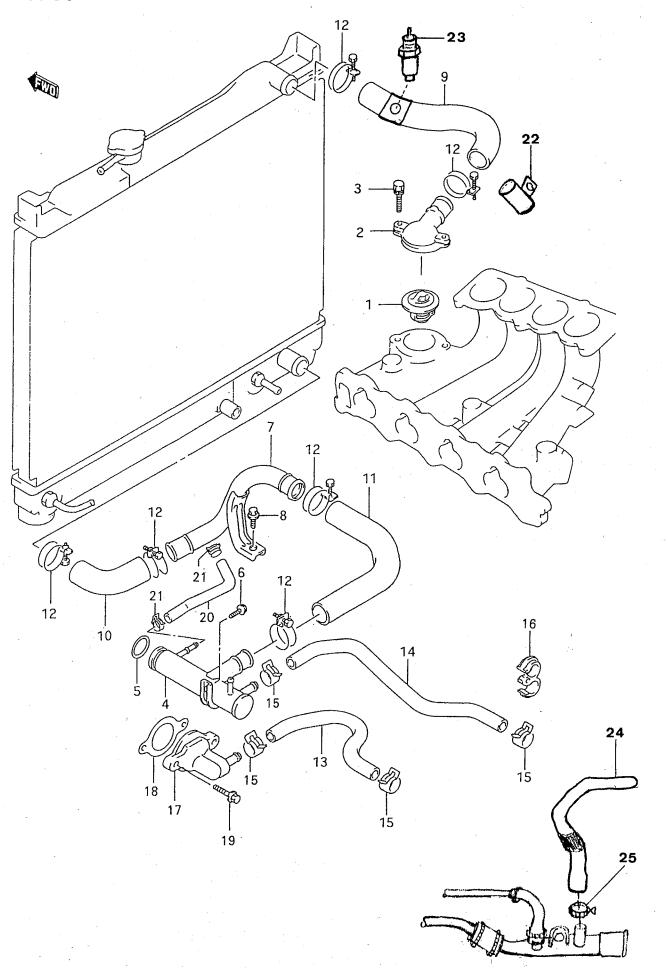

| /: REF. | | | Q, | TY | |
|------------|-------------------------------|-------------------------------|-----|-----|------------|
| N.º | PART Nº | DESCRIPTION | С | | REMARKS |
| | | · | | | · |
| 1 - 1 | 17670-85C00 | THERMOSTAT ASSY, WATER (82 C) | 1 | 1 | E2 |
| 1-2 | 17600-60823 | THERMOSTAT ASSY, WATER (88 C) | 1 | 1 | E22 |
| 2 | 17561-58B00 | CAP, WATER THERMOSTAT | 1 | 1 | |
| 3 | 09103-08341 | BOLT | 2 | 2 | * |
| 4 | 1 <i>755</i> 0-58B00 | PIPE, WATER INLET | -1 | 1 | |
| 5 | 09280-28008 | O RING | . 1 | 1 | |
| 6 | 01550-06103 | BOLT | 1 | 1 | |
| 7 | 17860-60A10 | PIPE, RADIATOR OUTLET | 1 | 1 | |
| 8 | 01550-08123 | BOLT | 1 | 1 | |
| 9-1 | 17841-58B10 | HOSE, RADIATOR INLET | 1 | 1 . | |
| 9-2 | 17841-86CA0 | HOSE, RADIATOR INLET | 1 | 1 | 1.9 DIESEL |
| 10-1 | 17851-85C00 | HOSE, RADIATOR OUTLET NO.1 | 1 | 1 | 3DR |
| 10-2 | 17851-56B01 | HOSE, RADIATOR OUTLET NO.1 | - | , 1 | 5DR |
| 10-3 | 17851-86CA0 | HOSE, RADIATOR OUTLET NO.1 | 1 | . 1 | 1.9 DIESEL |
| 11 | 17852-85C00 | HOSE, RADIATOR OUTLET NO.2 | 1 | 1 | |
| 12-1 | 09400-36312 | CLAMP | 6 | 6 | |
| 12-2 | 09402-46511 | CLAMP | 6 | 6 | 1.9 DIESEL |
| 13 | 17871-57B02 | HOSE, HEATER INLET | 1 | 1 | |
| 14 | 17872-85C00 | HOSE, HEATER OUTLET | 1 | 1 | |
| 15-1 | 11196-85C00 | CLIP | 4 | 4 | * |
| 15-2 | 09401-18403 | CLAMP | 2 | 2 | 1.9 DIESEL |
| 16 | 09408-00117 | CLIP | 1 | 1 . | |
| 1 <i>7</i> | 1 <i>757</i> 0- <i>57</i> B00 | CAP, WATER OUTLET | 1 | 1 | |
| 18 | 17699-60B02 | GASKET, THERMOSTAT CASE | 1 | 1 | |
| 19 | 01550-08253 | BOLT | 2 | 2 | ı |
| 20 | 17859-58B00 | HOSE, WATER BYPASS | 1 | 1 | 1 |
| 21 | 17879-85C00 | CLIP | 2 | 2 | |
| 22 | 17841-86CD0 | HOSE, RADIATOR | 1 | - 1 | 1.9 DIESEL |
| 23 | 3 5331-86CA0 | TERMOCONTACTO | 1 | 1 | 1.9 DIESEL |
| 24 | 17841-86CB0 | INLET HOSE, TANK RESERVOIR | 7 | 1 | 1.9 DIESEL |
| 25 | 08313-86CA0 | CLAMP | ,1 | 1 | 1.9 DIESEL |

FIG. 37

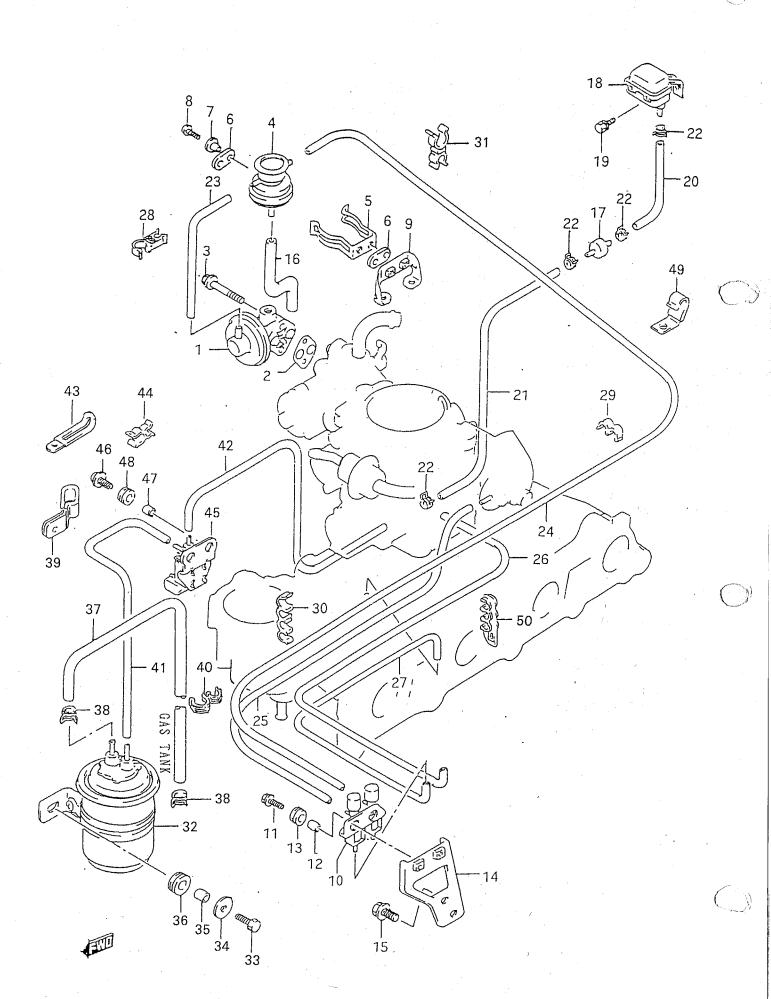

| REF. | | | Q, | TY | |
|------------|----------------------|--------------------------|-----|----|---------|
| N.º | PART Nº | DESCRIPTION | С | V | REMARKS |
| | | | | | |
| 1 | 18111-56B00 | VALVE, EGR | 1. | 1 | |
| 2 | 18529-85C00 | GASKET, EGR VALVE | 1 | 1 | |
| 3 | 01550-06453 | BOLT | 2 | 2 | |
| 4. | 18112-60B00 | MODULATOR ASSY, EGR | 1 | 1 | |
| 5 | 13814-85C00 | CLAMP, MODULATOR | 1 | 1 | |
| 6 | 13817-82000 | CUSHION, MODULATOR CLAMP | 2 | 2 | |
| 7 | 13815-85C00 | SPACER, MOUDULATOR CLAMP | 2 | 2 | |
| 8 | 02142-06163 | SCREW | 2 | 2 | |
| 9 | 18412-56B00 | BRACKET, MODULATOR | 1 | 1 | |
| 10 | 1811 <i>7-</i> 61A00 | VALVE, VACUUM SWITCHING | 1 | 1 | |
|) 11 · | 09136-06133 | SCREW, VSV (6X14) | 2 | 2 | |
| 12 | 09180-06106 | SPACER (6.8X10X7) | 2 | 2 | |
| 13 | 09308-10004 | GROMMET | 2 | 2 | |
| 14 | 1841 <i>7-</i> 61A00 | BRACKET | 1 | 1 | |
| 15 | 01550-10203 | BOLT | 2 | 2 | |
| 16 | 09352-50111-600 | HOSE, EGR TO MODULATOR | 1 | 1 | |
| | | (L:600>160) | | | |
| 1 <i>7</i> | 27965-85400 | FILTER, GAS | 1 | 1 | |
| 18 | 18590-80C20 | SENSOR, PRESSURE | 1 | 1 | |
| 19 | 01550-06123 | BOLT | 1 | 1 | |
| 20 | 09358-35754-600 | HOSE, VAC (L:600>50) | . 1 | 1 | |
| 21 | 09358-35754-600 | HOSE, VAC (L:600>230) | 1 | 1 | |
| 22 | 18119-85C40 | CLIP, HOSE | 4 | 4 | |
| 23 | 09358-35754-600 | HOSE, VAC (L:600>180) | 1 | 1 | |
| 24 | 09358-35754-600 | HOSE, VAC (L:600>510) | 1 | 1 | |
| 25 | 09358-35754-600 | HOSE, VAC (L:600>280) | 1 | 1 | t |
| 26 | 09358-35754-600 | HOSE, VAC (L:600>270) | 1 | 1 | |
| 27 | 09358-35754-600 | HOSE, VAC (L:600>200) | 1 | 1 | |
| 28 | 09408-00111 | CLAMP, HOSE | 1 | 1 | |
| 29 | 18119-85C00 | CLIP, HOSE | 1 | 1 | |
| 30 | 09408-00035 | CLIP, HOSE | 1 | 1 | |
| 31 | 09408-00056 | CLAMP, HOSE | 1 | 1 | |
| | | | | | 4.00 |

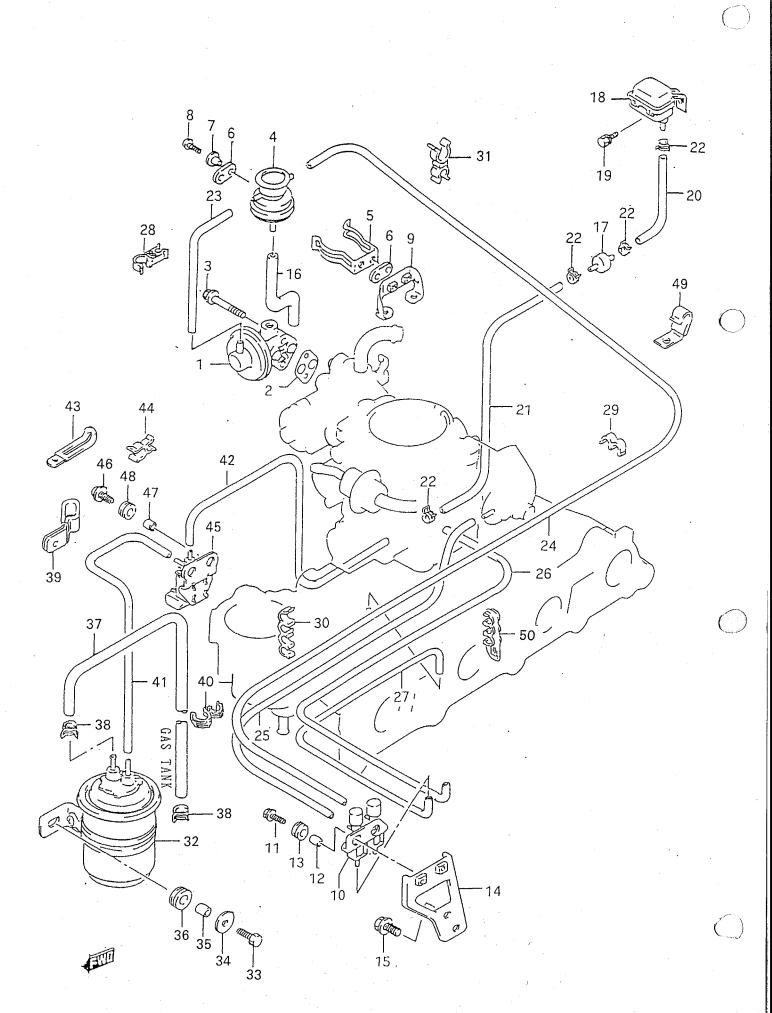


FIG. 037 (1-D-15) EMISSION CONTROL (2 VALVE)

| RF | REF. | REE | | Q, TY | | | |
|------|------|----------------------|------------------------------|-------|-----|---------|--|
| | N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS | |
| | | | | | | | |
| | 32 | 18560-61A00 | CANISTER | 1 | 1 | | |
| | 33 | 01 <i>55</i> 0-08203 | BOLT | 2 | 2 | | |
| | 34 | 09160T08075 | WASHER (8.2X26X1.6) | 2 | 2 | | |
| | 35 | 09180-08171 | SPACER (8.2X12.5X6) | 2 | 2 | | |
| | 36 | 09320-12011 | GROMMET, CANISTER | 2 | 2 | | |
| | 37 | 09354-54115-600 | HOSE, CANISTER INLET | 1 | 1 | | |
| | | | (L:600>550) | | | | |
| | 38 | 18119-85C10 | CLIP, HOSE | 2 | 2 | | |
| | 39 | 18119-85C20 | CLAMP, INLET HOSE | 1 | 1 . | | |
| | 40 | 18119-85C30 | CLAMP, INLET HOSE | 1 | 1 | | |
| | 41 | 09358-35754-600 | HOSE, CANISTER PURGE | . 1 | 1 | | |
| | | | (L:600>150) | | | | |
| | 42 | 09358-35754-600 | HOSE, CANISTER PURGE | 1 | 1 | | |
| | | | (L:600>280) | | | | |
| | 43 | 09404-08420 | CLAMP, HOSE | 1 | 1 | | |
| | 44 | 09408-00137 | CLAMP, HOSE | 1 | 1 | | |
| | 45 | 1811 <i>7-5</i> 6B10 | VALVE ASSY, SOLENOID | 1 | 1 | | |
| | 46 | 09136-06133 | SCREW, SOLENOID VALVE (6X14) | 2 | 2 | | |
| | 47 | 09180-06106 | SPACER (6.8X10X7) | 2 | 2 | | |
| | 48 | 09308-10004 | GROMMET, SOLENOID VALVE | 2 | 2 | | |
| | 49 | 09403-09315 | CLAMP, HOSE | 1 | 1 | | |
| | 50 | 33881-82011 | CLAMP, HOSE | 1 | 1 | | |
| | | | | | | | |

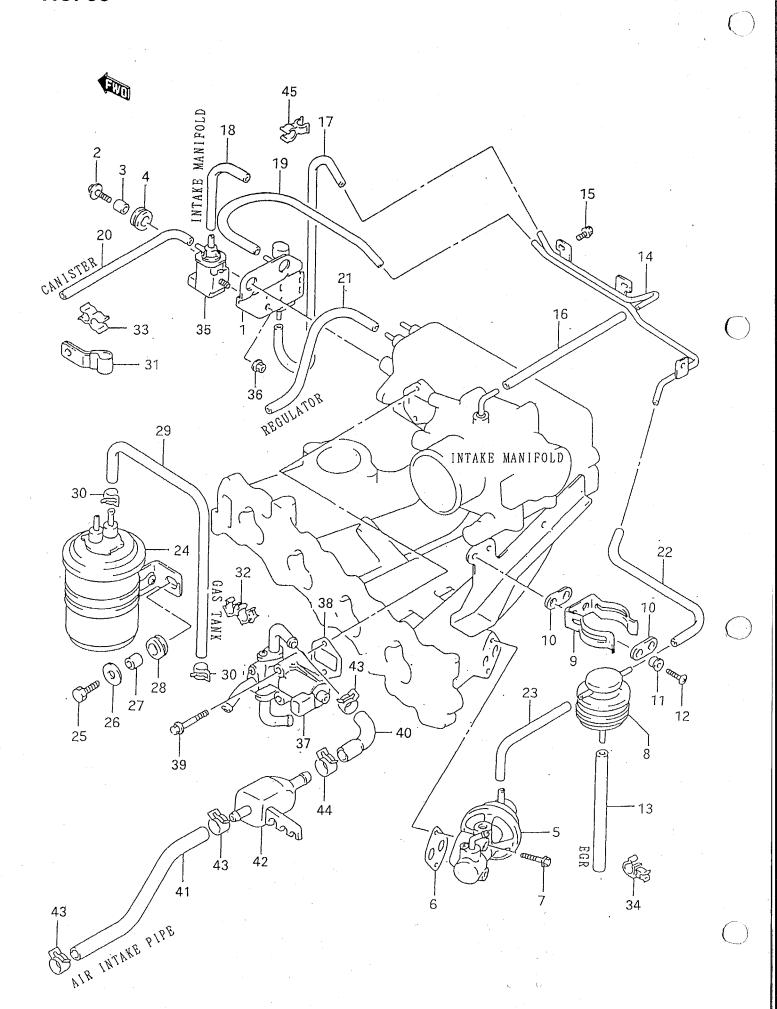


FIG. 038 (1-E-02) EMISSION CONTROL SYSTEM (4 VALVE)

| | REF. | | | Q, | TY | REMARKS | |
|---|------------|----------------------|----------------------------|----|-----|--|--|
| | N.º | PART Nº | DESCRIPTION | С | ٧ | remarks | |
| | 1 | 1811 <i>7-5</i> 8B20 | VALVE, VACUUM SWITCHING | 1 | 1 | | |
| | 2 | 09136-06133 | SCREW (6X14) | 2 | 2 | | |
| | 3 | 09180-06106 | SPACER (6.8X10X7) | 2 | 2 | | |
| | . 4 | 09308-10004 | GROMMET | 2 | 2 | | |
| | 5 | 18111-58B40 | VALVE, EGR | 1 | 1 | | |
| | 6. | 18529-85C00 | GASKET, EGR VALVE | 1 | 1 | | |
| | 7 | 01550-06453 | BOLT | 2 | 2 | | |
| | 8 | 18112-55A00 | MODULATOR ASSY, EGR | 1 | 1 | | |
| | 9 | 13814-85C00 | CLAMP, MODULATOR | 1 | 1 | | |
| | 10 | 13817-82000 | CUSHION, MODULATOR CLAMP | 2 | 2 | | |
| | 11 | 13815-85C00 | WASHER, MODULATOR CLAMP | 2 | 2 | | |
| Ù | 12 | 02142-06163 | SCREW | 2 | 2 | | |
| | 13 | 18471-65B00 | HOSE, EGR TO MODULATOR | 1 | 1 | | |
| | 14 | 18340-57B01 | PIPE, VACUUM | 1 | 1 | | |
| | 15 | 01550-06123 | BOLT | 2 | 2 | | |
| | 16 | 09358-35754-600 | HOSE, VAC | 1 | 1 | L:600>85 | |
| | 1 <i>7</i> | 09358-35754-600 | HOSE, VAC | 1 | 1 | L:600>180 | |
| | 18 | 09358-35754-600 | HOSE, VAC | 1 | 1 . | L:600>65 | |
| | 19 | 09358-35754-600 | HOSE, VAC | 1 | 1 | L:600>150 | |
| | 20 | 09358-35754-600 | HOSE, VAC | 1 | 1 | L:600>200 | |
| | 21 | 09358-35754-600 | HOSE, VAC | 1 | 1 | L:600>170 | |
| | 22 | 09358-35754-600 | HOSE, VAC | 1 | 1 | L:600>120 | |
| | 23 | 09358-35754-600 | HOSE, VAC | 1 | 1 | L:600>290 | |
| | 24 | 18560-61A00 | CANISTER | 1 | 1 | | |
| | 25 | 01500-08203 | BOLT | 2 | 2 | | |
|) | 26 | 09160-08075 | WASHER (8.2X26X1.6) | 2 | 2 | ı | |
| | 27 | 09180-08171 | SPACER (8.8X12X6) | 2 | 2 | ************************************** | |
| | 28 | 09320-12011 | CUSHION | 2 | 2 | | |
| | 29 | 09354-54115-600 | HOSE, CANISTER INLET | 1 | 1 | L:600>550 | |
| | 30 | 18119-85C10 | CLIP, CANISTER INLET HOSE | 2 | 2 | | |
| | 31 | 09403-12405 | CLAMP, CANISTER INLET HOSE | 1 | 1 | | |


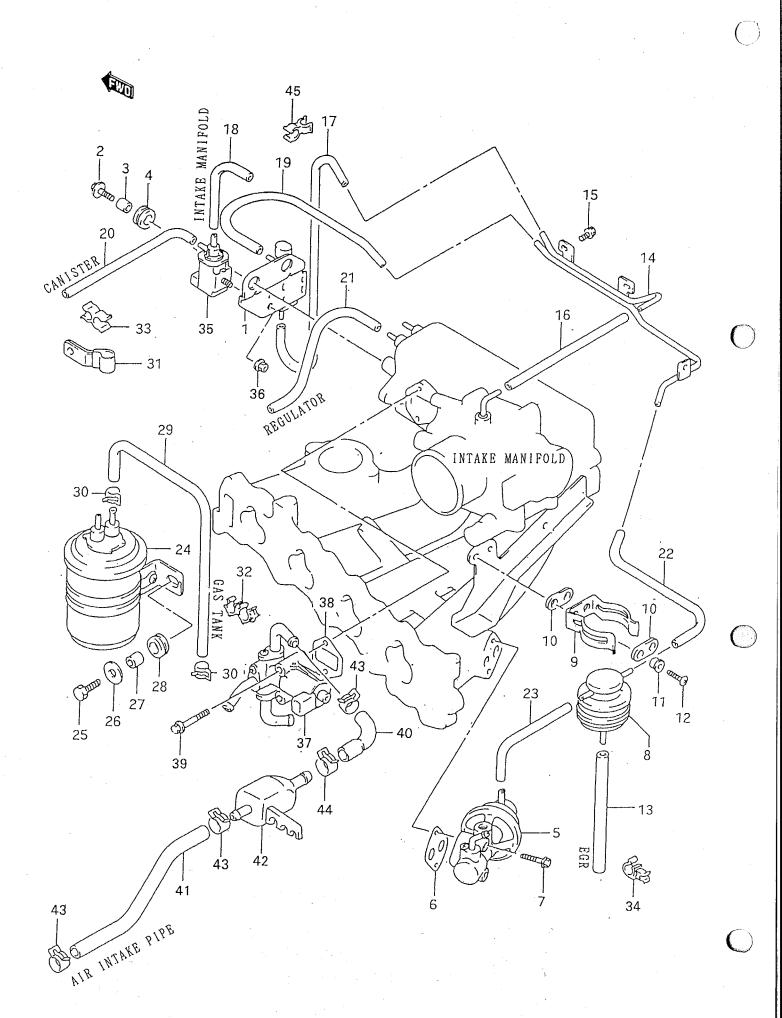



FIG. 038 (1-E-03) EMISSION CONTROL SYSTEM (4 VALVE)

| REF. | | | | Υ | | |
|------|----------------------|-------------------|-----|---|---------|--|
| N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS | |
| | | | | | | |
| 32 | 18119-85C30 | CLAMP | 1 | 1 | | |
| 33 | 09408-00137 | CLAMP | 1 | 1 | | |
| 34 | 09408-00111 | CLAMP | 1 | 1 | | |
| 35 | 1811 <i>7-5</i> 8B10 | SOLENOID, DUTY | ·] | 1 | | |
| 36 | 08316-10063 | NUT | 1 | 1 | | |
| 37 | 18117-58B00 | VALVE, ISC | 1 | 1 | | |
| 38 | 18139-58B00 | GASKET, ISC VALVE | 1 . | 1 | | |
| 39 | 01550-06453 | BOLT | 2 | 2 | | |
| 40 | 18141-58B00 | HOSE, ISC NO.1 | 1 | 1 | | |
| 41 | 18142-58B00 | HOSE, ISC NO.2 | 1 | 1 | | |
| 42 | 181 <i>45-5</i> 8B00 | CHAMBER, ISC | 1 | 1 | , | |
| 43 | 09401-15404 | CLIP | 3 | 3 | 30 | |
| 44 | 11196-85C00 | CLIP, ISC HOSE | 1 | 1 | | |
| 45 | 09408-00067 | CLAMP | 1 | 1 | | |


FIG. 39

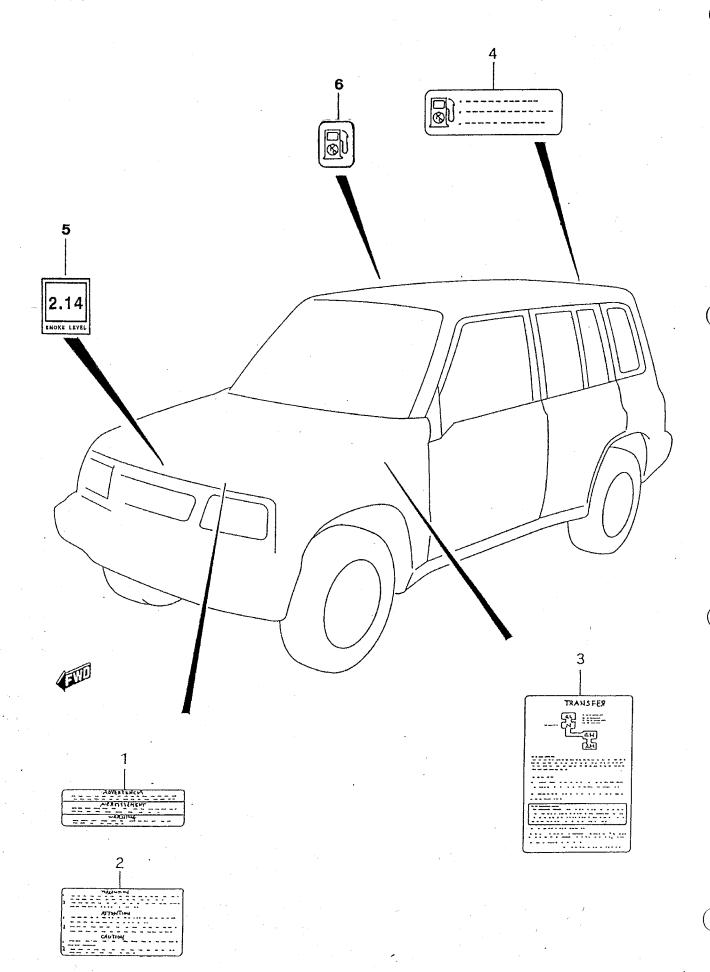

| REF. | PART Nº | | Q, TY | | |
|------|-------------|------------------------------|-------|---|------------|
| N.º | | DESCRIPTION | C | ٧ | REMARKS |
| | | | | | · |
| 1 | 11958-85C00 | LABEL, COOLING FAN CAUTION | . 1 | 1 | |
| 2 | 17998-82012 | LABEL, COOLING WATER CAUTION | 1 | 1 | |
| 3-1 | 28381-60A01 | EMBLEM, TRANSFER GEAR SHIFT | 1 | 1 | |
| 3-2 | 28381-60A60 | EMBLEM, TRANSFER GEAR SHIFT | 1 | 1 | E22 |
| 4 | 11959-60E00 | LABEL, FUEL LIMITATION | 7 | 1 | |
| 5 | 11032-86CA0 | LABEL, SMOKE LEVEL | 1 | 1 | 1.9 DIESEL |
| 6 | 11959-86CA0 | LABEL, DIESEL | 1 | 1 | 1.9 DIESEL |

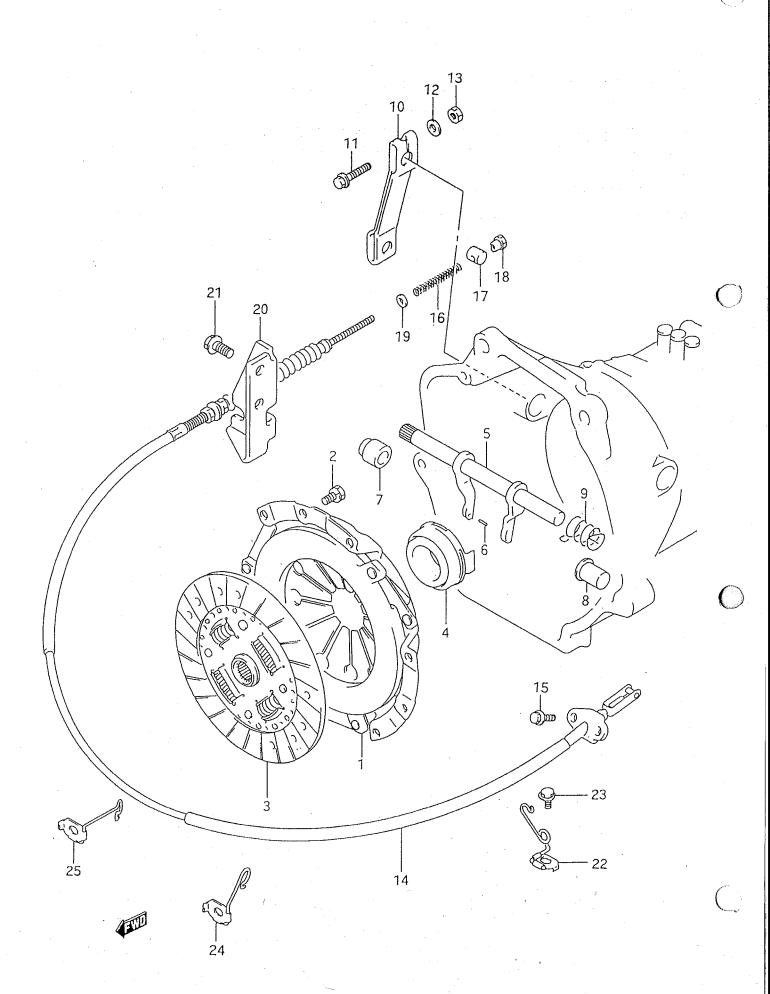

| REF. | | | Q, | TY | |
|------------|----------------------|--------------------------|-----|-----|-------------|
| N.º | PART Nº | DESCRIPTION | С | V | REMARKS |
| | | 4 | | | |
| 1 -1 | 22100-57B10-R | COVER ASSY, CLUTCH | 1 | . 1 | |
| 1 -2 | 22100-86CA0 | COVER ASSY, CLUTCH | 1 | 1 | 1.9 DIESEL |
| 2 | 01 <i>57</i> 0-08163 | BOLT | 6 | 6 | |
| 3-1 | 22400-57B10-R | DISC, CLUTCH | 1 | 1 | |
| 3-2 | 22400-86CA0 | DISC, CLUTCH | 1 | 1 | 1.9 DIESEL |
| 4 | 23265-70C00 | BEARING, CLUTCH RELEASE | 1 | 1 | |
| 5-1 | 23260-60A00 | SHAFT, CLUTCH RELEASE | 1 | 1 | |
| 5-2 | 23260-86CA0 | SHAFT, CLUTCH RELEASE | . 1 | 1 | 1.9 DIESEL |
| 6 | 09205-03019 | PIN | 1 | 1 | |
| 7 | 23264-60A00 | BUSH | 1 | 1 | |
| 8 | 23264-60A20 | BUSH | 1 | 1 | |
| 9 | 23269-60A00 | SPRING | 1 | 1 | |
| 10 | 23266-60A00 | ARM, CLUTCH RELEASE | 1 | 1 | |
| 11 | 01550-08403 | BOLT | 1 | 1 | |
| 12 | 08322-01083 | WASHER | 1 | 1 | |
| 13 | 08316-10083 | NUT | 1 | 1 | |
| 14-1 | 23710A60A11 | CABLE ASSY, CLUTCH | 1 | 1 | 2 VALVE:LHD |
| 14-2 | 23710-60A01 | CABLE ASSY, CLUTCH | 1 | 1 | 2 VALVE:RHD |
| 14-3 | 23710-57B11 | CABLE ASSY, CLUTCH | 1 | 1 | 4 VALVE:LHD |
| 14-4 | 23710-57B01 | CABLE ASSY, CLUTCH | 1 | 1 | 4 VALVE:RHD |
| 14-5 | 23710- <i>57</i> B01 | CABLE ASSY, CLUTCH | 1 | 1 | 1.9 DIESEL |
| 15 | 01550-06163 | BOLT | 2 | 2 | |
| 16 | 09440-08026 | SPRING | 1 | 1 | |
| 1 <i>7</i> | 09209-13018 | PIN | 1 | 1 | |
| 18-1 | 09150-06014 | NUT | 1 | 1 | • |
| 18-2 | 09150-86CA1 | NUT | 1 | 1 | 1.9 DIESEL |
| 19 | 08322-01063 | WASHER | . 1 | 1 | |
| 20-1 | 23910-56B10 | BRACKET, CLUTCH CABLE | 1 | 1 | |
| 20-2 | 23911-56B00 | BRACKET, CLUTCH CABLE | 1 | 1 | 3DR:E2,E53 |
| 20-3 | 23910-56B10 | BRACKET, CLUTCH CABLE | . 1 | 1 | 1.9 DIESEL |
| 21 -1 | 01550-10203 | BOLT | 2 | 2 | |
| 21 -2 | 01550-10163 | BOLT | 2 | 2 | 1.9 DIESEL |
| 22-1 | 23915-60A20 | CLAMP, CLUTCH CABLE NO.1 | 1 | 1 | LHD |
| 22-2 | 2391 <i>5-57</i> B01 | CLAMP, CLUTCH CABLE NO.1 | - 1 | 1 | RHD |
| 23 | 01550-06103 | BOLT | . 1 | - 1 | |
| 24 | 23916-60A00 | CLAMP, CLUTCH CABLE NO.2 | 1 | 1 | |
| 25 | 01550-06123 | BOLT | 1 | 1 | |

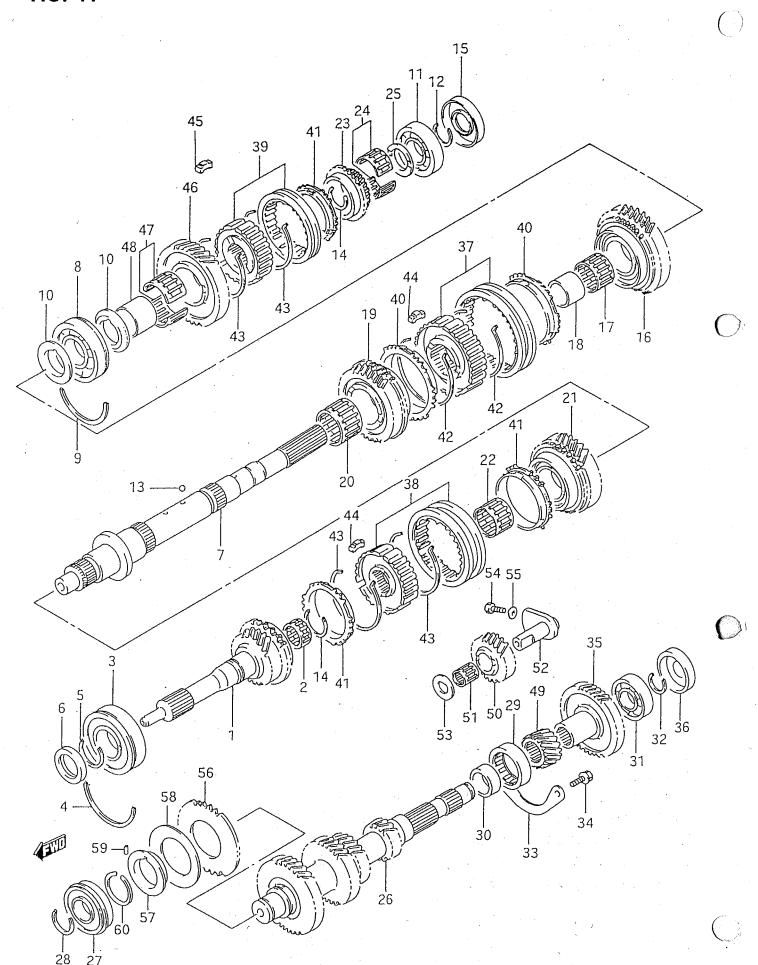

| | REF. | | | Q, | TY | | |
|------------------|------------|----------------------|-----------------------------|--------|--------|--------------|--|
| | N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS | |
| | | 0/110 05000 | CLIAFT INDUT | . 1 | ī.,, | (23 DIENTES) | |
| | 1 | 24110-85C00 | SHAFT, INPUT | 1 | 1 | (25) | |
| | 2 | 21915-85C00 | BEARING | 1 | 1 | | |
| | 3 | 21911-85C00 | BEARING | 1 | 1 | | |
| | 4 | 21933-85C80 | C RING | 1 | | | |
| | 5 | 21933-85C30 | CIRCLIP | 1 | 1 | | |
| | 6 | 09283-25088 | SEAL, OIL | 1 | 1 | | |
| • | 7 | 24121-60A00 | SHAFT, TRANSMISSION MAIN | - | l a | | |
| | 8 | 21911-85C20 | BEARING | 1 | i | | |
| | 9 | 21933-85C90 | C RING | 1 | 1 | | |
| | 10 | 24271-85C00 | WASHER | 2 | 2 | | |
| *** **: */ | 11 | 09262-25073 | BEARING, REAR | i - | 1 | | |
| | 12 | 21933-8 <i>5</i> C10 | CIRCLIP | 1 | 1 | | |
| | 13 | 06111-06003 | BALL | 3 | 3 | | |
| | 14 | 21933-85C30 | CIRCLIP | 2 | 2 | | |
| | 15 | 09282-25006 | SEAL, OIL | 1 | 1 | | |
| | 16 | 24211-83011 | GEAR, MAIN SHAFT LOW | 1 | 1 | | |
| | 1 <i>7</i> | 21915-85C40 | BEARING | 1 | 1. | | |
| | 18 | 09300-30003 | BUSH | 1 | 1 | | |
| | 19 | 24220-85C00 | GEAR, MAIN SHAFT 2ND | 1 | 1 | | |
| | 20 | 21915-85C40 | BEARING | 1 | 1 | | |
| | 21 | 24230-85C00 | GEAR, MAIN SHAFT 3RD | 1 | 1 | | |
| | 22 | 21915-85C30 | BEARING | 1 | 1 | | |
| | 23 | 24250-85C10 | GEAR, MAIN SHAFT 5TH | 1 | 1 | | |
| | (24) | 24801-85810 | BEARING 24801- 60810 | 1 | 1 | 5E-014,04 | |
| ì | 25 | 24255-60A00 | WASHER | 1 | 1 | | |
| - 1 | 26 | 24131-60A02 | SHAFT, TRANSMISSION COUNTER | 1 | 1 | • | |
| | 27 | 21911-85C10 | BEARING, FRONT | 1 | 1 | | |
| | 28 | 21933-85C30 | CIRCLIP | 1 | 1 | | |
| | 29 | 21921-85C00 | BEARING, CENTER | 1 | 1 | | |
| | 30 | 09300-25028 | BUSH | 1 | 1 | • | |
| | 31 | 09262-20073 | BEARING, REAR | 1 | 1 | | |
| | 32 | 21933-85C00 | CIRCLIP | 1 | 1 | | |
| | | | | | | | |



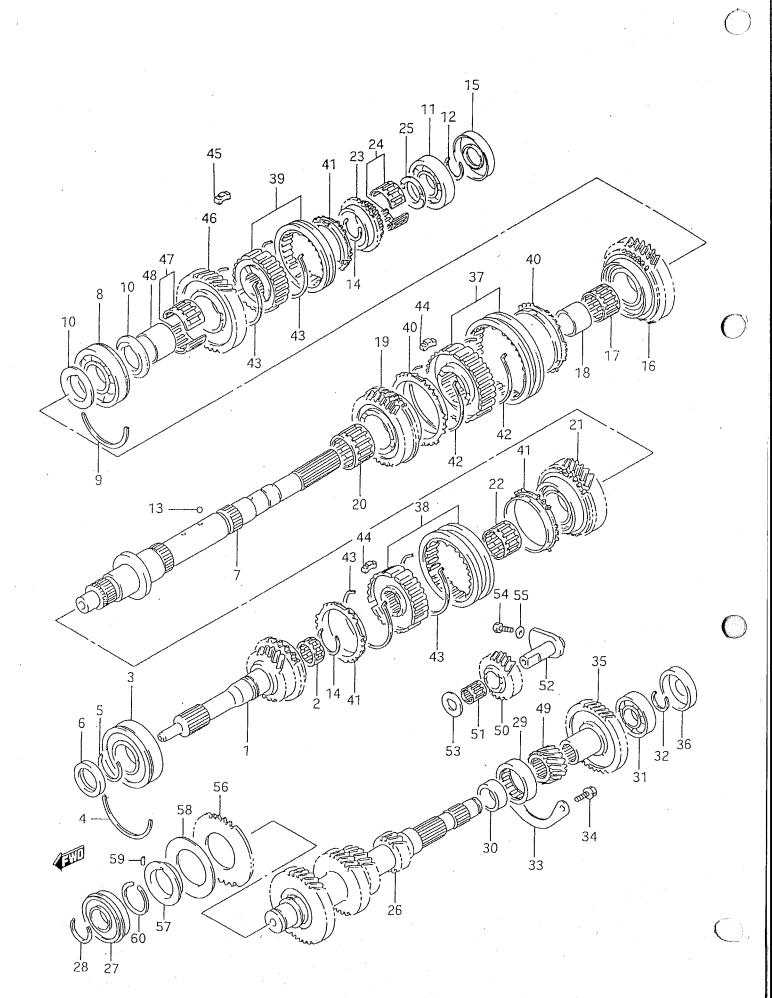


FIG. 041 (1-F-04) TTRANSMISSION

| RFE | | PART N° DESCRIPTION C | Q, TY | | |
|-----|--|--|--|-------------------------------|--|
| N.º | PART Nº | | CV | REMARKS | |
| | | | . The section of the section and test section (section) and section (section) | | |
| 33 | 24135-60A01 | PLATE, BEARING | 1 1 | | |
| 34 | 09103-06083 | BOLT (6X16) | 2 2 | | |
| 35 | 24351-60A10 | GEAR, COUNTER SHAFT 5TH | 1 1 | | |
| 36 | 21947-85C30 | PLUG | 1 1 | | |
| 37 | 24400-60A00 | HUB, SYNC LOW SPEED | 1 1 | | |
| 38 | 24410-60A00 | HUB, SYNC HIGH SPEED | 1 1 | | |
| 39 | 24420-60A01 | HUB, SYNC REV | 1 1 | | |
| 40 | 24431-83001 | RING, SYNC LOW SPEED | 2 2 | | |
| 41 | 24432-60A00 | RING, SYNC HIGH SPEED | 3 3 | | |
| 42 | 09388-00017 | SPRING, LOW SPEED | 2 2 | | |
| 43 | 09388-00019 | SPRING, HIGH SPEED | 4 4 | | |
| 44 | 24471-60A00 | KEY | 6 6 | | |
| 45 | 24473-70D10 | KEY | 3 3 | | |
| 46 | 24681-60A00 | GEAR, MAIN SHAFT REV | 1 1 | | |
| 47 | 24801-60820 | BEARING | 1 1 | | |
| 48 | 09300-30003 | BUSH | 1 1 | | |
| 49 | 24671-60A00 | GEAR, COUNTER SHAFT REV | 1 1. | | |
| 50 | 24561-85F00 | GEAR, REV IDLE | 1 1 | | |
| 51 | 09263-26027 | BEARING | 1 1 | | |
| 52 | 24551-56B00 | SHAFT, REV GEAR | 1 1 | | |
| 53 | 09166-16020 | WASHER | 1 1 | | |
| 54 | 24565-60B00 | BOLT | 1 1 | | |
| 55 | 21945-85C20 | WASHER | 1 1 | | |
| 56 | 24137-60A10 | GEAR, FRICTION | 1 1 | | |
| 57 | 24138-85C00 | RETAINER, FRICTION GEAR | 1 1 | | |
| 58 | 24139-85C00 | SPRING, FRICTION GEAR | 1 1 | i . | |
| 59 | 09261-02010 | PIN | 1 1 | | |
| 60 | 21933-85C60 | SNAPRING | 1 1 | | |
| | 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 | 33 24135-60A01 34 09103-06083 35 24351-60A10 36 21947-85C30 37 24400-60A00 38 24410-60A00 39 24420-60A01 40 24431-83001 41 24432-60A00 42 09388-00017 43 09388-00017 44 24471-60A00 45 24473-70D10 46 24681-60A00 47 24801-60820 48 09300-30003 49 24671-60A00 50 24561-85F00 51 09263-26027 52 24551-56B00 53 09166-16020 54 24565-60B00 55 21945-85C20 56 24137-60A10 57 24138-85C00 58 24139-85C00 59 09261-02010 | N.º BART N.º DESCRIPTION 33 24135-60A01 PLATE, BEARING 34 09103-06083 BOLT (6X16) 35 24351-60A10 GEAR, COUNTER SHAFT 5TH 36 21947-85C30 PLUG 37 24400-60A00 HUB, SYNC LOW SPEED 38 24410-60A00 HUB, SYNC HIGH SPEED 39 24420-60A01 HUB, SYNC LOW SPEED 40 24431-83001 RING, SYNC LOW SPEED 41 24432-60A00 RING, SYNC HIGH SPEED 42 09388-00017 SPRING, LOW SPEED 43 09388-00017 SPRING, HIGH SPEED 44 24471-60A00 KEY 45 24473-70D10 KEY 46 24681-60A00 GEAR, MAIN SHAFT REV 47 24801-60820 BEARING 48 09300-30003 BUSH 49 24671-60A00 GEAR, COUNTER SHAFT REV 50 24561-85F00 GEAR, REV IDLE 51 09263-26027 BEARING 52 24551-56B00 SHAFT, REV GEAR 53 09166-16020 WASHER 54 24565-60B00 BOLT 55 21945-85C20 WASHER 56 24137-60A10 GEAR, FRICTION 57 24138-85C00 SPRING, FRICTION GEAR 58 24139-85C00 SPRING, FRICTION GEAR 59 09261-02010 PIN | PART N° DESCRIPTION C V | |

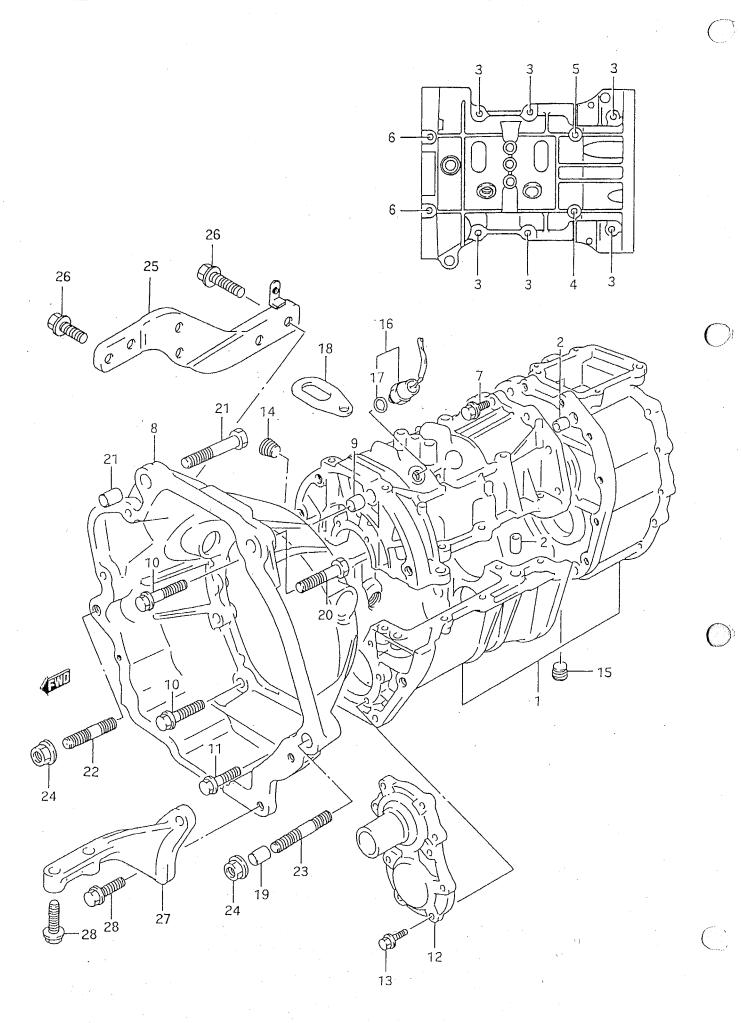


| j | REF. | | | Q, TY | | |
|----|------------|----------------------|-------------------------------|-------|-----|------------|
| | N.º | PART Nº | DESCRIPTION | C | ٧ | REMARKS |
| | | · | · | | | |
| | 1 | 24700-60A01 | CASE ASSY, TRANSMISSION | 1 | 1 | |
| | 2 | 04211-13149 | .PIN | 4 | 4 | |
| | 3 | 01 <i>55</i> 0-08303 | .BOLT | 6 | 6 | |
| | 4 | 09103-08013 | .BOLT | 1 | 1 | |
| | 5 | 09103-08134 | .BOLT (8X110) | 1 | 1 | |
| | 6 | 09103-08131 | .BOLT (8X120) | . 2 | 2 | |
| | 7 | 01550-08303 | .BOLT | 12 | 12 | |
| | 8-1 | 21341-77E00 | HOUSING, CLUTCH | 1 | 1 | |
| | 8-2 | 21341-86CA0 | HOUSING, CLUTCH | 1 | 1 | 1.9 DIESEL |
| ę, | 9 | 04211-13149 | PIN | 2 | 2 | |
|) | 10 | 01 <i>55</i> 0-10403 | BOLT | 6 | 6 | |
| | 11 | 01550-10503 | BOLT | 2 | 2 | |
| | 12 | 24741-60A01 | RETAINER, INPUT SHAFT BEARING | . 1 | 1 | |
| | 13 | 09103-08153 | BOLT (8X30) | 8 | 8 | |
| | 14 | 21947-85C40 | PLUG, OIL FILLER & LEVEL | 1 | 1 | |
| | 15 | 21947-85C50 | PLUG, OIL DRAIN | 1 | 1 | |
| | 16 | 37610-83001 | SWITCH ASSY, BACK UP LAMP | 1 | 1 | |
| | 1 <i>7</i> | 09280-11002 | .O RING | 1 | 1 | |
| | 18 | 11851-62B00 | HOOK, ENGINE | 1 | 1 | |
| | 19 | 09206-15001 | PIN | 2 | 2 | |
| | 20-1 | 01550-12653 | BOLT | 1 | 1 | |
| | 20-2 | 00057-86CA0 | BOLT | 1 | 1 | 1.9 DIESEL |
| | 21-1 | 01550-12753 | BOLT | 1 | 1 | |
| | 21 -2 | 00048-86CA0 | BOLT | 1 | . 1 | 1.9 DIESEL |
| 1 | 22 | 09108-12006 | STUD BOLT | 1 | 1 | |
| | 23 | 09108-12007 | STUD BOLT | 1 | 1 | |
| | 24-1 | 08316-10123 | NUT | 2 | 2 | \$ ** |
| | 24-2 | 04018-86CA0 | NUT | 2 | 2 | 1.9 DIESEL |
| | 25 | 24790-56B10 | STIFFNER, RH | 1 | 1 | |
| | 26 | 01550-10203 | BOLT | 4 | 4 | |
| | 27 | 24791-56B00 | STIFFNER, LH | 1 | 1 | |
| | 28 | 01550-10353 | BOLT | 4 | 4 | |
| | | | | | | |

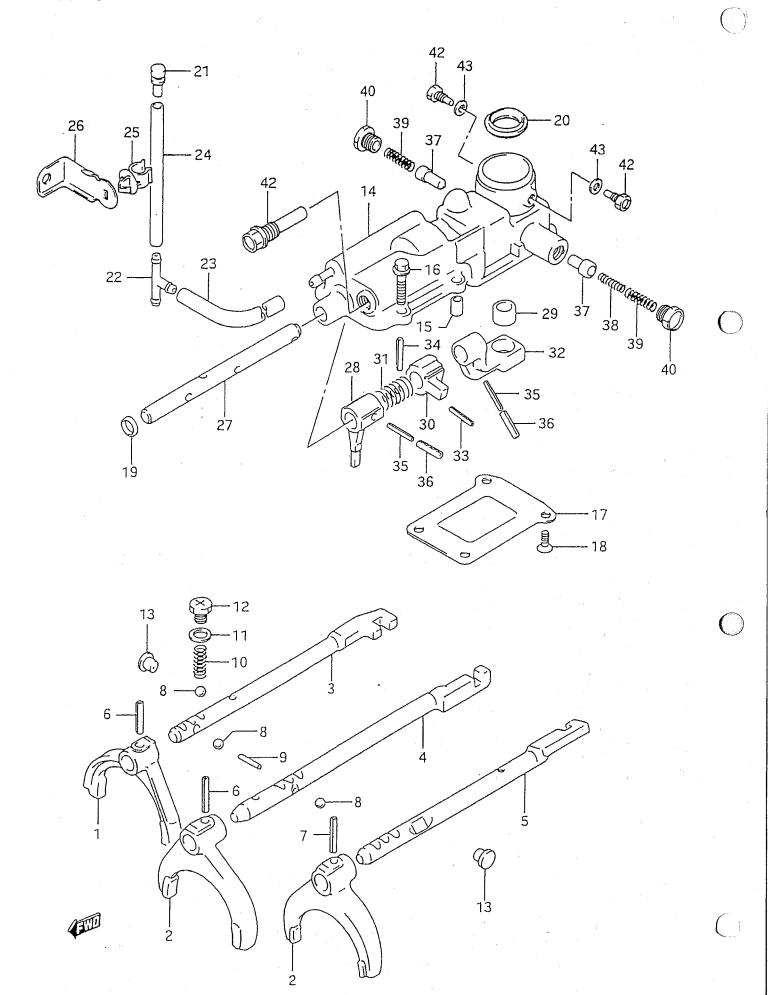

| REF. | Q, | TY | | | |
|------------|----------------------|------------------------------|-------|---|------------|
| N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS |
| | | | | | |
| 1 | 2521,1-60A02 | FORK, LOW SPEED GEAR SHIFT | 1 | 1 | |
| 2 | 25221-60A11 | FORK, HIGH & REV GEAR SHIFT | 2 | 2 | |
| 3 | 25410-60A00 | SHAFT, LOW SPEED GEAR SHIFT | 1 | 1 | |
| 4 | 25420-60A10 | SHAFT, HIGH SPEED GEAR SHIFT | - 1 | 1 | |
| 5 | 25450-60A00 | SHAFT, REV GEAR SHIFT | 1 | 1 | |
| 6 | 09205-05012 | SPRING PIN | 2 | 2 | |
| 7 | 09205-05016 | SPRING PIN | 1 | 1 | |
| 8 | 06111-12004 | BALL | 5 | 5 | |
| 9 | 09261-03017 | ROLLER | 1 | 1 | |
| 10 | 25415-85C00 | SPRING | 3 | 3 | |
| 11 | 21945-85C30 | WASHER | 3 | 3 | |
| 12 | 09248-12005 | SCREW | 3 | 3 | |
| 13 | 09250-10006 | PLUG | 2 | 2 | |
| 14-1 | 25120-60A01 | CASE, GEAR SHIFT LEVER | 1 | 1 | |
| 14-2 | 25120-60A00 | CASE, GEAR SHIFT LEVER | 1 | 1 | 1.9 DIESEL |
| 15 | 04211-09149 | PIN | 2 | 2 | |
| 16 | 01 <i>55</i> 0-08203 | BOLT | 5 | 5 | |
| 1 <i>7</i> | 25129-60A00 | PLATE, GEAR SHIFT CASE | 1 | 1 | |
| 18 | 02122-06163 | SCREW | 4 | 4 | |
| 19 | 21947-85C10 | PLUG | 1 | 1 | |
| 20 | 28117-60A00 | SEAT, CASE | 1 | 1 | |
| 21 | 46543-85C00 | BREATHER, MISSION | 1 | 1 | • |
| 22 | 09367-08004 | UNION, 3WAY HOSE | 1 | 1 | |
| 23 | 21931-85C10 | HOSE, BREATHER | . 1 | 1 | |
| 24 | 21931-85C00 | HOSE, BREATHER | , 1. | 1 | ſ |
| 25 | 09403-11311 | CLAMP, BREATHER HOSE | 1 | 1 | 1 |
| 26 | 24831-57B00 | BRACKET, HOSE CLAMP | . 1 | 1 | |
| 27-1 | 25521-60A11 | SHAFT, GEAR SHIFT | . 1 | 1 | |
| 27-2 | 25521-60A01 | SHAFT, GEAR SHIFT | 1 | 1 | 1.9 DIESEL |
| 28 | 25541-60A03 | LEVER, GEAR SHIFT | 1 | 1 | |
| 29 | 25551-85C00 · | BUSH, LEVER | . 1 . | 1 | |
| 29-2 | 25521-60A02 | BUSH, LEVER | 1 | 1 | 1.9 DIESEL |

FIG. 43

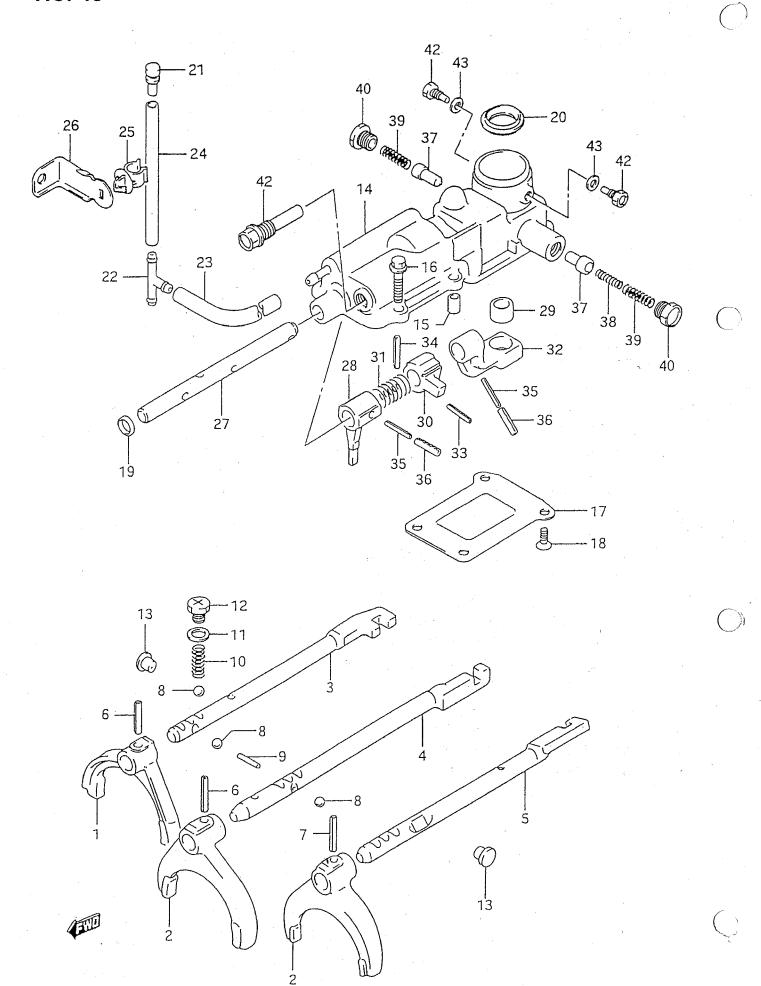

| REF. | | | Q, TY | |
|------|-------------|--------------------------|-------|---------|
| N.º | PART Nº | DESCRIPTION | CV | REMARKS |
| | | | | |
| 30 | 25271-60A01 | YOKE, GEAR SHIFT LIM | 1 1 | |
| 31 | 21935-85C10 | SPRING | 1 1 | |
| 32 | 25531-60A01 | ARM, GEAR SHIFT | 1 1 | |
| 33 | 09205-05012 | SPRING PIN | 1 1 | |
| 34 | 09205-05015 | SPRING PIN | 1 1 | |
| 35 | 09205-03037 | SPRING PIN, INNER | 2 .2 | |
| 36 | 09205-06016 | SPRING PIN, OUTER | 2 2 | |
| 37 | 25341-80701 | PIN, SELECT GUIDE | 2 2 | |
| 38 | 09440-05037 | SPRING, INNER | 1 1 | |
| 39 | 09440-08029 | SPRING, OUTER | 2 2 | |
| 40 | 21947-85C60 | BOLT | 2 2 | |
| 41 | 25281-60A02 | BOLT, REV GEAR SHIFT LIM | 1 1 | |
| 42 | 21941-85C50 | BOLT | 2 2 | |
| 43 | 21945-85C00 | LOCK WASHER | 2 2 | |

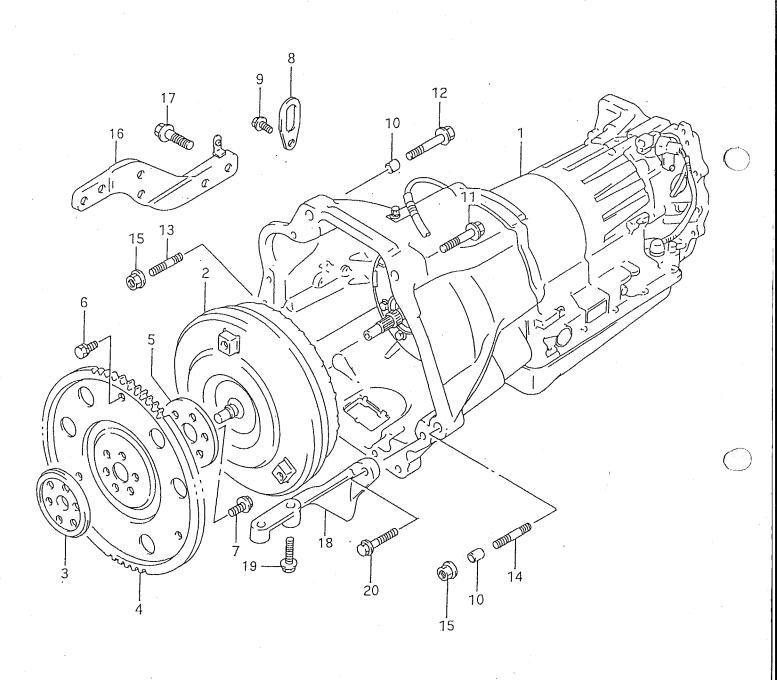


FIG. 044 (1-F-08) AUTOMATIC TRANSMISSION (4AT)

| | REF. | | | Q, | TY | | KS |
|---|------------|----------------------|------------------------------|----|----|---------|----|
| | N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS | |
| | | | | | | | |
| | 1 | 21000- <i>57</i> B10 | TRANSMISSION ASSY, AUTOMATIC | 1 | 1 | | |
| | 2 | 22700-77EA0 | .CONVERTER, TORQUE | 1 | 1 | | |
| | 3 | 22611-61A02 | FLANGE, DRIVE PLATE FRONT | 1 | 1 | | |
| | 4 | 22620-57B00 | PLATE, DRIVE | 1 | 1 | | |
| | 5 | 22631-61A00 | FLANGE, DRIVE PLATE REAR | 1 | 1 | | |
| | 6 | 09103-10286 | BOLT (10X13.5) | 3 | 3 | | |
| | 7 | 09103-10200 | BOLT (10X18.5) | 6 | 6 | | |
| | 8 | 11851-62B00 | HOOK, ENGINE | 1 | 1 | | |
| | 9 | 01550-06123 | BOLT | 1 | 1 | | |
| | 10 | 09206-15001 | PIN | 2 | 2 | | |
| M | 11 | 01550-12653 | BOLT | 1 | 1 | | |
| | 12 | 01550-12753 | BOLT | 1 | 1 | | |
| | 13 | 09108-12006 | STUD BOLT | 1 | 1 | | |
| | 14 | 09108-12007 | STUD BOLT | 1 | 1 | | |
| | 15 | 08316-10123 | NUT | 2 | 2 | | |
| | 16 | 24790-56B10 | STIFFENER, CASE RH | 1 | 1 | | |
| | 1 <i>7</i> | 01550-10203 | BOLT | 4 | 4 | | |
| | 18 | 24791-56B00 | STIFFENER, CASE LH | 1 | 1 | | |
| | 19 | 01550-10353 | BOLT | 4 | 4 | | |
| | | | | | | | |

NO USAR ESTA PAGINA PARA MERCADO ESPAÑOL DO NOT USE THIS PAGE FOR SPANISH MARKET

FIG. 45

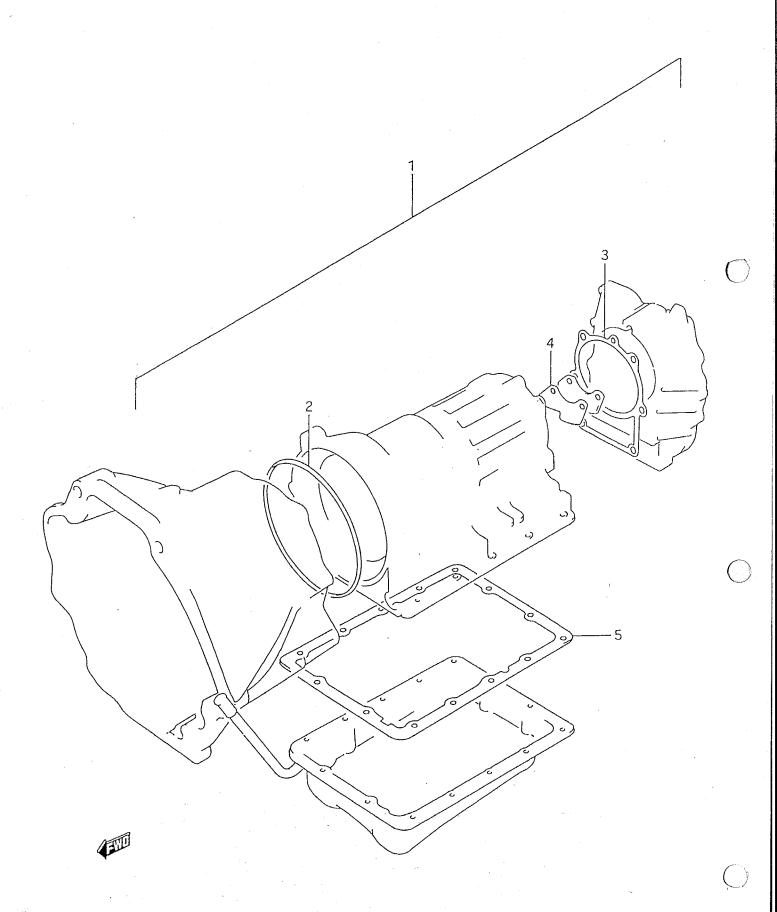


FIG. 045 (1-F-09) 4AT GASKET SET (4AT)

| REF. | | | Q, TY | |
|------|-------------|----------------------------|-------|-----------|
| N.º | PART Nº | DESCRIPTION | C V | REMARKS |
| | | | | |
| 1 | 24780-57BT0 | GASKET SET, AT | 1 1 | |
| 2 | 29736-57B00 | .O RING, HOUSING | 1 1 | |
| 3 | 24784-57B00 | .GASKET, ADAPTOR | 1 1 | |
| 4 | 24783-57B00 | .GASKET, OIL GALLERY COVER | 1 1 | |
| 5 | 24782-57B00 | .GASKET, OIL PAN | 1 1 | |
| 6 | 24700-57BT0 | OVERHAUL SET, AT | . 1 1 | NOT SHOWN |

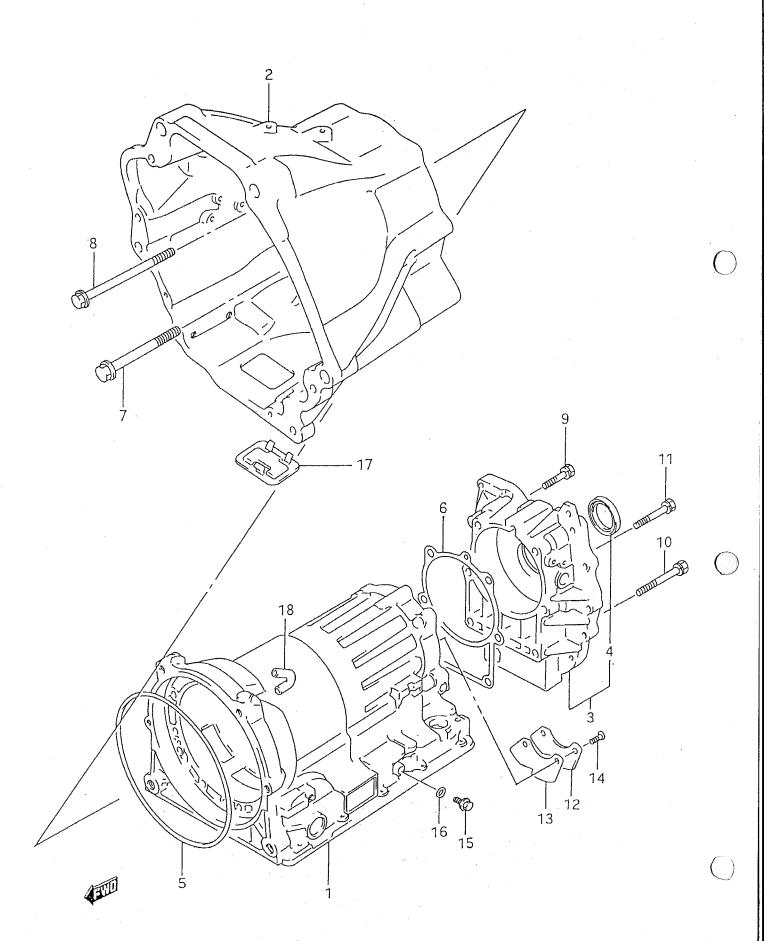


FIG. 046 (1-F-10) 4AT TM CASE (4AT)

| REF. | | | | TY | |
|------|----------------------|---------------------------|-----|-----|---------|
| N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS |
| | | | | | |
| 1 | 24712-57B00 | CASE ASSY, TRANSMISSION | 1 | 1 | |
| 2 | 24711-57B00 | HOUSING, TORQUE CONVERTER | 1 | 1 | |
| 3 | 24710-57B01 | CASE ASSY, ADAPTOR | 1 | 1 | |
| 4 | 29792-57B01 | .SEAL, ADAPTOR CASE | 1 | 1 | |
| . 5 | 29736-57B00 | O RING, HOUSING | 1 . | 1 | |
| 6 | 24784-57B00 | GASKET, ADAPTOR | 1 | 1 | |
| 7 | 29995-57B00 | BOLT, HOUSING NO.2 | 2 | 2 | |
| 8 | 29996-57B00 | BOLT, HOUSING NO.1 | 4 | 4 | |
| 9 | 01 <i>5</i> 70-10453 | BOLT | 4 | 4 | |
| 10 | 29972-57B00 | BOLT, ADAPTOR NO.3 | 1 | 1 | |
| 11. | 29991-57B00 | BOLT, ADAPTOR NO.2 | 1 | 1 | |
| 12 | 24761-57B00 | COVER, PLATE | 1 | 1 | |
| 13 | 24783-57B00 | GASKET, COVER | 1 | 1 . | |
| 14 | 29994-57B00 | SCREW, COVER | 3 | 3 | |
| 15 | 29849-57B00 | PLUG, TRANSMISSION CASE | 2 | 2 | |
| 16 | 29738-57B00 | O RING, CASE PLUG | 2 | 2 | |
| 17 | 22641-61A01 | CAP, HOUSING | 1 | 1 | |
| 18 | 24772-57B00 | ADAPTOR, BREATHER | 1 | 1 | |

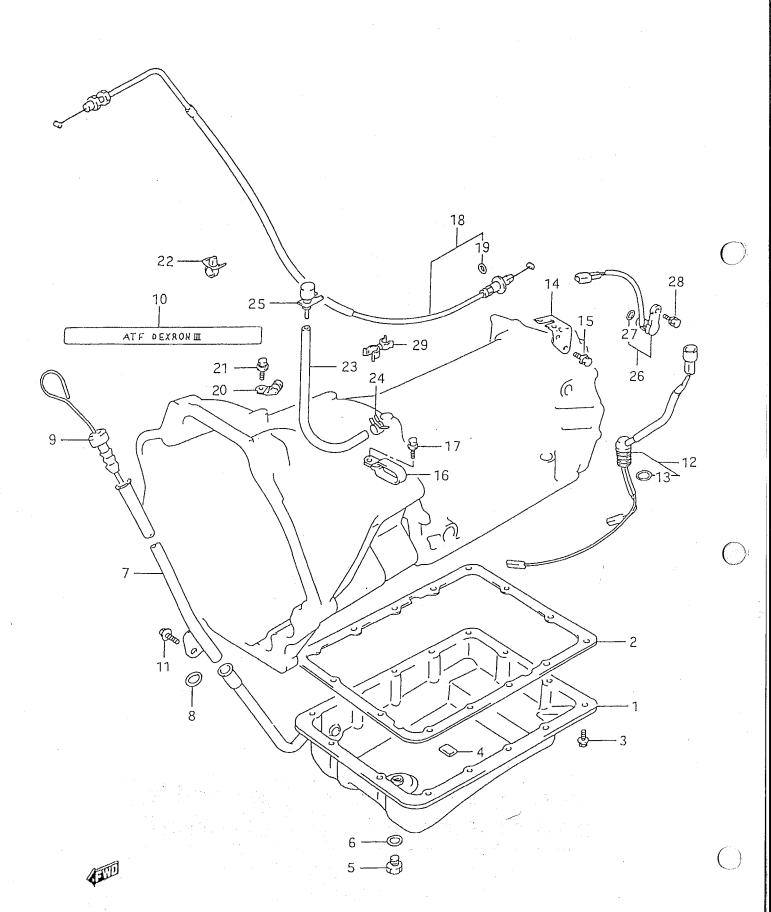


FIG. 047 (1-F-11) 4AT OIL PAN AND WIRE HARNESS (4AT)

| REF. | | Q, TY | | | |
|------------|-------------|-----------------------------|-----|-----|---------|
| N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS |
| | | | | | |
| 1 | 24741-57B01 | PAN, OIL | 1 | 1 | • |
| 2 | 24782-57B00 | GASKET, OIL PAN | 1 | 1 | |
| 3 | 09117-06002 | BOLT (6X14) | 14 | 14 | |
| 4 | 24745-57B00 | MAGNET, OIL PAN | 2 | 2 | |
| 5 | 24742-57B00 | PLUG, DRAIN | 1 | 1 | |
| 6 | 24781-57B00 | GASKET, DRAIN PLUG | 1 | 1 | |
| 7 | 22940-57B01 | TUBE, OIL FILLER | 1 | 1 | |
| 8 | 09280-10014 | O RING | 1 | 1 | / |
| 9 | 22951-57B01 | GAUGE, OIL | 1 | 1 | |
| 10 | 24839-61A31 | EMBLEM, ATF | 1 | 1 | |
| 11 | 01550-08203 | BOLT | 2 | 2 | |
| 12 | 24732-57B10 | HARNESS, SOLENOID WIRE | 1 | 1 | |
| 13 | 29726-57B00 | O RING, WIRE HARNESS | . 1 | 1 | |
| 14 | 26150-57B00 | BRACKET, WIRE HARNESS | 1 | 1 | |
| 15 | 01550-06103 | BOLT | 1 | 1 | |
| 16 | 09403-16407 | CLAMP | 1 | 1 | |
| 1 <i>7</i> | 01550-06103 | BOLT | . 1 | 1 | |
| 18 | 24751-57B00 | CABLE ASSY, THROTTLE | 1 | 1 | |
| 19 | 29727-57B00 | .O RING, CABLE | 1 | 1 | |
| 20 | 24733-57B00 | CLAMP, CABLE | 1 | 1 | |
| 21 | 29969-57B00 | BOLT, CABLE CLAMP | 1 | 1 | |
| 22 | 09408-00151 | CLAMP | 1 | 1 | |
| 23 | 24771-57B00 | HOSE, TRANSMISSION BREATHER | 1 | 1 | |
| 24 | 24735-57B00 | CLIP, BREATHER HOSE | 1 | 1 | |
| 25 | 24773-57B00 | BREATHER, TRANSMISSION | 1 | 1 | |
| 26 | 24791-57B00 | SENSOR, SPEED | 1 | 1 | ſ |
| 27 | 29725-57B00 | .O RING, SPEED SENSOR | 1 | 1 | 1 |
| 28 | 29989-57B00 | BOLT, SPEED SENSOR | 1 | . 1 | |

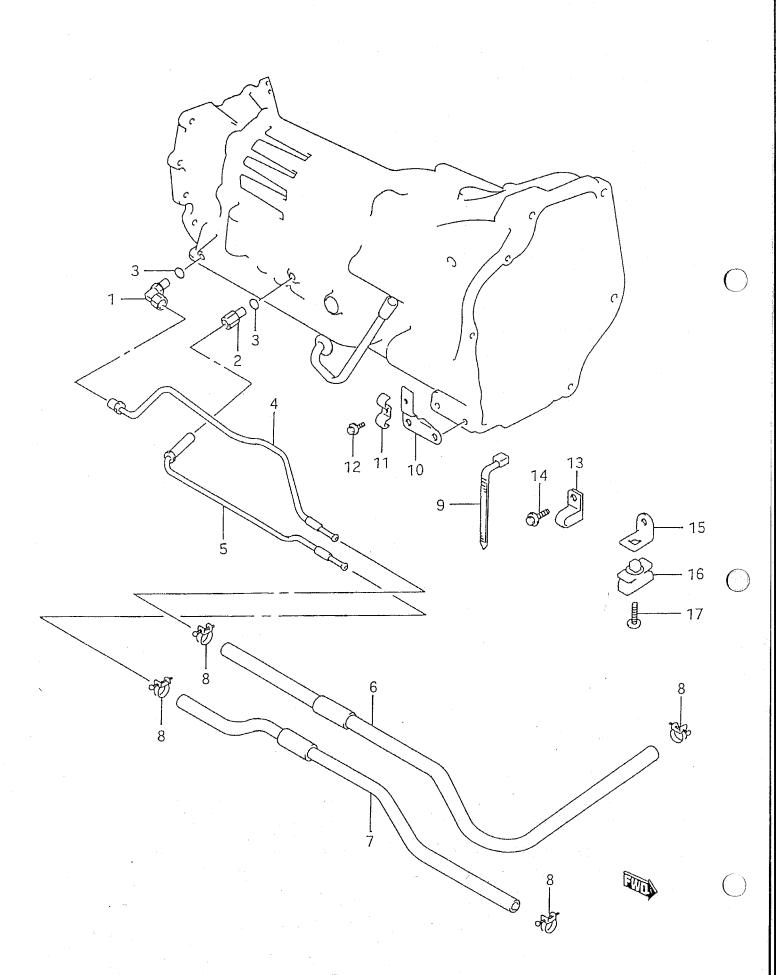


FIG. 048 (1-F-12) 4AT OIL HOSE (4AT)

| | | Q, TY | | | |
|----------------------|---|--|---|--|--|
| PART Nº | DESCRIPTION | C | ٧ | REMARKS | |
| | | | | | |
| 24744-57B00 | ELBOW, OIL INLET | 1 | 1 | | |
| 24743-57B01 | UNION, OIL OUTLET | 1 | 1 | | |
| 29737-57B00 | O RING, PIPE | 2 | 2 | • | |
| 22910-57B01 | PIPE, OIL INLET | 1 | 1 | | |
| 22920-57B01 | PIPE, OIL OUTLET | 1 | 1 | | |
| 24891-56X52 | HOSE, OIL INLET (L:1000>890) | 1 | 1 | | |
| 24891-56X52 | HOSE, OIL OUTLET (L:1000>630) | 1 | 1 | | |
| 09400-15302 | CLAMP | 4 | 4 | | |
| 09407-14403 | CLAMP (L:125) | 1 | 1 | | |
| 24895-57B00 | BRACKET, CLAMP | 1 | 1 | | |
| 24899-85500 | PLATE, OIL PIPE | 1 | 1 | | |
| 01550-06103 | BOLT | 1 | 1 | | |
| 09404-10418 | CLAMP, TRANSMISSION CASE | 1 | 1 | | |
| 01 <i>55</i> 0-10163 | BOLT | 1 | 1 . | | |
| 22935-61A00 | BRACKET, CLAMP | 1 | 1. | | |
| 09403-14309 | CLAMP | 1 | 1 | | |
| 03541-06253 | SCREW | 1 | 1 . | | |
| | 24743-57B01 29737-57B00 22910-57B01 22920-57B01 24891-56X52 24891-56X52 09400-15302 09407-14403 24895-57B00 24899-85500 01550-06103 09404-10418 01550-10163 22935-61A00 09403-14309 | 24744-57800 ELBOW, OIL INLET 24743-57801 UNION, OIL OUTLET 29737-57800 O RING, PIPE 22910-57801 PIPE, OIL INLET 22920-57801 PIPE, OIL OUTLET 24891-56X52 HOSE, OIL INLET (L:1000>890) 24891-56X52 HOSE, OIL OUTLET (L:1000>630) 09400-15302 CLAMP 09407-14403 CLAMP (L:125) 24895-57800 BRACKET, CLAMP 24899-85500 PLATE, OIL PIPE 01550-06103 BOLT 09404-10418 CLAMP, TRANSMISSION CASE 01550-10163 BOLT 22935-61A00 BRACKET, CLAMP 09403-14309 CLAMP | PART N° DESCRIPTION C 24744-57B00 ELBOW, OIL INLET 1 24743-57B01 UNION, OIL OUTLET 1 29737-57B00 O RING, PIPE 2 22910-57B01 PIPE, OIL INLET 1 24891-56X52 HOSE, OIL INLET (L:1000>890) 1 24891-56X52 HOSE, OIL OUTLET (L:1000>630) 1 09400-15302 CLAMP 4 09407-14403 CLAMP (L:125) 1 24895-57B00 BRACKET, CLAMP 1 24899-85500 PLATE, OIL PIPE 1 01550-06103 BOLT 1 09404-10418 CLAMP, TRANSMISSION CASE 1 01550-10163 BOLT 1 22935-61A00 BRACKET, CLAMP 1 09403-14309 CLAMP 1 | PART N° DESCRIPTION C V 24744-57B00 ELBOW, OIL INLET 1 1 24743-57B01 UNION, OIL OUTLET 1 1 29737-57B00 O RING, PIPE 2 2 22910-57B01 PIPE, OIL INLET 1 1 24891-56X52 HOSE, OIL OUTLET (L:1000>890) 1 1 24891-56X52 HOSE, OIL OUTLET (L:1000>630) 1 1 09400-15302 CLAMP 4 4 09407-14403 CLAMP (L:125) 1 1 24895-57B00 BRACKET, CLAMP 1 1 24899-85500 PLATE, OIL PIPE 1 1 01550-06103 BOLT 1 1 01550-10163 BOLT 1 1 01550-10163 BOLT 1 1 02935-61A00 BRACKET, CLAMP 1 1 09403-14309 CLAMP 1 1 | |

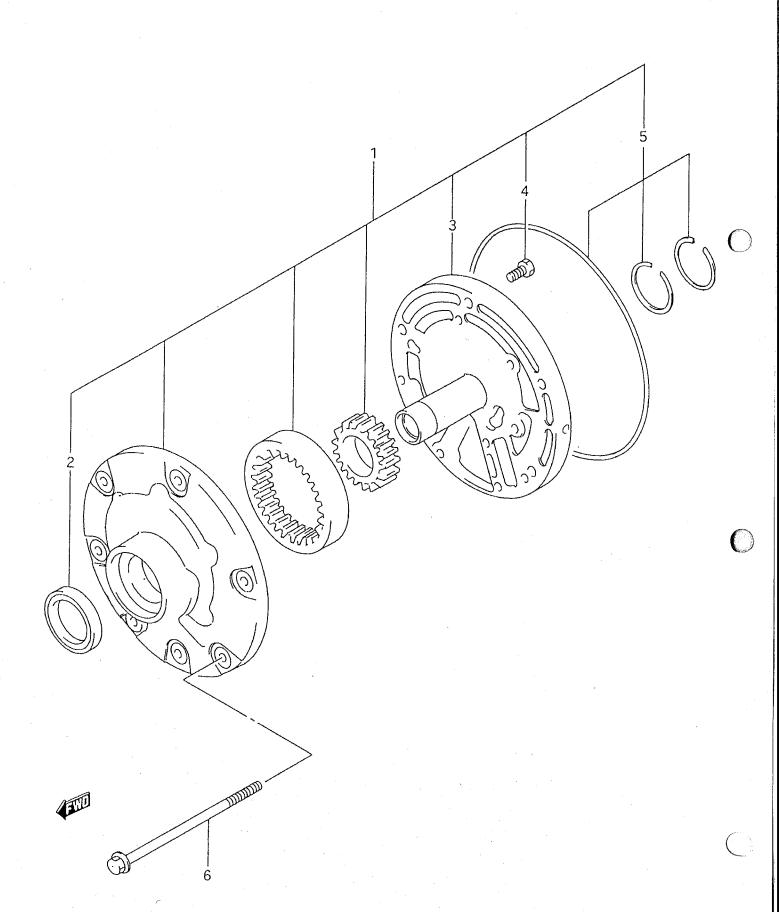


FIG. 049 (1-F-13) 4AT OIL PUMP (4AT)

| REF. | | | Q, TY | | |
|------|----------------------|--------------------------|-------|---|---------|
| N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS |
| | | | | | |
| 1 | 22800-57B00 | PUMP ASSY, OIL | 1 | 1 | |
| 2 | 29799-57B00 | .SEAL, OIL PUMP | 1 | 1 | |
| 3 | 22820-57B00 | .COVER, OIL PUMP | 1 | 1 | |
| 4 | 29999-57B00 | .BOLT, COVER | 6 | 6 | |
| 5 | 22860-57BT0 | .RING SET, OIL PUMP SEAL | 1 | 1 | |
| 6 | 29998- <i>57</i> B00 | BOLT, OIL PUMP | 7 | 7 | |

FIG. 50


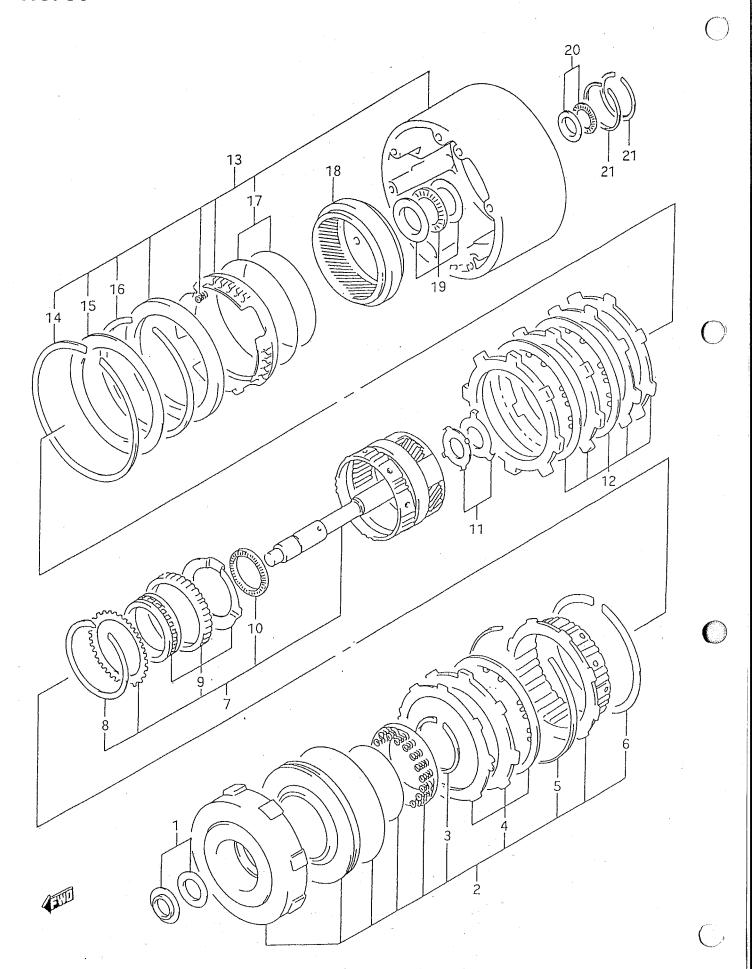


FIG. 050 (1-F-14) 4AT OVER DRIVE (4AT)

| | REF. | | | Q, TY | | , |
|-------|------|-------------|-------------------------------|-------|----|---------|
| | N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS |
| | | | | | | |
| | 1 | 24963-57BT0 | BEARING SET, THRUST NO.5 | 1 | 1 | |
| | 2 | 24100-57B00 | CLUTCH ASSY, OVER DRIVE | 1 | 1 | |
| | 3 | 28949-57B00 | .RING, CLUTCH SNAP | 1 | 1 | |
| | 4 | 24111-57BT0 | .DISK SET, OVER DRIVE CLUTCH | 1 | 1 | |
| | 5 | 24191-57B00 | .RING, RETAINING CLUTCH | 1 | 1 | |
| | 6 | 24192-57B00 | .RING, RETAINING BRAKE HUB | 1 | 1 | |
| | 7 | 24140-57B00 | GEAR ASSY, OVER DRIVE | 1 | 1 | |
| | 8 | 24193-57B00 | .RING, RETAINING PLNTY | 1 | 1 | |
| | 9 | 26850-57BT0 | .CLUTCH ASSY, ONE WAY | 1 | 1 | |
| | 10 | 29698-57B00 | .BEARING, THRUST | 1 | 1 | |
| 1 | 11 | 24163-57BT0 | WASHER SET, THRUST PLNTY | 1 | 1 | |
| | 12 | 24114-57BT0 | DISC SET, OVER DRIVE BRAKE | 1 | 1. | |
| | 13 | 26310-57BT0 | PISTON ASSY, OVER DRIVE BRAKE | 1 | 1 | • |
| | 14 | 24194-57B00 | .RING, BRAKE FRONT | 1 | 1 | |
| | 15 | 24118-57B00 | .PLATE, BRAKE CUSHION | 1 | 1 | |
| | 16 | 24194-57B00 | .RING, BRAKE FRONT | 1 | 1 | |
| | 17 | 29745-57BT0 | O RING SET, BRAKE PISTON | 1 | 1 | |
| | 18 | 24142-57B00 | GEAR, PLNTY RING | 1 | 1 | |
| | 19 | 24961-57BT0 | BEARING SET, THRUST NO.3 | 1 | 1 | |
| | 20 | 24964-57BT0 | BEARING SET, THRUST NO.6 | 1 | 1 | |
| | 21 | 29797-57B00 | SEAL RING, REAR | 2 | 2 | |
| | | | | | | |

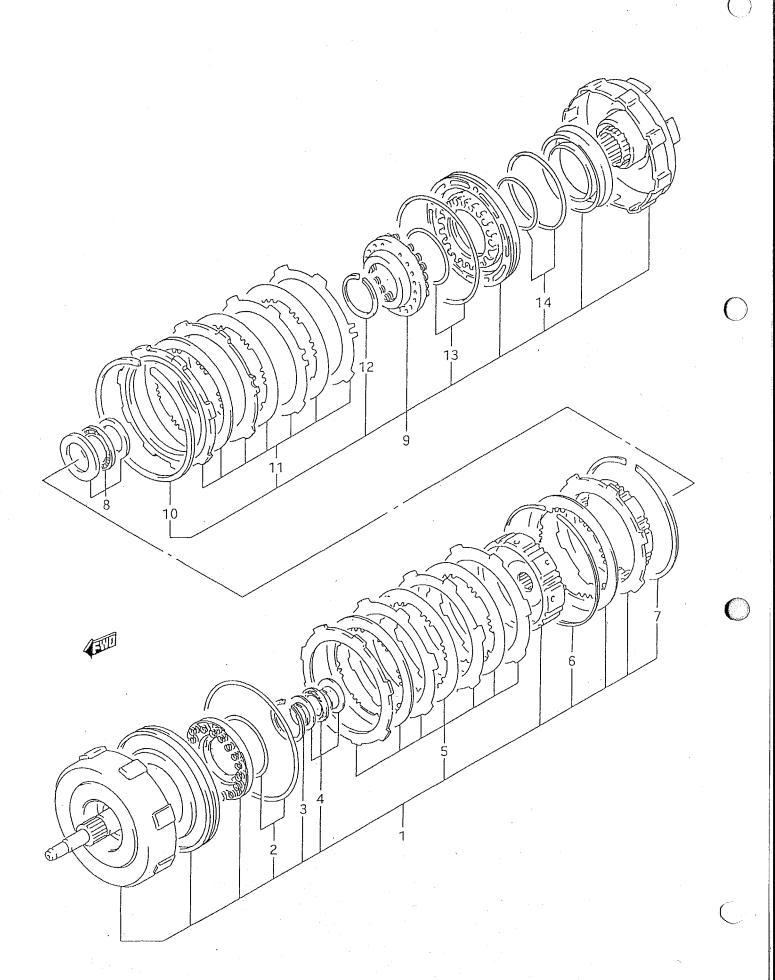

| | | Q, TY | | | |
|----------------------|--|--|---|---|--|
| PART Nº | DESCRIPTION | С | ٧ | REMARKS | |
| | | | | | |
| 26601-57B01 | CLUTCH ASSY, FWD | 1 | 1 | | |
| 26622-57BT0 | .O RING SET, CLUTCH NO.1 | 1 | 1 | | |
| 26691-57B00 | .RING, RETURN SPRING | 1 | 1 | | |
| 26661-57BT0 | .BEARING SET, THRUST NO.7 | 1 | 1 | | |
| 26631-57BTO | .PLATE SET, DIRECT CLUTCH | 1 | 1 | | |
| 24191-57B00 | .RING, CLUTCH | 1 | 1 | | |
| 26692-57B01 | .RING, BACK PLATE | 1 | . 1 | | |
| 26662-57BTO | BEARING SET, THRUST NO.8 | 1 | 1 | | |
| 26602-57B00 | CLUTCH ASSY, DIRECT | 1 | 1 | | |
| 26692-57B10 | .RING, BACK PLATE | 1 | 1 | | |
| 26621-57BTO | .PLATE SET, DIRECT CLUTCH | 1 | 1 | | |
| 26691 <i>-57</i> B00 | .RING, RETURN SPRING | 1 | 1 | | |
| 26622-57BTO | O RING SET, DIRECT CLUTCH | 1 | 1 | | |
| 26632-57BT0 | O RING SET, DIRECT CLUTCH | 1 | 1 | | |
| | 26622-57BTO 26691-57BTO 26661-57BTO 26631-57BTO 24191-57BOO 26692-57BOO 26692-57BOO 26692-57BOO 26692-57BTO 26691-57BTO 26691-57BTO 26621-57BTO | 26601-57B01 CLUTCH ASSY, FWD 26622-57BT0 .O RING SET, CLUTCH NO.1 26691-57B00 .RING, RETURN SPRING 26661-57BT0 .BEARING SET, THRUST NO.7 26631-57BT0 .PLATE SET, DIRECT CLUTCH 24191-57B00 .RING, CLUTCH 26692-57B01 .RING, BACK PLATE 26662-57BT0 .BEARING SET, THRUST NO.8 26602-57B00 CLUTCH ASSY, DIRECT 26692-57B10 .RING, BACK PLATE 26621-57BT0 .PLATE SET, DIRECT CLUTCH 26691-57B00 .RING, RETURN SPRING 26622-57BT0 .O RING SET, DIRECT CLUTCH | PART N° DESCRIPTION C 26601-57B01 CLUTCH ASSY, FWD 1 26622-57BT0 .O RING SET, CLUTCH NO.1 1 26691-57B00 .RING, RETURN SPRING 1 26661-57BT0 .BEARING SET, THRUST NO.7 1 26631-57BT0 .PLATE SET, DIRECT CLUTCH 1 24191-57B00 .RING, CLUTCH 1 26692-57B01 .RING, BACK PLATE 1 26602-57B00 CLUTCH ASSY, DIRECT 1 26692-57B10 .RING, BACK PLATE 1 26691-57B00 .PLATE SET, DIRECT CLUTCH 1 26691-57B00 .RING, RETURN SPRING 1 26692-57B10 .RING, RETURN SPRING 1 26622-57B10 .O RING SET, DIRECT CLUTCH 1 | PART N° DESCRIPTION C V 26601-57B01 CLUTCH ASSY, FWD 1 1 26622-57BT0 .O RING SET, CLUTCH NO.1 1 1 26691-57B00 .RING, RETURN SPRING 1 1 26631-57BT0 .BEARING SET, THRUST NO.7 1 1 26631-57B00 .PLATE SET, DIRECT CLUTCH 1 1 26692-57B01 .RING, BACK PLATE 1 1 26602-57B00 BEARING SET, THRUST NO.8 1 1 26602-57B00 CLUTCH ASSY, DIRECT 1 1 26692-57B10 .RING, BACK PLATE 1 1 26691-57B10 .PLATE SET, DIRECT CLUTCH 1 1 26691-57B00 .RING, RETURN SPRING 1 1 26622-57B10 .O RING SET, DIRECT CLUTCH 1 1 | |


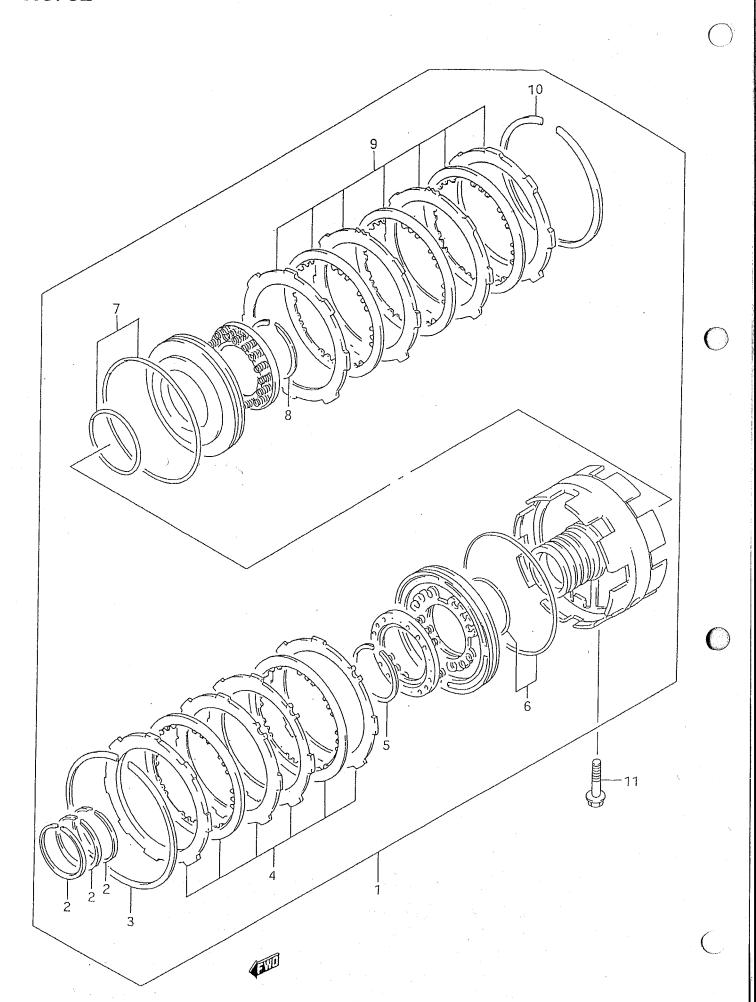


FIG. 052 (1-G-02) 4AT CENTER SUPPORT (4AT)

| REF. | | | Q, | TY | |
|------|-------------|-----------------------------|----|----|---------|
| N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS |
| | | | | | |
| 1 | 26900-57B00 | BRAKE ASSY, DRIVE / 2ND | 1 | 1 | |
| 2 | 29797-57B00 | .RING, SEAL REAR | 3 | 3 | |
| 3 | 26692-57B10 | .RING, BACK PLATE | 1 | 1 | |
| 4 | 26911-57BT0 | .DISC SET, B1 BRAKE | 1 | 1 | |
| 5 | 28949-57B00 | RING, B1 BRAKE | 1 | 1 | |
| 6 | 29743-57BT0 | O RING SET, B1 BRAKE PISTON | 1 | 1 | |
| . 7 | 29742-57BT0 | O RING SET, B2 BRAKE PISTON | 1 | 1 | |
| 8 | 28949-57B00 | .RING, B2 BRAKE | 1 | 1 | |
| 9 | 26913-57BT0 | .DISC SET, B2 BRAKE | 1 | 1 | |
| 10 | 26692-57B10 | .RING, BACK PLATE | 1 | 1 | |
| 11 | 29997-57B00 | BOLT, CENTER SUPPORT | 2 | 2 | |
| | | | | | |

FIG. 53

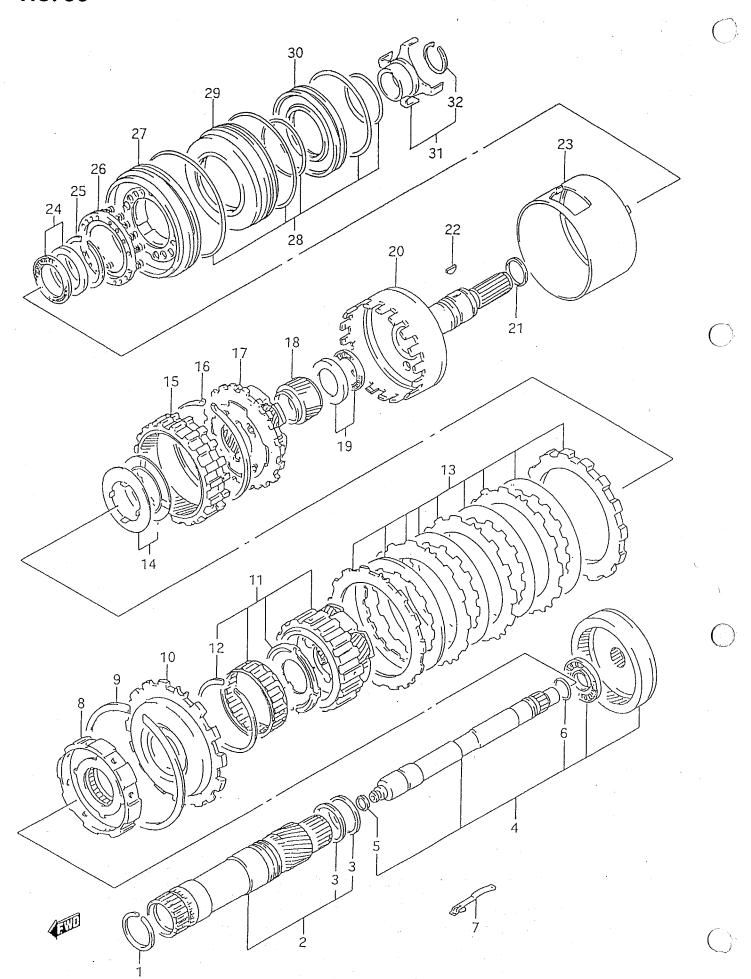

| FI | G. | 0 | 5 | 3 |
|----|----|---|---|---|
| Н | Ğ. | U | 5 | J |

| REF. | | | Q, | TY | |
|------------|-------------|------------------------------|---|----|---------|
| N.º | PART Nº | DESCRIPTION | C | ٧ | REMARKS |
| | | | and look look over the look dask dask over some | | |
| 1 | 24991-57B00 | RING, DIRECT CLUTCH | 1 | 1 | |
| 2 | 24901-57B00 | GEAR ASSY, PLNTY SUN | 1 | 1 | |
| 3 | 29796-57B00 | .RING, SUN GEAR SEAL | 2 | 2 | |
| 4 | 24950-57B00 | SHAFT ASSY, INNER | 1 | 1 | |
| 5 | 29795-57B00 | RING, SLEEVE SEAL | 1 | 1 | |
| 6 | 24995-57B00 | .RING, INNER SHAFT | 1 | 1 | |
| 7 | 29622-57B00 | SPRING, LEAF | 1 | 1 | |
| 8 | 24931-57B00 | HUB ASSY, B2 BRAKE | 1 | 1 | |
| 9 | 26891-57B00 | RING, REACTION PLATE | 1 | 1 | • |
| 10 | 26831-57B00 | PLATE, REV BRAKE REACTION | 1 | 1 | |
| 11 | 24902-57B00 | GEAR ASSY, FRONT PLNTY | 1 | 1 | |
| 12 | 24993-57B00 | .RING, CLUTCH | 1 | 1 | |
| 13 | 26811-57BT0 | PLATE SET, 1ST/REV BRAKE | 1 | 1 | |
| 14 | 29945-57BT0 | WASHER SET, THRUST PLNTY | 1 | 1 | |
| 15 | 24943-57B00 | GEAR, FRONT PLNTY RING | 1 | 1 | |
| 16 | 24992-57B00 | RING, FRONT PLNTY RING | 1 | 1 | |
| 1 <i>7</i> | 24944-57B00 | GEAR, REAR PLNTY CARRIER | 1 | 1. | |
| 18 | 24946-57B00 | GEAR, PLNTY SUN | 1 | 1 | |
| 19 | 26663-57BTO | BEARING SET, THRUST NO.9 | 1 | 1 | |
| 20 | 24952-57B01 | SHAFT ASSY, OUT PUT | 1 | 1 | |
| 21 | 29794-57B00 | SEAL RING, OUT PUT SHAFT | 1 | 1 | |
| 22 | 24971-57B00 | KEY, WOODRUFF | 1 | 1 | |
| 23 | 26832-57B00 | TUBE, BRAKE APPLY | 1 | 1 | |
| 24 | 24962-57BTO | BEARING SET, THRUST NO.4 | 1 | 1 | |
| 25 | 28949-57B00 | RING, REV SPRING | 1 | 1 | |
| 26 | 26841-57B00 | SPRING, PISTON RETURN | 1 | 1 | |
| 27 | 26821-57B00 | PISTON, REVERSE BRAKE | 1 | 1 | |
| 28 | 29729-57BT0 | O RING SET, REV BRAKE PISTON | 1 | 1 | |
| 29 | 26861-57B00 | SLEEVE, REACTION | 1 | 1 | |
| 30 | 26822-57B00 | PISTON, SECONDARY REV | 1 | 1 | |
| 31 | 24921-57BT0 | ROTOR SET, CENTER | 1 | 1 | |
| 32 | 24994-57B00 | .RING, ROTOR | 1 | 1 | |
| | | | | | |

FIG. 54

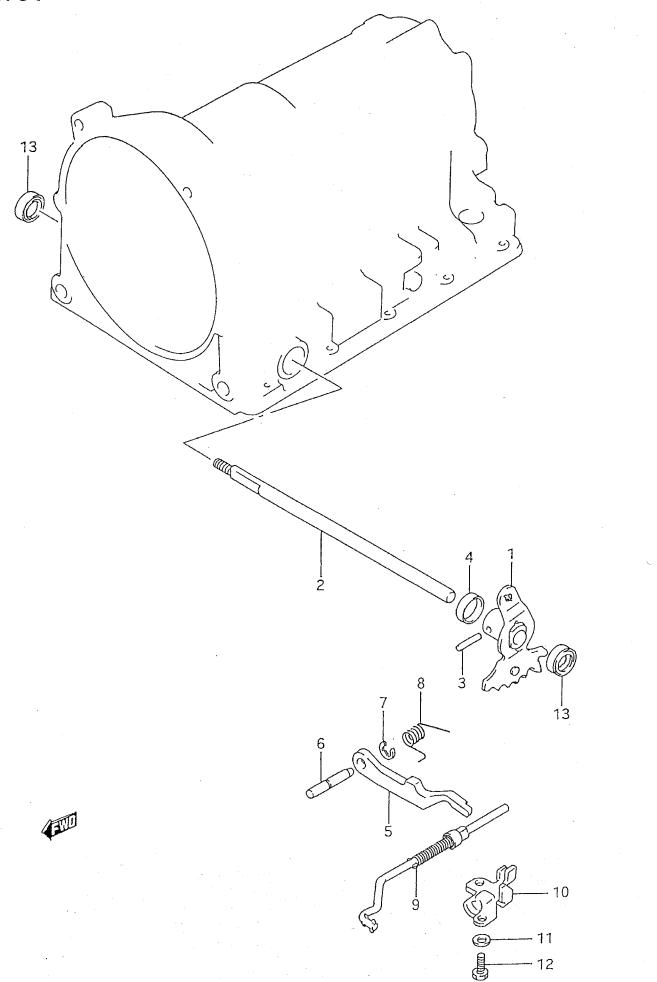


FIG. 054 (1-G-04) 4AT PARKING LOCK (4AT)

| REF. | | | | Q, TY | | |
|------|-----|-------------|-------------------------|------------|-----|--|
| | N.º | PART Nº | DESCRIPTION | C , | ٧ | REMARKS |
| | | | | <u> </u> | | |
| | 1 | 25911-57B00 | LEVER, MANUAL SHIFT | 1 | 1 | |
| | 2 | 25951-57B00 | SHAFT, MANUAL SHIFT | 1 | 1 | |
| | 3 | 29898-57B00 | PIN, MANUAL SHIFT LEVER | 1 | 1 | |
| | 4 | 25921-57B00 | COVER, SLEEVE | 1 | 1 | |
| | 5 | 25961-57B00 | PAWL, PARKING LOCK | 1 | 1 . | |
| | 6 | 29899-57B00 | PIN, PAWL | 1 | 1 | |
| | 7 | 28948-57B00 | RING, PAWL | 1 | 1 | |
| | 8 | 29624-57B00 | SPRING, PAWL | 1 | 1 | |
| | 9 | 25931-57B00 | ROD, PARKING LOCK | 1 | 1 . | |
| | 10 | 25941-57B00 | BRACKET, PAWL | 1 | 1 | |
| | 11 | 29944-57B00 | WASHER, BRACKET | 2 | 2 | |
| J | 12 | 29988-57B00 | SCREW, BRACKET | 2 | 2 | |
| | 13 | 29793-57B00 | SEAL, OIL LIP | 2 | 2 | and the second s |
| | | | | | | |

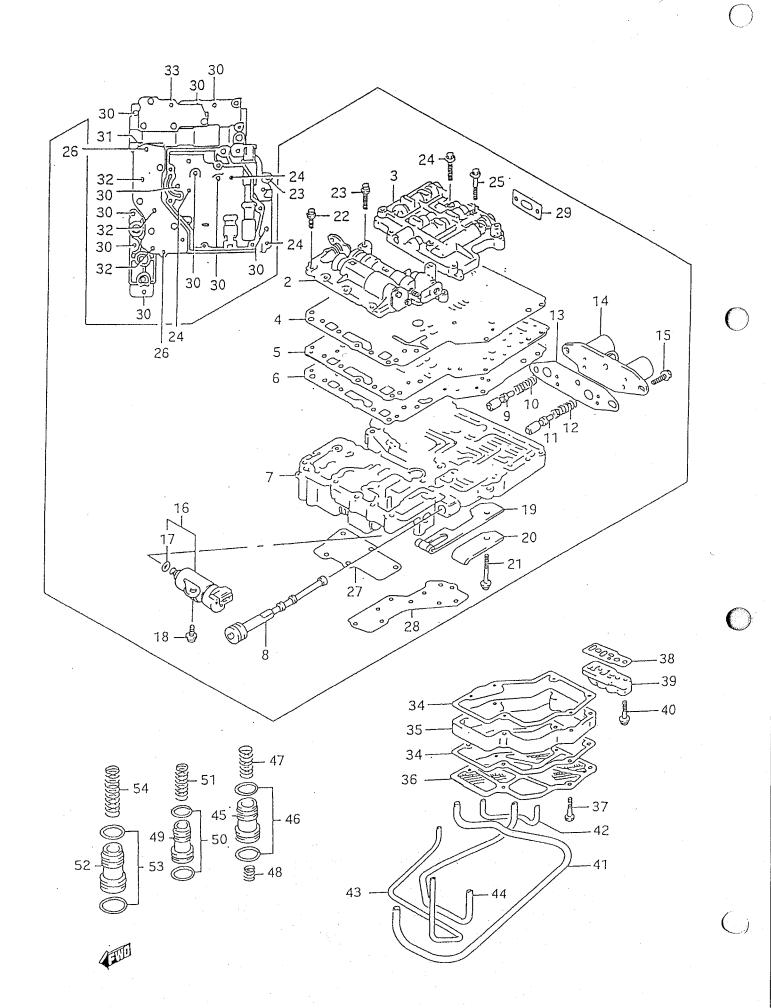


FIG. 055 (1-G-05) 4AT VALVE (4AT)

| REF. | | | Q, TY | | |
|---------|-------------|--------------------------------|-------|----|---------|
| N.º | PART Nº | DESCRIPTION | С | V | REMARKS |
| 1 | 26500-57B03 | VALVE BODY ASSY | 1 | 1 | |
| 2 | 26530-57B01 | .BODY ASSY, UPPER VALVE FRONT | 1 | 1 | |
| 3 | 26520-57B00 | .BODY ASSY, UPPER VALVE REAR | 1 | 1 | |
| 4 | 26584-57B01 | .GASKET, VALVE BODY | 1 | 1 | |
| 5 | 26522-57B02 | .PLATE, SEPARATOR | 1 | 1 | |
| 6 | 26585-57B01 | .GASKET, VALVE BODY | 1 | 1 | |
| 7. | 26510-57B01 | .BODY ASSY, LOWER VALVE | 1 | 1 | |
| 8 | 26552-57B00 | .VALVE, MANUAL | 1 | 1 | |
| 9 | 26538-57B00 | .VALVE, MODULATOR | 1 | 1 | |
| 10 | 29627-57B00 | .SPRNG, VALVE | 1 | 1 | |
| 11 | 26538-57B00 | .VALVE, MODULATOR | 1 | 1 | Į. |
| 12 | 29628-57B00 | .SPRING, VALVE | 1 | 1 | |
| 13 | 26589-57B00 | .GASKET, SOLENOID | 1 | 1 | |
| 14 | 26591-57B00 | .SOLENOID, NO.1 | 1 | 1 | |
| 15 | 29973-57B00 | .BOLT, SOLENOID NO.1 | 1 | 1 | |
| 16 | 26592-57BT0 | .SOLENOID SET, NO.2 | 1 | 1 | |
| 17 | 29728-57B00 | O RING, SOLENOID NO.2 | 1 | 1 | |
| 18 | 29983-57B00 | .BOLT, SOLENOID NO.2 | 1 | 1 | |
| 19 | 26541-57B00 | .SPRING, DETENT | 1 | 1 | |
| 20 | 26523-57B00 | .PLATE, SPRING | 1 | 1 | |
| 21 | 29974-57B00 | .BOLT, SPRING | 1 | 1 | |
| 22 | 29979-57B00 | .BOLT, NO.1 | 4 | 4 | |
| 23 | 29978-57B00 | .BOLT, NO.2 | 2 | 2 | |
| 24 | 29977-57B00 | .BOLT, NO.3 | 4 | 4 | |
| 25 | 29976-57B00 | .BOLT, NO.4 | 3 | 3 | |
| 26 | 29975-57B00 | BOLT, NO.5 | 2 | 2 | |
| 27 | 26586-57B00 | .GASKET, LOCK UP VALVE | 1 | 1 | • |
| 28 | 26587-57B00 | .GASKET, LOWER VALVE BODY | 1 | 1 | |
| 29 | 26588-57B00 | .GASKET, REAR UPPER VALVE BODY | 1 | 1 | |
| 30 | 29986-57B00 | BOLT, VALVE BODY NO.1 | 10 | 10 | |
| 31 | 29985-57B00 | BOLT, VALVE BODY NO.2 | 1 | 1 | |
| 32 | 29984-57B00 | BOLT, VALVE BODY NO.3 | . 3 | 3 | |
| 33 | 29987-57B00 | BOLT, VALVE BODY NO.4 | 1 | 1 | |


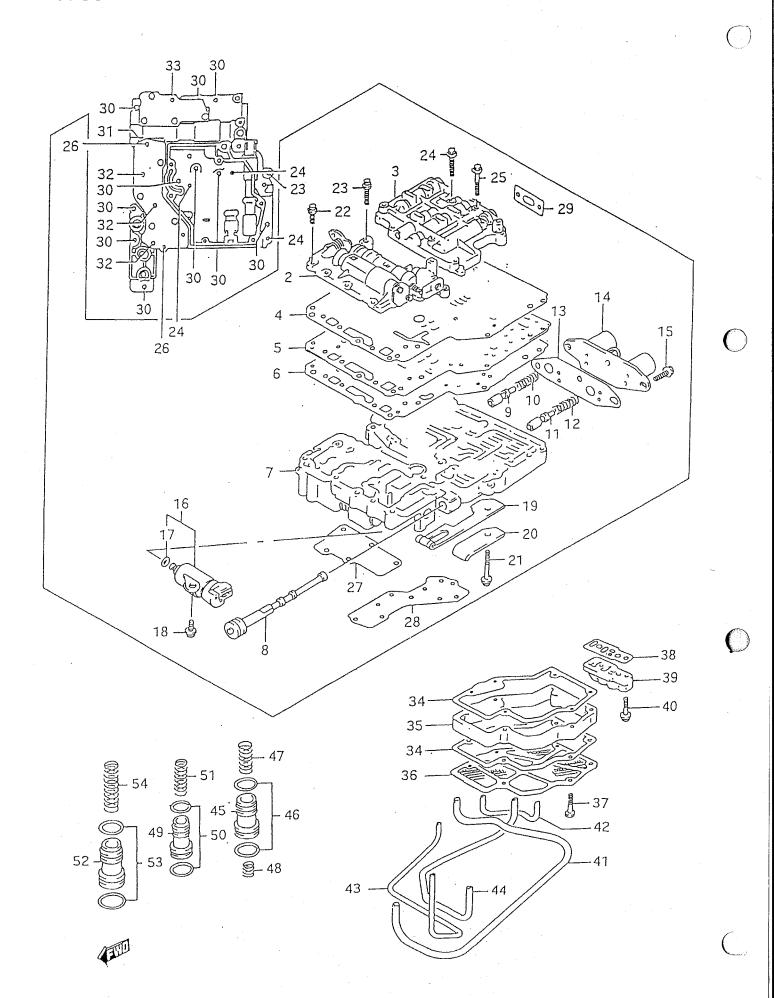


FIG. 055 (1-G-06) 4AT VALVE (4AT)


| REF. | | | , Q, | TY | |
|--------|-------------|-------------------------------|------|-----|---------|
| N.º | PART Nº | DESCRIPTION | С | V | REMARKS |
| 34 | 26583-57B00 | GASKET, SCREEN | 2 | 2 | |
| 35 | 26565-57B00 | SPACER, SCREEN | 1 | 1 | |
| 36 | 26582-57B00 | SCREEN, OIL | 1 | 1 | |
| 37 | 29977-57B00 | BOLT, SCREEN | 6 | 6 | |
| 38 | 26581-57B00 | GASKET, COVER | 2 | 2 | |
| 39 | 26521-57B00 | COVER, BRAKE APPLY | 1 | 1 | |
| 40 | 29986-57B00 | BOLT | 2 | 2 | |
| 41 | 26533-57B00 | TUBE, FWD CLUTCH APPLY | 1 | 1 | |
| 42 | 26532-57B00 | TUBE, REV BRAKE APPLY | 1 | 1 | |
| 43 | 26534-57B00 | TUBE, O/D BRAKE APPLY | 1 | 1 | |
| 44 | 26531-57B00 | TUBE, LUBE APPLY | 1 | 1 | |
| 45 | 29721-57B00 | PISTON, 2ND BRAKE ACCUMULATOR | 1 | 1 | |
| 46 | 29733-57BT0 | O RING SET, 2ND BRAKE | 1 | 1 | |
| 47 | 29644-57B00 | SPRING, ACCUMULATOR | 1 | 1 | |
| 48 | 29645-57B00 | SPRING, ACCUMULATOR | 1 | 1 . | |
| 49 | 29722-57B00 | PISTON, DIRECT CLUTCH | 1 | 1 | |
| | | ACCUMULATOR | | | |
| 50 | 29732-57BT0 | O RING SET, DIRECT CLUTCH | 1 | 1 | |
| 51 | 29643-57B00 | SPRING, ACCUMULATOR | 1 | 1 | |
| 52 | 26410-57B00 | PISTON, FWD CLUTCH | 1 | 1 | |
| | | ACCUMULATOR | | | |
| 53 | 29731-57BT0 | O RING SET, FWD CLUTCH | 1 | 1 | |
| 54 | 29641-57B00 | SPRING, ACCUMULATOR NO.1 | 1 | 1 | |

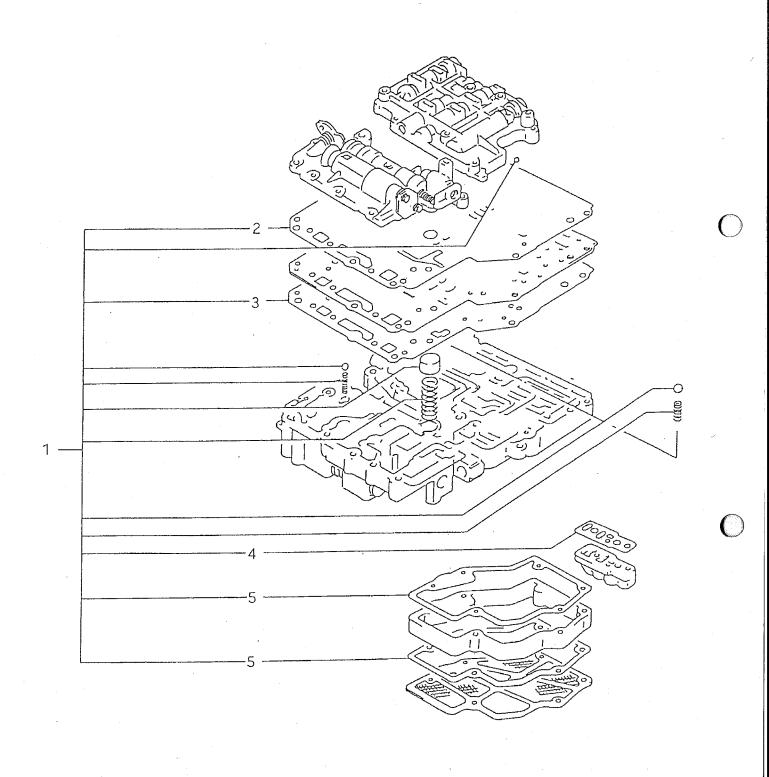

43711

FIG. 056 (1-G-07) 4AT VALVE OVERHAUL SET (4AT)

| REF. | | T Nº DESCRIPTION | Q, TY | | • | |
|------|-------------|--------------------------|-------|---|---------|---|
| N.º | PART Nº | | С | ٧ | REMARKS | |
| | | | | | | • |
| 1 | 26580-57BT0 | OVERHAUL SET, VALVE BODY | 1 | 1 | | |
| 2 | 26584-57B01 | .GASKET, VALVE BODY | 1 | 1 | | |
| 3 | 26585-57B01 | .GASKET, VALVE BODY | 1 - | 1 | | |
| 4 | 26581-57B00 | .GASKET, COVER | 1 | 1 | | |
| 5 | 26583-57B00 | .GASKET, SCREEN | 2 | 2 | | |

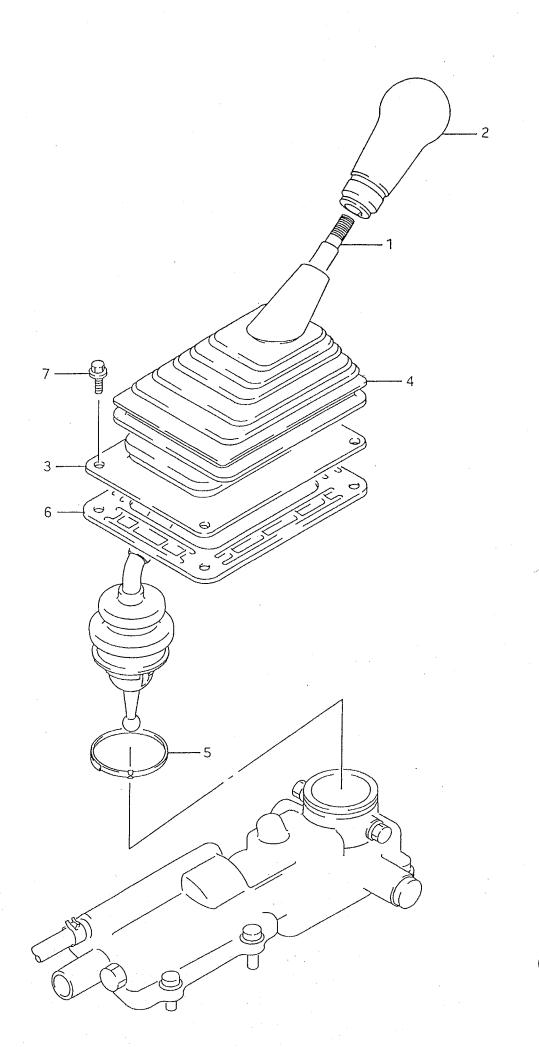

4311

FIG. 057 (1-G-08) GEAR SHIFT CONTROL

| REF. | D4 DT \ \ 10 | | Q, | Q, TY | PE) / / PI (0 |
|------|--------------|---------------------------|----|-------|---------------|
| N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS |
| | | | | | |
| 1 | 28101-85C00 | LEVER, GEAR SHIFT CONTROL | 1 | 1 | |
| 2 | 28113-85C00 | KNOB, CONTROL LEVER | 1 | 1 | |
| 3-1 | 28136-60A02 | BOOT, LEVER NO.2 | 1 | - | JA |
| 3-2 | 28136-60A10 | BOOT, LEVER NO.2 | 1 | 1 | JX, JLX |
| 4 | 28138-60A01 | BOOT, LEVER NO.3 | 1 | 1 | |
| 5 | 21935-85C00 | CLAMP | 1 | 1 | |
| 6 | 28137-60A01 | COVER, BOOT | 1 | 1 | |
| 7 | 02162-06123 | BOLT | 4 | 4 | |


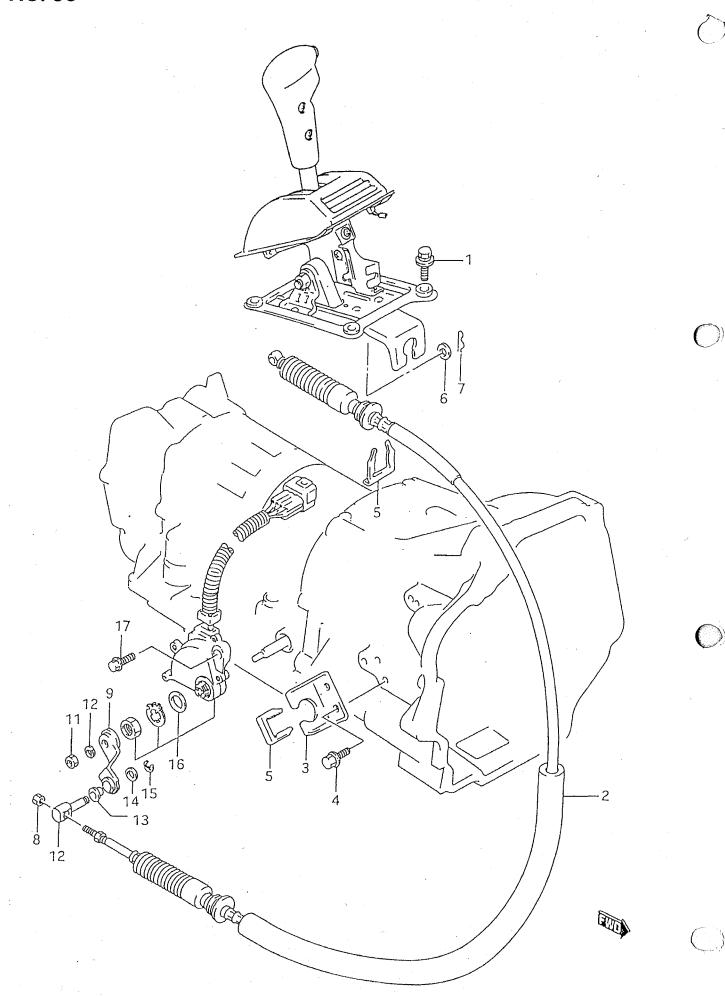


FIG. 058 (1-G-09) GEAR SHIFT CONTROL (4AT)

| 7 | REF. | REE Q, TY | | | | |
|---|------------|----------------------|-----------------------|---|---|---------|
| | N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS |
| | | · | | | | |
| | 1 | 09118-08118 | BOLT (8X20) | 4 | 4 | |
| | 2 | 28210- <i>57</i> B00 | CABLE ASSY, SELECT | 1 | 1 | |
| | 3 | 28221-61A00 | BRACKET, SELECT CABLE | 1 | 1 | |
| | 4 | 01550-08203 | BOLT | 2 | 2 | |
| | 5 | 09383-19001 | E RING | 2 | 2 | |
| | 6 | 09160-08094 | WASHER | 1 | 1 | |
| | 7 | 09385-08004 | CLIP | 1 | 1 | |
| | 8 | 08310-00063 | NUT | 1 | 1 | |
| | 9 | 28231- <i>57</i> B00 | LEVER, MANUAL SELECT | 1 | 1 | |
| | 10 | 09162-08008 | LOCK WASHER | 1 | 1 | |
| - | 11 | 08310-00083 | NUT | 1 | 1 | |
| | 12 | 28291-78233 | JOINT, SELECTOR CABLE | 1 | 1 | |
| | 13 | 09305-08012 | BUSH | 1 | 1 | |
| | 14 | 08322-01083 | WASHER | 1 | 1 | |
| | 15 | 08332-11063 | E RING | 1 | 1 | |
| | 16 | 24731-57B10 | SWITCH ASSY, SHIFT | 1 | 1 | |
| | 1 <i>7</i> | 29993-57B00 | BOLT, SHIFT SWITCH | 1 | 1 | |
| | 18 | 09404-08420 | CLAMP, CABLE | 1 | 1 | |
| | 19 | 01550-08123 | BOLT | 1 | 1 | |


FIG. 59

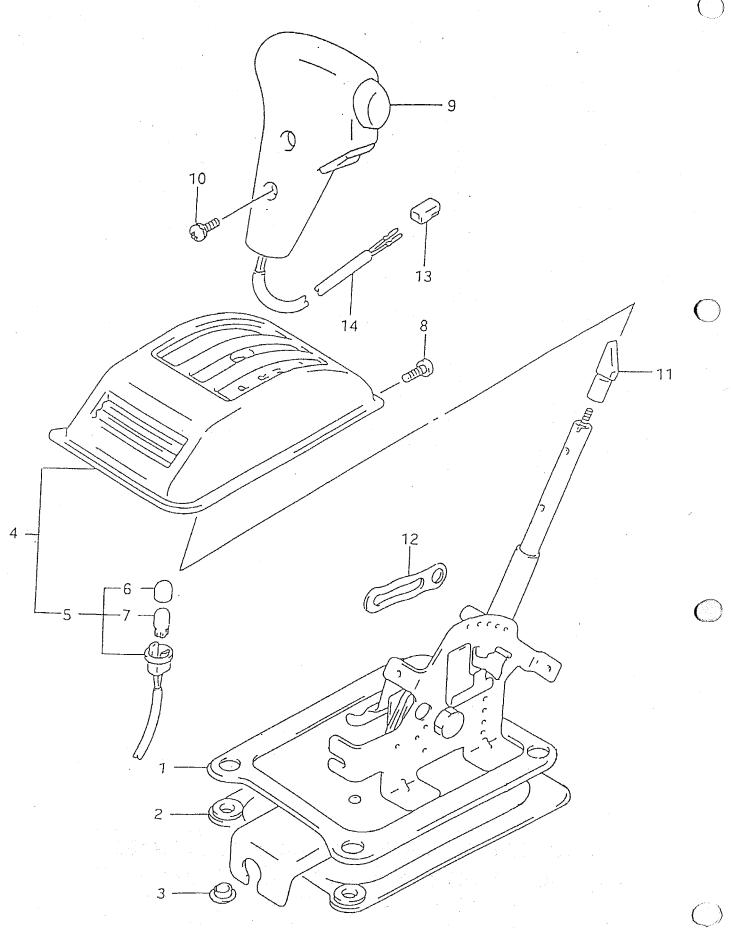

OIII


FIG. 059 (1-G-10) SELECT LEVER (4AT)

| REF. | | | G | , TY | | |
|------|----------------------|--------------------------|---|------|---------|--|
| N.º | PART Nº | DESCRIPTION | C | ٧ | REMARKS | |
| | | | | | | |
| 1 -1 | 28110- <i>57</i> B30 | LEVER ASSY, SELECT | 1 | 1 | LHD | |
| 1 -2 | 28110-57B10 | LEVER ASSY, SELECT | 1 | 1 | RHD | |
| 2 | 28176-61A00 | GASKET, HOUSING | 1 | 1 | | |
| 3 | 09169-08043 | WASHER | 4 | 4 | | |
| 4-1 | 28150-57B30 | INDICATOR ASSY, SELECT | 1 | 1 | LHD | |
| 4-2 | 28150-57B10 | INDICATOR ASSY, SELECT | 1 | 1 | RHD | |
| 5 | 28180-61A00 | LAMP ASSY, ILLUMINATION | 1 | 1 | | |
| 6 | 28182-61A00 | FILTER, BULB | 1 | 1 | | |
| 7 | 09471-12077 | BULB (12V1.7W) | 1 | 1 | | |
| 8 | 02142-05103 | SCREW | 3 | 3 | | |
| 9-1 | 28160-57B31-5PK | KNOB ASSY | 1 | 1 | LHD | |
| 9-2 | 28160-57B01-5PK | KNOB ASSY | 1 | 1 | RHD | |
| 10 | 09125-05117 | SCREW | 1 | 1 | | |
| 11 | 28164-57B00 | GÜIDE, DETENT RELEASE | 1 | 1 | | |
| 12 | 09404-10416 | CLAMP | 1 | 1 | | |
| 13 | 28117-64B60 | COUPLER, O/D SWITCH WIRE | 1 | 1 | | |
| 14 | 28118- <i>57</i> B00 | TUBE, WIRE HARNESS | 1 | 1 | | |

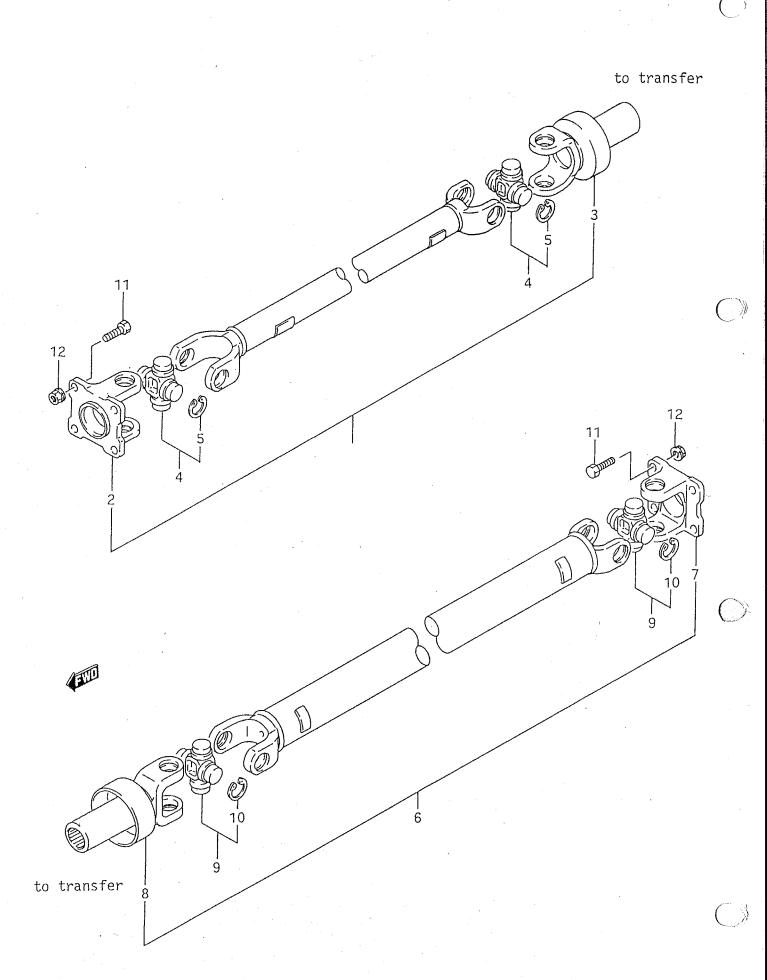

| REF. | PART Nº DESCRIPTION | | Q, | TY | REMARKS | |
|-------|---------------------|------------------------------------|----------|-----|--------------|--|
| N.º | | | С | V | | |
| 2 2 | 07101.05000 | CHART ACCV PROPERTED EDON'T | 1 | . 1 | | |
| 1 -1 | 27101-85C00 | SHAFT ASSY, PROPELLER FRONT | | | | |
| 1-2 | 27101-57B01 | SHAFT ASSY, PROPELLER FRONT | 1 | | 4AT | |
| 2-1 | 27131-85C00 | .YOKE, JOINT FLANGE | <u> </u> | 1 | – | |
| 2-2 | 27131-56B00 | .YOKE, JOINT FLANGE | 1 | 1 | 4AT | |
| 3-1 | 27140-85C00 | .YOKE, SLIDING | 1 | 1 | | |
| 3-2 | 27140-60A00 | YOKE, SLIDING | 1 | 1 | - 25 dientes | |
| 4 | 27200-85C00 | JOINT ASSY, UNIVERSAL CIRCLIP | 2 | 2 | 29 34 3 | |
| 5-1 | 27225-85C00 | CIRCLIP | 8 | 8 | | |
| 5-2 | 08331-41256 | CIRCLIP | 8 | 8 | 4AT | |
| 6-1 | 27102-85C00 USE | SHAFT ASSY, PROPELLER REAR 27/0286 | OBOST | 1 | 3DR (MAL) | |
| 6-2 | 27102-56B10 | SHAFT ASSY, PROPELLER REAR | - | 1 | 5DR | |
| 6-3 | 27102-57B30 | SHAFT ASSY, PROPELLER REAR | 1 | 1 | 3DR:4AT | |
| 6-4 | 27102-57B20 | SHAFT ASSY, PROPELLER REAR | - | 1 | 5DR:4AT | |
| 7-1 | 27131-56B00 | .YOKE, JOINT FLANGE | 1 | 1 | 5DR | |
| 7-2 | 27131-85C00 | .YOKE, JOINT FLANGE | 1 | 1 | 3DR | |
| 8 - 1 | 27140-60A00 | YOKE, SLIDING | 1 | 1 | 5DR | |
| 8-2 | 27140-60A30 | .YOKE, SLIDING | 1 | 1 . | 4AT | |
| 8-3 | 27140-85C00 | YOKE, SLIDING | 1 | 1 | 3DR | |
| 9 | 27200-85C00 | JOINT ASSY, UNIVERSAL | 2 | 2 | | |
| 10-1 | 08331-41256 | CIRCLIP | 8 | 8 | 5DR | |
| 10-2 | 27255-85C00 | CIRCLIP | 8 | 8 | 3DR | |
| 11 | 01500-10303 | BOLT | 8 | 8 | | |
| 12 | 09159-10091 | NUT | 8 | 8 | | |
| | | | | | | |

POS. 6-1 PAGE CON 26 DIENTE REF. 27102-85COPY 27102-60A01-JAPON COMPROBADO DIA 20-01-06 COMPROBADO DIA 20-01-06

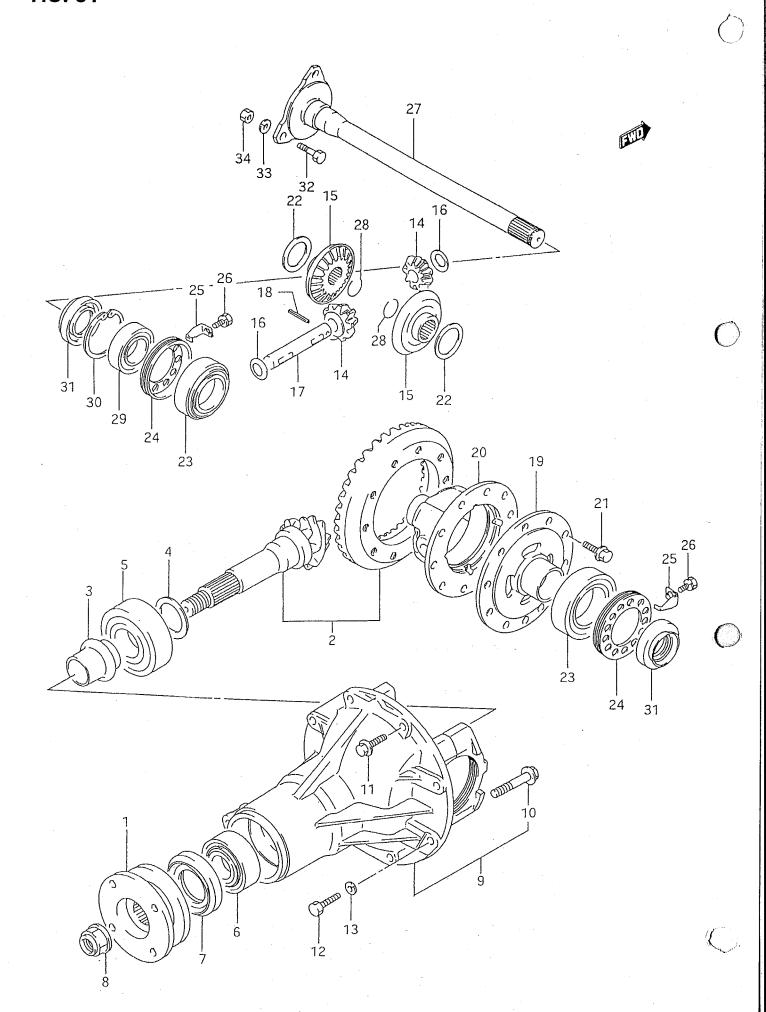

| REF. | | | | Q, TY | | | |
|------|-------------|------------------------------|------|-------|-----|---------|--|
| N.º | PART Nº | DESCRIPTION | • | С | ٧ | REMARKS | |
| 0 | 27301-85011 | CONT. DIFERECIAL T | rass | l | 1 | ४:५। | |
| 1 | 27110-56B01 | FLANGE, UNIVERSAL JOINT | | 1 | 1 | | |
| 2 | 20022-00000 | BEVEL PINION & GEAR SET, FRO | TMC | 1 | 7> | 8541 | |
| 3 | 27315-60A01 | SPACER, PINION | | 1 | 1 | | |
| 4-1 | 09181-35023 | SHIM, PINION (T:0.30) | | AR | 0-1 | | |
| 4-2 | 09181-35016 | SHIM, PINION (T:1.12) | | AR | 0-1 | | |
| 4-3 | 09181-35018 | SHIM, PINION (T:1.18) | | AR | 0-1 | | |
| 4-4 | 09181-35020 | SHIM, PINION (T:1.24) | | AR | 0-1 | | |
| 4-5 | 09181-35022 | SHIM, PINION (T:1.30) | | AR | 0-1 | | |
| 5 | 21925-85C00 | BEARING, PINION FRONT | | 1 | 1 | | |
| 6 | 21925-85C30 | BEARING, PINION REAR | | 1 | 1 | | |
| 7 | 09283-40022 | SEAL, PINION OIL | | 1 | 1 | | |
| ., 8 | 27375-60A00 | NUT | | 1 | 1 | | |
| 9 | 27450-85C00 | CARRIER ASSY, DIFF FRONT | | 1 | 1 | | |
| 10 | 21941-85C30 | .BOLT | | 4 | 4 | | |
| 11 | 01550-08303 | BOLT | | 6 | 6 | | |
| 12 | 21941-85C60 | BOLT | | 2 | 2 | | |
| 13 | 09162-10008 | LOCK WASHER | | 2 | 2 | | |
| 14 | 27331-83020 | PINION, DIFF | | 2 | 2 | | |
| 15 | 27341-83000 | GEAR, DIFF | | 2 | 2 | | |
| 16 | 09164-15006 | WASHER | | 2 | 2 | | |
| 17 | 27351-64B20 | SHAFT, DIFF PINION | | 1 | 1 | | |
| 18 | 09205-05007 | SPRING PIN | | 1 | 1 | | |
| 19 | 27411-60A02 | CASE, DIFF RH | | 1 | 1 | | |
| 20 | 27421-60A02 | CASE, DIFF LH | | 1 | 1 | | |
| 21 | 21941-85C10 | BOLT | | 10 | 10 | | |
| 22-1 | 09160-35006 | WASHER (T:0.9) | | AR | 0-2 | | |
| 22-2 | 09160-35002 | WASHER (T: 1.0) | | AR | 0-2 | | |
| 22-3 | 09160-35003 | WASHER (T:1.1) | | AR | 0-2 | | |
| 22-4 | 09160-35004 | WASHER (T:1.2) | | AR | 0-2 | | |
| 23 | 21925-85C60 | BEARING, DIFF SIDE | | 2 | 2 | | |
| 24 | 27461-83000 | ADJUSTER, BEARING | | 2 | 2 | | |
| 25 | 27462-63202 | PLATE, BEARING LOCK | | 2 | 2 | | |
| | 01550-08123 | BOLT | | 2 | 2 | | |
| 26 | 01550-08123 | BOLT | | 2 | 2 | | |

FIG. 61



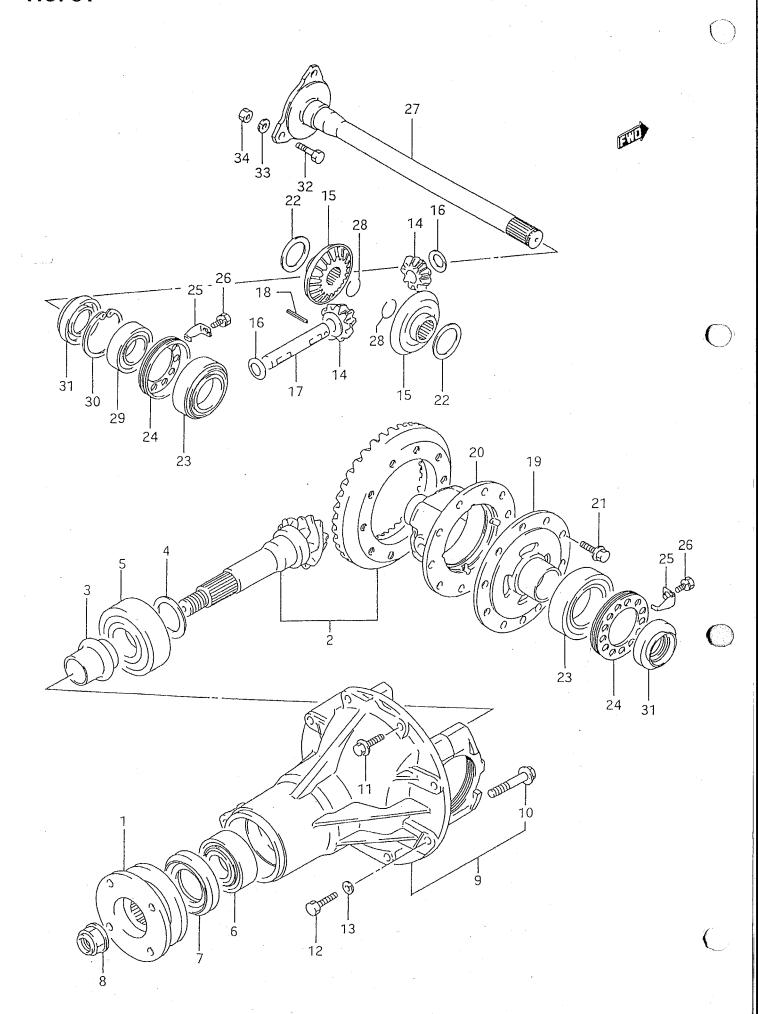


FIG. 061 (1-G-13) FRONT DIFFERENTIAL GEAR


| REF. | | | Q, TY | |
|------|-------------|--------------------|-------|---------|
| N.º | PART Nº | DESCRIPTION | CV | REMARKS |
| | | | | |
| 27 | 27471-60A10 | SHAFT, FRONT DRIVE | 1 1 | |
| 28 | 09381-24001 | RING, SNAP | 2 2 | |
| 29 | 08133-62067 | BEARING | 1 1 | |
| 30 | 08331-41626 | CIRCLIP | 1 1 | |
| 31 | 09283-35008 | SEAL, OIL | 2 2 | |
| 32 | 21941-85C00 | BOLT | 3 3 | |
| 33 | 08321-01103 | LOCK WASHER | 3 3 | |
| 34 | 08310-00103 | NUT | 3 3 | |
| | | | | |

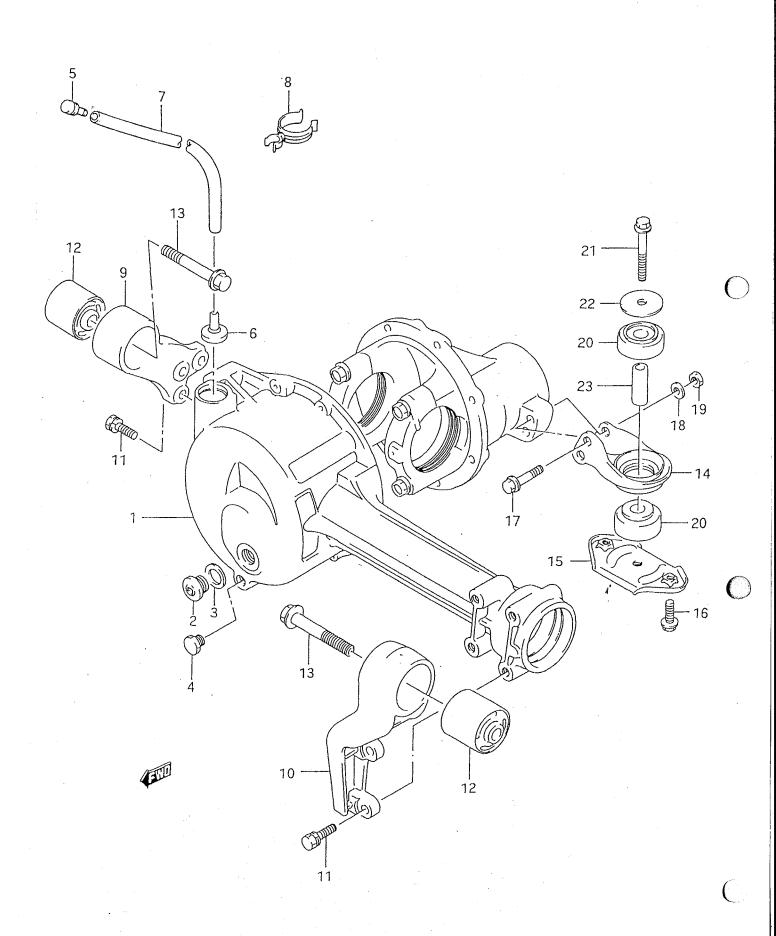

| REF. | | | Q, TY | | |
|------|----------------------|--------------------------------|-------|---|---------|
| N.º | PART Nº | DESCRIPTION | С | V | REMARKS |
| 1 | 27611-60A02 | HOUSING, DIFFERENTIAL | 1 | 1 | |
| 2 | 21947-85C70 | PLUG, OIL LEVEL | 1 | 1 | |
| 3 | 09168-20003 | GASKET, OIL LEVEL | 1 | 1 | |
| 4 | 21947-85C50 | PLUG, OIL DRAIN | 1 | 1 | |
| 5 | 46543-85C00 | BREATHER, DIFF | 1 | 1 | |
| 6 | 27620-85400 | UNION, BREATHER | 1 | 1 | |
| 7 | 21931-85C20 | HOSE, BREATHER | 1 | 1 | |
| 8 | 09408-00161 | CLAMP, HOSE | 2 | 2 | |
| 9 | 27661-60A01 | BRACKET, DIFF MOUNT FRONT RH | 1 | 1 | |
| 10 | 27665-60A00 | BRACKET, DIFF MOUNT FRONT LH | 1 | 1 | |
| 11 | 01 <i>57</i> 0-10303 | BOLT | 7 | 7 | |
| 12 | 27550-60A00 | MOUNTING, DIFF FRONT | 2 | 2 | |
| 13 | 09103-12033 | BOLT (12X85) | 2 | 2 | |
| 14 | 27670-60A00 | BRACKET, DIFF MOUNT REAR NO.1 | . 1 | 1 | |
| 15 | 27675-60A01 | BRACKET, DIFF MOUNT REAR NO. 2 | 1 | 1 | |
| 16 | 01570-10203 | BOLT | 2 | 2 | |
| 17 | 01550-10553 | BOLT | 2 | 2 | |
| 18 | 08321-01103 | LOCK WASHER | 2 | 2 | |
| 19 | 08310-00103 | NUT | 2 | 2 | |
| 20 | 27561-85C00 | MOUNTING, DIFF REAR | 2 | 2 | |
| 21 | 01550-10653 | BOLT | 1 | 1 | |
| 22 | 09160-10104 | WASHER (10.5X50X3.2) | 1 | 1 | |
| 23 | 09180-10117 | SPACER (10.9X17.3X46.8) | 1 | 1 | |

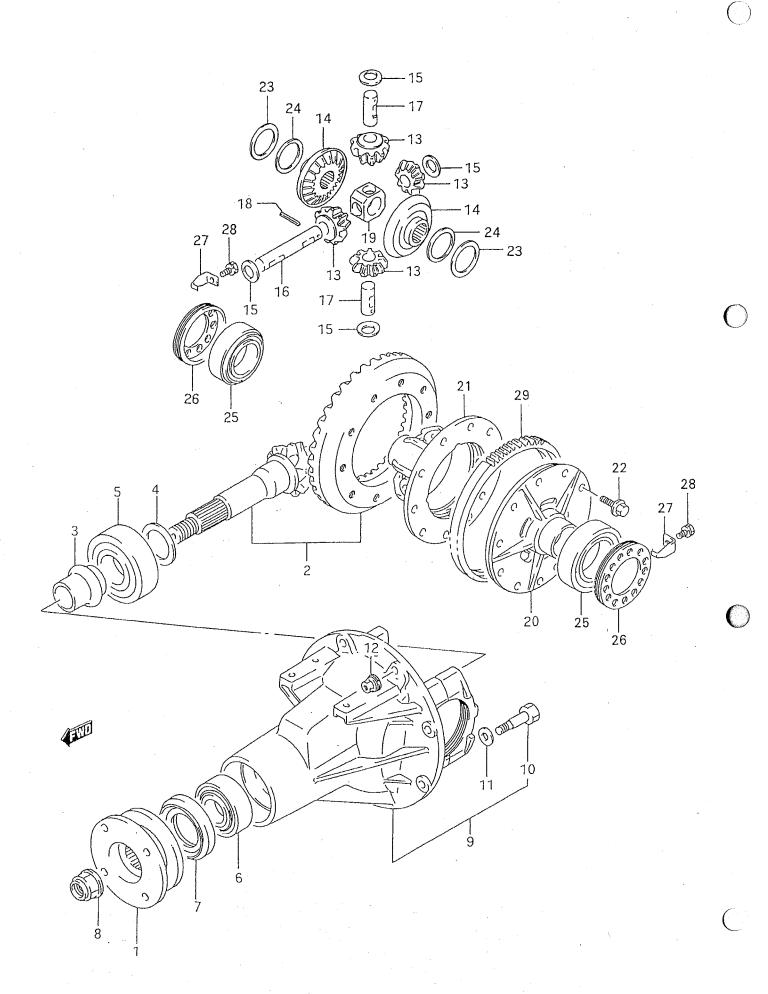

| REF. | | | Q, TY | | | |
|----------|----------------------|---------------------------------------|--------|----------|---------|--|
| N.º | PART Nº | DESCRIPTION | С | V | REMARKS | |
| 1 | 27110-56B01 | FLANGE, UNIVERSAL JOINT | 1 | 1 | | |
| 2 | 20026-00000 | BEVEL PINION & GEAR SET, REART | ' 1 | 1 | | |
| 3 | 2731 <i>5</i> -60A01 | SPACER, PINION | 1 | 1 | | |
| 3 4-1 | 09181-35023 | SHIM, PINION (T:0.30) | ΛD | 0-1 | | |
| 4-1 | 09181-35016 | SHIM, PINION (T.1.12) | | 0-1 | | |
| 4-2 | 09181-35018 | SHIM, PINION (T:1.18) | | 0-1 | | |
| 4-4 | 09181-35020 | SHIM, PINION (T:1.24) | | 0-1 | | |
| 4-5 | 09181-35020 | SHIM, PINION (T.1.30) | | 0-1 | | |
| 5 | 21925-85C30 | BEARING, PINION REAR | 1 | 1 | | |
| 6 | 21925-85C00 | BEARING, PINION FRONT | 1 | 1 | | |
| 7 | 09283-40022 | SEAL, PINION OIL | 1 | 1 | | |
| 8 | 27375-60A00 | NUT | 1 | 1 | | |
| 9-1 | 27450-85C50 | CARRIER ASSY, DIFF REAR | 1 | 1 | N/ABS | |
| 9-2 | 27450-60821 | CARRIER ASSY, DIFF REAR | 1 | 1 | W/ABS | |
| 10 | 21941-85C20 | BOLT | 4 | 4 | YY/ ADS | |
| 11 | 08321-01123 | LOCK WASHER | 4 | 4 | | |
| 12 | 21943-85C00 | NUT | 8 | 8. | | |
| 13 | 27331-60A10 | PINION, DIFF | 4 | 4 | | |
| 14 | 27341-60A10 | GEAR, DIFF | 2 | 2 | | |
| 15 | 09164-15006 | WASHER | | | | |
| 16 | 27351-64B20 | SHAFT, DIFF PINION NO.1 | 4, | 1 | | |
| 17 | 27355-60A01 | • | 1 | . ! 2 | | |
| 18 | 09205-05007 | SHAFT, DIFF PINION NO.2 SPRING PIN | 2 | 3 | | |
| | | | ა 1 | | | |
| 19 | 27356-86081 | JOINT, PINION | I | 1 | | |

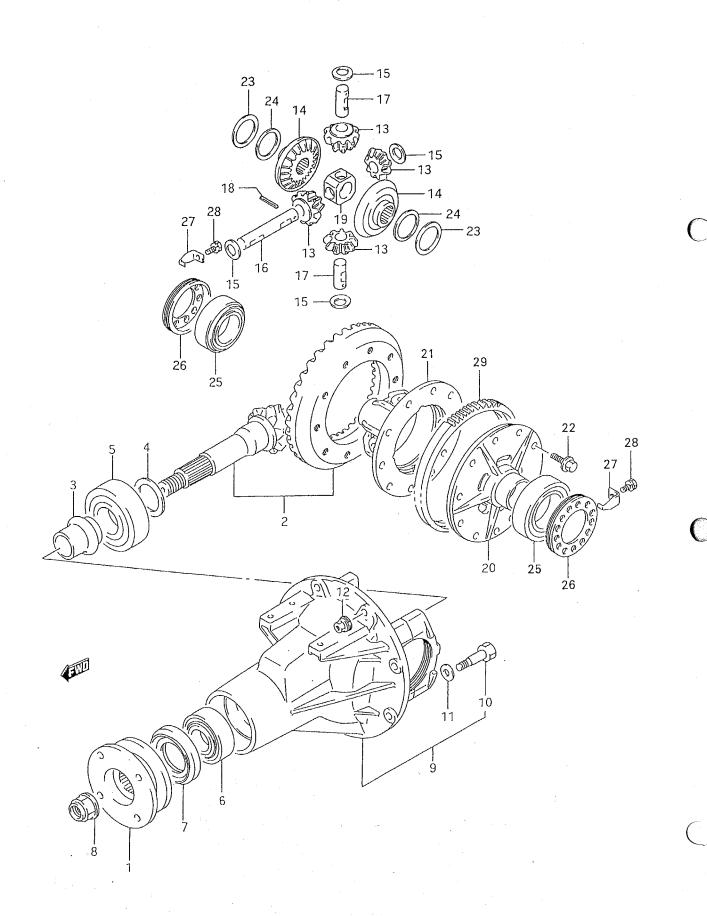

| REF. N.º | PART Nº | DESCRIPTION | Q, | TY V | REMARKS |
|-------------|-------------|---------------------------|----|---------|---------|
| | | | | | |
| 20 | 27411-60A22 | CASE, DIFF LH | 1. | 1 | |
| 21 | 27421-60A13 | CASE, DIFF RH | 1 | 1 | |
| 22 | 21941-85C10 | BOLT | 12 | 12 | |
| 23-1 | 09160-35015 | WASHER, DIFF SIDE (T:0.6) | AR | 0-2 | |
| 23-2 | 09160-35014 | WASHER, DIFF SIDE (T:0.7) | AR | 0-2 | |
| 23-3 | 09160-35013 | WASHER, DIFF SIDE (T:0.8) | AR | 0-2 | |
| 24 | 21945-85C10 | WASHER, DIFF GEAR SPRING | 2 | 2 | |
| 25 | 21925-85C60 | BEARING, DIFF SIDE | 2 | 2 | |
| 26 | 27461-83000 | ADJUSTER, BEARING | 2 | 2 | |
| 27 | 27462-63202 | PLATE, BEARING LOCK | 2 | 2 | |
| 28 | 01550-08123 | BOLT | 2 | 2 | |
| 29 | 27425-60A02 | RING, EXCITER | Ī | 1 | W/ABS |

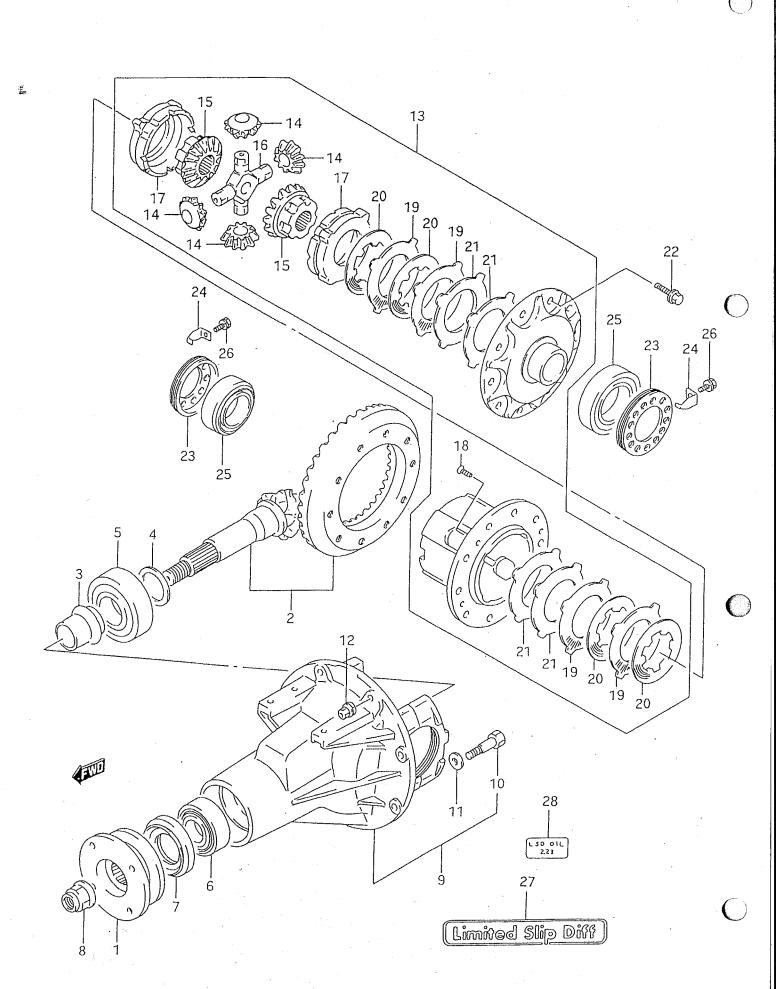


FIG. 064 (1-H-04) REAR DIFFERENTIAL GEAR (W/LSD)

| REF. | | | Q, TY | | |
|------------|-----------------|-------------------------------|-------|---------|--|
| N.º | PART Nº | DESCRIPTION | C V | REMARKS | |
| 1 | 27110-56B01 | FLANGE, UNIVERSAL JOINT | 1 | | |
| 2 | 27300-61821 | BEVEL PINION & GEAR SET, REAR | 1 | | |
| 3 | 27315-60A01 | SPACER, PINION | 1 | | |
| 4-1 | 09181-35023 | SHIM, PINION (T:0.30) | 0-1 | | |
| 4-2 | 09181-35012 | SHIM, PINION (T:1.00) | 0-1 | | |
| 4-3 | 09181-35014 | SHIM, PINION (T:1.06) | 0-1 | | |
| 4-4 | 09181-35016 | SHIM, PINION (T:1.12) | 0-1 | | |
| 4-5 | 09181-35018 | SHIM, PINION (T:1.18) | 0-1 | | |
| 4-6 | 09181-35020 | SHIM, PINION (T:1.24) | 0-1 | | |
| 4-7 | 09181-35022 | SHIM, PINION (T:1.30) | 0-1 | | |
| 5 | 09265-35002 | BEARING, PINION REAR | 1 | | |
| 6 | 09265-30012 | BEARING, PINION FRONT | 1 | | |
| 7 | 09283-40022 | SEAL, PINION OIL | 1 | | |
| 8 | 27375-60A00 | NUT | 1 | | |
| 9 | 27450-60840 | CARRIER ASSY, DIFF REAR | 1 | | |
| 10 | 09111-12009 | .BOLT | 4 | | |
| 11 | 08321-01123 | .LOCK WASHER | 4 | | |
| 12 | 21943-85C00 | NUT | 8 | | |
| 13 | 27400-60830 | CASE ASSY, LSD (12 HOLE) | . 1 | | |
| 14 | 27331-60A40 | .PINION | 4 | | |
| 15 | 27341-60A40 | .GEAR | 2 | | |
| 16 | 27351-60A40 | .SHAFT, DIFF PINION | 2 | | |
| 1 <i>7</i> | 27357-60A40 | .RING | 1 | | |
| 18 | 02122-06123 | .SCREW | 4 | | |
| 19-1 | 27433-60A40-170 | .PLATE, FRICTION (T:1.7) | 0-4 | | |
| 19-2 | 27433-60A40-180 | .PLATE, FRICTION (T:1.8) | 0-4 | | |
| 20-1 | 27432-60A40-170 | .DISK, FRICTION (T:1.7) | 0-4 | | |
| 20-2 | 27432-60A40-180 | .DISK, FRICTION (1.8) | 0-4 | | |
| 21 | 27434-60A40 | .PLATE, SPRING | 4 | | |
| 22 | 09103-10184 | BOLT (10X25) | 12 | | |
| 23 | 27461-83000 | ADJUSTER, BEARING | 2 | | |
| 24 | 27462-63202 | PLATE, BEARING LOCK | 2 | | |
| 25 | 09265-45002 | BEARING, DIFF SIDE | 2 | | |
| 26 | 01550-08123 | BOLT | 2 | | |
| 27 | 27911-79400 | EMBLEM, LSD | 1 | | |
| 28 | 27912-60A00 | EMBLEM, OIL CAPACITY | 1 | | |
| | | · | | | |

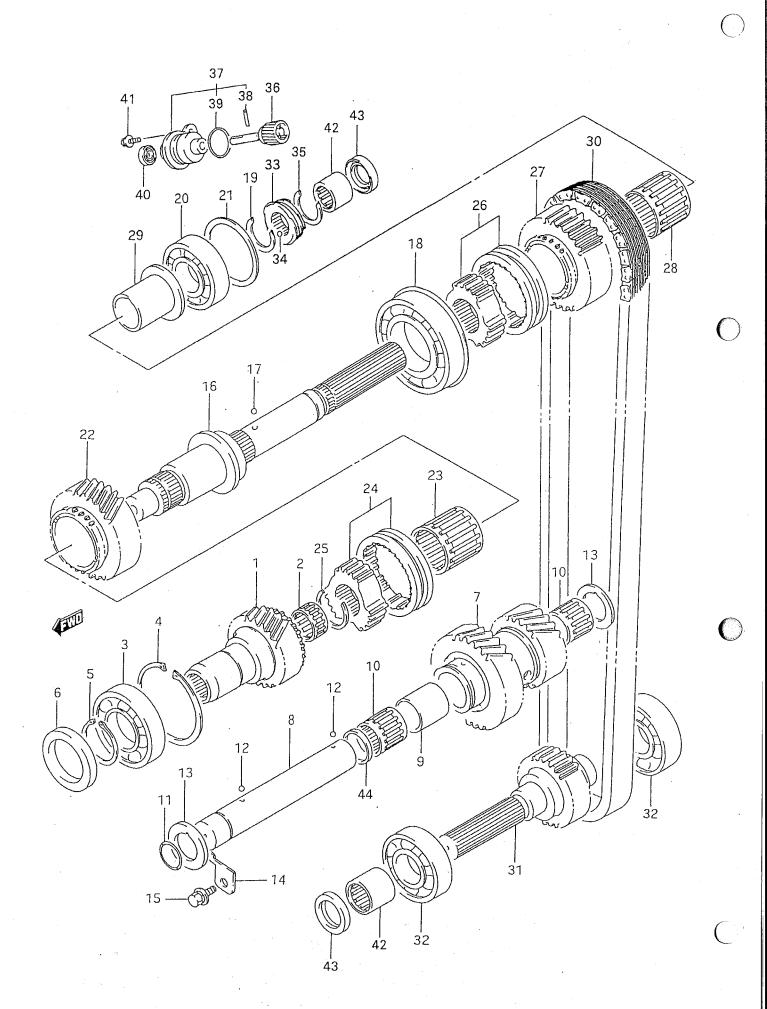


FIG. 065 (1-H-05) TRANSFER GEAR

| REF. | | | Q, TY | ·. |
|------------|----------------------|----------------------------|--------|---------|
| N.º | PART Nº | DESCRIPTION | CV | REMARKS |
| | · | | | |
| 1 | 29110-85C00 | GEAR, INPUT | 1 1 | |
| 2 | 21915-85C60 | BEARING | 1 1 | |
| 3 | 21911-85C30 | BEARING | 1 1 | |
| 4 | 21933-85C70 | CIRCLIP | 1 1 | |
| 5 | 08331-31356 | CIRCLIP | 1 1 | |
| 6 | 09282-35002 | SEAL, OIL | 1 1 | |
| 7 | 29121-85C00 | GEAR, COUNTER | 1 1 | |
| 8 | 29131-60A02 | SHAFT, COUNTER | 1 1 | |
| 9 | 09180-26004 | SPACER (26X31X33.7) | 1 1 | |
| 10 | 21915-85C10 | BEARING | 2 2 | |
| 11 | 09280-21008 | O RING | 1 1 | |
| 12 | 06111-06003 | BALL | 2 2 | |
| 13 | 09166-25012 | WASHER | 2 2 | |
| 14 | 29136-60A01 | PLATE, SHAFT | 1 1 | |
| 15 | 01 <i>5</i> 70-08163 | BOLT | 1 1 | |
| 16 | 29141-60A10 | SHAFT, OUTPUT REAR | 1 1 | |
| 1 <i>7</i> | 06111-06003 | BALL | 1 1 | |
| 18 | 08173-62100 | BEARING | 1 1 | |
| 19 | 21933-85C40 | CIRCLIP | 1 1 | |
| 20 | 09262-30077 | BEARING | 1 1 | |
| 21-1 | 09181-62003 | SHIM, OUTPUT SHAFT (T:0.1) | AR 0-1 | |
| 21-2 | 09181-62008 | SHIM, OUTPUT SHAFT (T:0.2) | AR 0-1 | |
| 21-3 | 09181-62004 | SHIM, OUTPUT SHAFT (T:0.3) | AR 0-1 | |
| 21 -4 | 09181-62009 | SHIM, OUTPUT SHAFT (T:0.4) | AR 0-1 | |
| 21 -5 | 09181-62005 | SHIM, OUTPUT SHAFT (T:0.5) | AR 0-1 | |


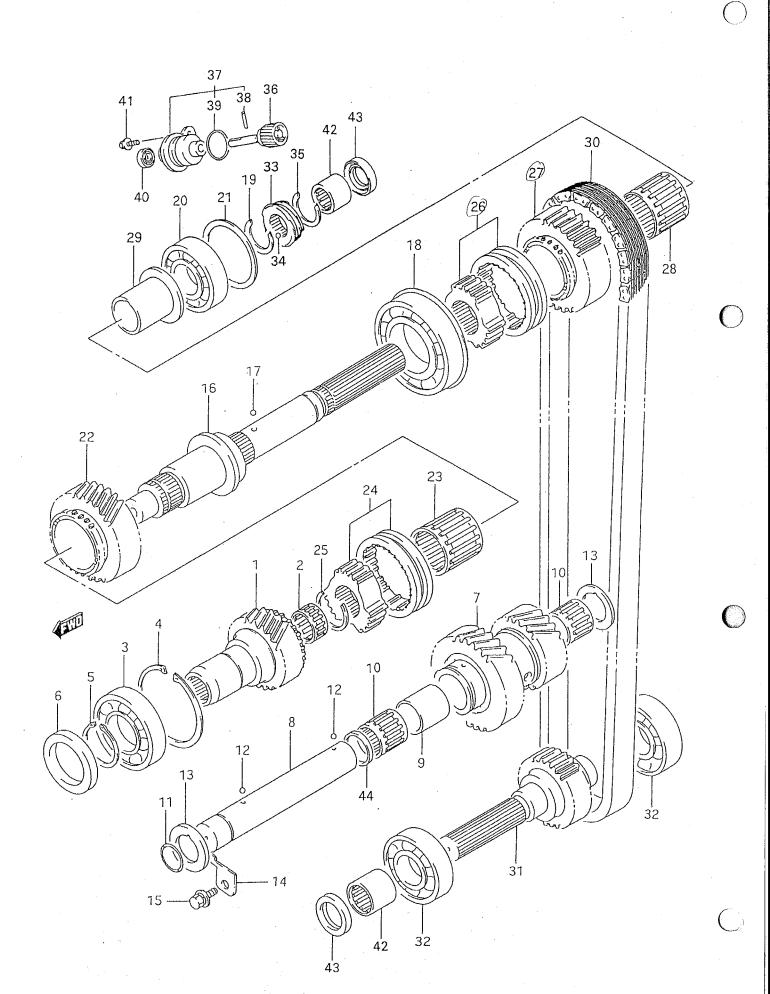


FIG. 065 (1-H-06) TRANSFER GEAR

| REF. | | | Q, TY | | | |
|------|----------------------|-------------------------------|-------|----|---------|--|
| N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS | |
| | | | _ | _ | | |
| 22 | 29211-85C00 | GEAR, OUTPUT LOW | 1 | 1 | | |
| 23 | 21915-85C50 | BEARING | 1 | 1 | | |
| 24 | 29230-85C00 | HUB, REDUCTION CLUTCH | 1 | 1 | | |
| 25 | 21933-85C50 | CIRCLIP | 1 | 1 | | |
| 26 | 29230-60A10 | HUB, FRONT DRIVE CLUTCH | 1 | 1 | | |
| 27 | 29221-60A00 | SPROCKET, DRIVE | 1 | 1 | | |
| 28 | 21915-85C50 | BEARING | . 1 | 1 | | |
| 29 | 29222-60A00 | BUSH, SPROCKET | 1 | 1 | | |
| 30 | 29225-60A01 | CHAIN, DRIVE | 1 | 1 | | |
| 31 | 291 <i>5</i> 1-60A00 | SHAFT, OUTPUT FRONT | 1 | 1 | | |
| 32 | 09262-30077 | BEARING | 2 | 2 | | |
| 33 | 29411-60A20 | GEAR, SPEEDOMETER DRIVE | 1 | 1 | | |
| 34 | 06111-06003 | BALL | 1 | 1 | | |
| 35 | 21933-85C20 | CIRCLIP | 1 | 1 | | |
| 36 | 29421-60A02 | GEAR, SPEEDOMETER DRIVEN | 1 | 1 | | |
| 37 | 29430-60810 | CASE, SPEEDOMETER DRIVEN GEAR | 1 | 1 | | |
| 38 | 09205-03022 | .SPRING PIN | 1 | 1. | | |
| 39 | 09280-24009 | .O RING | 1 | 1 | | |
| 40 | 09282-07001 | SEAL, OIL | 1 | 1 | | |
| 41 | 01550-06163 | BOLT | 1 | 1 | | |
| 42 | 09263-40006 | BEARING, CENTER & REAR CASE | 2 | 2 | | |
| 43 | 09283-40021 | SEAL, CENTER & REAR CASE OIL | 2 | 2 | | |
| 44 | 29133-85C00 | RING, FRICTION | 1 | 1 | | |

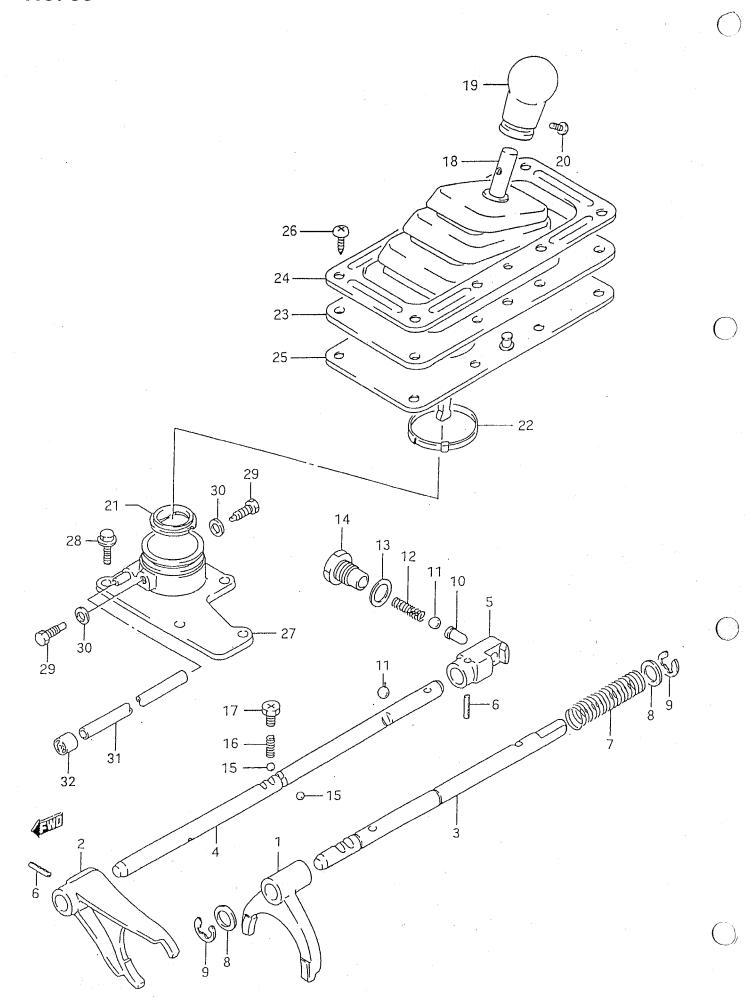

| REF. | PART Nº | | · (| Q, | TY | |
|------|----------------------------|--|----------------|----------|--------|---------|
| N.º | | DESCRIPTION | | <u> </u> | V | REMARKS |
| 1 | 20211 40402 | EODE EDONIT DDIVE SHIET | 1 | 1 | 1 | |
| 1 | 29311-60A02 | FORK, FRONT DRIVE SHIFT FORK, REDUCTION SHIFT | |) | 1 | |
| 2 | 29321-60A10 | • | - | ! ! | 1 | |
| 3 | 29331-60A00 29332-60A10 | SHAFT, FRONT DRIVE SHIFT | | ! 1 | 1 | |
| 4 | | SHAFT, REDUCTION SHIFT | | ı İ | 1 | |
| 5 | 29339-60A00 | YOKE, REDUCTION SHIFT | | ı 2 | 2 | |
| 6 | 09205-05012 | SPRING PIN | | | | |
| 7 | 09440-19020 | SPRING | |] | 1 2 | |
| 8 | 08211-14221 | WASHER | | 2 | 2 | |
| 9 | 08332-11126 | E RING | | | | |
| 10 | 29334-60A10 | PIN, SELECT RETURN | | 1 2 | 1 2 | |
| 11 | 06111-12004 | BALL SPING SELECT PETURAL | | ۷ ۱ | Z 1 | |
| 12 | 09440-10033 | SPRING, SELECT RETURN | | ! 1 | 1 | |
| 13 | 09160-18018 | WASHER (18X24X2) | , | i 1 | 1 | |
| 14 | 21941-85C40 | BOLT | | ן ה | 1 3 | |
| 15 | 06111-10003 | BALL | | 3 | | |
| 16 | 29415-85C00 | SPRING, LOCATING | | 2 | 2 2 | |
| 17 | 09128-10002 | SCREW | | 2 | 1 | |
| 18-1 | 29300-60A13 | LEVER, GEAR SHIFT CONTROL | |] | 1 | 4 A T |
| 18-2 | 29300-77E10 | LEVER, GEAR SHIFT CONTROL | . - | ! | 1 | 4AT |
| 19-1 | 29344-85C00 | KNOB, LEVER | | | i | 4 A T |
| 19-2 | 29344-60A10 | KNOB, LEVER | | | 1 | 4AT |
| 20 | 02112-06123 | SCREW | | ļ | 1 | |
| 21 | 29535-60A00 | SEAT, LEVER | | 1 | 1 | |
| 22-1 | 21935-85C00 | CLAMP | , | 1 | 1 | / A T |
| 22-2 | 09401-57901 | CLAMP | | ļ | 1 | 4AT |
| 23 | 29346-56B01 | BOOT, LEVER | |] | l - | · |
| 24 | 29347-56B00 | COVER, BOOT | | | - | |
| 25 | 29349-60A10 | SHEET, T/F GEAR SHIFT LEVER | | | 1 | |
| 26 | 03141-06203 | SCREW | 8 | 3 | 8 | |


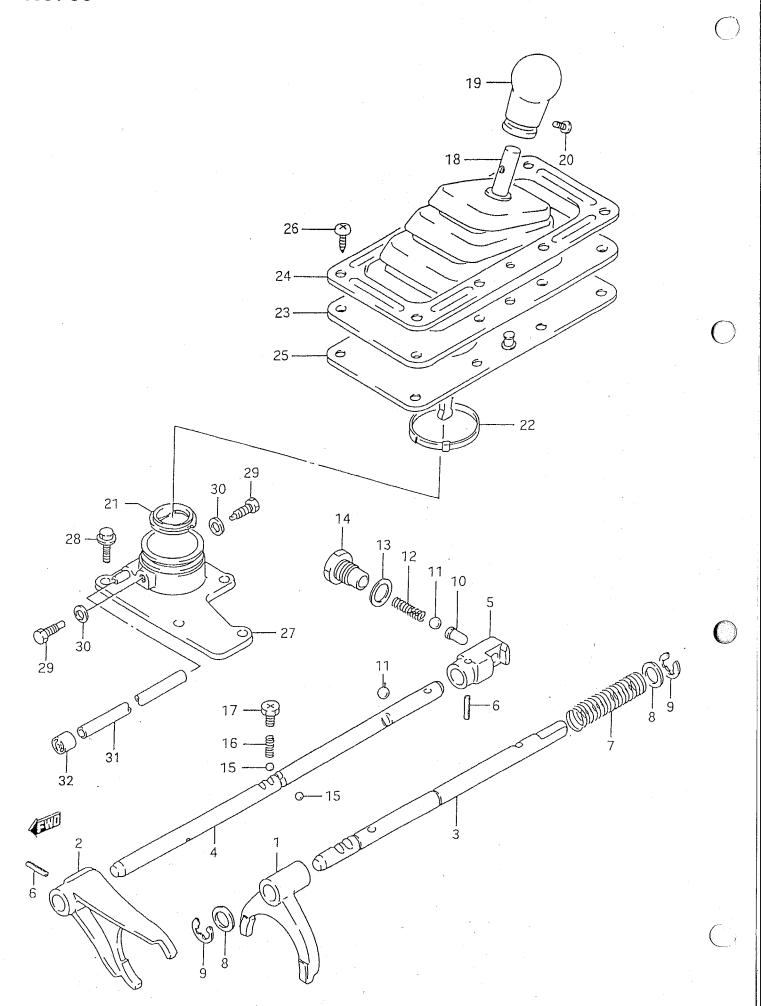



FIG. 066 (1-H-08) TRANSFER GEAR SHIFTING

| RFF | PART Nº | | Q, | TY | |
|-------|--|--|---|---|--|
| N.º | | DESCRIPTION | С | ٧ | REMARKS |
| | | | | | |
| 27 | 29750-60A00 | CASE, LEVER | 1 | 1 | |
| 28 | 01550-08203 | BOLT | 5 | 5 | |
| 29-1 | 21941-85C50 | BOLT, LEVER LOCATING | 2 | 2 | |
| 29-2 | 09135-08006 | BOLT, LEVER LOCATING | 2 | 2 | 4AT |
| 30-1 | 21945-85C00 | LOCK WASHER | 2 | 2 | |
| 30-2 | 09162-08008 | LOCK WASHER | 2 | 2 | 4AT |
| 31 -1 | 21931-85C30 | HOSE, BREATHER | 1 | 1 | |
| 31-2 | 09352-70113-00B | HOSE, BREATHER | 1 | 1 | 4AT,L:2000>1040 |
| 32 | 46543-60A00 | PLUG, BREATHER | 1 | 1 | 4AT |
| | 27 28 29-1 29-2 30-1 30-2 31-1 31-2 | 27 29750-60A00 28 01550-08203 29-1 21941-85C50 29-2 09135-08006 30-1 21945-85C00 30-2 09162-08008 31-1 21931-85C30 31-2 09352-70113-00B | N.º PART Nº DESCRIPTION 27 29750-60A00 CASE, LEVER 28 01550-08203 BOLT 29-1 21941-85C50 BOLT, LEVER LOCATING 29-2 09135-08006 BOLT, LEVER LOCATING 30-1 21945-85C00 LOCK WASHER 30-2 09162-08008 LOCK WASHER 31-1 21931-85C30 HOSE, BREATHER 31-2 09352-70113-00B HOSE, BREATHER | REF. N.º PART Nº DESCRIPTION C 27 29750-60A00 CASE, LEVER 1 28 01550-08203 BOLT 5 29-1 21941-85C50 BOLT, LEVER LOCATING 2 29-2 09135-08006 BOLT, LEVER LOCATING 2 30-1 21945-85C00 LOCK WASHER 2 30-2 09162-08008 LOCK WASHER 2 31-1 21931-85C30 HOSE, BREATHER 1 31-2 09352-70113-00B HOSE, BREATHER 1 | N.º PART Nº DESCRIPTION C V 27 29750-60A00 CASE, LEVER 1 1 28 01550-08203 BOLT 5 5 29-1 21941-85C50 BOLT, LEVER LOCATING 2 2 29-2 09135-08006 BOLT, LEVER LOCATING 2 2 30-1 21945-85C00 LOCK WASHER 2 2 30-2 09162-08008 LOCK WASHER 2 2 31-1 21931-85C30 HOSE, BREATHER 1 1 31-2 09352-70113-00B HOSE, BREATHER 1 1 |

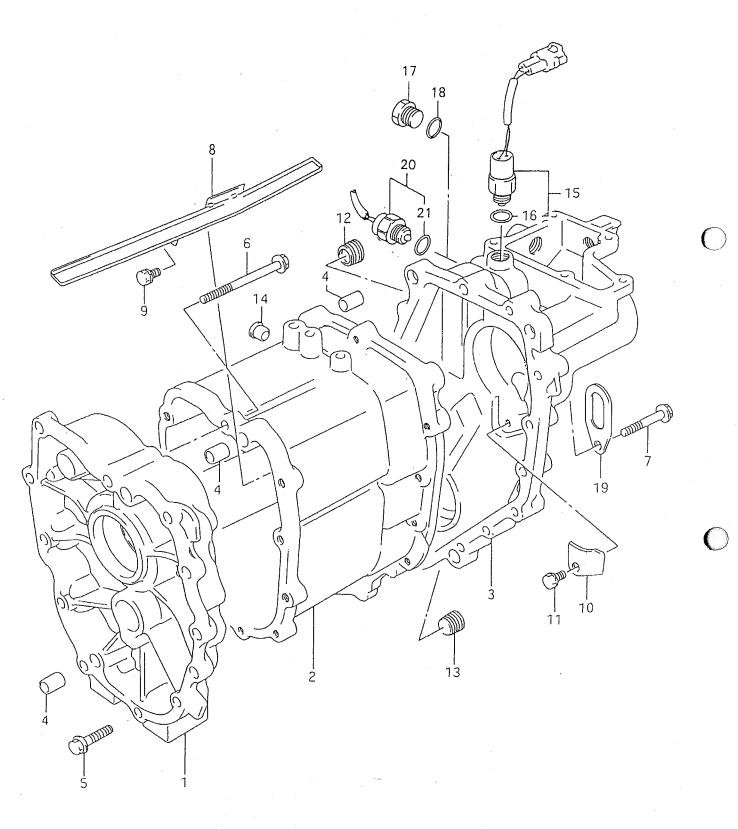


1300


| | | Q, | TY | | |
|---------------|---|--|---|--|---|
| PART Nº | DESCRIPTION | C | ٧ | REMARKS | |
| | | | | | |
| 29511-60A01 | CASE, TRANSFER FRONT | 1 | 1 | | |
| 29521-60A01 | CASE, TRANSFER CENTER | 1 |] | | |
| 29531-60A21 | CASE, TRANSFER REAR | 1 | 1 | | |
| 04211-13149 | PIN, CASE | 6 | 6 | | |
| 01550-08303 | BOLT | 20 | 20 | | |
| 01550-08803 | BOLT | 1 | 1 | | |
| 01550-08453 | BOLT | 15 | 15 | | |
| 3 29528-60A00 | GUTTER, CENTER CASE | 1 | 1 | | |
| 09103-06083 | BOLT (6X12) | 1 | 1 | | |
| 29536-60A00 | PLATE, REAR CASE | 1 | 1 | | |
| 09103-06083 | BOLT (6X12) | 1 | 1 | | |
| 2 21947-85C40 | PLUG, OIL LEVEL & FILLER | . 1 | 1 | | |
| 3 21947-85C50 | PLUG, OIL DRAIN | 1 | 1 | | |
| 1 21947-85C80 | PLUG, LOCATING | 1 | 1 | | |
| 37680-60A01 | SWITCH ASSY, 4 WHEEL DRIVE | 1 | 1 | | |
| 09280-11002 | .O RING | . 1 | 1 | | |
| 7 09247-14013 | PLUG, LOW SWITCH | 1 | 1. | MT | |
| 09280-11002 | O RING | 1 | 1 | MT | |
| 11851-73000 | HOOK, ENGINE | 1 , | 1 | | |
| 37680-60A10 | SWITCH ASSY, LOW | 1 | 1 | 4AT | |
| 09280-11002 | .O RING | 1 | 1 | 4AT | |
| | 29511-60A01 29521-60A01 29531-60A21 04211-13149 01550-08303 01550-08453 29528-60A00 09103-06083 29536-60A00 09103-06083 21947-85C40 21947-85C50 21947-85C80 37680-60A01 09280-11002 09247-14013 09280-11002 11851-73000 37680-60A10 | 29511-60A01 CASE, TRANSFER FRONT 29521-60A01 CASE, TRANSFER CENTER 29531-60A21 CASE, TRANSFER REAR 04211-13149 PIN, CASE 01550-08303 BOLT 01550-08453 BOLT 01550-08453 BOLT 29528-60A00 GUTTER, CENTER CASE 09103-06083 BOLT (6X12) 29536-60A00 PLATE, REAR CASE 09103-06083 BOLT (6X12) 21947-85C40 PLUG, OIL LEVEL & FILLER 21947-85C50 PLUG, OIL DRAIN 21947-85C80 PLUG, LOCATING 37680-60A01 SWITCH ASSY, 4 WHEEL DRIVE 09280-11002 O RING 11851-73000 HOOK, ENGINE 37680-60A10 SWITCH ASSY, LOW | PART N° DESCRIPTION C 29511-60A01 CASE, TRANSFER FRONT 1 29521-60A01 CASE, TRANSFER CENTER 1 29531-60A21 CASE, TRANSFER REAR 1 04211-13149 PIN, CASE 6 01550-08303 BOLT 20 01550-08453 BOLT 1 29528-60A00 GUITER, CENTER CASE 1 09103-06083 BOLT (6X12) 1 29536-60A00 PLATE, REAR CASE 1 09103-06083 BOLT (6X12) 1 21947-85C40 PLUG, OIL LEVEL & FILLER 1 21947-85C40 PLUG, OIL DRAIN 1 21947-85C50 PLUG, OIL DRAIN 1 21947-85C80 PLUG, LOCATING 1 37680-60A01 SWITCH ASSY, 4 WHEEL DRIVE 1 09280-11002 O RING 1 09280-11002 O RING 1 11851-73000 HOOK, ENGINE 1 37680-60A10 SWITCH ASSY, LOW 1 | 29511-60A01 CASE, TRANSFER FRONT 1 1 1 29521-60A01 CASE, TRANSFER CENTER 1 1 1 29531-60A21 CASE, TRANSFER CENTER 1 1 1 04211-13149 PIN, CASE 6 6 6 01550-08303 BOLT 20 20 01550-08803 BOLT 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 | PART N° DESCRIPTION C V REMARKS 29511-60A01 CASE, TRANSFER FRONT 1 1 1 29521-60A01 CASE, TRANSFER CENTER 1 1 1 29531-60A21 CASE, TRANSFER REAR 1 1 1 04211-13149 PIN, CASE 6 6 6 01550-08303 BOLT 20 20 01550-08453 BOLT 1 1 09103-06083 BOLT 15 15 29528-60A00 GUTER, CENTER CASE 1 1 09103-06083 BOLT (6X12) 1 1 29536-60A00 PLATE, REAR CASE 1 1 09103-06083 BOLT (6X12) 1 1 21947-85C40 PLUG, OIL LEVEL & FILLER 1 1 21947-85C50 PLUG, OIL DRAIN 1 1 21947-85C80 PLUG, LOCATING 1 1 37680-60A01 SWITCH ASSY, 4 WHEEL DRIVE 1 1 09247-14013 PL |

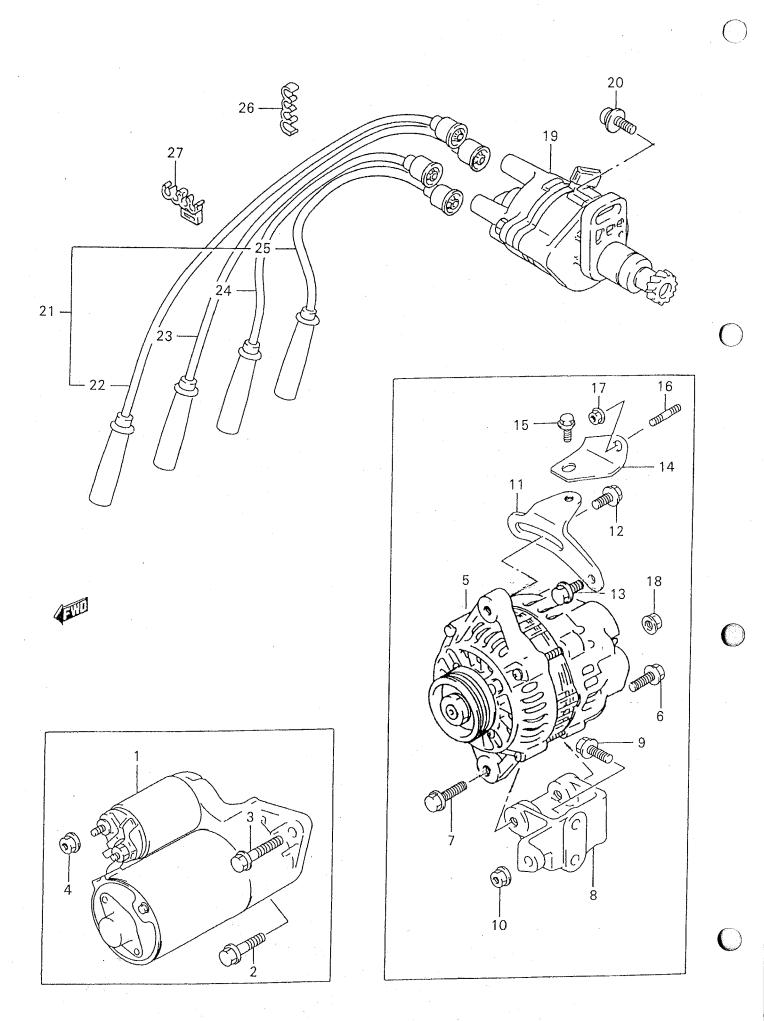

| REI | · F | | Q | , TY | | |
|-------|-----------------------|----------------------------|-----|------|--|--|
| N.º | | DESCRIPTION | C | ٧ | REMARKS | |
| | 1 31100-8 <i>5</i> C0 | 00 MOTOR ASSY, STARTING | 1 | 1 | | |
| | 2 01550-0835 | • | 1 | 1 | | |
| | 3 01550-0850 | | 1 | 1 | | |
| | 4 08316-1008 | | 2 | 2 | | |
| | 5 31400-85C0 | | 1 | 1 | | |
| | 6 01 <i>55</i> 0-0830 | | 1 | 1 | | |
| | 7 01550-0835 | BOLT | 1 | 1 | | |
| 8 | 8 1 <i>7</i> 911-56B0 | 0 BRACKET, GENERATOR | 1 | 1 | | |
| Ç | 9 01550-0825 | | 3 | 3 | | |
| 10 | 0 08316-1008 | 3 NUT | 1 | 1 | | |
| 11 | 1 17921-56B0 | 0 ARM, GENERATOR ADJUSTING | 1 | 1 | | |
| ຶ່ 12 | 2 09118-0810 | 7 BOLT (8X25) | 1 | 1 | | |
| 13 | 3 01550-0820 | BOLT | 1 | 1 | | |
| 14 | 4 17926-56B0 | 0 REINFORCEMENT | 1 | 1 | | |
| 13 | 5 01550-0816 | 3 BOLT | 1 | 1 | | |
| 10 | 6 01421-0816 | 3 STUD BOLT | . 1 | 1 | | |
| 15 | 7 08316-1008 | 3 NUT | 1 | 1 . | en e | |
| 18 | 8 08316-1006 | 3 NUT | 1 | 1 | | |
| 19 | 9 33100-70E1 | O DISTRIBUTOR ASSY | 1 | 1 | | |
| 20 | 09138-0800 | 3 SCREW (8X30) | 1 | 1 | | |
| 2 | 1 33705-8302 | O CORD SET, HIGH TENSION | 1 | 1 | | |
| 22 | 2 33730-60C | .CORD, HIGH TENSION NO.2 | 1 | 1 | | |
| 23 | 3 33740-60C | .CORD, HIGH TENSION NO.3 | 1 | 1 | | |
| 24 | 4 33750-8302 | 0 .CORD, HIGH TENSION NO.4 | 1 | 1 | | |
| 23 | 5 33760-8522 | 0 .CORD, HIGH TENSION NO.5 | 1 | 1 | | |
| 20 | 6 09408-0003 | 5 CLAMP, HIGH TENSION CORD | 1 | 1 | | |
| 27 | 7 33884-8651 | 0 CLAMP, HIGH TENSION CORD | 1 | 1 | | |

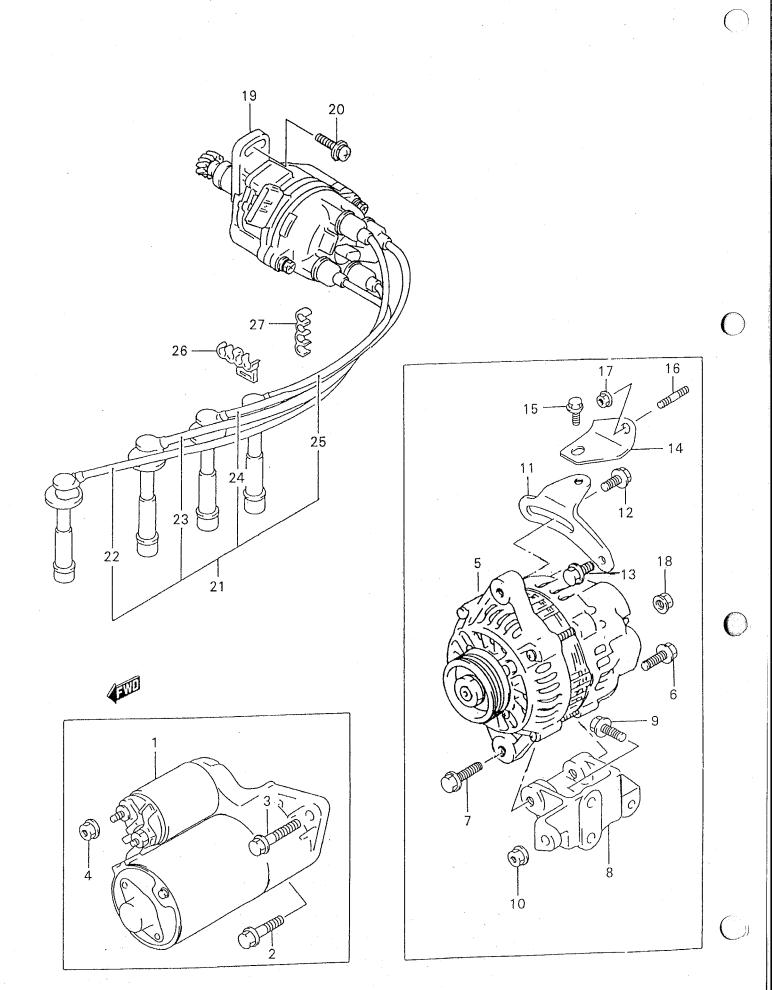

| REF. | PART Nº | DESCRIPTION | Q, | TY | |
|------------|-------------|--------------------------|-----|----|---------|
| N.º | | | С | V | REMARKS |
| | | | | | |
| 1 | 31100-85C00 | MOTOR ASSY, STARTING | 1 | 1 | |
| 2 | 01550-08353 | BOLT | 1 | 1 | |
| 3 | 01550-08503 | BOLT | 1 | 1 | |
| 4 | 08316-10083 | NUT | 2 | 2 | |
| 5 | 31400-85C00 | GENERATOR ASSY | 1 | 1 | |
| 6 | 01550-08303 | BOLT | . 1 | 1 | |
| 7 | 01550-08353 | B ∕ OLT | 1 | 1 | |
| 8 | 17911-71C01 | BRACKET, GENERATOR | 1 | 1 | |
| 9 | 01550-08253 | BOLT | 3 | 3 | |
| 10 | 08316-10083 | NUT | 1 | 1 | |
| 11 | 17921-57B00 | ARM, GENERATOR ADJUSTING | 1 | 1 | |
| 12 | 09118-08107 | BOLT (8X25) | . 1 | 1 | |
| 13 | 01550-08203 | BOLT | 1 | 1 | |
| 14 | 17926-56B00 | REINFORCEMENT | 1 | 1 | |
| 15 | 01550-08163 | BOLT | 1 | 1 | |
| 16 | 01421-08163 | STUD BOLT | 1 | 1 | |
| 1 <i>7</i> | 08316-10083 | NUT | 1 | 1 | |
| 18 | 08316-10063 | NUT | 1 | 1 | |
| 19 | 33100-70E00 | DISTRIBUTOR ASSY | 1 | 1 | |
| 20 | 09138-08003 | SCREW (8X30) | 1 | 1 | |
| 21 | 33705-57B21 | CORD SET, HIGH TENSION | 1 | 1 | |
| 22 | 33730-57B21 | .CORD, HIGH TENSION NO.2 | 1 | 1 | |
| 23 | 33740-57B21 | .CORD, HIGH TENSION NO.3 | 1 | 1 | |
| 24 | 33750-57B21 | .CORD, HIGH TENSION NO.4 | 1 | 1 | |
| 25 | 33760-57B21 | .CORD, HIGH TENSION NO.5 | . 1 | 1 | |
| 26 | 33884-86510 | CLAMP, HIGH TENSION CORD | 1 | 1 | e . |
| 27 | 09408-00035 | CLAMP, HIGH TENSION CORD | 2 | 2 | |

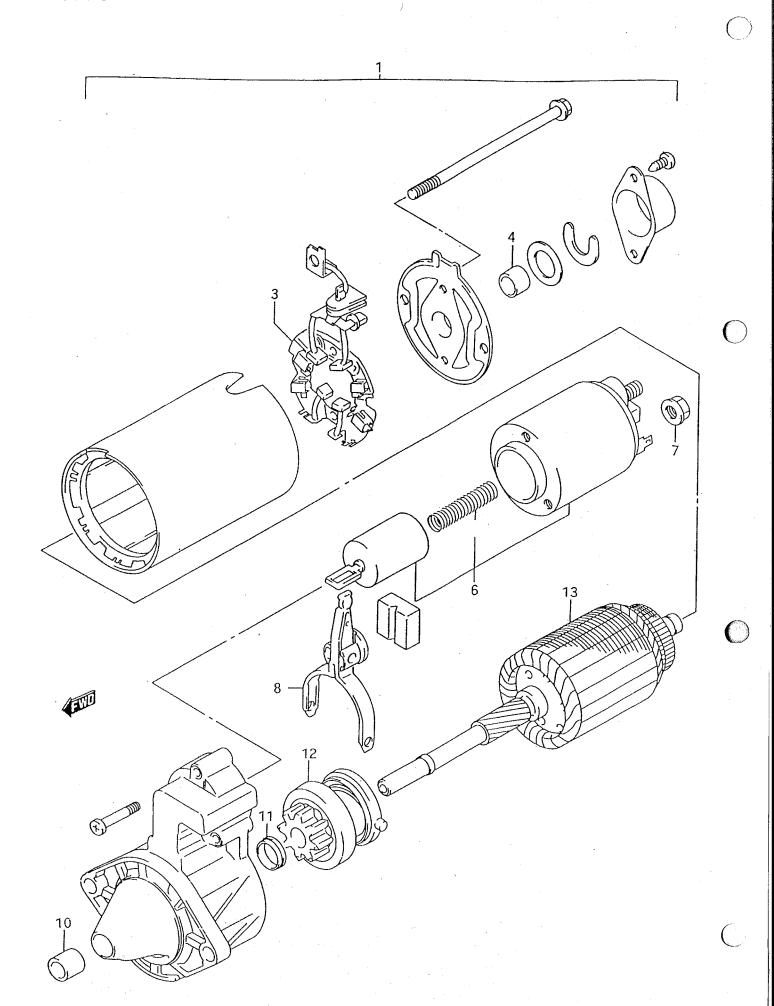

| REF. | | | Q, TY | | TY | | |
|------|-------------|----------------------|-------|---|----|---------|--|
| N.º | PART Nº | DESCRIPTION | _ | С | V | REMARKS | |
| | | | | | | | |
| 1 | 31100-85C00 | MOTOR ASSY, STARTING | | 1 | 1 | | |
| 2 | | | | | , | | |
| 3 | 31131-85C00 | .BRUSH ASSY | | 1 | 1 | | |
| 4 | 31172-85C00 | .BUSH | | 1 | 1 | | |
| 5 | | | | | | | |
| 6 | 31220-85C00 | .SWITCH ASSY | | 1 | 1 | | |
| 7 | 08361-15083 | .NUT | j.et | 1 | 1 | | |
| 8 | 31191-85C00 | .LEVER | | 1 | 1 | | |
| 9 | | | | | | | |
| 10 | 31152-85C00 | .BUSH | | 1 | 1 | | |
| 11 | 31152-85C10 | .BUSH | | 2 | 2 | | |
| 12 | 31320-85C00 | .CLUTCH ASSY | | 1 | 1 | | |
| 13 | 31311-85C00 | .ARMATURE | | 1 | 1 | | |
| 14 | | | | | | | |

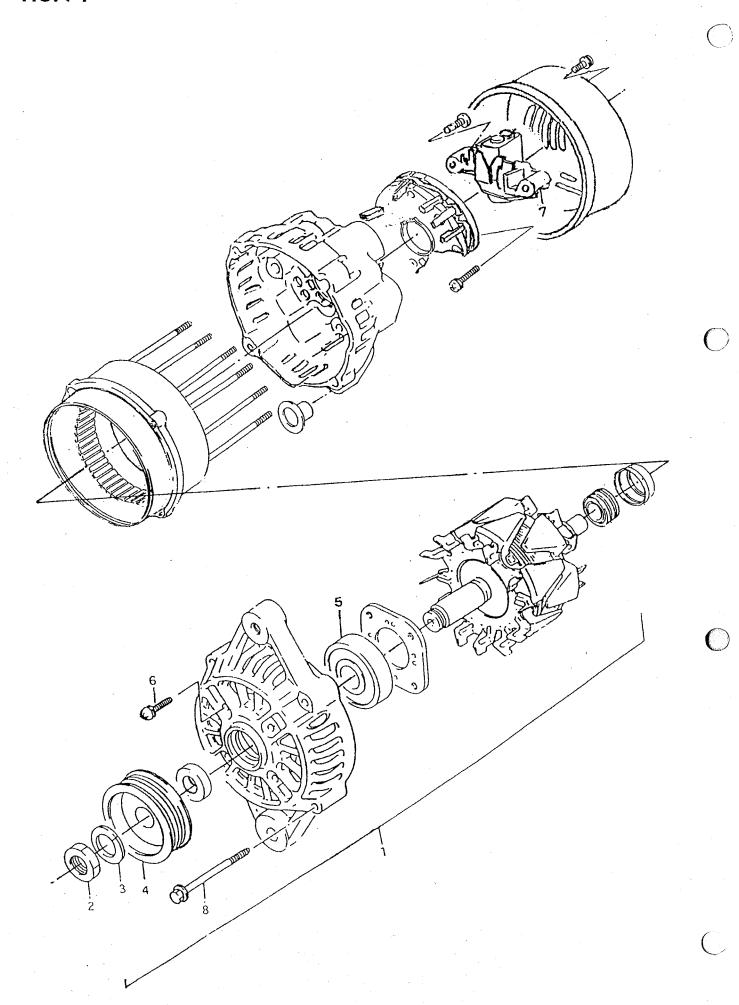


FIG. 071 (1-I-05) GENERATOR

| REF. | PART Nº | DESCRIPTION | Q, TY | |
|------|-------------|-----------------|-------|---------|
| N.º | | | C V | REMARKS |
| | | | | |
| 1 | 31400-85C00 | GENERATOR ASSY | 1 1 | |
| 2 | 31775-85C00 | .NUT | 1 1 | |
| 3 | 00000A01204 | .WASHER | 1 1 | |
| 4 | 31171-85C00 | .PULLEY | 1 1 | |
| 5 | 31582-85C00 | .BEARING | 1 1 | |
| 6 | 00000A01205 | .SCREW | 4 4 | 1 |
| 7 | 32500-85C00 | .REGULATOR ASSY | 1 1 | |

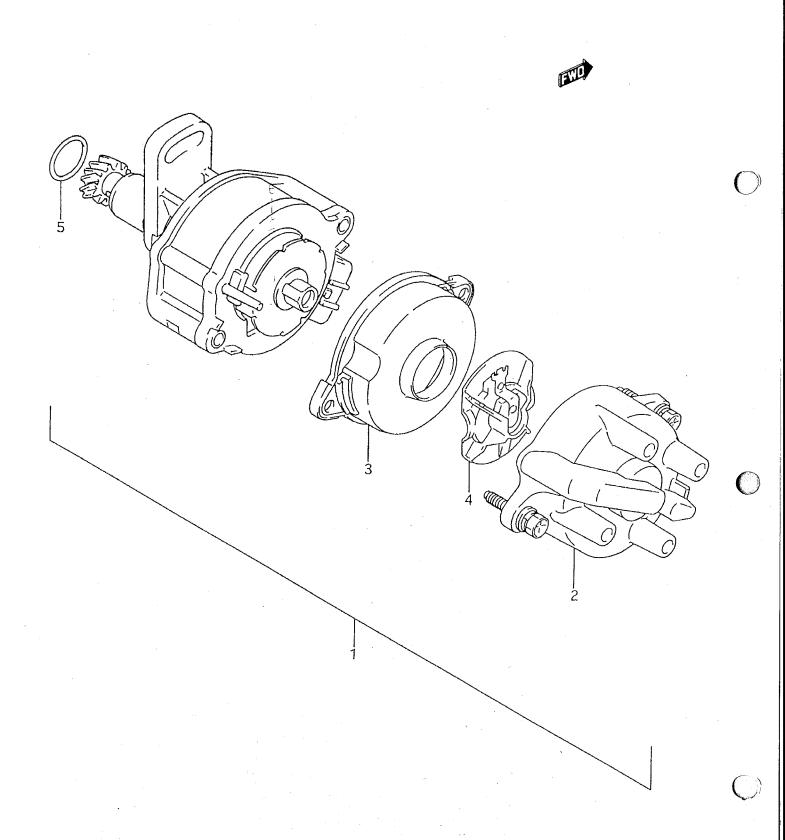


FIG. 072 (1-I-06) DISTRIBUTOR (2 VALVE)

| REF. | PART Nº | DESCRIPTION | Q, TY | | |
|------|-------------|---------------------|-------|---------|--|
| N.º | | | CV | REMARKS | |
| | | | | | |
| 1 | 33100-70E10 | DISTRIBUTOR ASSY | 1 1 | | |
| 2 | 33321-70E10 | .CAP, DISTRIBUTOR | 1 1 | | |
| 3 | 33326-70E10 | .COVER, DISTRIBUTOR | 1 1 | | |
| 4 | 33310-70E00 | .ROTOR, DISTRIBUTOR | 1 1 | | |
| 5 | 33278-85060 | .SEAL, DISTRIBUTOR | 1 1 | | |

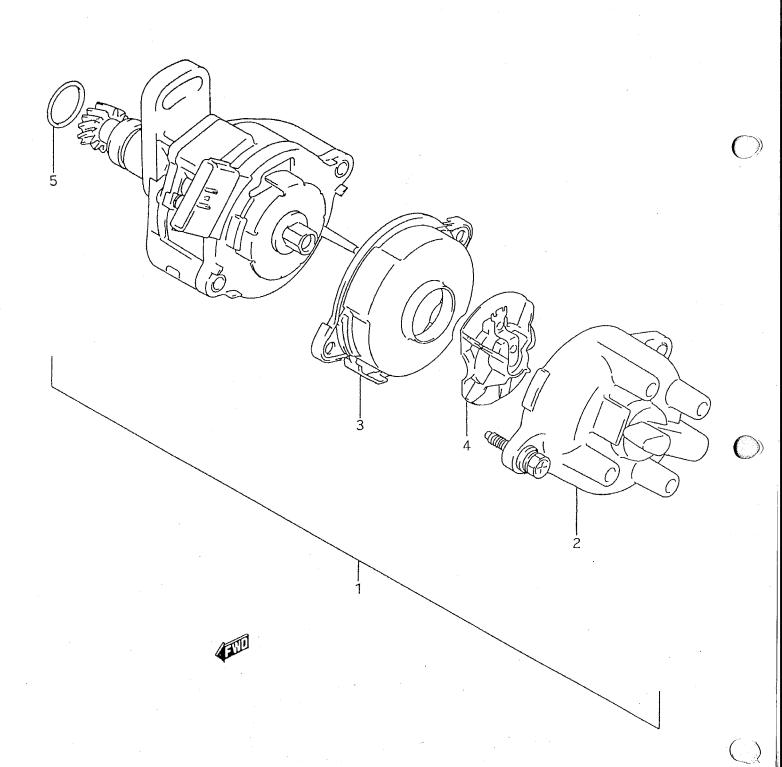


FIG. 073 (1-I-07) DISTRIBUTOR (4 VALVE)

| REF. N.º | PART Nº | DESCRIPTION | Q, TY C V | REMARKS |
|-------------|-------------|----------------------|--------------|---------|
| | · | | | |
| 1 | 33100-70E00 | DISTRIBUTOR ASSY | 1 1 | |
| 2 | 33321-70E00 | .CAP, DISTRIBUTOR | 1 1 | |
| 3 | 33326-70E00 | .COVER, DISTRIBUTOR | 1 1 | |
| 4 | 33310-70E00 | .ROTOR, DISTRIBUTOR | 1 1 | |
| 5 | 33278-85060 | .O RING, DISTRIBUTOR | 1 1 | |

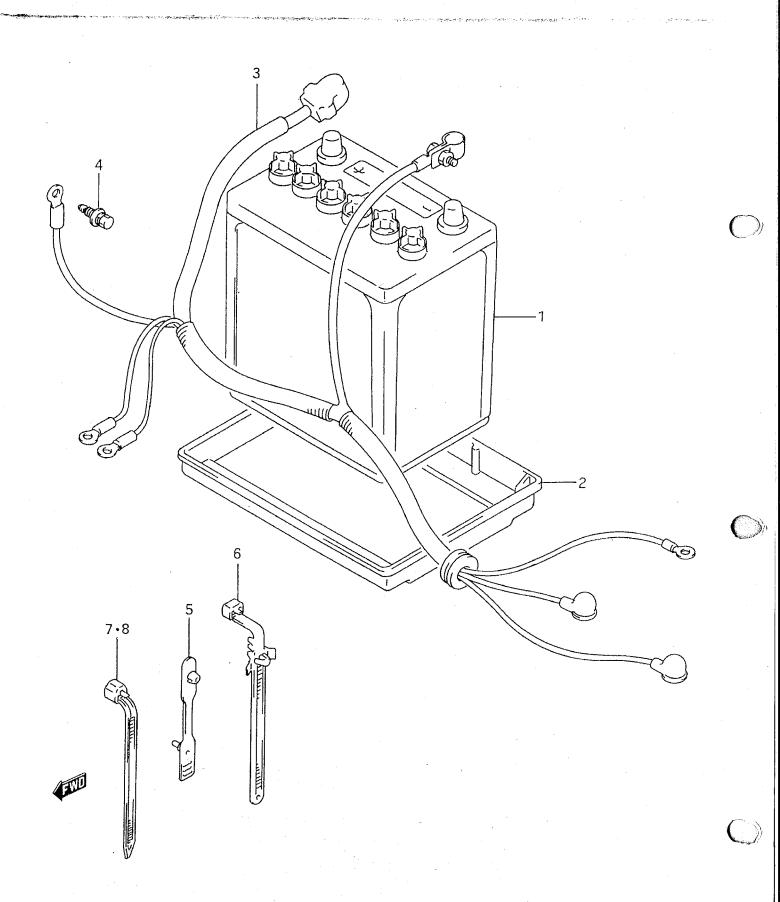


FIG. 074 (1-I-08) BATTERY

| | REF. | DA DT A LO | | | Q, TY | | | |
|---|-------|---------------|------------------------|---|-------|---|----------------|--|
| | N.º | PART Nº | DESCRIPTION | | С | ٧ | REMARKS | |
| | | | | | | | | |
| | 1 - 1 | 33610-85C90-R | BATTERY ASSY 45A | • | 1 | 1 | TUDOR | |
| | 1 - 2 | 36610-86CA0-R | BATTERY ASSY 60A | | 1 | 7 | VB | |
| | | 36610-86CB0-R | BATTERY ASSY 70A | | 1 | 1 | TUDOR | |
| | 2 | 33660-85C00 | TRAY, BATTERY | | 1 | 1 | | |
| | 3-1 | 33800-70E30 | CABLE, STARTER MOROR | | 1 | 1 | 2 VALVE | |
| | 3-2 | 33800-79E20 | CABLE, STARTER MOTOR | | 1 | 1 | E22 | |
| | 4 | 09115-06001 | BOLT, EARTH | | 1 | 1 | | |
| | 5 | 09407-05403 | CLAMP, ACG WIRE (L:88) | | 1 | 1 | | |
| | 6-1 | 09407-12404 | CLAMP, CABLE (L:140) | | 1 | 1 | E2 | |
| | 6-2 | 09407-12404 | CLAMP, CABLE (L:140) | | 2 | 2 | E22,E53 | |
| 1 | 7 | 09407-14406 | CLAMP, CABLE (L:130) | | 1 | 1 | 2 VALVE | |
| | 8 | 36990-85C10 | CLAMP, CABLE | | 1 | 1 | EXC/E2:4 VALVE | |
| | | | | | | | | |

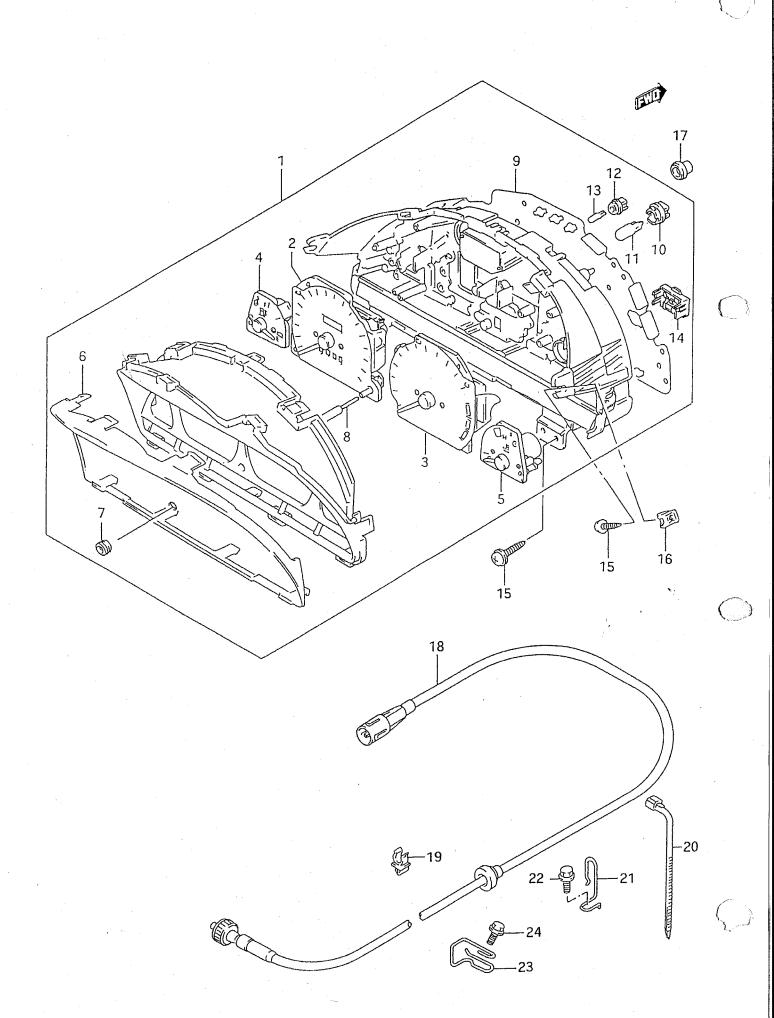


FIG. 075 (1-I-09) SPEEDOMETER

| | REF. | | | Q, TY | | | |
|-----|-------|-------------------------------|--------------------------------|-------|----|---------------|--|
| | N.º | PART Nº | DESCRIPTION | C | ٧ | REMARKS | |
| | | | | | | | |
| | 1 - 1 | 34101-79E80 | SPEEDOMETER ASSY (MILE/KILO) | 1 | 1 | E2 | |
| | 1-2 | 34101-78EF0 | SPEEDOMETER ASSY (MILE/KILO) | 1 | 1 | E2: | |
| | | | | | | W/AIR BAG,ABS | |
| | 1-3 | 34101-79E90 | SPEEDOMETER ASSY (KILO) | 1 | 1 | E22, E53 | |
| | 1 -4 | 34101-78EH0 | SPEEDOMETER ASSY (KILO) | 1 | 1 | E22: | |
| | | | | | | W/AIR BAG,ABS | |
| , a | 1-5 | 34101-86CA0 | SPEEDOMETER ASSY (KILO) | 1 | 1 | 1.9 DIESEL | |
| | 2-1 | 34120-79E10 | BODY ASSY, SPEEDOMETER | 1 | 1 | E2 | |
| | | | (MILE/KILO) | | | | |
| | 2-2 | 34120-79E20 | .BODY ASSY, SPEEDOMETER (KILO) | . 1 | 1 | E22,E53 | |
| | 3 | 34220-79E00 | BODY ASSY, TACHOMETER | 1 | 1 | | |
| | 4 | 34320-67E20 | BODY ASSY, FUEL METER | 1 | 1 | | |
| | 5 | 34420-67E20 | .BODY ASSY, TEMP METER | 1 | 1 | | |
| | 6 | 34112-67E20 | .GLASS, METER WINDOW | 1 | 1 | - | |
| | 7 | 34145-60B00 | .GROMMET | , 1 | 1 | | |
| | 8 | 34141-60E10 | .KNOB, TRIP METER | 1 | 1 | | |
| | 9 | 341 <i>5</i> 2- <i>77</i> E10 | .PLATE, PRINTED | 1 | 1 | | |
| | 10 | 34172-50E10 | .SOCKET, BULB | . 3 | 3 | | |
| | 11 | 09471-12131 | .BULB (12V,3.4W) | 3 | 3 | | |
| | 12-1 | 34175-78900 | .SOCKET, BULB | 12 | 12 | s. | |
| | 12-2 | 34175-78900 | .SOCKET, BULB | 15 | 15 | W/AIR BAG,ABS | |
| | 13-1 | 00000A00085 | .BULB (1.4W) | 12 | 12 | | |
| | 13-2 | 09471-12055 | .BULB (1.4W) | 15 | 15 | W/AIR BAG,ABS | |
| | 14 | 34155-50E10 | .CIRCUIT, HEAT WARNING | 1 | 1 | | |
|) | 15 | 03541-05203 | SCREW, METER | 4 | 4 | | |
| | 16 | 09148-05020 | NUT, SPEEDOMETER | 2 | 2 | · + - + | |
| | 17 | 34955-60E00 | BUSH, SPEEDOMETER | 2 | 2 | | |



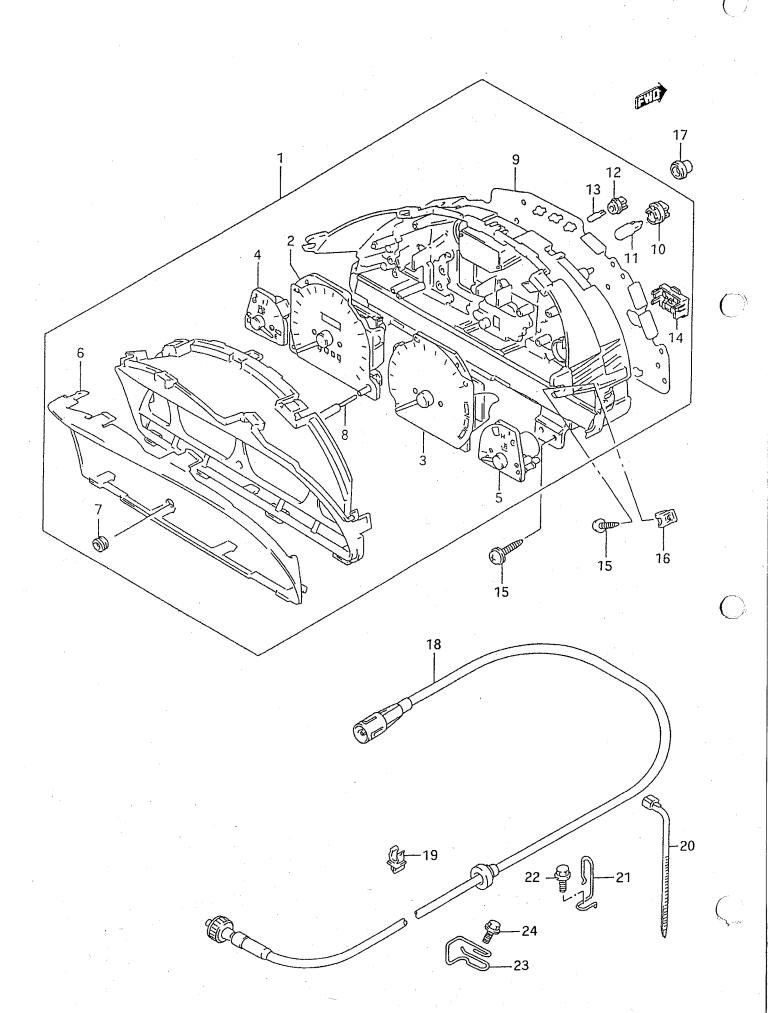


FIG. 075 (1-I-10) SPEEDOMETER


| | Q, | TY | |
|---------------------|---|---|---|
| DESCRIPTION | С | ٧ | REMARKS |
| | | | |
| E ASSY, SPEEDOMETER | 1 | 1 | LHD |
| E ASSY, SPEEDOMETER | 1 | 1 | RHD:MT |
| E ASSY, SPEEDOMETER | 1 | 1 | RHD:AT |
| MP, METER CABLE | 1 | 1 | |
| MP, METER CABLE | 1 | 1 | LHD:MT |
| ЛР, METER CABLE | 1 | 1 | MT |
| | 1 | 1 | MT |
| | 1 | 1 | AT |
| MP, METER CABLE | 1 | 1 | AT |
| | DESCRIPTION LE ASSY, SPEEDOMETER LE ASSY, SPEEDOMETER LE ASSY, SPEEDOMETER MP, METER CABLE MP, METER CABLE MP, METER CABLE MP, METER CABLE | DESCRIPTION C LE ASSY, SPEEDOMETER LE ASSY, SPEEDOMETER LE ASSY, SPEEDOMETER MP, METER CABLE MP, METER CABLE MP, METER CABLE MP, METER CABLE 1 1 1 | LE ASSY, SPEEDOMETER 1 1 LE ASSY, SPEEDOMETER |

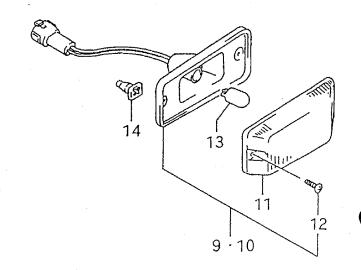


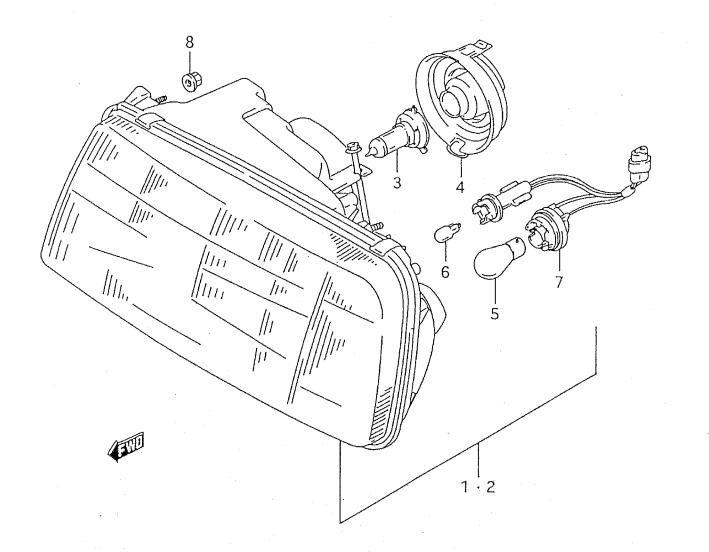

| REF. | | | Q, | TY | |
|------|-------------|-----------------------------|----|----|---------|
| N.º | PART Nº | DESCRIPTION | С | V | REMARKS |
| | | | | | |
| 1 | 35100-60A21 | HEADLAMP ASSY, RH | 1 | 1 | |
| 2 | 35300-60A21 | HEADLAMP ASSY, LH | 1 | 1 | |
| 3 | 09471-12060 | .BULB (12V,60/55W,H4,WHITE) | 2 | 2 | |
| 4 | 35179-82060 | .COVER | 2 | 2 | |
| 5 | 09471-12045 | .BULB (12V,21W) | 2 | 2 | |
| 6 | 09471-12081 | .BULB (12V,5W) | 2 | 2 | |
| 7 | 36118-60A20 | .SOCKET | 2 | 2 | |
| 8 | 08316-10063 | NUT | 8 | 8 | |
| 9 | 36410-85C00 | LAMP, SIDE TURN SIGNAL RH | 1 | 1 | |
| 10 | 36430-85C00 | LAMP, SIDE TURN SIDNAL LH | 1 | 1 | |
| 11 | 36412-85C00 | .LENS | 2 | 2 | |
| 12 | 03112-04163 | .SCREW | 4 | 4 | |
| 13 | 09471-12079 | .BULB (12V,4W) | 2 | 2 | |
| 14 | 36578-85C10 | NUT | 4 | 4 | |
| | · | | | | |


FIG. 77

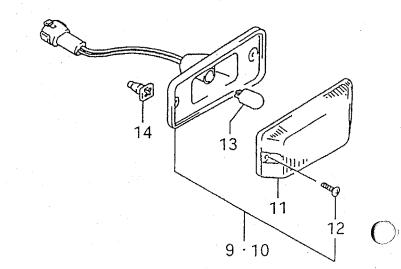

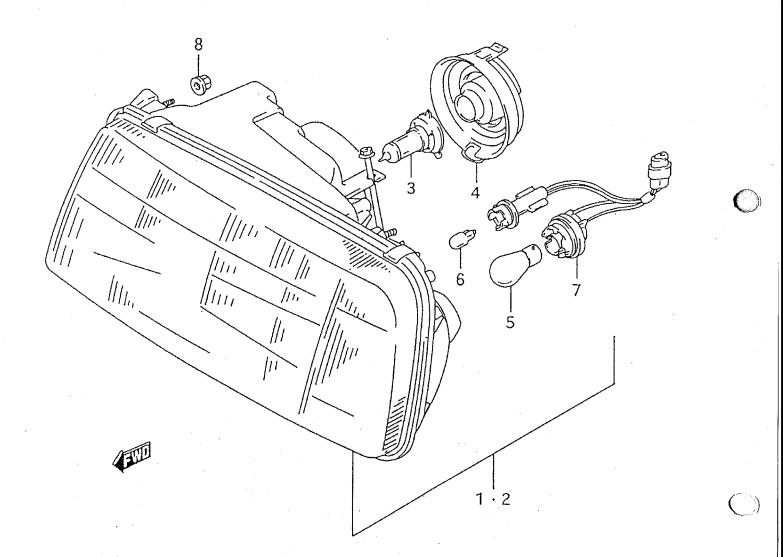

| F | -10 | _ | Ω | 7 | 7 |
|-----|-----|----|---|---|---|
| - 1 | -11 | フ. | v | / | / |

| REF. | | | Q, TY | |
|------|-------------|---------------------------|-------|--|
| N.º | PART Nº | DESCRIPTION | C V | REMARKS |
| | | | | |
| 1 | 35100-60A80 | HEADLAMP ASSY, RH | 1 1 | |
| 2 | 35300-60A80 | HEADLAMP ASSY, LH | 1 1 | |
| 3 | 09471-12060 | .BULB (12V,60/55W,H4) | 2 2 | <u>)</u> |
| 4 | 35179-82060 | .COVER | 2 2 | <u>) </u> |
| 5 | 09471-12045 | BULB (12V,21W) | 2 2 | 2 |
| 6 | 09471-12081 | .BULB (12V,5W) | 2 2 | 2 |
| 7 | 36118-60A20 | .SOCKET | 2 | 2 |
| 8 | 08316-10063 | NUT | 8 8 | 3 |
| 9 | 36410-85C00 | LAMP, SIDE TURN SIGNAL RH | 1 1 | |
| 10 | 36430-85C00 | LAMP, SIDE TURN SIDNAL LH | 1 1 | |
| 11 | 36412-85C00 | LENS | 2 2 | <u>)</u> |
| 12 | 03112-04163 | .SCREW | 4 4 | 1 |
| 13 | 09471-12079 | .BULB (12V,4W) | 2 2 | 2 |
| 14 | 36578-85C10 | NUT | 4 4 | 1 |

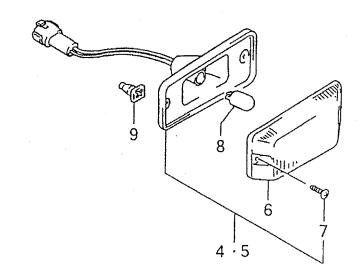

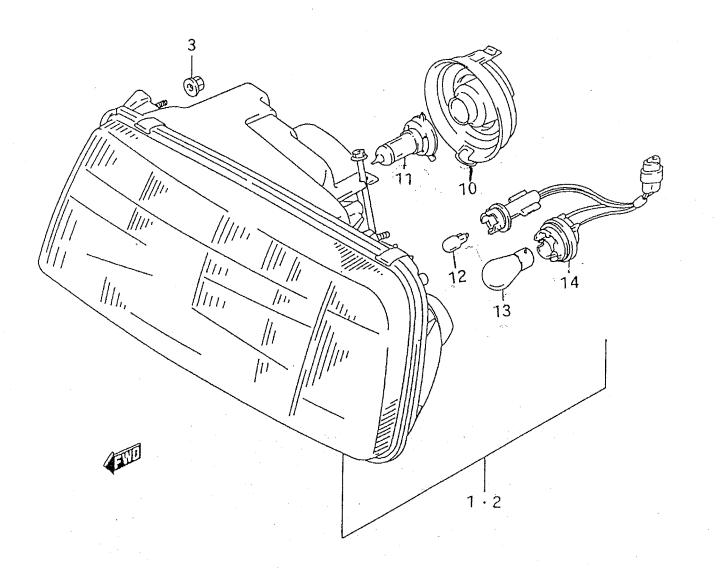


FIG. 078 (1-I-13)

REF. N.º


PART Nº

DESCRIPTION

Q, TY C V

REMARKS

NO USAR ESTA PAGINA PARA NINGUN MERCADO DO NOT USE THIS PAGE FOR ANY MARKET

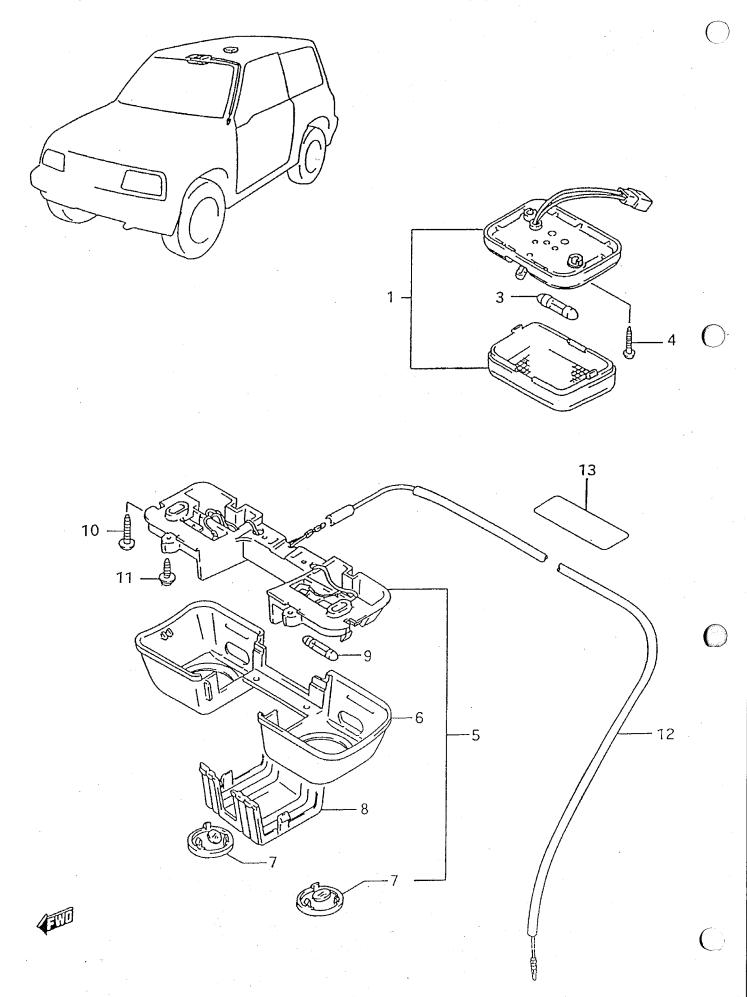

| | REF. | | | Q, | TY | | |
|---|------|-------------|------------------------|----|----|---------|--|
| | N.º | PART Nº | DESCRIPTION | C | ٧ | REMARKS | |
| | | | | | | | |
| | 1 | 36210A60A00 | LAMP ASSY, ROOM (GRAY) | 1 | 1 | | |
| | 2 | | | | | | |
| | 3 | 09471-12073 | .BULB (12V,5W) | 1 | 1 | | |
| | 4 | 03211-04163 | SCREW | 2 | 2 | | |
| | 5-1 | 36230-85C10 | LAMP ASSY, SPOT | 1 | - | | |
| | 5-2 | 36230-85C20 | LAMP ASSY, SPOT | - | 1 | | |
| | 6 | 36235-60A10 | .HOUSING | 1 | 1 | • | |
| | 7 | 36232-60A10 | .LENS | 2 | 2 | | |
| | 8 | 36242-60A10 | .COVER | 1 | 1 | | |
| | 9 | 09471-12073 | .BULB (12V,5W) | 2 | 2 | | |
| | 10 | 03141-05203 | SCREW | 2 | 2 | | |
| i | 11 | 03541-04103 | SCREW | 2 | 2 | | |
| | 12 | 36820-61A10 | WIRE, SPOT LAMP | 1 | 1 | | |
| | 13 | 36930-86000 | COVER. WIRE | 3 | - | | |

FIG. 80


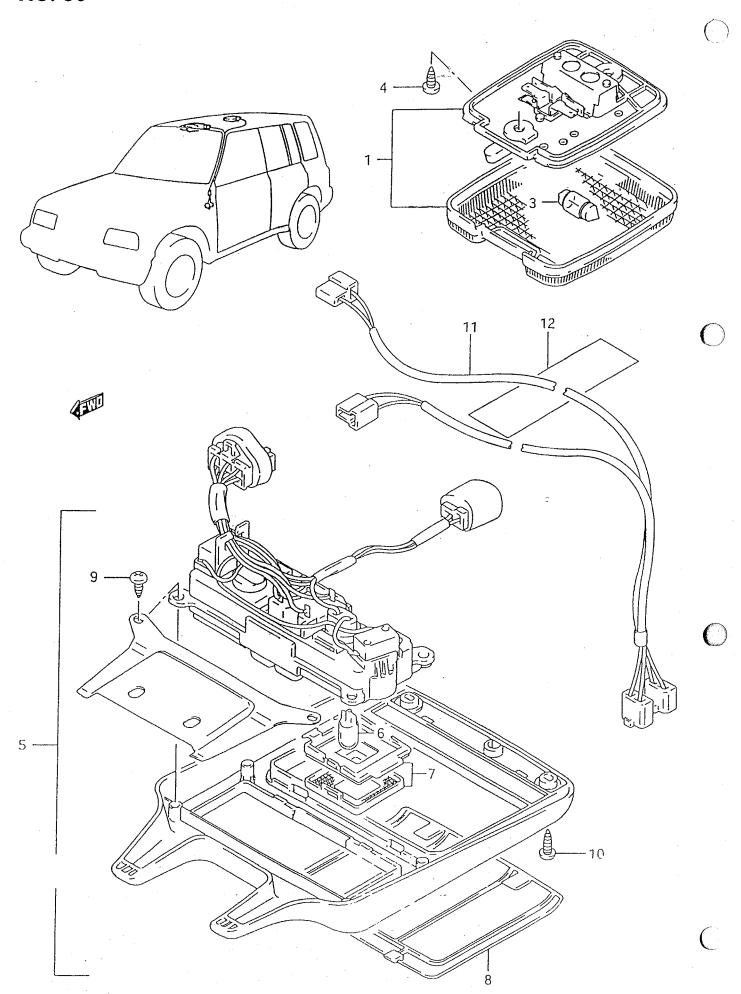


FIG. 080 (1-I-15) ROOM LAMP (5DR:SUN ROOF)


| REF. | | | Q, | .TY | | |
|------|------------------|------------------------------|----|-----|---------|--|
| N.º | PART Nº | DESCRIPTION | C | | REMARKS | |
| 1 | 2/210 5/000 5511 | LAMB ACCV DOOM CODAVI | | | | |
| 1 | 36210-56B00-5EH | LAMP ASSY, ROOM (GRAY) | | ı | | |
| 2 | 00 (71 10101 | DI II D. (10) (10) (4) | • | 1. | | |
| 3 | 09471-12181 | .BULB (12V,10W) | | ı | | |
| 4 | 03211-05163 | SCREW | | 2 | | |
| 5 | 37880-56B01-5EH | SWITCH ASSY, SUN ROOF & SPOT | | 1 | | |
| | . (| LAMP (GRAY) | | | | |
| 6 | 09471-12081 | .BULB (12V,5W) | , | 2 | | |
| 7 | 37884-56B00 | LENS ASSY | | 2 | | |
| 8 - | 37881-56B00-5EH | .COVER, SPOT LAMP (GRAY) | | 1 | | |
| 9 | 03511-04103 | .SCREW | | 4 | | |
| 10 | 03141-05203 | SCREW | | 3 | | |
| 11 | 36820-70E00 | WIRE, ROOM LAMP | | 1 | | |
| 12 | 36930-85C00 | COVER | | 3 | | |

FIG. 81

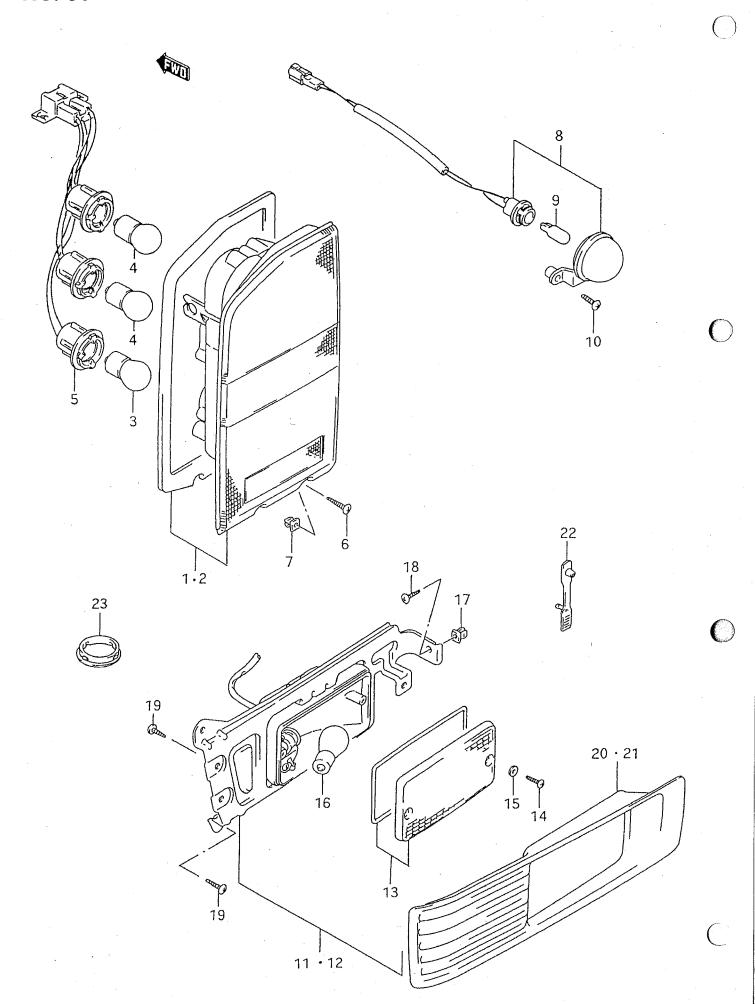


| REF. | | | Q, | TY | |
|-------------|-------------|--------------------------------|----|----|-------------|
| N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS |
| | | | | | |
| 1 | 35650-85C00 | LAMP UNIT, REAR COMBINATION RH | 1 | 1 | |
| 2 | 35670-85C00 | LAMP UNIT, REAR COMBINATION LH | 1 | 1 | |
| 3 | 09471-12083 | BULB (12V,21/5W) | 2 | 2 | |
| 4 | 09471-12045 | BULB (12V,21W) | 4 | 4 | |
| 5 | 35655-85C00 | SOCKET | 2 | 2 | |
| 6 | 03142-04253 | SCREW | 4 | 4 | |
| 7 | 09148-04021 | NUT | 4 | 4 | |
| 8 | 35910-85C00 | LAMP ASSY,LICENSE | 2 | 2 | |
| 9 | 09471-12081 | .BULB (12V,5W) | 2 | 2 | |
| 10 | 03511-04163 | SCREW | 4 | 4 | |
| 11 | 36570-85C10 | LAMP ASSY, REAR FOG RH | 1 | 1 | |
| 12 | 36590-85C10 | LAMP ASSY, REAR FOG LH | 1 | 1 | |
| 13 | 36572-85C10 | .LENS | 2 | 2 | |
| 14 | 03212-04169 | .SCREW | 4 | 4 | |
| 15 | 35129-85C10 | .WASHER | 4 | 4 | • |
| 16 | 09471-12064 | .BULB (12V,21W) | 2 | 2 | |
| ·1 <i>7</i> | 36578-85C00 | NUT | 2 | 2 | |
| 18 | 03141-04123 | SCREW | 2 | 2 | |
| 19 | 73429-50G00 | SCREW | 12 | 12 | \$ |
| 20 | 36571-85C10 | BEZEL, REAR FOG LAMP RH | 1 | 1 | |
| 21 | 36591-85C10 | BEZEL, REAR FOG LAMP LH | 1 | 1 | |
| 22 | 09407-05403 | CLAMP | 2 | 2 | 3DR |
| 23 | 36578-56B00 | PROTECTOR, LEAD WIRE | - | 2 | 5DR |

FIG. 82

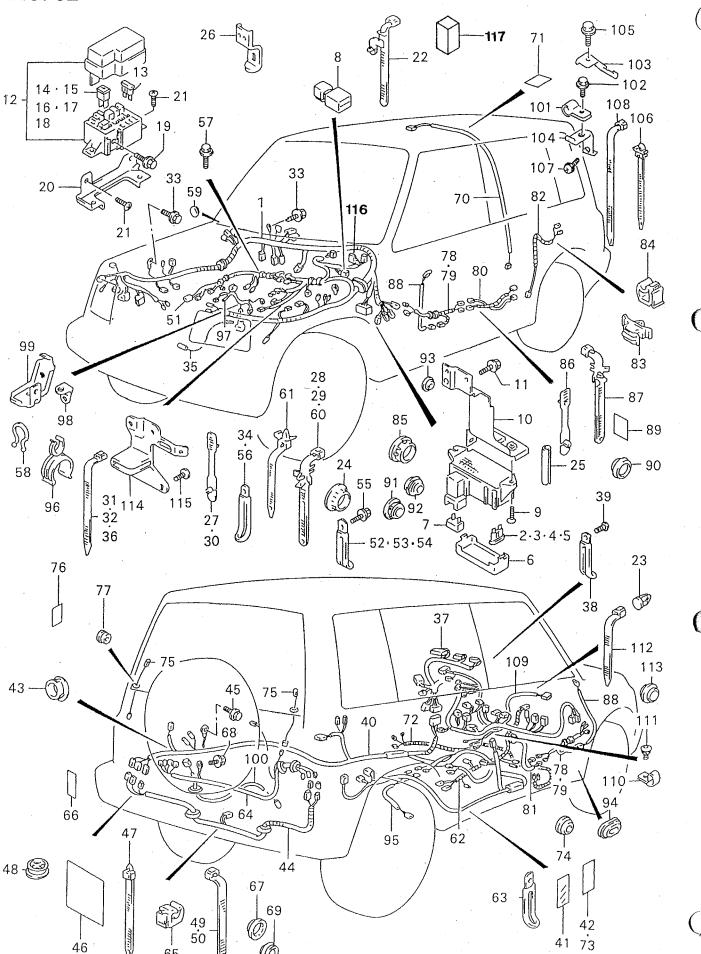


| REF. | | | Q, | TY | |
|-------------|-------------|---------------------------|--------|-----|----------------|
| N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS |
| | | Y | | | |
| 1-1 | 36601-71E11 | HARNESS, WIRING MAIN | 1 | 1 | MT: 4 VALVE |
| 1-2 | 36601-71E01 | HARNESS, WIRING MAIN | 1 | 1 | MT: W/ABS, |
| | | | | | OTHER COUNRIES |
| | • | | | | MARKETS |
| 1-3 | 36601-60A50 | HARNESS, WIRING MAIN | 1 | 1 | MT:E22, |
| | | | | | W/IMMOBILIZER |
| 1-4 | 36601-60A40 | HARNESS, WIRING MAIN | . 1 | 1 | MT:E22,W/ABS, |
| | | | | | IMMOBILIZER |
| 1 -5 | 36601-72E00 | HARNESS, WIRING MAIN | 1 | 1 | MT:E53 2 VALVE |
| 1-6 | 36601-71E31 | HARNESS, WIRING MAIN | 1 | 1 | AT |
| 1 <i>-7</i> | 36601-71E21 | HARNESS, WIRING MAIN | 1 | 1 | AT,W/ABS |
| 1 -8 | 36601-60A70 | HARNESS, WIRING MAIN | 1 | 1 | AT, |
| , | | | | | W/IMMOBILIZER |
| 1 -9 | 36601-60A60 | HARNESS, WIRING MAIN | 1 | . 1 | AT,W/ABS, |
| | | | | | IMMOBILIZER |
| 1-10 | 36601-86CA0 | HARNESS, WIRING MAIN | 1 | 1 | 1.9 DIESEL |
| 2 | 09481-10101 | .FUSE (10A) | 7 | 7 | E22 |
| 3 | 09481-15101 | .FUSE (1 <i>5</i> A) | AR | AR | |
| 4 | 09481-20101 | .FUSE (20A) | AR | AR | |
| 5 | 09481-25101 | .FUSE (25A) | . 1 | 1 | E53 |
| 6-1 | 36717-60A30 | .COVER, FUSE BOX | 1 | 1 | 2 VALVE |
| 6-2 | 36717-60A40 | .COVER, FUSE BOX | 1 - | 1 | 4 VALVE |
| 7 | 36795-82000 | .BRAKER, POWER WINDOW | 1 |] | |
| 8 | 33553-52E00 | .FILTER, NOISE SUPPRESSOR | 1 | 1 | |
| 9 | 02142-05123 | SCREW, FUSE BOX | 2 | 2 | 1 |
| 10 | 36735-60A00 | BRACKET, FUSE BOX | 1 | 1 | |
| | 01550-06103 | BOLT, BRACKET | 2 | 2 | |
| 12-1 | 36730-60A20 | BOX ASSY, MAIN FUSE | | 3 | 4.5.7.4.15.7P |
| 12-2 | 36730-60A20 | BOX ASSY, MAIN FUSE | 1 | 1 | 4 VALVE |
| 13 | 09481-15101 | FUSE (15A) | 1. | 1 | 4 VALVE |
| 14 | 09481-30201 | FUSE (30A) | . | 1 | 4 VALVE |
| 15 | 09481-40201 | FUSE (40A) | ! | 1 | 2 VALVE |
| 16 | 09481-50201 | FUSE (50A) | I | 1 | |

FIG. 82

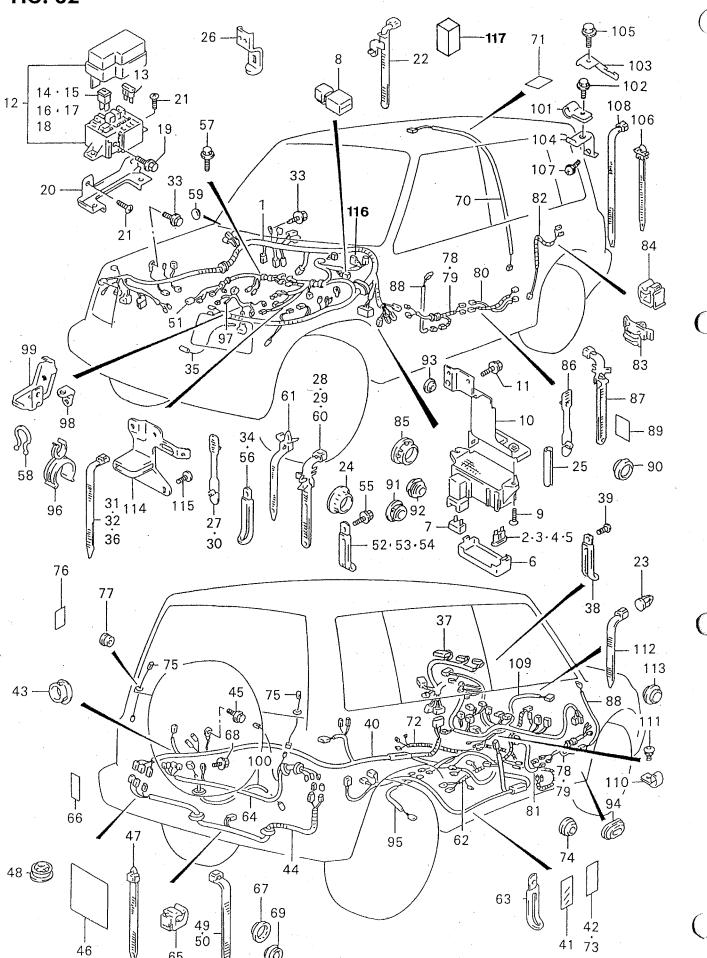


| REF. | | | Q, | TY | | |
|---------------|-------------|-----------------------------|-----|-----|------------|--|
| N.º | PART Nº | DESCRIPTION | C | ٧ | REMARKS | |
| | | | | | | |
| 1 <i>7-</i> 1 | 09481-60301 | FUSE (60A) | 1 | 1 | 2 VALVE | |
| 17-2 | 09481-60201 | FUSE (60A) | 1 | 1 | 4 VALVE | |
| 18 | 09481-80301 | FUSE (80A) | 1 | 1 | 4 VALVE | |
| 19 | 09138-06040 | BOLT, SLOW BLOW FUSE | 2 | 2 | | |
| 20-1 | 36737-60A00 | BRACKET, MAIN FUSE | 1 | 1 | 2 VALVE | |
| 20-2 | 36737-70E00 | BRACKET, MAIN FUSE | . 1 | - 1 | 4 VALVE | |
| 20-3 | 36737-86CA0 | BRACKET, MAIN FUSE | 1 | 1 | 1.9 DIESEL | |
| 21 | 02142-06103 | SCREW | 4 | 4 | | |
| 22 | 36990-56B00 | CAMP, HARNESS DASH PANEL | 5 | 5 | | |
| 23 | 09409-07320 | CAP, DASH PANEL HOLE | 1 | - 1 | | |
| 24 | 09308-25002 | PROTECTOR, SIDE LAMP WIRE | 2 | 2 | | |
| 25 | 75957-77E00 | PROTECTOR, FUSE BOX BRACKET | 1 | 1 | | |
| 26 | 36996-85C00 | PROTECTOR, MAIN HARNESS | 1 | 1 | e* | |
| 27 | 09407-05403 | CLAMP, WASHER HOSE | 1 | 1 | 10 miles | |
| 28-1 | 09407-12404 | CLAMP, HARNESS SIDE (L:140) | 12 | 12 | | |
| 28-2 | 09407-12404 | CLAMP, HARNESS COWL TOP | 8 | 8 | | |
| | | (L:140) | | | | |
| 28-3 | 09407-12404 | CLAMP, DOOR CONTROLLER WIRE | : 1 | 1 | | |
| | | (L:140) | | | | |
| 29 | 09407-12404 | CLAMP, FAN SWITCH WIRE | 1 | 1 | • | |
| 30 | 09407-05403 | CLAMP, HORN WIRE | 1 | 1 | | |
| 31 | 09407-18403 | CLAMP, HARNESS & CABLE | 1 | 1 | | |
| 32 | 09407-25401 | CLAMP, IGNITIO SWITCH WIRE | 1 | 1 | | |
| 33 | 09115-06001 | BOLT, HARNESS GROUND | 4 | 4 | | |
| 34 | 09404-08420 | CLAMP, HARNESS | 1 | 1 | | |
| 35 | 36955-60A00 | WIRE, POWER STEERING | 1 | 1 | W/POWER | |
| | | | | | STEERING | |
| 36 | 36990-85C10 | CLAMP, POWER STEERING WIRE | 2 | 2 | W/POWER | |
| | | | | | STEERING | |
| | | | | | | |

FIG. 82

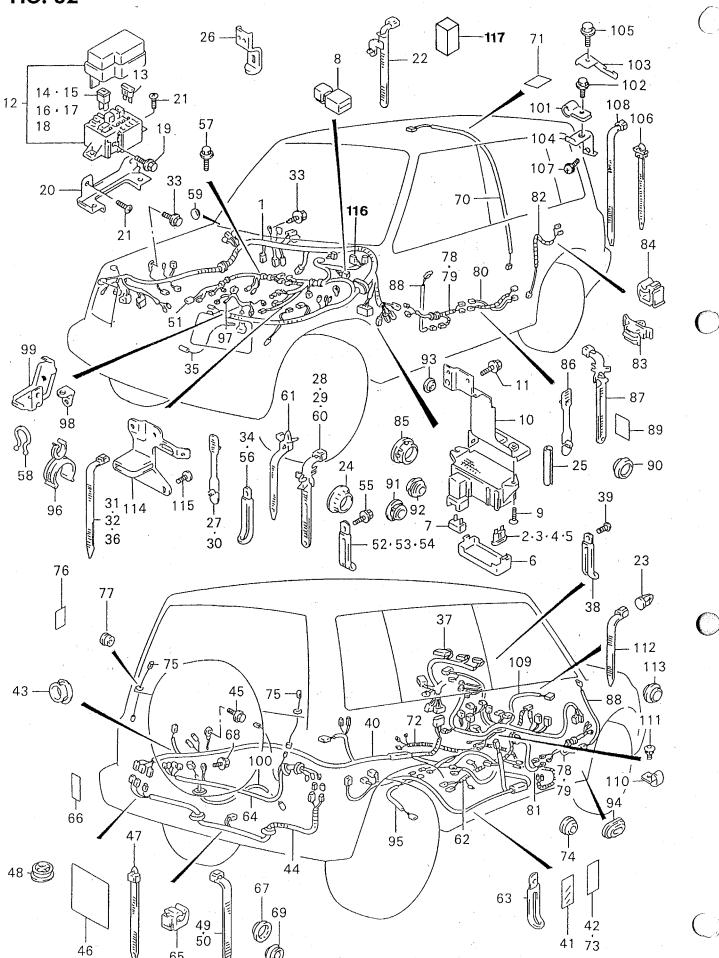


| REF. | | | Q, | TY | |
|--------|-------------|---------------------------|------------|------|--|
| N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS |
| | | | | | |
| 37-1 | 36620-77E81 | HARNESS, INSTRUMENT PANEL | 1 | 1 | OTHER COUNTRIES |
| | | | | | MARKETS |
| 37-2 | 36620-77EJ0 | HARNESS, INSTRUMENT PANEL | 1 | 1 | E22:W/AIR BAG |
| 37-3 | 36620-77EQ0 | HARNESS, INSTRUMENT PANEL | 1 | 1 | E22, |
| | | | | | W/IMMOBILIZER |
| 37-4 | 36620-77ES0 | HARNESS, INSTRUMENT PANEL | 1 | 1 | E22,W/AIR BAG, + |
| 37-5 | 36620-86CA0 | HARNESS, INSTRUMENT PANEL | 1 | 1 | 1.9 DIESEL |
| 38-1 | 09404-06427 | CLAMP, HARNESS (L:95) | . 9 | 9 | |
| 38 - 2 | 09404-06431 | CLAMP, HARNESS (L:80) | 4 | 4 | ************************************** |
| 39-1 | 03541-05123 | SCREW, CLAMP (L:12) | 15 | 15 | |
| 39-2 | 03541-05163 | SCREW, CLAMP (L:16) | 15 | 15 | W/AIR BAG, |
| | | | | | IMMOBILIZER |
| 40-1 | 36630-71E10 | HARNESS, WIRING FLOOR | 1 | 1 | 3DR |
| 40-2 | 36630-71E00 | HARNESS, WIRING FLOOR | 1 | -, 1 | 3DR:W/ABS |
| 40-3 | 36630-72E00 | HARNESS, WIRING FLOOR | • - | 1 | 5DR:JX |
| 40-4 | 36630-77E50 | HARNESS, WIRING FLOOR | - | 1 | 5DR:JLX |
| 40-5 | 36630-71E20 | HARNESS, WIRING FLOOR | - | 1 | 5DR:JLX,W/ABS |
| 41 | 76561-60A00 | COVER, FLOOR HARNESS | : <u>-</u> | 4 | 5DR |
| 42-1 | 36930-85C00 | COVER, FLOOR HARNESS | 3 | 3 | 3DR |
| 42-2 | 36930-85C00 | COVER, FLOOR HARNESS | <u>-</u> | 6 | 5DR |
| 43-1 | 09308-42001 | PROTECTOR, FLOOR HARNESS | . 1 | 1 | 3DR |
| 43-2 | 09308-42001 | PROTECTOR, FLOOR HARNESS | - | 2 | 5DR |
| 44-1 | 36640-57B31 | HARNESS, WIRING REAR LAMP | 1 | 1 | 3DR |
| 44-2 | 36640-77E20 | HARNESS, WIRING REAR LAMP | | 1 | 5DR |
| 45 | 09129-06002 | SCREW, HARNESS GROUND | 1 | . 1 | |
| 46 | 36930-70E00 | COVER, HARNESS | 1 | 1 | |
| | | | | | |

FIG. 82

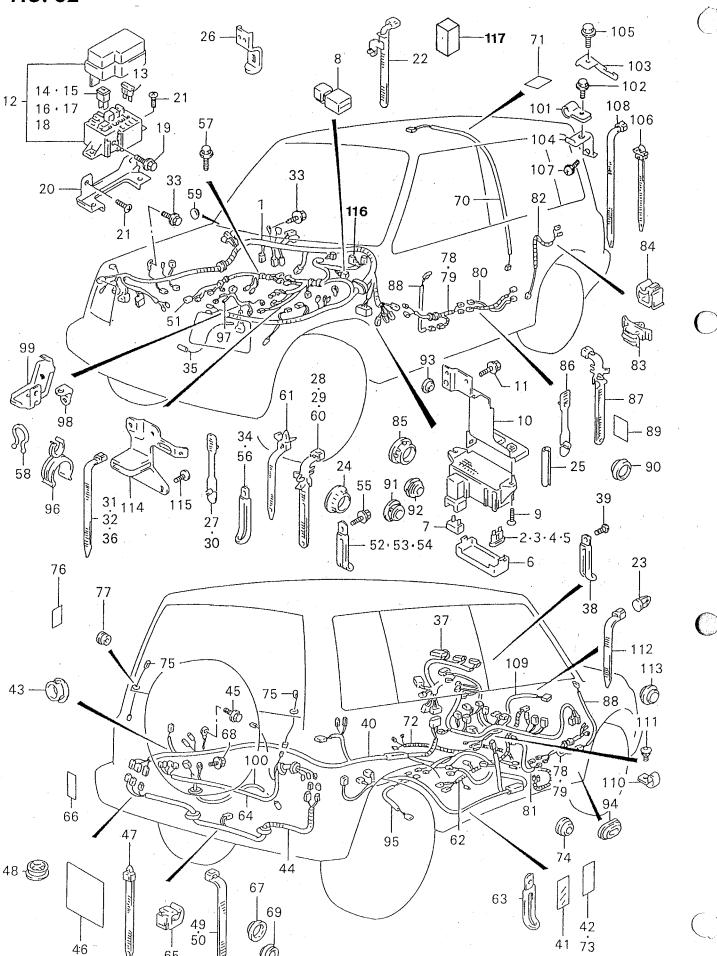


| | | | Q, | TY | |
|----------------------|--|---|---|---|--|
| PART Nº | DESCRIPTION | | С | ٧ | REMARKS |
| | | | | | |
| 09407-11402 | CLAMP, HARNESS (L:90) | | 3 | 3 | 3DR |
| 09407-11402 | CLAMP, HARNESS (L:90) | | , - | 2 | 5DR,N/ABS |
| 09250-30010 | CAP, ABS WIRE HOLE | | 1 | 1 | N/ABS |
| 36990-85C00 | CLAMP, REAR LAMP HARNESS | | 2 | 2 | 3DR,N/ABS |
| 09407-25401 | CLAMP, HARNESS | | 7 | 1 | |
| 36650-71E70 | HARNESS, WIRING ENGINE | | 1 | 1 | 2 VALVE |
| 36650-71E40 | HARNESS, WIRING ENGINE | | 1 | 1 | 4 VALVE:MT |
| 36650-71E50 | HARNESS, WIRING ENGINE | | · 1 | 1 | 4 VALVE:AT |
| 36650-86CA0 | HARNESS, WIRING ENGINE | | 1 | . 1 | 1.9 DIESEL |
| 09404-06431 | CLAMP, OIL PUMP WIRE (L:80) | | 3 | 3 | 4 VALVE |
| 09404-06433 | CLAMP, HARNESS (L:95) | | 1 | 1 | 4 VALVE |
| 36990-85C20 | CLAMP, HARNESS | | 2 | 2 | |
| 01550-06103 | BOLT, CLAMP | | 1 | 1 | |
| 36990-85C30 | CLAMP, HARNESS | | 3 | 3 | |
| 01 <i>55</i> 0-06123 | BOLT, HARNESS GROUND | | 2 | 2 | |
| 09408-00024 | CLAMP, STARTER WIRE | | . 1 | 1. | |
| 09409-07320 | CAP, DASH PANEL HOLE | | 2 | 2 | 2 VALVE |
| 09407-12404 | CLAMP, ENGINE HARNESS | | . 1 | 1 | |
| 09407-12405 | CLAMP, MISSION HARNESS | | : 1 | 1 | 4 VALVE |
| 36660-61A00 | HARNESS, WIRING MISSION | | 1~ | 1 | MT |
| 36660-70E40 | HARNESS, WIRING MISSION | | 1 | 1 | AT |
| 36990-85C20 | CLAMP, HARNESS | | 4 | 4 | MT |
| 36990-85C20 | CLAMP, HARNESS | • | 2 | 2 | AT |
| 36845-62A11 | WIRE, BACK DOOR | | | 1 | |
| 36667-60A00 | CLAMP, BACK DOOR WIRE | | - | 5 | |
| 36930-85C00 | COVER, BACK DOOR WIRE | | - | 1 | |
| 09308-28001 | PROTECTOR, BACK DOOR WIRE | | - | 2 | |
| | 09407-11402 09250-30010 36990-85C00 09407-25401 36650-71E70 36650-71E40 36650-86CA0 09404-06431 09404-06433 36990-85C20 01550-06103 36990-85C30 01550-06123 09408-00024 09409-07320 09407-12404 09407-12405 36660-61A00 36660-70E40 36990-85C20 36990-85C20 36845-62A11 36667-60A00 36930-85C00 | 09407-11402 CLAMP, HARNESS (L:90) 09407-11402 CLAMP, HARNESS (L:90) 09250-30010 CAP, ABS WIRE HOLE 36990-85C00 CLAMP, REAR LAMP HARNESS 09407-25401 CLAMP, HARNESS 36650-71E70 HARNESS, WIRING ENGINE 36650-71E40 HARNESS, WIRING ENGINE 36650-86CA0 HARNESS, WIRING ENGINE 09404-06431 CLAMP, OIL PUMP WIRE (L:80) 09404-06433 CLAMP, HARNESS (L:95) 36990-85C20 CLAMP, HARNESS 01550-06103 BOLT, CLAMP 36990-85C30 CLAMP, HARNESS 01550-06123 BOLT, CLAMP 09408-00024 CLAMP, STARTER WIRE 09409-07320 CAP, DASH PANEL HOLE 09407-12404 CLAMP, ENGINE HARNESS 36660-61A00 HARNESS, WIRING MISSION 36990-85C20 CLAMP, HARNESS 36660-61A00 HARNESS, WIRING MISSION 36990-85C20 CLAMP, HARNESS 36660-61A00 HARNESS, WIRING MISSION 36990-85C20 CLAMP, HARNESS 36990-85C20 CLAMP, HARNESS 36845-62A11 WIRE, BACK DOOR WIRE 36930-85C00 COVER, BACK DOOR WIRE | 09407-11402 CLAMP, HARNESS (L:90) 09407-11402 CLAMP, HARNESS (L:90) 09250-30010 CAP, ABS WIRE HOLE 36990-85C00 CLAMP, REAR LAMP HARNESS 09407-25401 CLAMP, HARNESS 36650-71E70 HARNESS, WIRING ENGINE 36650-71E40 HARNESS, WIRING ENGINE 36650-86CA0 HARNESS, WIRING ENGINE 09404-06431 CLAMP, OIL PUMP WIRE (L:80) 09404-06433 CLAMP, HARNESS 01550-06103 BOLT, CLAMP 36990-85C20 CLAMP, HARNESS 01550-06123 BOLT, CLAMP 36990-85C30 CLAMP, STARTER WIRE 09409-07320 CAMP, HARNESS GROUND 09408-00024 CLAMP, ENGINE HARNESS 09407-12404 CLAMP, ENGINE HARNESS 36660-61A00 HARNESS, WIRING MISSION 36990-85C20 CLAMP, HARNESS 36660-70E40 HARNESS, WIRING MISSION 36990-85C20 CLAMP, HARNESS 36845-62A11 WIRE, BACK DOOR WIRE 36930-85C00 COVER, BACK DOOR WIRE | PART N° DESCRIPTION C 09407-11402 CLAMP, HARNESS (L:90) 3 09407-11402 CLAMP, HARNESS (L:90) - 09250-30010 CAP, ABS WIRE HOLE 1 36990-85C00 CLAMP, REAR LAMP HARNESS 2 09407-25401 CLAMP, HARNESS 1 36650-71E70 HARNESS, WIRING ENGINE 1 36650-71E40 HARNESS, WIRING ENGINE 1 36650-71E50 HARNESS, WIRING ENGINE 1 36650-86CA0 HARNESS, WIRING ENGINE 1 09404-06431 CLAMP, OIL PUMP WIRE (L:80) 3 09404-06433 CLAMP, HARNESS (L:95) 1 36990-85C20 CLAMP, HARNESS 2 01550-06103 BOLT, CLAMP 1 36990-85C30 CLAMP, HARNESS 3 01550-06123 BOLT, HARNESS GROUND 2 09408-00024 CLAMP, STARTER WIRE 1 09409-07320 CAP, DASH PANEL HOLE 2 09407-12404 CLAMP, ENGINE HARNESS 1 36660-61A00 HA | 09407-11402 CLAMP, HARNESS (L:90) 3 3 09407-11402 CLAMP, HARNESS (L:90) - 2 09250-30010 CAP, ABS WIRE HOLE 1 1 36990-85C00 CLAMP, REAR LAMP HARNESS 2 2 09407-25401 CLAMP, HARNESS 1 1 36650-71E70 HARNESS, WIRING ENGINE 1 1 36650-71E40 HARNESS, WIRING ENGINE 1 1 36650-86CA0 HARNESS, WIRING ENGINE 1 1 36650-86CA0 HARNESS, WIRING ENGINE 1 1 09404-06431 CLAMP, OIL PUMP WIRE (L:80) 3 3 09404-06433 CLAMP, HARNESS (L:95) 1 1 36990-85C20 CLAMP, HARNESS 2 2 01550-06103 BOLT, CLAMP 1 1 36990-85C30 CLAMP, HARNESS GROUND 2 2 09407-07320 CAP, DASH PANEL HOLE 2 2 09407-12404 CLAMP, ENGINE HARNESS 1 1 09407-12405 CLAMP, MI |

FIG. 82

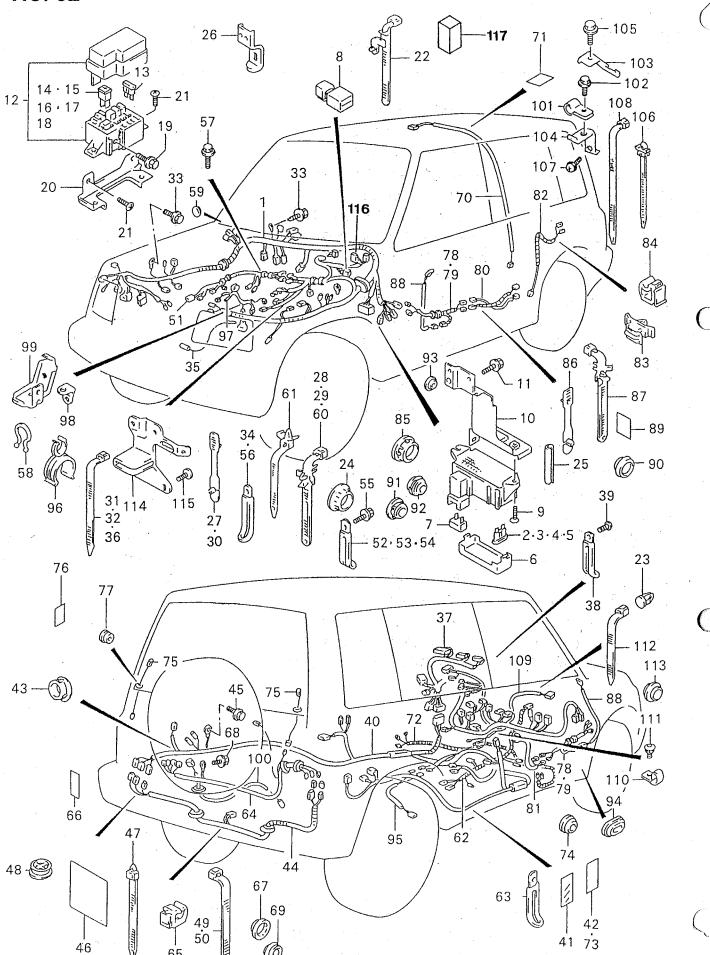

| REF. | | | Q, TY | | |
|------------|--------------|---------------------------|-------|-----|--------------------|
| N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS |
| | | | | | |
| 68 | 09139-05028 | SCREW, WIRE GROUND | 1 | 1 | |
| 69 | 09250-25007 | CAP, WIRE HOLE | 2 | - | |
| 70-1 | 36820-60A30 | WIRE, ROOM LAMP | . 1 | 1 | 3DR |
| 70-2 | 36820-56B00 | WIRE, ROOM LAMP | - | 1 | 5DR,N/SUN ROO |
| 71 | 36930-85C00 | COVER, ROOM LAMP WIRE | - | 3 | |
| 72-1 | 36823-70E80 | WIRE, BELT/PARKING SWITCH | 1 | 1 | 3DR |
| 72-2 | 36823-70E70 | WIRE, BELT/PARKING SWITCH | 1 | 1 | 3DR:W/ABS |
| 73 | 36930-85C00 | COVER, SWITCH WIRE | 5 | -5 | 3DR |
| 74 | 36995-60A10 | GROMMET, SIDE SILL | 2 | 2 | 3DR |
| 75 | 36890-70C00 | WIRE, REAR DEFOGGER | - | 2 | |
| 76 | 36930-85C00 | COVER, DEFOGGER WIRE | _ | 1 | |
| 77 | 09308-03005 | GROMMET, DEFOGGER WIRE | | 2 | · · |
| 78 | 36756-70E00 | WIRE, POWER WINDOW/MIRROR | 2 | 2 | W/POWER |
| | | | | | WINDOW:3DR |
| 79 | 36756-62A00 | WIRE, POWER WINDOW/MIRROR | | 2 | W/POWER |
| * | 1 | | | | WINDOW:5DR |
| 80-1 | 36757-70E00 | WIRE, SOLENOID & SWITCH | 1 | 1 | W/POWER |
| | | | | | WINDOW:3DR |
| 80-2 | 36757-62A00 | WIRE, SOLENOID & SWITCH | | 1 | W/POWER |
| | | | | • | WINDOW:5DR |
| 81-1 | 36757-70E20 | WIRE, SOLENOID | 1 | 1 | W/POWER |
| | | | • • | • | WINDOW:3DR |
| 81-2 | 36757-62A10 | WIRE, SOLENOID | _ | 1 | W/POWER |
| · - | | TTINE, COLLI (CID | | • | WINDOW:5DR |
| 82 | 36756-62A20 | WIRE, REAR DOOR | | 2 | |
| 0 2 | 00,00 02,420 | TTIME, REPAIR DOOR | | | WINDOW:5DR |
| 83 | 34935-56B00 | CLAMP, REAR DOOR WIRE | _ | 2 | W/POWER |
| | 04703 30000 | CEANII, KEAR DOOK WIKE | | | WINDOW:5DR |
| 84 | 36667-60A00 | CLAMP, REAR DOOR WIRE | _ | 2 | W/POWER |
| 04 | 30007 OUAUU | CLAIVII, REAR DOOR WIRE | | 2 | WINDOW:5DR |
| 85 | 09308-40001 | PROTECTOR, WIRE | 2 | 2 | W/POWER |
| 00 | 07300 40001 | TROTECTOR, WIRE | | | WINDOW |
| 86-1 | 09407-05403 | | 10 | | |
| 00-1 | 07407-03403 | CLAMP, POWER WINDOW WIRE | 10 | 10 | W/POWER |
| 86-2 | 09407-05403 | | - | 1.0 | WINDOW:3DR |
| 00-2 | 07407-03403 | CLAMP, POWER WINDOW WIRE | =. | 18 | W/POWER WINDOW:5DR |

FIG. 82

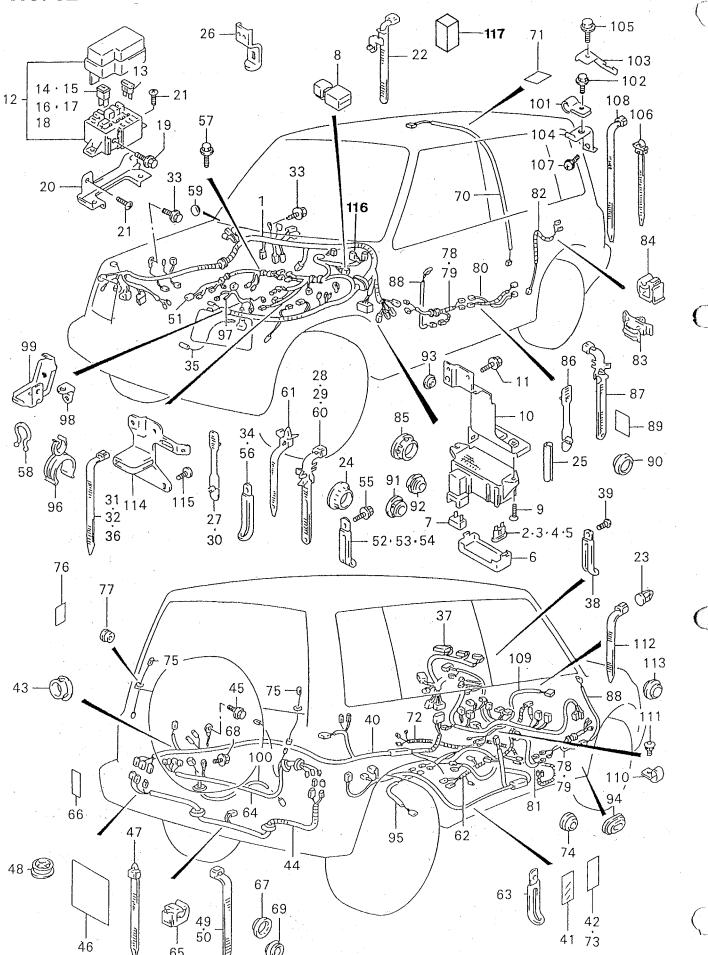

| | REF. | | | Q, TY | | | |
|----|----------|----------------------------|--|-----------|---|----------------------|--|
| | N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS | |
| | | | | | | | |
| | 87 | 09407-12404 | CLAMP, CONTROLLER WIRE | 1 | 1 | W/POWER | |
| | | | | | į | WINDOW | |
| | 88 | 36753-60A00 | WIRE, MIRROR MOTOR | 2 | 2 | W/REMO-CON | |
| | | | | | | MIRROR | |
| | 89 | 36757-82100 | FILM, WIRE HOLE DOOR | 2 | 2 | N/REMO-CON | |
| | | | | | | MIRROR | |
| | 90 | 09250-25008 | CAP, WIRE HOLE BODY | 2 | 2 | 3DR:N/REMOCON | |
| | | | | | | MIRROR | |
| | 91 | 09250-20014 | CAP, WIRE HOLE | - | 4 | 5DR:N/POWER | |
| | | 0.4757.5.4800 | | | | WINDOW | |
| - | 92 | 36757-56B00 | CAP, WIRE HOLE FRONT | - | 2 | 5DR:N/REMOCON | |
| | 00 | 2/757 5/010 | CAR MAINE CLAMB HOLE | | | MIRROR | |
| | 93 | 36757-56B10 | CAP, WIRE CLAMP HOLE | - | 2 | 5DR:N/POWER | |
| | 94 | 00250 20017 | CAD DEAD WASHED HOSE | - | | WINDOW | |
| | 94 95 | 09250-20017 36880-60A20 | CAP, REAR WASHER HOSE | 1 | - | | |
| | 95 96 | 09408-00055 | WIRE, SHIFT ILLUM | 1 | ן | AT | |
| | 90 97 | 36670-70E10 | CLAMP, MAIN HARNESS HARNESS, WIRING INJECTOR | 1 | 1 | 4 \ 71 \ A \ 72 | |
| | 98 | 36995-57B30 | BRACKET, INJECTOR HARNESS | .] | 1 | 4 VLAVE | |
| | 99 | 36995-57B20 | BRACKET, ENGINE HARNESS | 1 1 |] | 4 VALVE | |
| | 100-1 | 36875-70E10 | WIRE, ABS SENSOR | . 1 | 1 | 4 VALVE W/ABS:3DR | |
| | 100-2 | 36875-70E00 | WIRE, ABS SENSOR | ' !, _ | 1 | W/ABS:5DR | |
| | 101 | 36997-60A00 | CLAMP, ABS WIRE | 3 | 3 | W/ABS.JDR W/ABS | |
| | 102 | 01550-06123 | BOLT | 3 | 3 | W/ABS | |
| i. | 103 | 36996-56B00 | BRACKET, ABS WIRE CLAMP | 1 | 1 | W/ABS | |
| | 104 | 36997-60A10 | CLAMP, ABS WIRE | 1 | 1 | W/ABS | |
| | 105 | 01550-08123 | BOLT | 1 | 1 | W/ABS | |
| | 106 | 09407-14408 | CLAMP, ABS WIRE | 1 | 1 | W/ABS | |
| | | | | | | • | |

FIG. 82


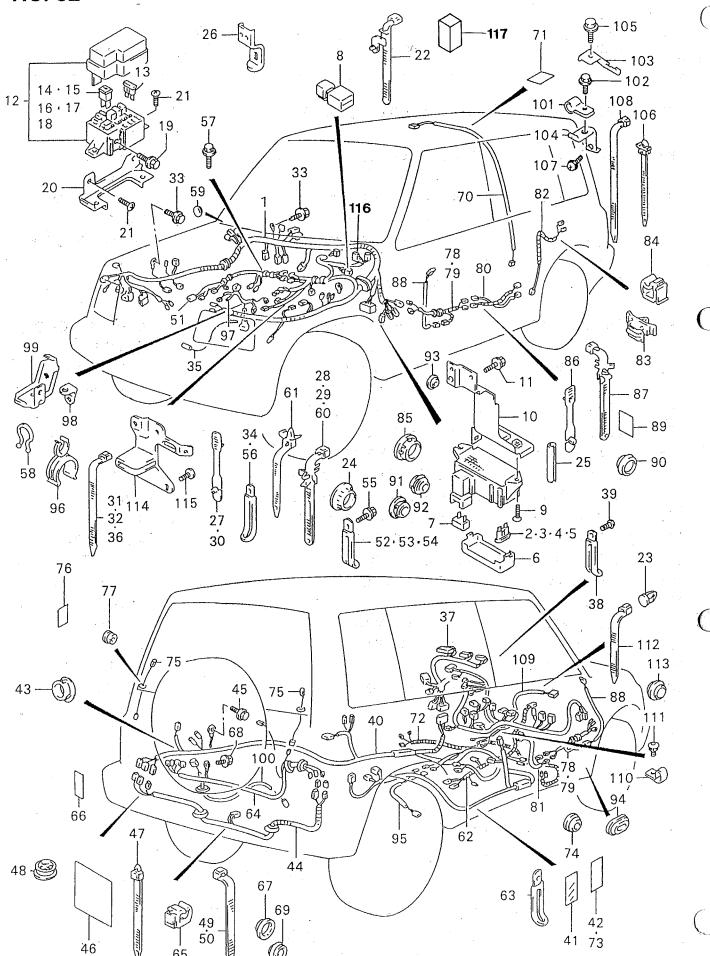



FIG. 082 (1-J-08) WIRING HARNESS (LHD)

| REF. | | | 4.5 | Q, | TY | |
|---------------|-------------|-------------------------|-----|-------|-----|------------|
| N.º | PART Nº | DESCRIPTION | | С | ٧ | REMARKS |
| | | | | ÷ | | : |
| 107 | 09132-06006 | SCREW, WIRE CLAMP | | 1. | 1 | W/A BS |
| 108 | 09407-18403 | CLAMP, ABS WIRE | | 1 . | . 1 | W/ABS |
| 109 | 36690-77E20 | HARNESS ASSY, AIR BAG | | 1 | 1 | W/AIR BAG |
| 110 | 09403-14412 | CLAMP, HARNESS | | 2 | 2 | W/AIR BAG |
| 111 | 09137-06020 | SCREW (6X20) | | 2 | 2 | W/AIR BAG |
| 112 | 09407-14403 | CLAMP, HARNESS | | 1 | 1 | W/AIR BAG |
| 113 | 09250-35005 | CAP, DASH PANEL HOLE | ÷ . | . 1 1 | - 1 | W/AIR BAG |
| 114 | 36614-70E00 | BRACKET, MAIN HARNESS | | 1 | 1 | |
| 115 | 02142-06103 | SCREW | | 2 | 2, | |
| 116 | 31850-86CB0 | RELAY CLOSE | | 2 | 2 | 1.9 DIESEL |
| 7 11 7 | 35334-86CA0 | PROTECTOR RELAY ELECTRO | | 2 | 2 | 1.9 DIESEL |


FIG. 83

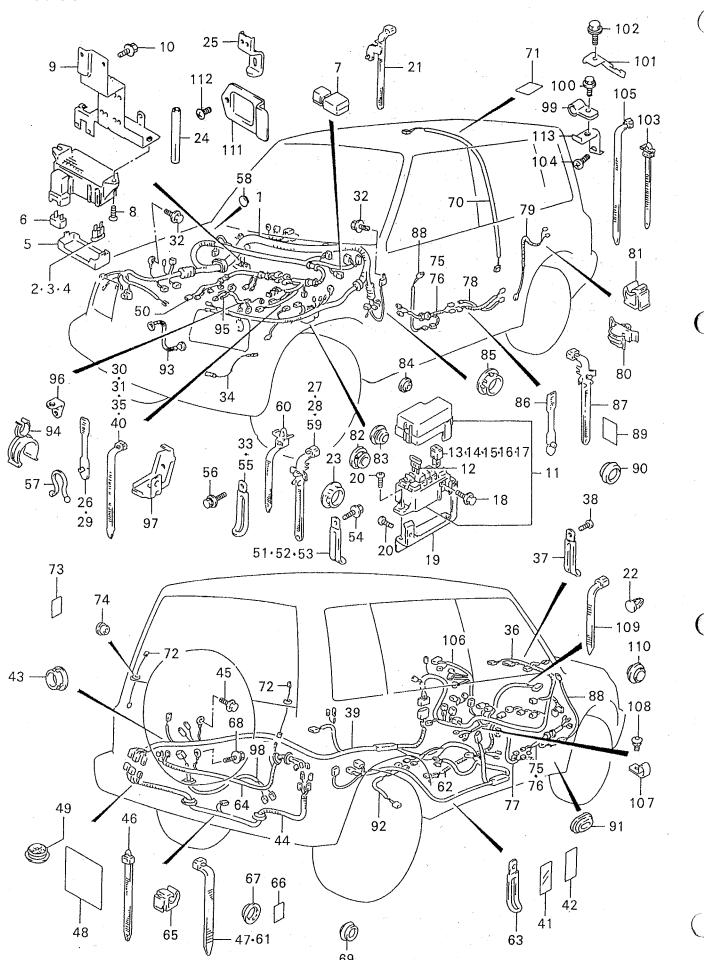


| REF. | | | , , Q, | TY | | |
|-------------|-------------|---------------------------|--------|----|------------------|--|
| N.º | PART Nº | DESCRIPTION | С | V | REMARKS | |
| | | | | | | |
| 1 -1 | 36601-71E40 | HARNESS, WIRING MAIN | 1 | 1 | MT:2 VALVE | |
| 1 -2 | 36601-61A00 | HARNESS, WIRING MAIN | 1 | - | MT:2 VALVE | |
| | | | | | W/IMMOBILIZER | |
| 1 -3 | 36601-70E60 | HARNESS, WIRING MAIN | 1 | 1 | MT:4 VALVE | |
| 1 -4 | 36601-70E50 | HARNESS, WIRING MAIN | 1 | 1 | MT:4VALVE,W/ABS | |
| 1-5 | 36601-60A10 | HARNESS, WIRING MAIN | 1 | 1 | MT:4 VALVE | |
| | | | | | W/IMMOBILIZER | |
| 1-6 | 36601-60A00 | HARNESS, WIRING MAIN | 1 | 1 | MT:4VALVE,W/ABS | |
| | | | | | W/IMMOBILIZER | |
| 1 <i>-7</i> | 36601-70E80 | HARNESS, WIRING MAIN | . 1 | 1 | AT | |
| 1 -8 | 36601-70E70 | HARNESS, WIRING MAIN | . 1 | 1 | AT,W/ABS | |
| 1-9 | 36601-60A30 | HARNESS, WIRING MAIN | 1 | 1 | AT,W/IMMOBILIZER | |
| 1-10 | 36601-60A20 | HARNESS, WIRING MAIN | - | 1 | AT,W/ABS | |
| | | | | | W/IMMOBILIZER | |
| 2 | 09481-15101 | .FUSE (1 <i>5</i> A) | AR | AR | | |
| 3 | 09481-20101 | .FUSE (20A) | 2 | 2 | | |
| 4 | 09481-25101 | .FUSE (25A) | 1 | 1 | ÷ | |
| 5-1 | 36717-60A30 | .COVER, FUSE BOX | 1 | 1 | 2 VALVE | |
| 5-2 | 36717-77E00 | .COVER, FUSE BOX | 1 | 1 | 4 VALVE | |
| 6 | 36795-82000 | .BRAKER, POWER WINDOW | 1 | 1 | | |
| 7 | 33553-52E00 | .FILTER, NOISE SUPPRESSOR | 1 | 1 | | |
| 8 | 02142-05123 | SCREW, FUSE BOX | 2 | 2 | | |
| 9-1 | 36735-77E03 | BRACKET, FUSE BOX | 1 | 1 | 2 VALVE | |
| 9-2 | 36735-77E13 | BRACKET, FUSE BOX | 1 | 1 | 4 VALVE | |
| 10 | 01550-06103 | BOLT, BRACKET | 2 | 2 | | |

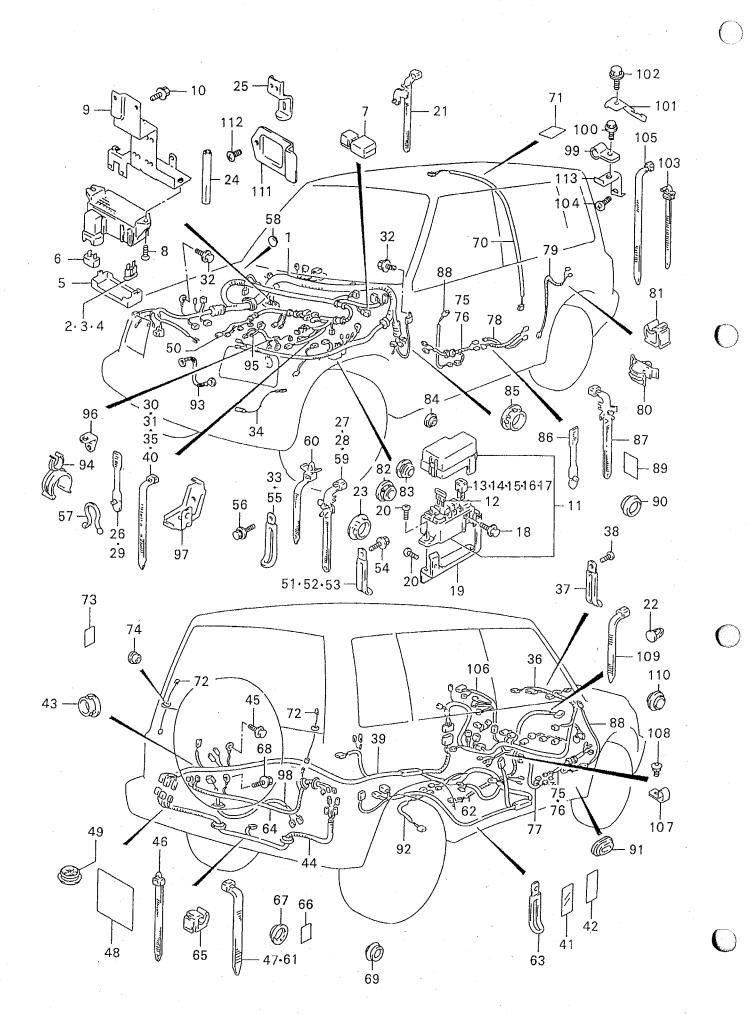


| REF. | | | Q, | TY | |
|------|----------------|-------------------------------------|-----|----|-------------|
| N.º | PART Nº | DESCRIPTION | C | ٧ | REMARKS |
| | · | · | | | |
| 11-1 | 36730-60A20 | BOX ASSY, MAIN FUSE | 1 | 1 | 3DR:2 VALVE |
| 11-2 | 36740-77E10 | BOX ASSY, MAIN FUSE | 1 | 1 | 3DR:4 VALVE |
| 11-3 | 36740-77E00 | BOX ASSY, MAIN FUEL1 | 1 | 1 | 5DR |
| 12 | 09481-15101 | FUSE (15A) | 3 | 3 | 4 VALVE |
| 13 | 09481-30201 | FUSE (30A) | 1 | 1 | |
| 14 | 09481-40201 | FUSE (40A) | 1 | 1 | 2 VALVE |
| 15 | 09481-50201 | FUSE (50A) | 1 | 1 | |
| 16-1 | 09481-60301 | FUSE (60A) | 1 | 1 | 2 VALVE |
| 16-2 | 09481-60201 | FUSE (60A) | 1 | 1 | 4 VALVE |
| 17 | 09481-80301 | FUSE (80A) | 1 | 1. | 4 VALVE |
| 18 | 09138-06040 | BOLT, SLOW BLOW FUSE | 2 | 2 | |
| 19-1 | 36737-60A00 | BRACKET, MAIN FUSE | 1 | 1 | 2 VALVE |
| 19-2 | 36737-70E10 | BRACKET, MAIN FUSE | 1 _ | 1 | 4 VALVE |
| 20 | 02142-06103 | SCREW | 4 | 4 | |
| 21 | 36990-56B00 | CLAMP, HARNESS DASH PANEL | 5 | 5 | |
| 22 | 09409-07320 | CAP, DASH PANEL HOLE | 1 | 1 | 4 VALVE |
| 23 | 09308-25002 | PROTECTOR, SIDE LAMP WIRE | 2 | 2 | |
| 24 | 75957-77E00 | PROTECTOR, FUSE BOX BRACKET | 1 | 1 | |
| 25 | 36996-70E00 | PROTECTOR, MAIN HARNESS | 1 | 1 | , |
| 26 | 09407-05403 | CLAMP, WASHER HOSE | 1 | 1 | |
| 27-1 | 09407-12404 | CLAMP, HARNESS SIDE (L:140) | 12 | 12 | |
| 27-2 | 09407-12404 | CLAMP, HARNESS COWL TOP | 8 | 8 | |
| 07.0 | 00.407.10.40.4 | (L:140) | 1 | , | |
| 2/-3 | 09407-12404 | CLAMP, DOOR CONTROLLER WIRE (L:140) | 1 | 1 | |
| 28 | 09407-12404 | CLAMP, FAN SWITCH WIRE | 1 | 1 | , |
| 29 | 09407-05403 | CLAMP, HORN WIRE | 1 | 1 | 1 7 |

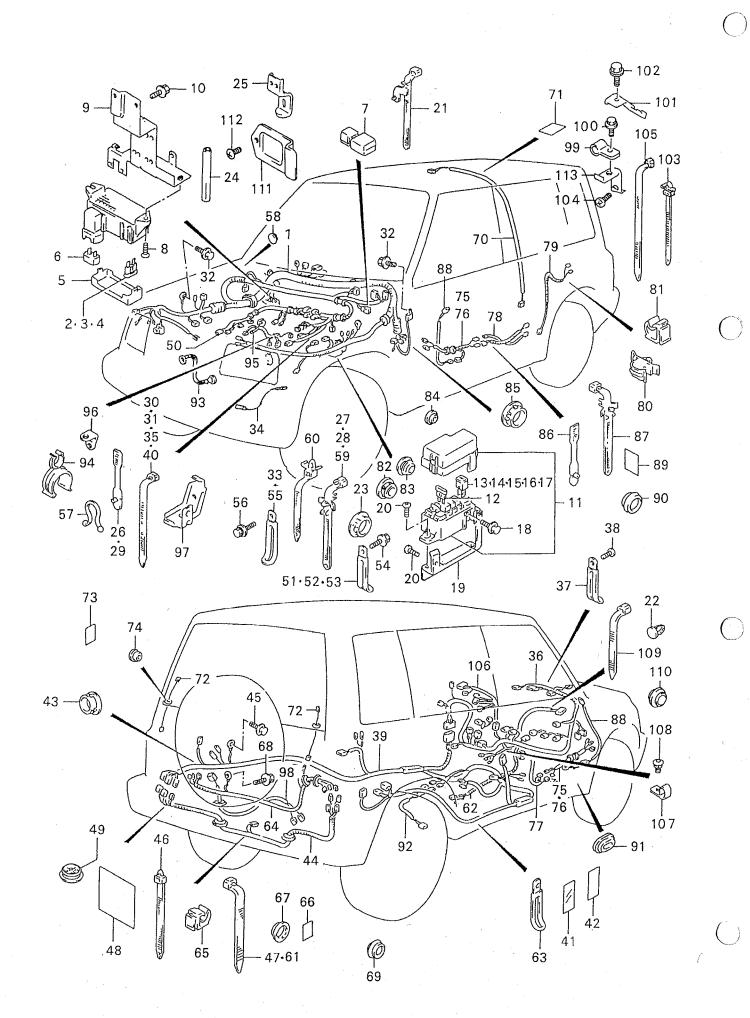


| REF. | | | Q, TY | | | |
|------|-------------|-----------------------------|-------|----|---------------|--|
| N.º | PART №° | DESCRIPTION | С | V | REMARKS | |
| | | | _ | | | |
| 30 | 09407-18403 | CLAMP, HARNESS & CABLE | 1 | 1 | 4 VALVE | |
| 31 | 09407-25401 | CLAMP, IGNITION SWITCH WIRE | 1 | 1 | 4 VALVE | |
| 32 | 09115-06001 | BOLT, HARNESS GROUND | 4 | 4 | | |
| 33-1 | 09404-06433 | CLAMP, HARNESS (L:95) | 1 | 1 | 2 VALVE | |
| 33-2 | 09404-08420 | CLAMP, HARNESS (L: 137) | 1 | 1 | 4 VALVE | |
| 34 | 36955-60A00 | WIRE, POWER STEERING | 1 | 1 | W/POWER | |
| | | | | | STEERING | |
| 35 | 36990-85C10 | CLAMP, POWER STEERING WIRE | 2 | 2 | W/POWER | |
| | | | | | STEERING | |
| 36-1 | 36620-77E52 | HARNESS, INSTRUMENT PANEL | 1 | 1 | | |
| 36-2 | 36620-77EF0 | HARNESS, INSTRUMENT PANEL | 1 | 1 | W/AIR BAG | |
| 36-3 | 36620-77EP0 | HARNESS, INSTRUMENT PANEL | 1 | 1 | W/IMMOBILIZER | |
| 36-4 | 36620-77ER0 | HARNESS, INSTRUMENT PANEL | 1 | 1 | W/AIR BAG | |
| | | | | | W/IMMOBILIZER | |
| 37-1 | 09404-06427 | CLAMP, HARNESS (L:95) | 9 | 9 | | |
| 37-2 | 09404-06431 | CLAMP, HARNESS (L:80) | 4 | 4 | | |
| 38-1 | 03541-05123 | SCREW, CLAMP (L:12) | 15 | 15 | | |
| 38-2 | 03541-05163 | SCREW, CLAMP (L:16) | 15 | 15 | W/AIR BAG | |
| 39-1 | 36630-71E70 | HARNESS, WIRING FLOOR | 1 | 1 | 3DR | |
| 39-2 | 36630-71E60 | HARNESS, WIRING FLOOR | - | 1 | 3DR:W/ABS | |
| 39-3 | 36630-72E10 | HARNESS, WIRING FLOOR | - | 1 | 5DR:JX | |
| 39-4 | 36630-77E70 | HARNESS, WIRING FLOOR | - | 1 | 5DR:JLX | |
| 39-5 | 36630-71E80 | HARNESS, WIRING FLOOR | - | 1 | 5DR:JLX,W/ABS | |
| 41 | 76561-60A00 | COVER, FLOOR HARNESS | - | 4 | 5DR | |
| 42-1 | 36930-85C00 | COVER, FLOOR HARNESS | 3 | 3 | 3DR | |
| 42-2 | 36930-85C00 | COVER, FLOOR HARNESS | - | 6 | 5DR | |
| | | • | | | | |

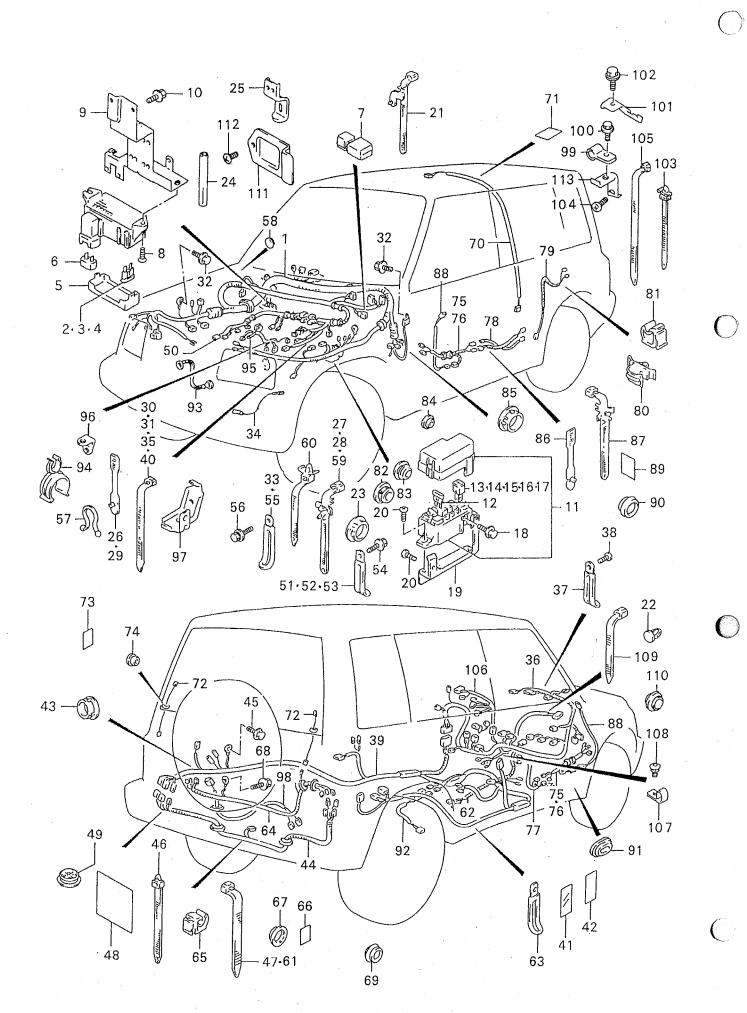


| REF. | | | Q, TY | | |
|--------------|-------------|--------------------------------|-------|-----|------------|
| N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS |
| | | | | | |
| 43-1 | 09308-42001 | PROTECTOR, FLOOR HARNESS | 1 | 1 | 3DR |
| 43-2 | 09308-42001 | PROTECTOR, FLOOR HARNESS | - | 2 | 5DR |
| 44-1 | 36640-57B31 | HARNESS, WIRING REAR LAMP | 1 | 1 | 3DR |
| 44-2 | 36640-77E20 | HARNESS, WIRING REAR LAMP | - | . 1 | 5DR |
| 45 | 09129-06002 | SCREW, HARNESS GROUND | 1 | 1 | |
| 46-1 | 09407-11402 | CLAMP, HARNESS | 3 | 3 | 3DR |
| 46-2 | 09407-11402 | CLAMP, HARNESS | - | 2 | 5DR,N/ABS |
| 47 | 09407-25401 | CLAMP, HARNESS | 1 | 1 | |
| 48 | 36930-70E00 | COVER, HARNESS | 1 | 1 | |
| 49 | 09250-30010 | CAP, ABS WIRE HOLE | 1 | 1 | N/ABS |
| 50-1 | 36650-71E60 | HARNESS, WIRING ENGINE | 1 | 1 | 2 VALVE |
| 50-2 | 36650-70E80 | HARNESS, WIRING ENGINE | 1 | 1 | 4 VALVE:MT |
| 50-3 | 36650-70E90 | HARNESS, WIRING ENGINE | 1 | 1 | 4 VALVE:AT |
| 51 -1 | 09404-06431 | CLAMP, ENGINE HARNESS (L:80) | 1 | 1 | 4 VALVE |
| 51-2 | 09404-06431 | CLAMP, OIL PUMP WIRE (L:80) | 3 | 3 | 4 VALVE |
| 52 | 09404-06433 | CLAMP, INJECTOR HARNESS (L:95) | 1 | 1 | |
| 53 | 36990-85C20 | CLAMP, HARNESS | 2 | 2 | |
| 54 | 01550-06103 | BOLT, CLAMP | 1 | 1 | |
| 55 | 36990-85C30 | CLAMP, HARNESS | 3 | 3 | |
| 56 | 01550-06123 | BOLT, HARNESS GROUND | 2 | 2 | |
| 57 | 09408-00024 | CLAMP, STARTER WIRE | 1 | 1 | |
| <i>5</i> 8-1 | 09409-07320 | CAP, DASH PANEL HOLE | 2 | 2 | 2 VALVE |
| 58-2 | 09409-07320 | CAP, DASH PANEL HOLE | 1 | 1 | 4 VALVE |
| 59 | 09407-12404 | CLAMP, ENGINE HARNESS | 1 | 1 | |
| 60 | 09407-12405 | CLAMP, MISSION HARNESS | 1 | 1 | 4 VALVE |
| 61 | 36990-85C00 | CLAMP, REAR LAMP HARNESS | 2 | 2 | 3DR,N/ABS |

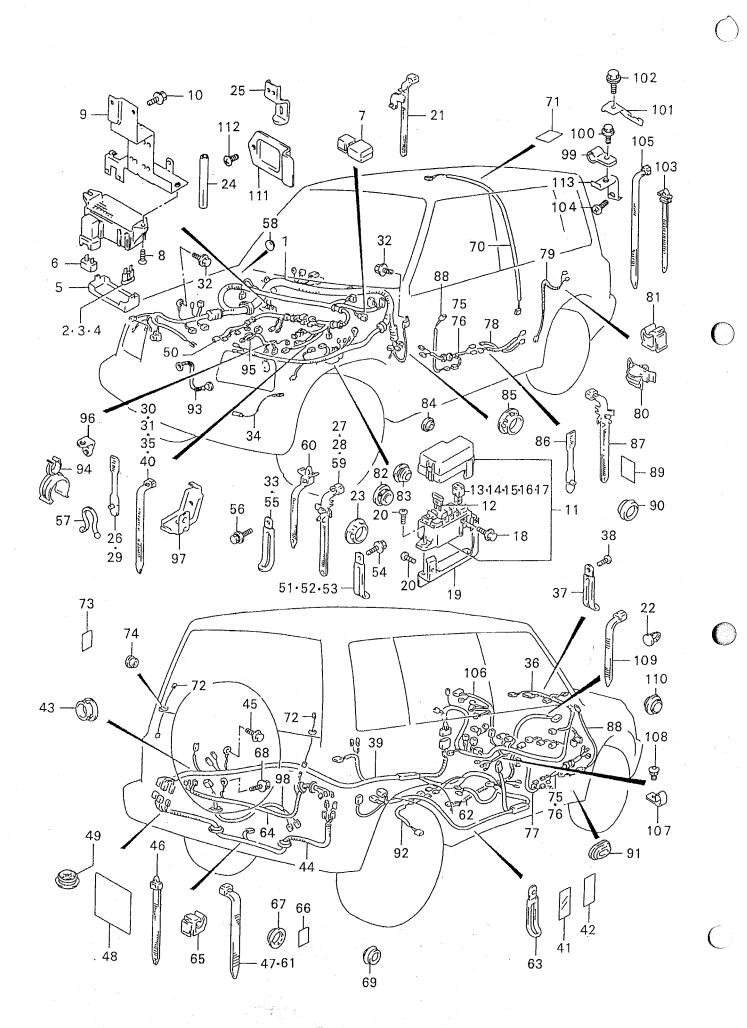


| | | | Q, | TY | |
|---------------|-------------|---------------------------|----|----|----------------|
| REF. N.º | PART Nº | DESCRIPTION | C | V | REMARKS |
| 62-1 | 36660-61A00 | HARNESS, WIRING MISSION | 1 | 1 | MT |
| 62-2 | 36660-70E40 | HARNESS, WIRING MISSION | 1 | 1 | AT |
| 63-1 | 36990-85C30 | CLAMP, HARNESS | 4 | 4 | MT |
| 63-2 | 36990-85C30 | CLAMP, HARNESS | 2 | 2 | AT |
| 64 | 36845-62A11 | WIRE, BACK DOOR | - | 1 | |
| 65 | 36667-60A00 | CLAMP, BACK DOOR WIRE | _ | 5 | |
| 66 | 36930-85C00 | COVER, BACK DOOR WIRE | _ | 1 | |
| 67 | 09308-28001 | PROTECTOR, BACK DOOR WIRE | _ | 2 | ٠. |
| 68 | 09139-05028 | SCREW, WIRE GROUND | 1 | 1 | |
| 69 | 09250-25007 | CAP, WIRE HOLE | 2 | _ | |
| 70-1 | 36820-60A30 | WIRE, ROOM LAMP | 1 | 1 | 3DR |
| 70-2 | 36820-56B00 | WIRE, ROOM LAMP | _ | 1 | 5DR,N/SUN ROOF |
| 71 | 36930-85C00 | COVER, ROOM LAMP WIRE | _ | 3 | , . |
| 72 | 36890-70C00 | WIRE, REAR DEFOGGER | - | 2 | |
| 73 | 36930-85C00 | COVER, DEFOGGER WIRE | _ | 1 | |
| 74 | 09308-03005 | GROMMET, DEFOGGER WIRE | - | 2 | • |
| <i>7</i> 5 | 36756-70E00 | WIRE, POWER WINDOW/MIRROR | 2 | 2 | W/POWER |
| | | | | | WINDOW:3DR |
| 76 | 36756-62A00 | WIRE, POWER WINDOW/MIRROR | - | 2 | W/POWER |
| | | | | | WINDOW:5DR |
| <i>77</i> - 1 | 36757-70E00 | WIRE, SOLENOID & SWITCH | 1 | 1 | W/POWER |
| | - | | | | WINDOW:3DR |
| 77-2 | 36757-62A00 | WIRE, SOLENOID & SWITCH | - | 1 | W/POWER |
| | | | | | WINDOW:5DR |
| 78-1 | 36757-70E20 | WIRE, SOLENOID | 1 | 1 | W/POWER |
| | | | | | WINDOW:3DR |
| 78-2 | 36757-62A10 | WIRE, SOLENOID | - | 1 | W/POWER |
| | | | | | WINDOW:5DR |
| 79 | 36756-62A20 | WIRE, REAR DOOR | - | 2 | W/POWER |
| | | | | | WINDOW:5DR |
| 80 | 34935-56B00 | CLAMP, REAR DOOR WIRE | - | 2 | W/POWER |
| | | | | | WINDOW:5DR |
| 81 | 36667-60A00 | CLAMP, REAR DOOR WIRE | | 2 | W/POWER |
| | | | | | WINDOW:5DR |
| | | | | | |

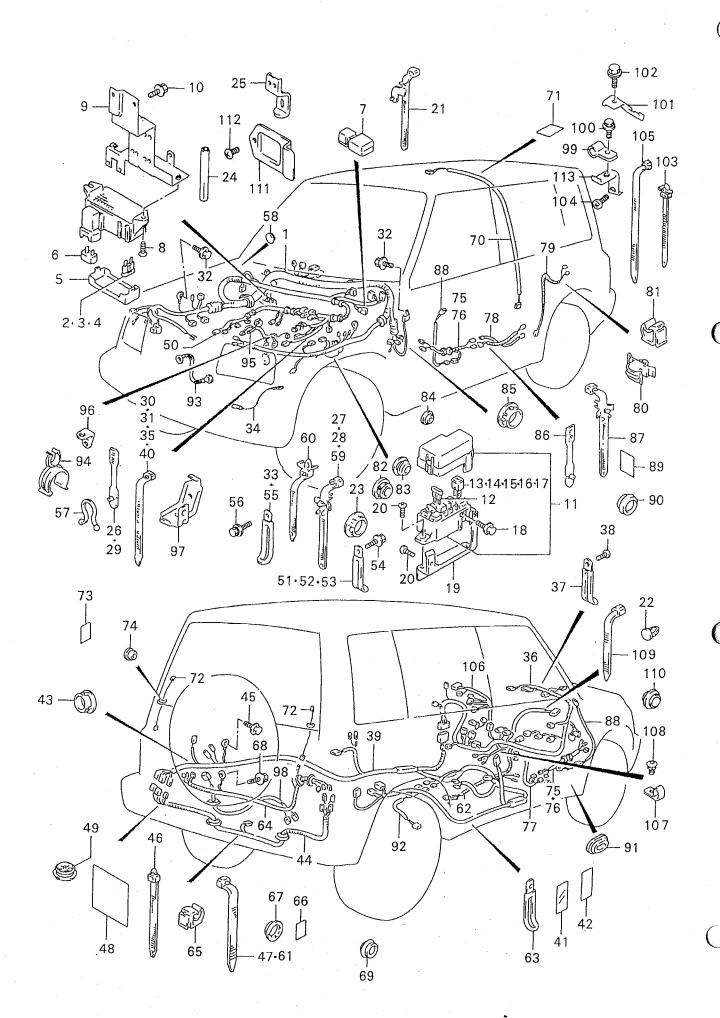

| | REF. | | | Q, | TY | | |
|----------|------|-------------|---------------------------|----------|----|----------------------------|--|
| | N.º | PART Nº | DESCRIPTION | С | V | REMARKS | |
| | 82 | 09250-20014 | CAP, WIRE HOLE | - | 4 | 5DR:N/POWER WINDOW | |
| | 83 | 36757-56B00 | CAP, WIRE HOLE FRONT | - | 2 | 5DR:N/REMOCON MIRROR | |
| | 84 | 36757-56B10 | CAP, WIRE CLAMP HOLE | - | 2 | 5DR:N/POWER WINDOW | |
| | 85 | 09308-40001 | PROTECTOR, WIRE | 2 | 2 | W/POWER WINDOW | |
| | 86-1 | 09407-05403 | CLAMP, POWER WINDOW WIRE | 10 | 10 | W/POWER WINDOW:3DR | |
| \ j | 86-2 | 09407-05403 | CLAMP, POWER WINDOW WIRE | - | 18 | W/POWER WINDOW:5DR | |
| | 87 | 09407-12404 | CLAMP, CONTROLLER WIRE | 1 | 1 | W/POWER WINDOW | |
| | 88 | 36753-60A00 | WIRE, MIRROR MOTOR | 2 | 2 | W/REMO-CON MIRROR | |
| | 89 | 36757-82100 | FILM, WIRE HOLE DOOR | 2 | 2 | n/remo-con Mirror | |
| | 90 | 09250-25008 | CAP, WIRE HOLE BODY | 2 | 2 | 3DR: N/REMO- CON MIRROR | |
| | 91 | 09250-20017 | CAP, REAR WASHER HOSE | 1 | - | | |
| | 92 | 36880-60A20 | WIRE, SHIFT ILLUM | 1 | 1 | AT | |
| | 93 | 39312-82012 | WIRE, HORN GROUND | 1 | 1 | | |
| | 94 | 09408-00055 | CLAMP, MAIN HARNESS | 1 | 1 | | |
| | 95 | 36670-70E10 | HARNESS, WIRING INJECTOR | 1 | 1 | 4 VALVE | |
| | 96 | 36995-57B30 | BRACKET, INJETCOT HARNESS | 1 | 1 | 4 VALVE | |
| | 97 | 36995-57B20 | BRACKET, ENGINE HARNESS | 1 | 1 | 4 VALVE | |
| | 98-1 | 36875-70E10 | WIRE, ABS SENSOR | 1 | 1. | W/ABS:3DR | |
| | 98-2 | 36875-70E00 | WIRE, ABS SENSOR | - | 1 | W/ABS:5DR | |
| | 99 | 36997-60A00 | CLAMP, ABS WIRE | 3 | 3 | W/ABS | |
| | 100 | 01550-06123 | BOLT | 3 | 3 | W/ABS | |

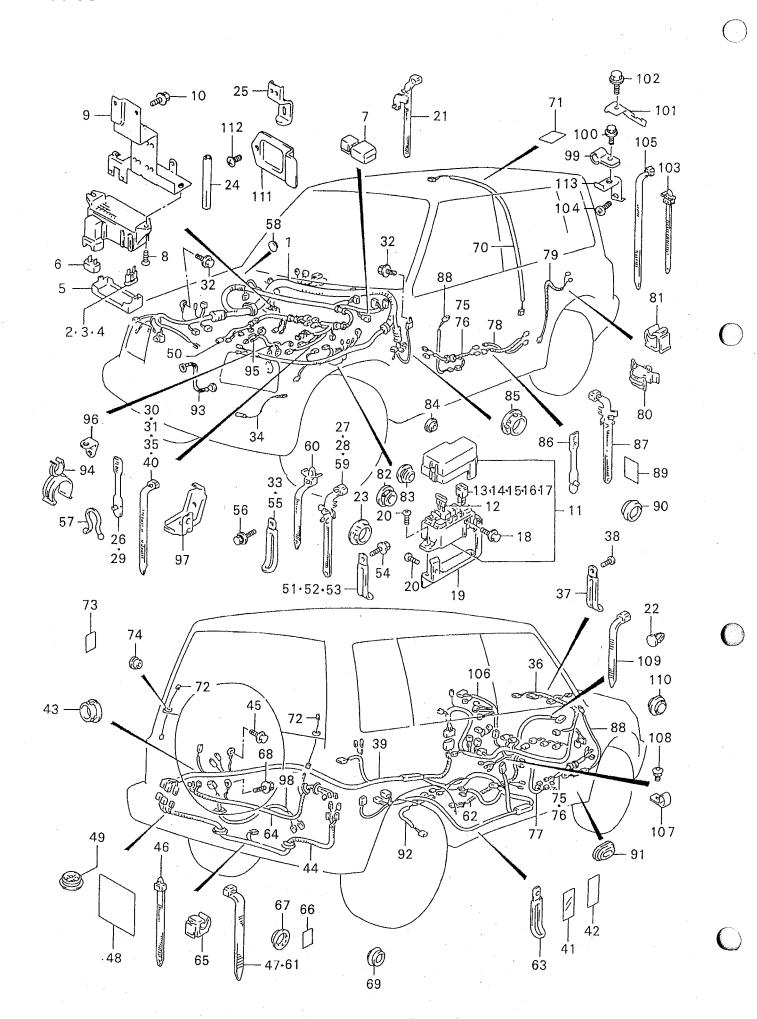


| REF. | | | Q, TY | | | | |
|-------|-------------|-------------------------|-------|----|-----------|--------------|--|
| N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS | NARKS | |
| | | | | | | | |
| 101 | 36996-56B00 | BRACKET, ABS WIRE CLAMP | 1 | 1 | W/ABS | | |
| 102 | 01550-08123 | BOLT | 1 | 1 | W/ABS | | |
| 103 | 09407-14408 | CLAMP, ABS WIRE | 1 | 1. | W/ABS | | |
| 104 | 09132-06006 | SCREW, WIRE CLAMP | 1 | 1 | W/ABS | | |
| 105 | 09407-18403 | CLAMP, ABS WIRE | 1 | 1 | W/ABS | | |
| 106 | 36690-77E10 | HARNESS ASSY, AIR BAG | 1 | 1 | W/AIR BAG | | |
| 107 | 09403-14412 | CLAMP, HARNESS | 2 | 2 | W/AIR BAG | | |
| 108 | 09137-06020 | SCREW (6X20) | 2 | 2 | W/AIR BAG | | |
| 109 | 09407-12404 | CLAMP, HARNESS | 1 | 1 | W/AIR BAG | | |
| 110 | 09250-35005 | CAP, DASH PANEL HOLE | 1 | 1 | W/AIR BAG | | |
| 111 | 36614-70E10 | BRACKET, MAIN HARNESS | 1 - | 1. | | | |
| 112-1 | 01550-06103 | BOLT | 2 | 2 | 2 VALVE | | |
| 112-2 | 02142-06103 | SCREW | 2 | 2 | 4 VALVE | | |
| 113 | 36997-60A10 | CLAMP, ABS WIRE | 1 | 1 | W/ABS | | |

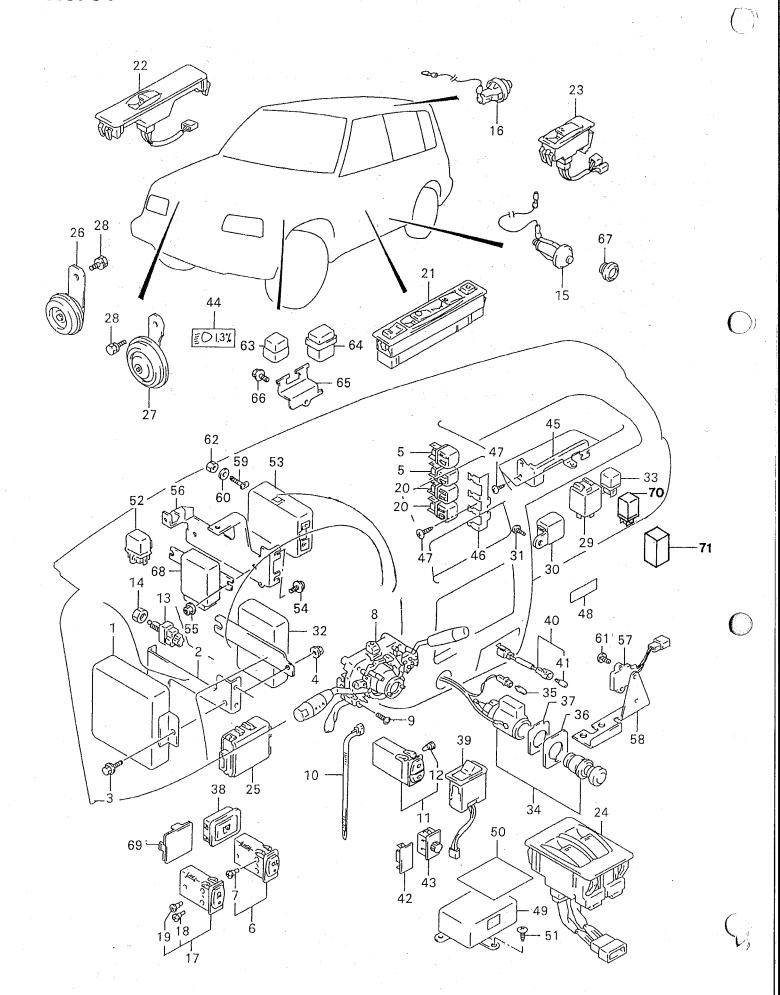


| REF. | | | Q, TY | | | |
|------------|-------------|--|--------------|----------|--------------------------------|--|
| N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS | |
| | | | | | | |
| 1 - 1 | 33920-70E30 | CONTROLLER, FUEL INJECTION | 1 | 1 | 2 VALVE | |
| 1-2 | 33920-71E50 | CONTROLLER, FUEL INJECTION | 1 | 1 | 4 VALVE, OTHER MARKETS | |
| 1-3 | 33920-71ED0 | CONTROLLER, FUEL INJECTION | 1 | 1 | 4 VALVE, E 22 W/IMMOBILIZER | |
| 1 -4 | 33920-71E60 | CONTROLLER, FUEL INJECTION | 1 | 1 | 4 VALVE, E 18 | |
| 2 | 33924-77E10 | BRACKET, EPI CONTROLLER | 1 | 1 | , | |
| 3 | 01550-06103 | BOLT | 5 | 5 | | |
| 4 | 08316-10063 | NUT | 2 | 2 | | |
| 5-1 | 38850-50F50 | RELAY, FUEL | 2 | -2 | | |
| 5-2 | 31850-86CA0 | RELAY, ASSY INVER | 2 | 2 | 1.9 DIESEL | |
| 6 | 37280-70F00 | SWITCH ASSY, RR FOG LAMP | 1 | 1 | 777 512022 | |
| 7 | 09471-12135 | BULB | 1 | 1 | | |
| 8-1 | 37400-77E40 | SWITCH ASSY, COMBINATION | 1 | 1 | N/AIR BAG | |
| 8-2 | 37400-77E50 | SWITCH ASSY, COMBINATION | 1 | 1 | W/AIR BAG | |
| 9 | 02112-05123 | SCREW | 3 | 3 | W/ AIR DAO | |
| 10 | 09407-25401 | CLAMP (L:235) | - 1 | 1 | | |
| 11 | 37370-50G00 | SWITCH, RR WIPER & WASHER | | . ' 1 | | |
| 12 | 37399-60E10 | BULB | _ | 2 | 1 | |
| 13 | 37740-60D01 | SWITCH, STOP LAMP | 1 | 1 | | |
| 14 | 09140-10043 | NUT | 1 | 1 | | |
| 15-1 | 37670-61A00 | SWITCH ASSY, DOOR | 2 | 2 | 3DR | |
| 15-2 | 37670-61A00 | SWITCH ASSY, DOOR | ~ . | 4 | 5DR | |
| 16 | 37670-61A00 | | | - 1 | 5DR | |
| 1 <i>7</i> | 37860-60A01 | SWITCH ASSY, BACK DOOR SWITCH ASSY, REAR DEFOGGER | | 1 | SDR A | |
| 18 | | | - | 1 | | |
| | 09471-12135 | BULB (CLEAR) | - | 1 | | |
| 19 | 37399-60E10 | .BULB (GREEN) | - | 1 | | |
| 20 | 38850-50F50 | RELAY, HEADLAMP | 2 | 2 | VIII/DOLLIED | |
| 21 | 37990-56B60 | SWITCH, POWER WINDOW MASTER | 1. | 1 | W/POWER WINDOW | |
| 22 | 37995-56B60 | SWITCH, POWER WINDOW SUB | 1 | 1 | W/POWER WINDOW | |
| 23 | 37995-56B50 | SWITCH, POWER WINDOW REAR | - | 2 | 5DR:W/POWER WINDOW | |
| 24 | 37993-56B50 | SWITCH, POWER WINDOW CENTER | · - | . 1 | 5DR:W/POWER WINDOW | |
| | | | | | | |


FIG. 84

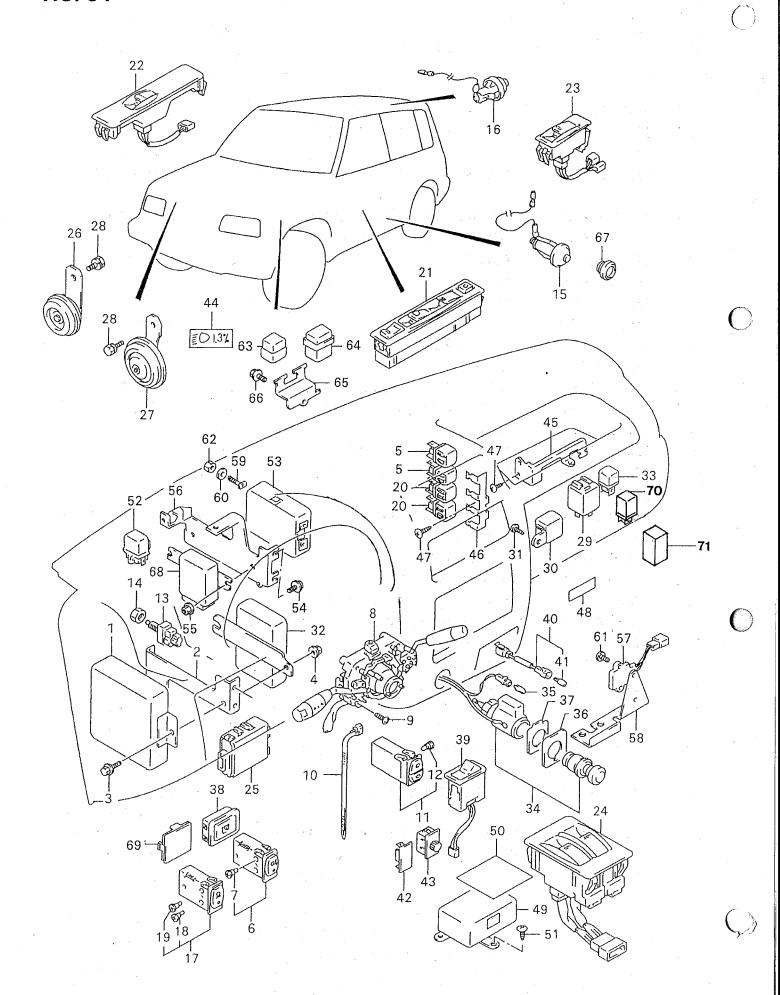

| REF. | | | Q, TY | | | |
|------|----------------------|-----------------------------|-------|-----|-------------------------------|--|
| N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS | |
| | · | | | | · | |
| 25-1 | 38700-77E10 | CONTROLLER, POWER DOOR LOCK | 1 | 1 | 3DR:W/POWER | |
| 25-2 | 20700 77500 | CONTROLLED DOWNER DOOR LOCK | | 1 | DOOR LOCK | |
| 23-2 | 38700-77E00 | CONTROLLER, POWER DOOR LOCK | | | 5DR:W/POWER DOOR LOCK | |
| 26 | 38500-85C00 | HORN ASSY, HIGH PITCHED | 1. | 1. | JLX | |
| 27 | 38500-85C10 | HORN ASSY, LOW PITCHED | 1 | 1 | | |
| 28-1 | 01 <i>57</i> 0-08123 | BOLT | 1 | 1 | | |
| 28-2 | 01570-08123 | BOLT | 2 | 2 | JLX | |
| 29 | 38610-85C00 | RELAY ASSY, TURN & 4 WAY | 1 | 1 | | |
| 30 | 38590-77E10 | CONTROLLER, WARNING BUZZER | 1 | 1 | | |
| 31 | 03541-05163 | SCREW | 1 | 1 | | |
| 32 | 38880-70E20 | CONTROLLER ASSY, AT | 1 | 1 | AT | |
| 33 | 38850-50F50 | RELAY ASSY, HORN | 1 | 1 | JX,JLX | |
| 34 | 39400-85C00 | LIGHTER ASSY, CIGARETTE | 1 | 1 | | |
| 35 | 09471-85C00 | .BULB | 1 | 1 | | |
| 36 | 39471-60A00 | RIM, LIGHTER | 1 | . 1 | | |
| 37 | 39472-82000 | WASHER, LIGHTER | 1 | 1 | | |
| 38 | 37950-60E01 | SWITCH ASSY, MIRROR | 1 | 1 | W/REMOCON | |
| | | | | | MIRROR | |
| 39 | 37865-56B00 | SWITCH ASSY, P/N CHANGE | 1. 1 | 1. | AT | |
| 40 | 36550-85C00 | LAMP ASSY, ASHTRAY | 1 | 1 | EXC/JA | |
| | | ILLUMINATION | | | A Company of A | |
| 41 | 36551-85C00 | BULB | 1 | 1 | e filosofie Transportantes | |
| 42 | 37285-60E00 | CAP, OPTION SWITCH HOLE | AR | AR | | |
| 43 | 35180-60E00 | SWITCH, HEADLAMP LEVELING | 1 | 1 | E22 | |
| 44 | 35186-70A01 | LABEL, HEADLAMP AIMING | 1 | 1 | E22 | |
| 45 | 38851 <i>-77</i> E00 | BRACKET, RELAY | · 1 | 1 | | |
| 46-1 | 38851 <i>-77</i> E10 | BRACKET, RELAY | 1 | 1 | | |
| 46-2 | 38851-86CA0 | BRACKET, RELAY | - 1 | 1 | 1.9 DIESEL | |
| 47-1 | 03541-05123 | SCREW | 4 | 4 | | |
| 47-2 | 02142-05123 | SCREW, RELAY | 1 | 1 | 1.9 DIESEL | |
| 48 | 36930-85C00 | COVER | 1 | 1 | | |
| 49 | 38910-77 <u>F</u> 00 | RESERVOIR ASSY, SDM | 1 | 1 | W/AIR BAG | |
| 50 | 38912-77E00 | COVER, SDM | 1 | 1 | W/AIR BAG | |
| 51 | 09129-06006 | SCREW | 3 | 3 | W/AIR BAG | |
| 52-1 | 38860-72G00 | RELAY, PTC | -1 | 1 | 2 VALVE | |
| 52-2 | 38860-86CA0 | RELAY, PTC | 1 | 1. | 1.9 DIESEL | |

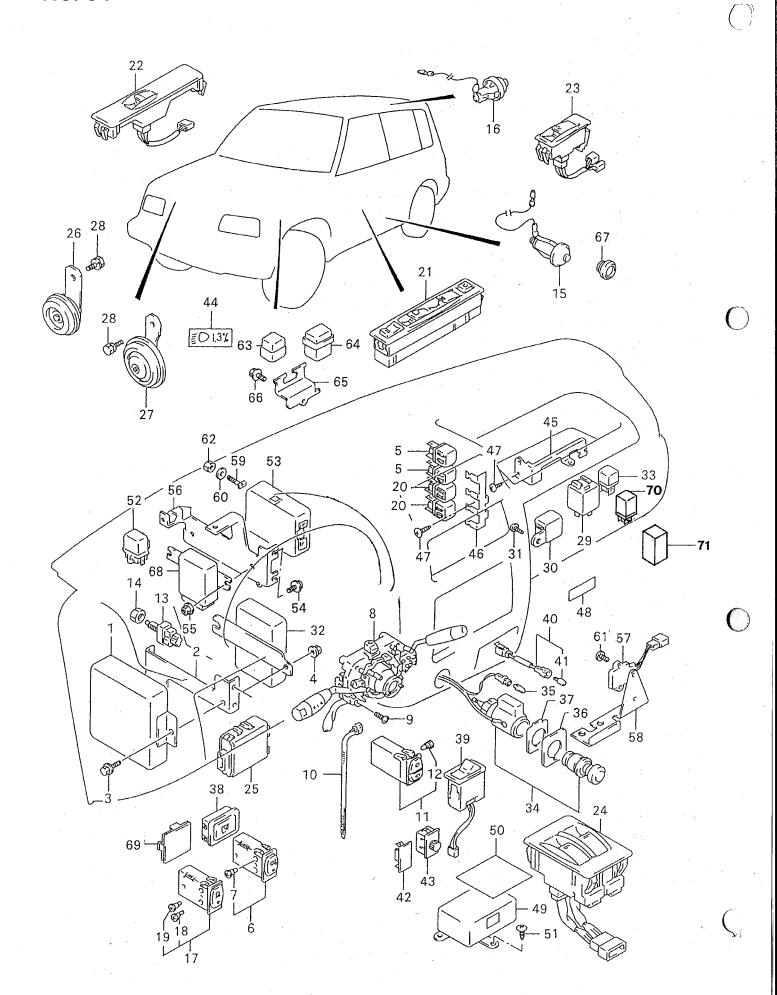


| REF. | • | | Q, | TY | | |
|------|-------------|---------------------------|------|----|---------------|--|
| N.º | PART Nº | DESCRIPTION | С | V | REMARKS | |
| | | | | | | |
| 53 | 33940-70E10 | CONTROLLER ASSY, ABS | 1 | 1 | W/ABS | |
| 54 | 01550-06103 | BOLT | 4 | 4 | W/IMMOBILIZER | |
| 55 | 08316-10063 | NUT | 2 | 2 | W/ABS | |
| 56-1 | 33946-70E11 | BRACKET, CONTROLLER | 1 | 1 | W/IMMOBILIZER | |
| 56-2 | 33946-70E30 | BRACKET, ABS RELAY | 1 | 1. | W/ABS | |
| 57 | 33945-70E00 | SENOR ASSY, G | 1 | -1 | W/ABS | |
| 58 | 33946-70E00 | BRACKET, G SENSOR | 1 | 1 | W/ABS | |
| 59 | 36886-50D00 | BOLT, ABS CONTROLLER | 3 | 3 | W/ABS | |
| 60 | 38913-50D00 | INSURATOR, ABS CONTROLLER | 3 | 3 | W/ABS | |
| 61 | 02112-04083 | SCREW, G SENSOR | 2 | 2 | W/ABS | |
| 62 | 08316-10053 | NUT | 3 | 3 | W/ABS | |
| 63 | 38860-50G20 | RELAY ASSY, ABS | 2 | 2 | W/ABS | |
| 64 | 38863-70G00 | COVER, ABS RELAY | 2 | 2 | W/ABS | |
| 65 | 33946-70E30 | BRACKET, ABS RELAY | 1 | 1 | W/ABS | |
| 66 | 01550-06103 | BOLT | 1 | 1 | W/ABS | |
| 67 | 09250-14008 | CAP, DOOR SWITCH HOLE | '- , | 1 | 3DR | |
| 68 | 33970-70E00 | CONTROLLER, IMMOBILIZER | • 1 | 1 | E22, | |
| | | | | | WIMMOBILIZER | |
| 69 | 37955-60E00 | CAP, MIRROR SWITCH HOLE | 1 | 1 | N/REMOCON | |
| | | | | | MIRROR | |
| 70 | 35224-86CA0 | REALY ELECTRO | 2 | 2 | 1.9 DIESEL | |
| 71 | 35334-86CA0 | PROTECTOR REALY ELECTRO | 2 | 2 | 1.9 DIESEL | |
| | | | | | | |

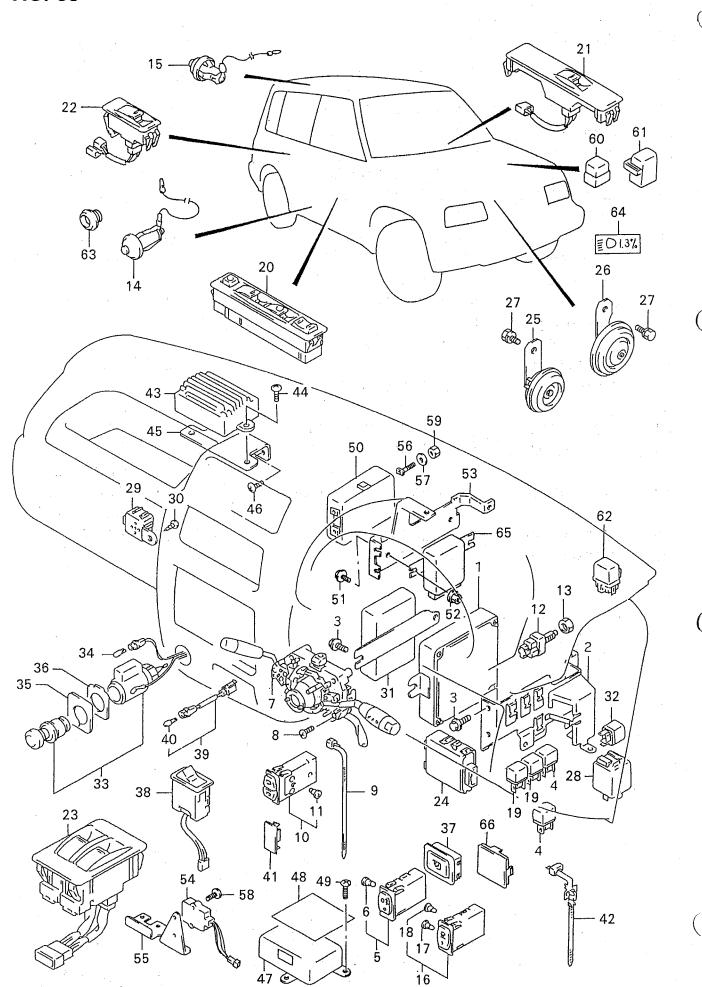


| REF. | | | | Q, TY | | | |
|------|------------|-------------|-----------------------------|-------|---|--------------------------|--|
| | N.º | PART Nº | DESCRIPTION | С | V | REMARKS | |
| | 1 - 1 | 33920-70E00 | CONTROLLER, FUEL INJECTION | 1 | 1 | 2 VALVE | |
| | 1 -2 | 33920-71ED0 | CONTROLLER, FUEL INJECTION | 1 | 1 | 4 VALVE | |
| | 2 | 33924-77E00 | BRACKET, EPI CONTROL | 1 | 1 | | |
| | 3 | 01550-06103 | BOLT | 5 | 5 | | |
| | 4 | 38850-50F50 | RELAY, FUEL | 2 | 2 | | |
| | 5 | 37280-70F00 | SWITCH ASSY, RR FOG LAMP | 1 | 1 | | |
| | 6 | 09471-12135 | .BULB | 1 | 1 | | |
| | 7-1 | 37400-77E00 | SWITCH ASSY, COMBINATION | 1 | 1 | N/AIR BAG | |
| | 7-2 | 37400-77E10 | SWITCH ASSY, COMBINATION | 1 | 1 | W/AIR BAG | |
| | 8 | 02112-05123 | SCREW | . 3 | 3 | | |
| s. | 9 | 09407-25401 | CLAMP (L:235) | 1 | 7 | | |
| | 10 | 37370-50G00 | SWITCH, RR WIPER & WASHER | _ | 1 | | |
| | 11 | 37399-60E10 | .BULB | - | 2 | | |
| | 12 | 37740-60D01 | SWITCH, STOP LAMP | 1 | 1 | | |
| | 13 | 09140-10043 | NUT | 1 | 1 | | |
| | 14-1 | 37670-61A00 | SWITCH ASSY, DOOR | 2 | 2 | 3DR | |
| | 14-2 | 37670-61A00 | SWITCH ASSY, DOOR | - | 4 | 5DR | |
| | 15 | 37670-61A00 | SWITCH ASSY, BACK DOOR | - | 1 | 5DR | |
| | 16 | 37860-70F00 | SWITCH ASSY, REAR DEFOGGER | - | 1 | | |
| | 1 <i>7</i> | 09471-12135 | .BULB (CLEAR) | - | 1 | | |
| | 18 | 37399-60E10 | .BULB (GREEN) | - | 1 | | |
| | 19 | 38850-50F50 | RELAY, HEADLAMP | 2 | 2 | | |
| | 20 | 37990-56B60 | SWITCH, POWER WINDOW MASTER | 1 | 1 | W/POWER WINDOW | |
| 2 | 21 | 37995-56B60 | SWITCH, POWER WINDOW SUB | 1 | 1 | W/POWER WINDOW | |
| | 22 | 37995-56B50 | SWITCH, POWER WINDOW REAR | - | 2 | 5DR:W/POWER WINDOW | |
| | 23 | 37993-56B50 | SWITCH, POWER WINDOW CENTER | - | 1 | 5DR:W/POWER WINDOW | |
| | 24-1 | 38700-77E10 | CONTROLLER, POWER DOOR LOCK | 1 | 1 | 3DR:W/POWER DOOR LOCK | |
| | 24-2 | 38700-77E00 | CONTROLLER, POWER DOOR LOCK | - | 1 | 5DR:W/POWER DOOR LOCK | |

FIG. 85

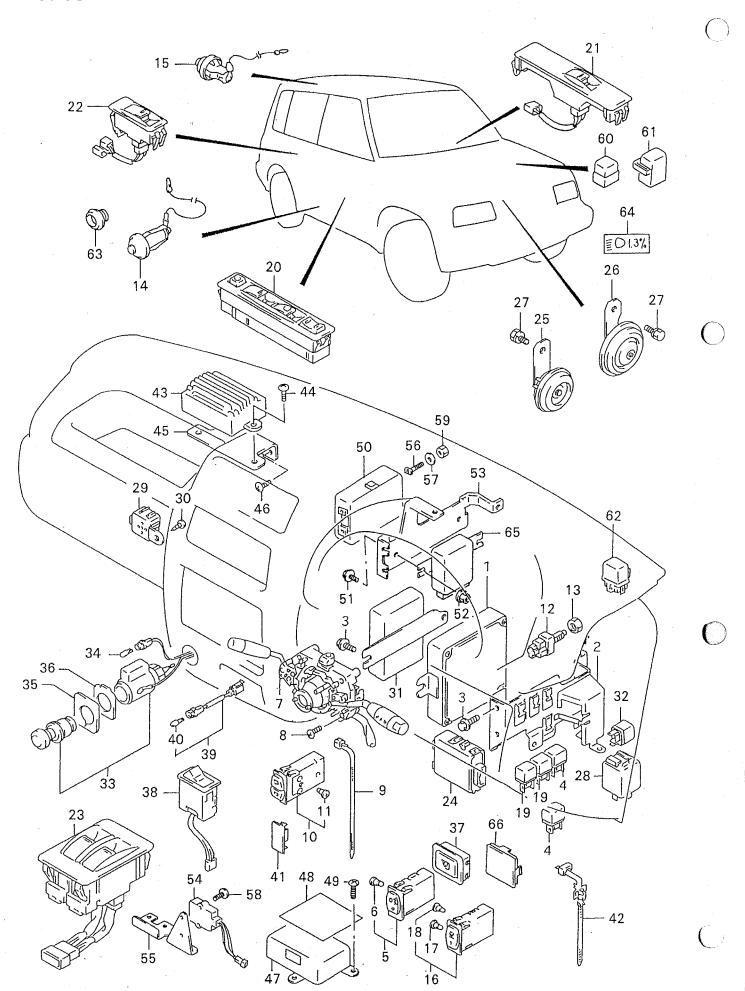


| REF. | | | | TY | | |
|------|-------------|-----------------------------|-----|----|-----------|--|
| N.º | PART Nº | DESCRIPTION | C | ٧ | REMARKS | |
| | | | | | | |
| 25 | 38500-85C00 | HORN ASSY, HIGH PITCHED | 1 | 1 | JLX | |
| 26 | 38500-85C10 | HORN ASSY, LOW PITCHED | 1 |] | | |
| 27-1 | 01570-08123 | BOLT | 1 | 1 | | |
| 27-2 | 01570-08123 | BOLT | 2 | 2 | JLX | |
| 28 | 38610-85C00 | RELAY ASSY, TURN & 4 WAY | 1 | 1 | | |
| 29 | 38590-77E10 | CONTROLLER, WARNING BUZZER | 1 | 1 | | |
| 30 | 03541-05163 | SCREW | 1 | 1 | | |
| 31 | 38880-70E20 | CONTROLLER ASSY, AT | 1 | 1 | AT | |
| 32 | 38850-50F50 | RELAY ASSY, HORN | 1 | 1 | | |
| 33 | 39400-85C00 | LIGHTER ASSY, CIGARETTE | 1 | 1 | | |
| 34 | 09471-85C00 | .BULB | 1 | 1 | | |
| 35 | 39471-60A00 | RIM, LIGHTER | 1 | 1 | | |
| 36 | 39472-82000 | Washer, Lighter | 1 | 1 | | |
| 37 | 37950-60E01 | SWITCH ASSY, MIRROR | 1 | 1 | W/REMOCON | |
| | | | | | MIRROR | |
| 38 | 37865-56B00 | SWITCH ASSY, P/N CHANGE | 1 | 1 | AT | |
| . 39 | 36550-85C00 | LAMP ASSY, ASHTRAY | 1 | 1: | | |
| | | ILLUMINATION | | | | |
| 40 | 36551-85C00 | .BULB | 1 | 1 | | |
| 41 | 37285-60E00 | CAP, OPTION SWITCH HOLE | AR | AR | | |
| 42 | 09407-12404 | CLAMP (L:140) | 1 | 1 | | |
| 43 | 38660-82202 | CONTROLLER ASSY, DIM-DIP | . 1 | 1 | | |
| 44 | 02142-06163 | SCREW | 2 | 2 | | |
| 45 | 38661-77E00 | BRACKET, DIM-DIP CONTROLLER | 1 | 1 | | |
| 46 | 02142-06123 | SCREW | 2 | 2 | | |
| 47 | 38910-77E00 | RESERVOIR ASSY, SDM | 1 | 1. | W/AIR BAG | |
| 48 | 38912-77E00 | COVER, SDM | 1 | 1 | W/AIR BAG | |
| 49 | 09129-06006 | SCREW | 3 | 3 | W/AIR BAG | |

FIG. 85

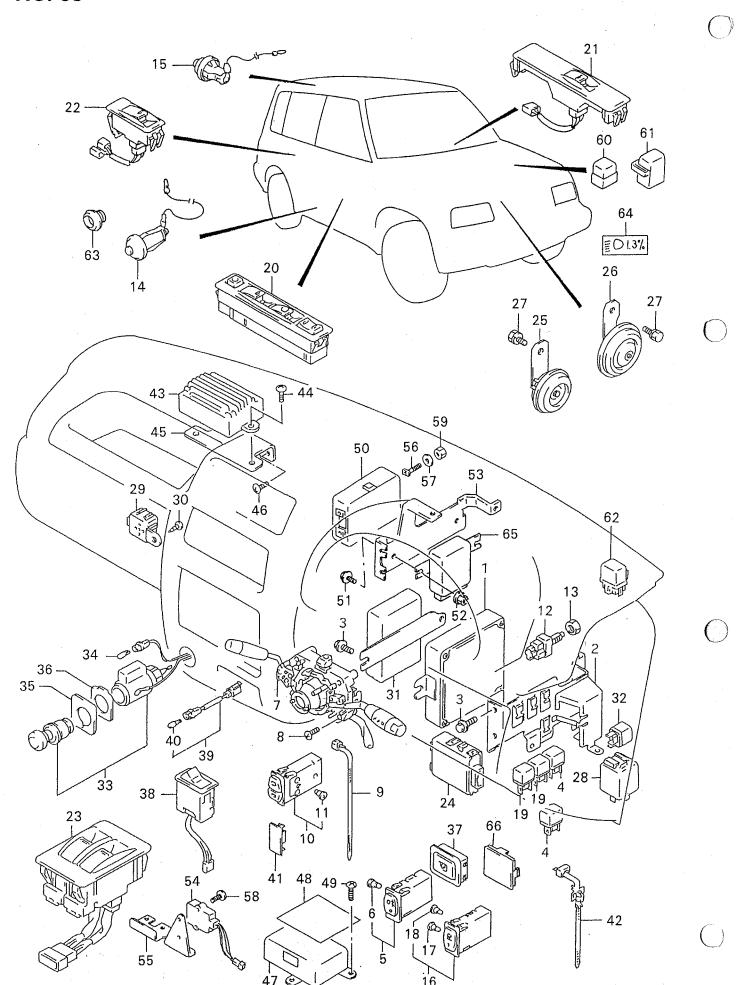

| REF. | | | | TY | | |
|------|-------------|---------------------------|-----|----|---------------------|--|
| N.º | PART Nº | DESCRIPTION | C | ٧ | REMARKS | |
| | | | | | | |
| 50 | 33940-70E10 | CONTROLLER ASSY, ABS | 1 | 1 | W/ABS | |
| 51 | 01550-06103 | BOLT | 4 | 4 | | |
| 52 | 08316-10063 | NUT | 2 | 2 | W/ABS | |
| 53 | 33946-70E20 | BRACKET, CONTROLLER | 1 | 1 | | |
| 54 | 33945-70E00 | SENSOR ASSY, G | 1 | 1 | W/ABS | |
| 55 | 33946-70E00 | BRACKET, G SENSOR | 1 | 1 | W/ABS | |
| 56 | 36886-50D00 | BOLT, ABS CONTROLLER | 3 | 3 | W/ABS | |
| 57 | 38913-50D00 | INSULATOR, ABS CONTROLLER | . 3 | 3 | W/ABS | |
| 58 | 02112-04083 | SCREW, G SENSOR | 2 | 2 | W/ABS | |
| 59 | 08316-10053 | NUT | 3 | 3 | W/ABS | |
| 60 | 38860-50G20 | RELAY ASSY, ABS | 2 | 2 | W/ABS | |
| 61 | 38863-70G00 | COVER, ABS RELAY | 2 | 2 | W/ABS | |
| 62 | 38860-72G00 | RELAY, PTC | 1 | 1 | | |
| 63 | 09250-14008 | CAP, DOOR SWITCH HOLE | - | 1 | 3DR | |
| 64 | 35186-70A01 | LABEL, HEADLAMP AIMING | 1 | 1 | | |
| 65 | 33970-70E00 | CONTROLLER, IMMOBILIZER | 1 | 1 | | |
| 66 | 37955-60E00 | CAP, MIRROR SWITCH HOLE | 1 | 1 | n/remoeon Mirror | |

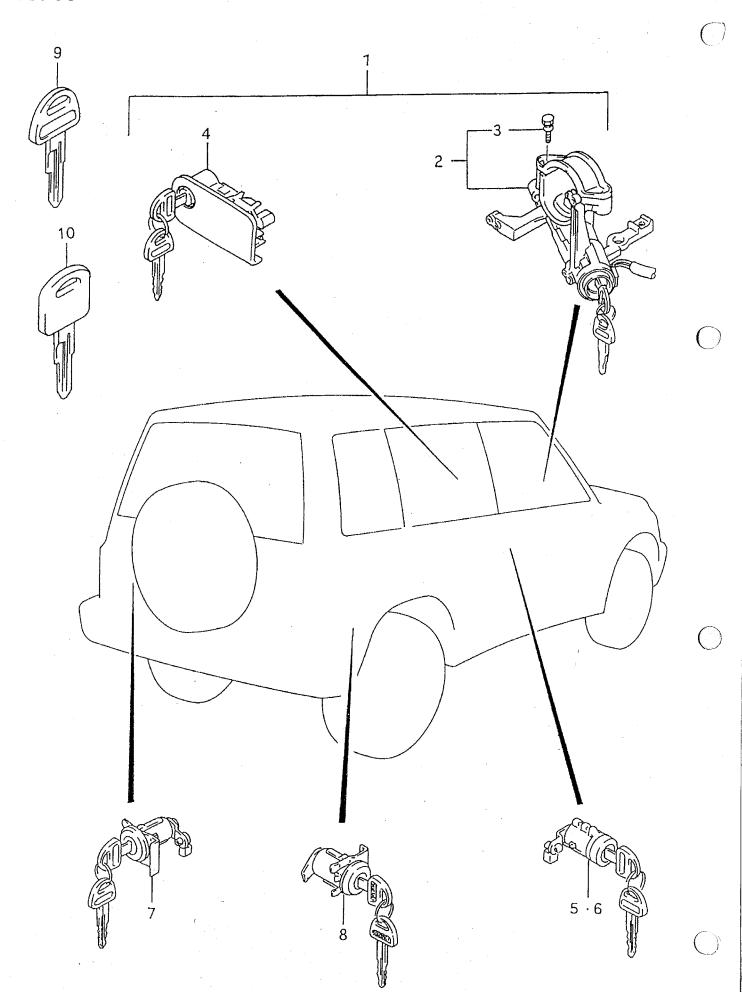

| REF. | | | | Q, TY | | , | |
|----------|-------------|--------------------------|-------------------------------|-------|----|--------------------|--|
| | N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS | |
| | | | | | | | |
| | 1 - 1 | 37106-77820-5ES | LOCK SET (BLACK) — | 1 | - | | |
| | 1-2 | 37105-77880-5ES | LOCK SET (BLACK) × | 1 | - | W/IMMOBILIZER | |
| | 1 -3 | 37106-77850-5ES | LOCK SET (BLACK) — | - | 1 | 3DR:E2 | |
| | 1 -4 | 37105-77890-5ES | LOCK SET (BLACK) × | - | 1 | 3DR:E2,W/ | |
| | > | | | | | IMMOBILIZER | |
| | 1-5 | 37106-77830-5ES | LOCK SET (BLACK)> | - | 1 | 3DR:E22:JX | |
| | 1-6 | 37106-77810-5ES | LOCK SET (BLACK)× | - | 1 | 3DR:E22:JX, W/ | |
| | | | | | | IMMOBILIZER | |
| | 1 <i>-7</i> | 37106-77850-5ES | LOCK SET (BLACK) | - | 1 | 3DR:E22:JLX | |
| | 1 -8 | 37105-77890-5ES | LOCK SET (BLACK) × | - | 1 | 3DR:E22:JLX, W/ | |
| ì | | \ | , A | | | IMMOBILIZER | |
| | 1-9 | 37106-77830-5ES | LOCK SET (BLACK) $	imes$ | - | 1 | 3DR:E53 | |
| | 1-10 | 37106-77830-5ES | LOCK SET (BLACK) × | - | 1 | 5DR:E2:JX | |
| | 1-11 | 37106-77810-5ES | LOCK SET (BLACK) × | - | 1 | 5DR:E2:JX, W/ | |
| | | | | | | IMMOBILIZER | |
| | 1-12 | 37106-77850-5ES | LOCK SET (BLACK) × | - | 1 | 5DR:E2:JLX | |
| | 1-13 | 37105-77890-5ES | LOCK SET (BLACK) × | - | 1. | 5DR:E2:JLX, W/ | |
| | - | | | | | IMMOBILIZER | |
| | 1-14 | 37106-77850-5ES | LOCK SET (BLACK) × | - | 1 | 5DR:E22 | |
| | 1-15 | 3710 <i>5-7</i> 7890-5ES | LOCK SET (BLACK) × | - | 1 | 5DR:E22,W/ | |
| | | | | | | IMMOBILIZER | |
| | 2-1 | 37101-77850 | .LOCK ASSY, STEERING | 1 | 1 | | |
| | 2-2 | 37106-77840 | .LOCK ASSY, STEERING | 1 | 1 | W/IMMOBILIZER | |
| | 3 | 37152-84100 | BOLT | 2 | 2 | | |
| . | 4 | 73430-77810-5ES | .LOCK ASSY, SIDE BOX (BLACK) | . 1 | 1 | | |
| | 5 | 82200-60831 | .CYLINDER, FRONT DOOR LOCK RH | 1 | 1 | | |
| | 6 | 82200-60841 | .CYLINDER, FRONT DOOR LOCK LH | 1 | 1 | | |



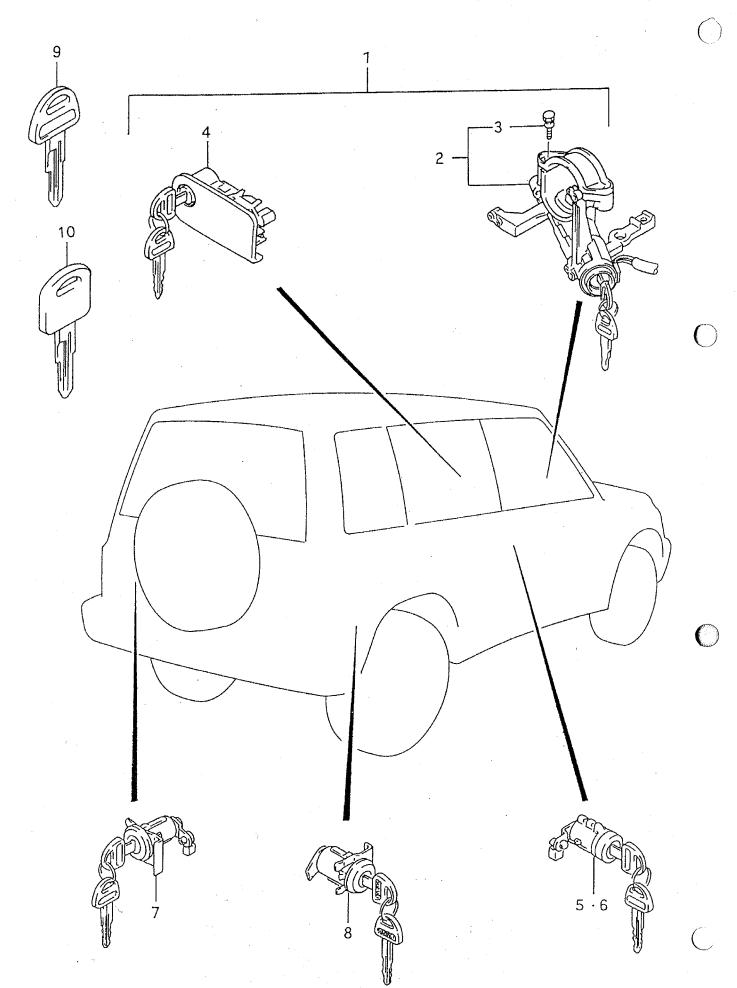


FIG. 086 (1-K-09) LOCK SET


| REF. N.º | PART Nº | DESCRIPTION | Q, C | TY V | REMARKS |
|-------------------------------|---|--|-----------------------|-----------------------|-----------------------|
| 7-1 7-2 8-1 8-2 9 | 82500-60821 82500-60831 89300-60802 89300-60802 37145-60A00 | CYLINDER, REAR GATE LOCK CYLINDER, BACK DOOR LOCK CYLINDER, FUEL LID LOCK CYLINDER, FUEL LID LOCK KEY, BLANK | 1 - 1 - 1 | - 1 - 1 1 | JX OPT |
| 10 | 37145-77E10 | KEY, BLANK | 1 | 1 | OPT, W/IMMOBILIZER |

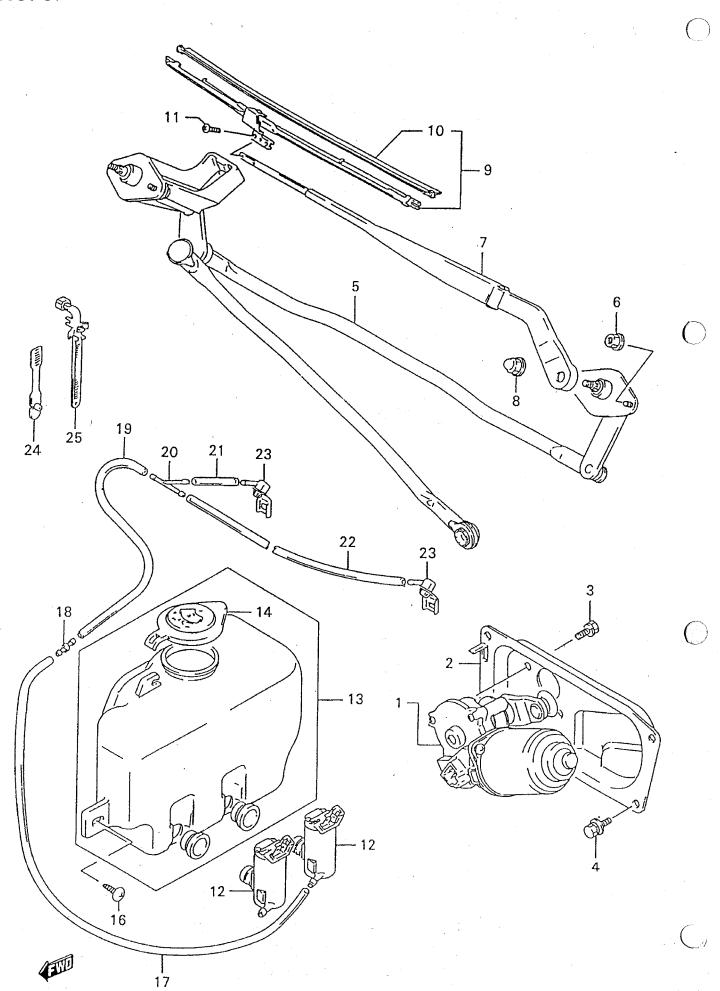


| REF. | | | Q, TY | | | • | |
|--------------------------|----------------------|-------------------------------|-------|-----|---|----|---|
| N.º | PART Nº | DESCRIPTION | - | С | ٧ | RE | MARKS |
| # # # # # # # # * | | | | | | -~ | · |
| 1 | 38101A60A40 | MOTOR & BRACKET ASSY, WIPER | | 1 | 1 | | |
| 2 | 38252-60A00 | .BRACKET, WIPER MOTOR | | 1 | 1 | | |
| 3 | 01 <i>57</i> 0-06103 | .BOLT | | 3 | 3 | | |
| 4 | 09115-06001 | BOLT, WIPER BRACKET | | 4 | 4 | | |
| 5 | 38102A60A10 | LINK ASSY, WIPER | | 1 | 1 | | |
| 6 | 08316-10063 | NUT | | 5 | 5 | | |
| 7 | 38310A60A00 | ARM ASSY, WIPER | | 2 | 2 | | |
| 8 | 08313-20083 | NUT | | 2 | 2 | | |
| 9 | 38340A60A00 | BLADE ASSY, WIPER | | 2 | 2 | | |
| 10 | 38346-84040 | BLADE | | 2 | 2 | | |
| 11 | 3831 <i>9-75</i> 000 | SCREW, BLADE | | 4 | 4 | | |
| 12-1 | 38410-66113 | PUMP ASSY, WASHER | | 1 | - | | |
| 12-2 | 38410-66113 | PUMP ASSY, WASHER | | - | 2 | | |
| 13-1 | 38450-60A00 | TANK ASSY, WASHER (1 ENGINE) | | 1 | - | | |
| 13-2 | 38450-61A00 | TANK ASSY, WASHER (2 ENGINES) | | - | 1 | | |
| 14 | 38452-80000 | .CAP, WASHER TANK | | 1 | 1 | | |
| 15-1 | | | | | | | |
| 15-2 | | | | | | | |
| 16 | 02112-16163 | SCREW, TANK | | 2 | 2 | | |
| 1 <i>7</i> | 38491-61A00 | HOSE, WASHER (L:1300>340) | | 1 | 1 | | |
| 18 | 38496-61A00 | VALVE, WASHER HOSE | | 1 | 1 | | ** |
| 19 | 38491-61A00 | HOSE, WASHER (L:1300>800) | | 1 | 1 | | |
| 20 | 38496-71311 | CONNECTOR, HOSE 3 WAY | | 1 | 1 | | |
| 21 | 38491-61A00 | HOSE, WASHER (L:1300>70) | | 1 | 1 | | |
| 22 | 38491-61A00 | HOSE, WASHER (L:1300>650) | | 1 | 1 | | |
| 23 | 38480-60A01 | NOZZLE, WASHER | | 2 | 2 | | • |
| 24 | 09407-05403 | CLAMP, WASHER HOSE | | 2 | 2 | | |
| 25 | 09407-12404 | CLAMP, WASHER HOSE | | . 1 | 1 | | |

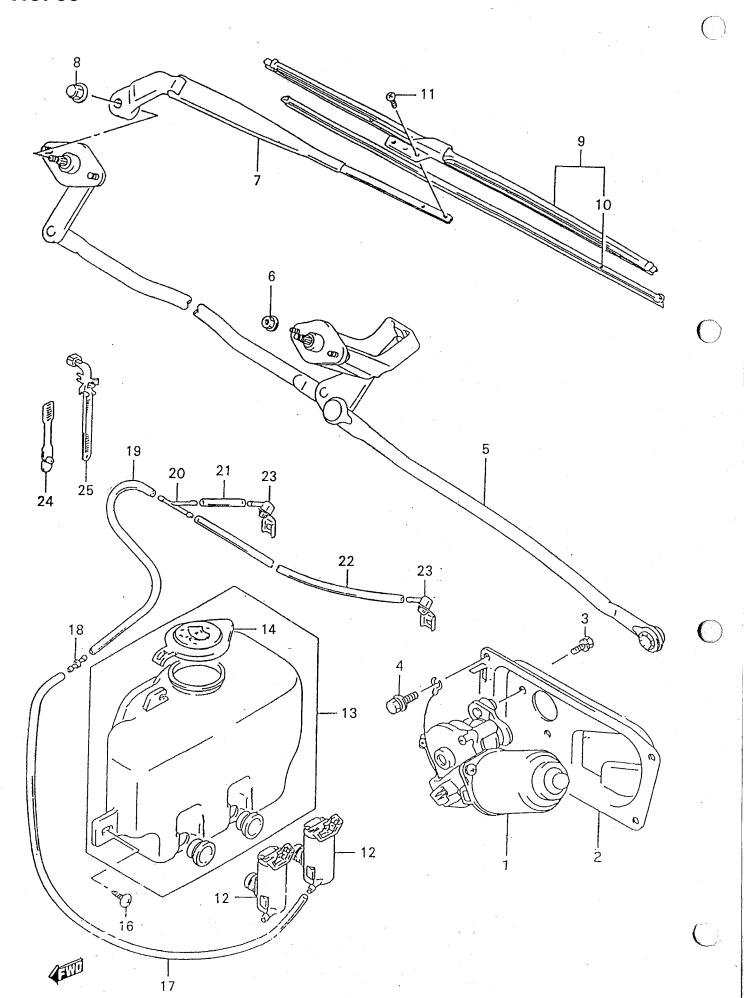


| REF. | PART Nº | DESCRIPTION | Q, TY | | |
|------------|----------------------|-------------------------------|-------|-----|---------|
| N.º | | | C | V | REMARKS |
| | | | | | |
| 1 | 38101-60A30 | MOTOR & BRACKET ASSY, WIPER | 1 | 1 | |
| 2 | 38252-60A00 | .BRACKET, WIPER MOTOR | 1 | `] | |
| 3 | 01 <i>57</i> 0-06103 | .BOLT | 3 | 3 | |
| 4 | 09115-06001 | BOLT, WIPER BRACKET | 4 | 4 | |
| 5 | 38102-60A00 | LINK ASSY, WIPER | 1 | 1 | |
| 6 | 08316-10063 | NUT | 5 | 5 | |
| 7 | 38310-60A10 | ARM ASSY, WIPER | 2 | 2 | |
| 8 | 08313-20083 | NUT | 2 | 2 | |
| 9 | 38340-60A10 | BLADE ASSY, WIPER | 2 | 2 | |
| 10 | 38346-84040 | .BLADE | 2 | 2 | |
| 11 | 38319-75000 | SCREW, BLADE | 4 | 4 | |
| 12-1 | 38410-66113 | PUMP ASSY, WASHER | 1 | - | |
| 12-2 | 38410-66113 | PUMP ASSY, WASHER | - | 2 | |
| 13-1 | 38450-60A00 | TANK ASSY, WASHER (1 ENGINE) | 1 | - | |
| 13-2 | 38450-61A00 | TANK ASSY, WASHER (2 ENGINES) | _ | 1 | |
| 14 | 38452-80000 | .CAP, WASHER TANK | 1 | 1 | |
| 15-1 | | | | | |
| 15-2 | | | | | |
| 16 | 02112-16163 | SCREW, TANK | 2 | 2 | |
| 1 <i>7</i> | 38491-61A00 | HOSE, WASHER (L:1300>340) | 1 | 1 | |
| 18 | 38496-61A00 | VALVE, WASHER HOSE | 1 | 1 | • |
| 19 | 38491-61A00 | HOSE, WASHER (L:1300>800) | 1 | 1 | |
| 20 | 38496-71311 | CONNECTOR, HOSE 3 WAY | 1 | 1 | |
| 21 | 38491-61A00 | HOSE, WASHER (L:1300>70) | 1 | 1 | |
| 22 | 38491-61A00 | HOSE, WASHER (L:1300>650) | 1 | 1 | |
| 23 | 38480-60A01 | NOZZLE, WASHER | 2 | 2 | |
| 24 | 09407-05403 | CLAMP, WASHER HOSE | 2 | 2 | |
| 25 | 09407-12404 | CLAMP, WASHER HOSE | 1 | 1 | |
| | | | | | |

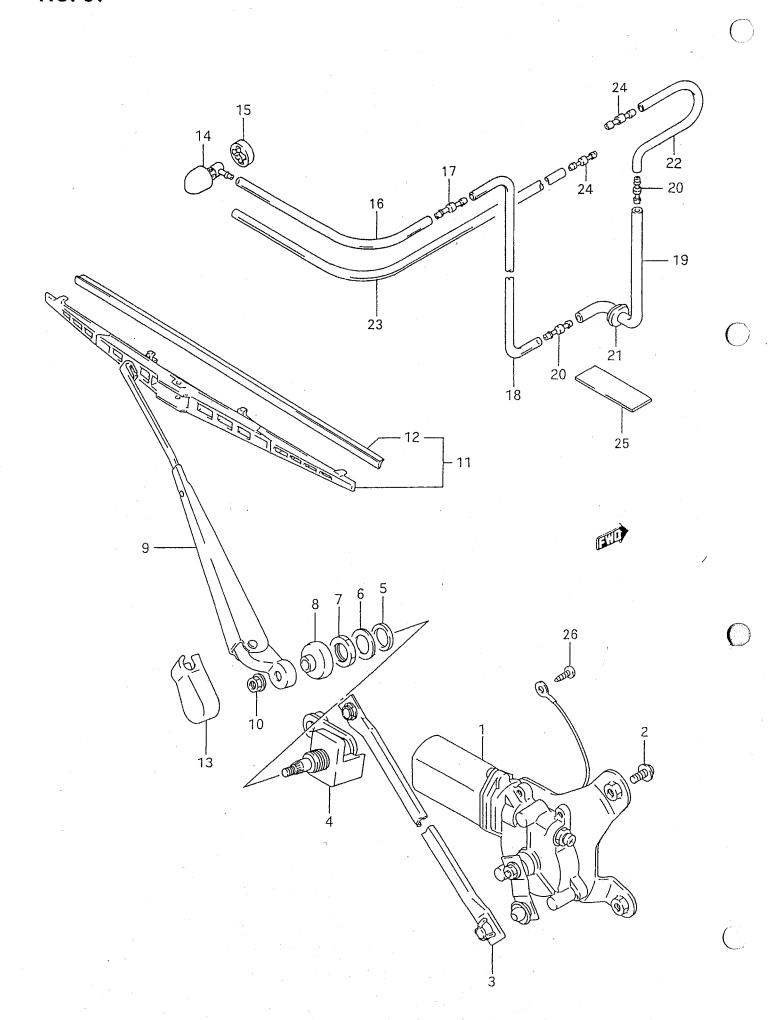


| REF. | PART Nº | DESCRIPTION | Q, TY | DEMADIVO |
|------------|----------------------|----------------------------|-------|------------------|
| N.º | FARI IN | DESCRIPTION | C V | REMARKS |
| | | | | |
| 1 | 38811-61A00 | MOTOR ASSY, REAR WIPER | 1 | |
| 2 | 09125-06060 | SCREW, WIPER BRACKET | 3 | |
| 3 | 38813-61A00 | ROD, REAR WIPER | 1 | |
| 4 | 38814-61A00 | PIVOT ASSY, REAR WIPER | 1 | |
| 5 | 38272-61A00 | GASKET, WIPER PIVOT | 1 | |
| 6 | 38271-61A00 | WASHER, WIPER PIVOT | 1 | |
| 7 | 38278-61A00 | NUT, WIPER PIVOT | . 1 | |
| 8 | 38274-61A00 | CAP, WIPER PIVOT | 1 | |
| 9 | 38821-61A00 | ARM ASSY, REAR WIPER | 1 | |
| 10 | 08316-10063 | NUT, WIPER ARM | 1 | |
| 11 | 38822-61A00 | BLADE ASSY, REAR WIPER | 1 | |
| 12 | 38346-61A00 | .BLADE, RUBBER | 1 | |
| 13 | 3831 <i>5</i> -61A00 | COVER, HEAD | 1 | |
| 14 | 38842-61A00 | NOZZLE, REAR WASHER | 1 | |
| 15 | 38843-61A01 | GASKET, REAR WASHER NOZZLE | 1 | |
| 16 | 38491-61A00 | HOSE, WASHER (L:1300) | 1 | |
| 1 <i>7</i> | 38496-61A00 | VALVE, WASHER HOSE | 1 | |
| 18-1 | 38491-61A10 | HOSE, WASHER (L:2100) | 1 | 3DR |
| 18-2 | 38491-79020 | HOSE, WASHER (L:3500>2750) | 1 | 5DR:LHD |
| 18-3 | 38491-79020 | HOSE, WASHER (L:3500>2100) | 1 | 5DR:RHD |
| 19 | 38835-61A00 | HOSE, WASHER | 1 | 3DR |
| 20 | 38838-82000 | CONNECTOR, WASHER HOSE | 2 | 3DR |
| 21 | 38839-82000 | GROMMET | 1 | 3DR |
| 22 | 38491-61A00 | HOSE (L:1300>650) | 1 | 3DR:LHD |
| 23-1 | 38491-79020 | HOSE, WASHER (L:3500>2750) | 1 | 3DR:LHD |
| 23-2 | 38491-79020 | HOSE, WASHER (L:3500>2100) | 1 | 3DR:RHD |
| 23-3 | 38491-61A00 | HOSE, WASHER (L:1300) | 1 | 5DR |
| 24-1 | 38496-56B00 | CONNECTOR, WASHER HOSE | 1 | 3DR:LHD, 3DR:RHD |
| 24-2 | 38496-61A00 | CONNECTOR, WASHER HOSE | :1 | 5DR |
| 25 | 36930-85C00 | CLAMP, WASHER HOSE | . 3 | |
| 26 | 09139-05028 | SCREW, EARTH | 1 | |
| | | | | |

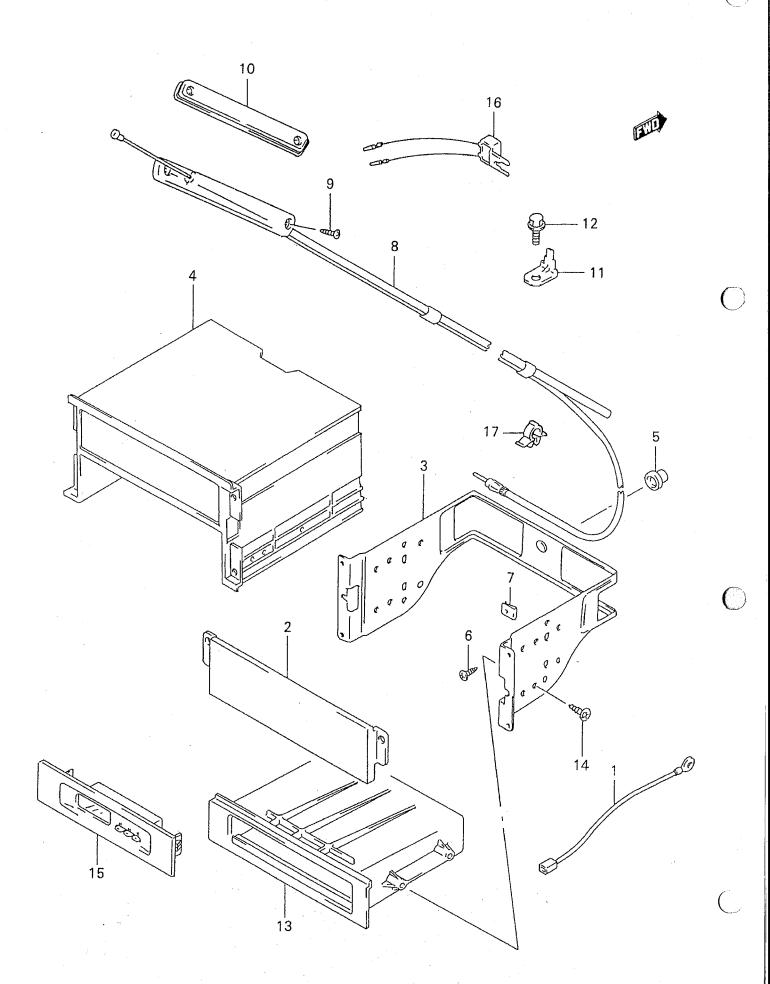

| REF. | | | Q, TY | | |
|------------|----------------------|-----------------------------|-------|---|-----------|
| N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS |
| | | · | | | |
| 1 | 39191-50F00 | WIRE, TUNER GROUND NO.1 | 1 | 1 | |
| 2 | 39161-70E01 | COVER, RADIO HOLE | 1 | 1 | |
| 3 | 39321-60G00 | BRACKET, TUNER | 1 | 1 | |
| 4 | 39321-60G10 | BRACKET, TUNER | 1 | 1 | |
| 5 | 34955-60E00 | BUSH | 1 | 1 | • |
| 6 | 03141-05123 | SCREW | 4 | 4 | |
| 7 | 09148-05038 | NUT | 4 | 4 | |
| 8 | 39250-85C00 | ANTENNA ASSY | 1 | 1 | W/ANTENNA |
| 9 | 39251-60A00 | SCREW, ANTENNA | 2 | 2 | |
| 10 | 39262-60A00 | COVER, ANTENNA HOLE | 1 | 1 | N/ANTENNA |
| 11 | 36865-82000 | TERMINAL, GROUND | 1 | 1 | 4 VALVE |
| 12 | 01 <i>55</i> 0-06103 | BOLT, TERMINAL | | 1 | 1 4 VALVE |
| 13-1 | 39182-70E21 | POCKET, TUNER | 1 | 1 | N/CLOCK |
| 13-2 | 39182-70E11 | POCKET, TUNER | 1 | 1 | W/CLOCK |
| 14 | 03241-05123 | SCREW | 4 | 4 | |
| 15 | 34600-77E00 | CLOCK ASSY | 1 | 1 | JX,JLX |
| 16 | 33551-60A10 | CONDENSOR, NOISE SUPPRESSOR | 1 | 1 | 2 VALVE |
| 1 <i>7</i> | 39283-85C00 | CLAMP, ANTENN FEEDER | 3 | 3 | W/ANTENNA |

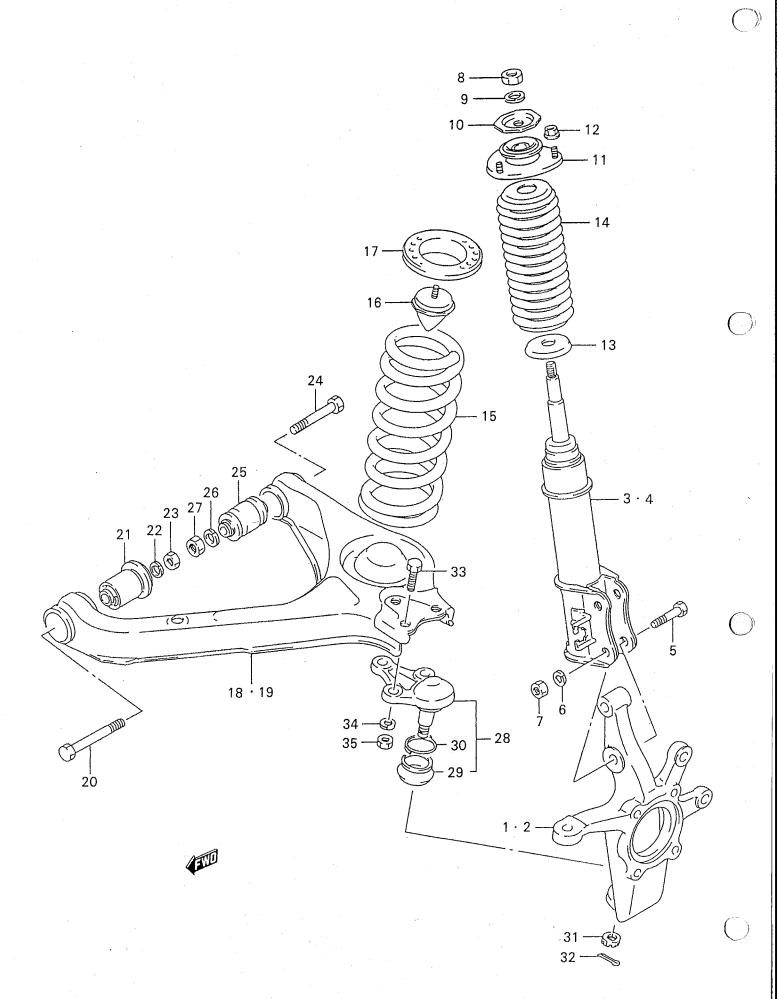

| DEF | PART Nº | DESCRIPTION | Q, TY | | | |
|-------------|-------------|---------------------------------------|-------|---|--|--|
| REF. N.º | | | _ | V | REMARKS | |
| | | · · · · · · · · · · · · · · · · · · · | | | DIR dirk dag had bed bed had had old all link tide buy had ben dag dire yan yan wan wan wan wa | |
| 1 | 45111-60A00 | KNUCKLE, STEERING RH |] | 1 | | |
| 2 | 45151-60A00 | KNUCKLE, STEERING LH | 1 | 1 | | |
| 3-1 | 41601-85CA0 | STRUT, FRONT SUSPENSION RH | 1 | 1 | N/ABS · | |
| 3-2 | 41601-85CB0 | STRUT, FRONT SUSPENSION RH | 1 | 1 | W/ABS | |
| 4-1 | 41602-85CA0 | STRUT, FRONT SUSPENSION LH | 1 | 1 | N/ABS | |
| 4-2 | 41602-85CB0 | STRUT, FRONT SUSPENSION LH | 1 | 1 | W/ABS | |
| 5 | 09100-12067 | BOLT | | 4 | | |
| 6 | 08321-01123 | LOCK WASHER | | 4 | | |
| 7 | 08310-00123 | NUT | , · · | 4 | | |
| 8 | 08310-00143 | NUT | 2 | 2 | | |
| 9 | 08321-01143 | LOCK WASHER | 2 | 2 | | |
| 10 | 41841-85C00 | SEAT, STRUT UPPER | 2 | 2 | | |
| 11 | 41810-60A01 | SUPPORT, FRONT STRUT | 2 | 2 | | |
| 12 | 08316-20083 | NUT | 6 | 6 | | |
| 13 | 41842-85C00 | SEAT, STRUT LOWER | 2 | 2 | | |
| 14 | 41850-60A00 | BOOT, STRUT DUST | 2 | 2 | | |
| 15-1 | 41111-60A21 | SPRING, FRONT COIL | 2 | 2 | 3DR | |
| 15-2 | 41111-56B03 | SPRING, FRONT COIL | - | 2 | 5DR | |
| 16 | 42110-85C00 | STOPPER, BUMP FRONT | 2 | 2 | | |
| 1 <i>7</i> | 41211-60A00 | SEAT, COIL SPRING RUBBER | . 2 | 2 | | |

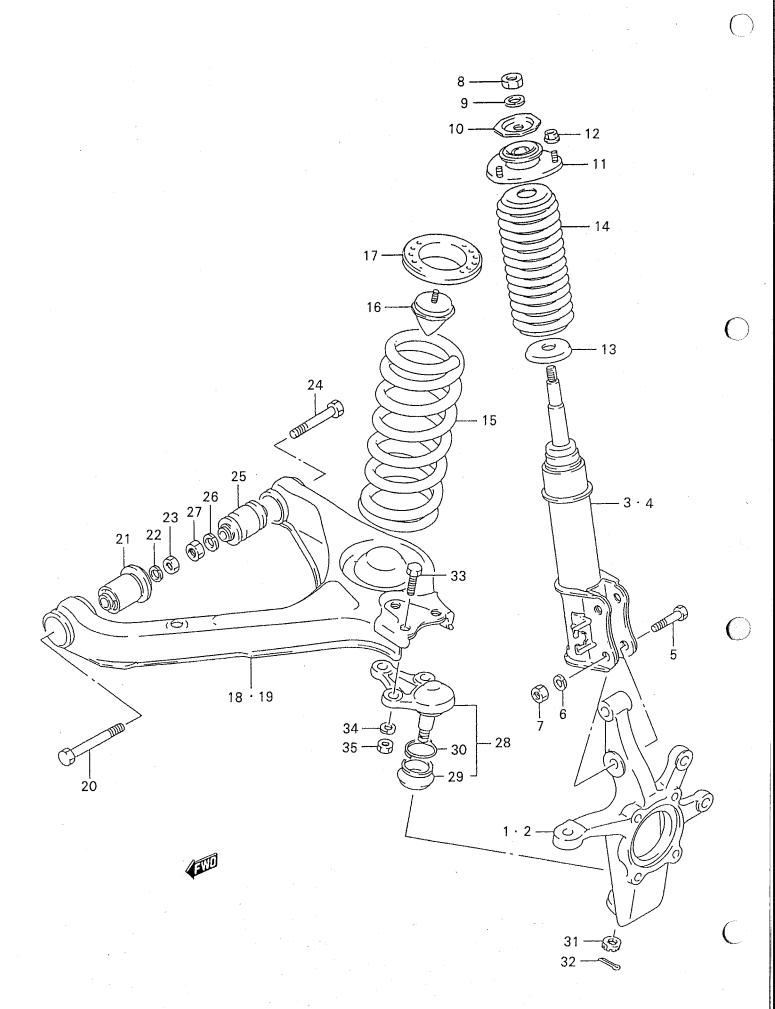

| REF. | PART Nº | DESCRIPTION | Q, TY | | |
|------|----------------------------|----------------------------|-------|----|---------|
| N.º | | | C | V | REMARKS |
| 18 | 45201-86C00 | ARM, FRONT SUSPENSION RH | 1 | 1 | |
| 19 | 45201-86C00 45202-86C00 | ARM, FRONT SUSPENSION LH | 1 | 1 | |
| 20 | 09103-12048 | BOLT, ARM FRONT | 2 | 2 | |
| 21 | 45253-85C00 | BUSHING, ARM FRONT | 2 | 2 | |
| 22 | 08321-01123 | LOCK WASHER | 2 | 2 | |
| 23 | 08310-00123 | NUT | 2 | 2 | |
| 24 | 09100-14002 | BOLT, ARM REAR | 2 | 2 | |
| 25 | 45254-85C00 | BUSHING, ARM REAR | 2 | 2 | |
| 26 | 08321-01143 | LOCK WASHER | 2 | 2 | |
| 27 | 08310-00143 | NUT | 2 | 2 | |
| 28 | 45700-85C00 | JOINT ASSY, LOWER ARM BALL | 2 | 2 | |
| 29 | 45714-85C00 | .SEAL SET | 2 | 2 | |
| 30 | 45715-85C00 | .CLIP | 2 | 2 | |
| 31 | 08314-40143 | NUT | 2 | 2 | |
| 32 | 04111-30308 | PIN | 2 | 2 | |
| 33 | 09100-12055 | BOLT | 6 | 6 | |
| 34 | 08321-01123 | LOCK WASHER | 6 | 6. | |
| 35 | 08310-00123 | NUT | 6 | 6 | |
| | | | | | |


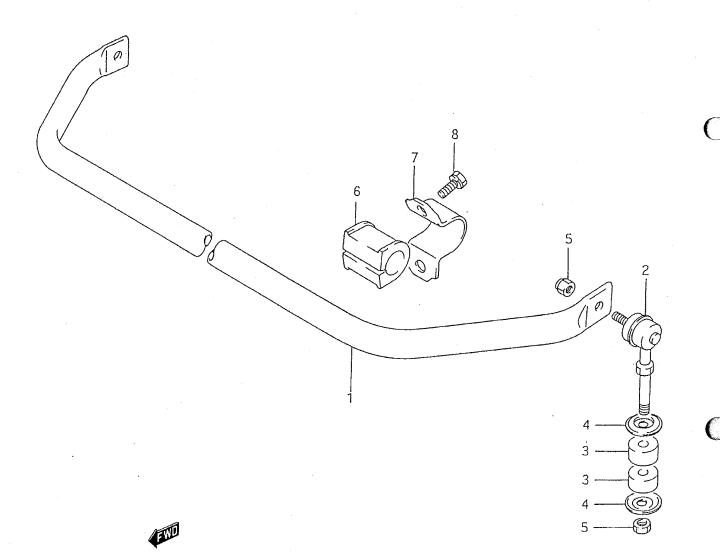


FIG. 092 (1-L-04) FRONT STABILIZER

| | DESCRIPTION | Q, TÝ | |
|----------------------|--|---|---|
| PART Nº | | C V | REMARKS |
| | | | |
| 42311-85C00 | BAR, STABILIZER FRONT | 1 1 | |
| 42420-85C00 | JOINT | 2 2 | |
| 09320-10024 | BUSH | 4 4 | |
| 09165-10002 | WASHER | 4 4 | |
| 42421-85C00 | NUT | 4 4 | |
| 42412-60A00 | BUSHING, BAR MOUNT | 2 2 | |
| 42411-85C00 | BRACKET, BAR MOUNT | 2 2 | |
| 01 <i>57</i> 0-08203 | BOLT | 2 2 | |
| | 42420-85C00 09320-10024 09165-10002 42421-85C00 42412-60A00 42411-85C00 | 42311-85C00 BAR, STABILIZER FRONT 42420-85C00 JOINT 09320-10024 BUSH 09165-10002 WASHER 42421-85C00 NUT 42412-60A00 BUSHING, BAR MOUNT 42411-85C00 BRACKET, BAR MOUNT | PART N° DESCRIPTION 42311-85C00 BAR, STABILIZER FRONT 1 1 42420-85C00 JOINT 2 2 09320-10024 BUSH 4 4 09165-10002 WASHER 4 4 42421-85C00 NUT 4 4 42412-60A00 BUSHING, BAR MOUNT 2 2 42411-85C00 BRACKET, BAR MOUNT 2 2 |

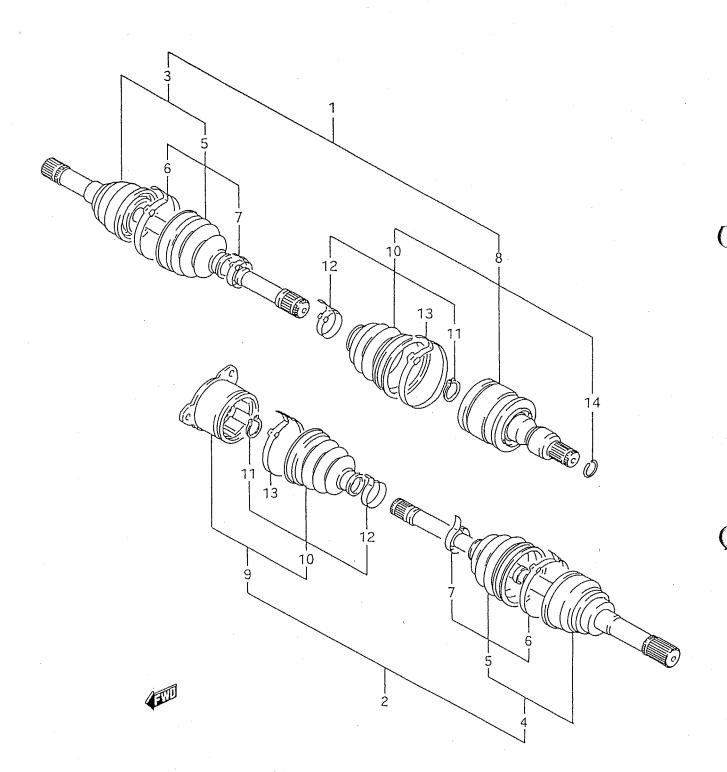

| REF. | PART Nº | DESCRIPTION | Q, | TY | |
|------|-------------|----------------------------|-----|----|---------|
| N.º | | | С | ٧ | REMARKS |
| | | | | | |
| 1 | 44101-60A20 | SHAFT ASSY, FRONT DRIVE RH | 1 | 1 | |
| 2 | 44102-60A10 | SHAFT ASSY, FRONT DRIVE LH | 1 | 1 | |
| 3 | 44131-60A10 | JOINT ASSY, WHEEL SIDE RH | 1 |] | |
| 4 | 44132-60A10 | JOINT ASSY, WHEEL SIDE LH | 1 | 1 | |
| 5 | 44133-60A10 | BOOT SET, WHEEL SIDE | 2 | 2 | |
| 6 | 44121-60A10 | CLAMP | 2 | 2 | |
| 7 | 44124-60A10 | CLAMP | 2 | 2 | |
| 8 | 44135-60A20 | JOINT ASSY, DIFF SIDE RH | 1 | 1 | |
| 9 | 44136-60A10 | JOINT ASSY, DIFF SIDE LH | . 1 | 1 | |
| 10 | 44134-60A10 | BOOT SET, DIFF SIDE | 2 | 2 | |
| 11 | 44111-60A10 | RING, SNAP | 2 | 2 | |
| 12 | 44124-60A10 | CLAMP | 2 | 2 | |
| 13 | 44121-60A10 | CLAMP | 2 | 2 | |
| 14 | 09381-24001 | RING, SNAP RH | 1 | 1 | |

FIG. 94


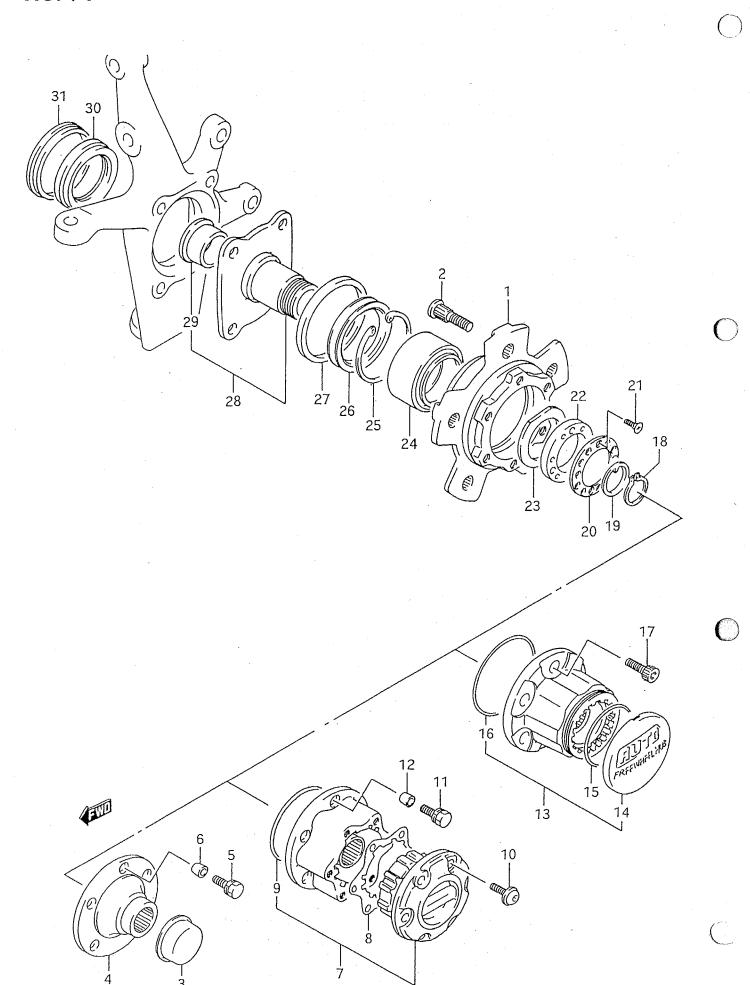





FIG. 094 (1-L-06) FRONT WHEEL HUB

| REF. DARENTO | | | Q, | TY | | |
|--------------|-------------------------------|---------------------------|----|----|-----------------|--|
| N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS | |
| | | | | | | |
| 1 -1 | 43421-60A00 | HUB, FRONT WHEEL | 2 | 2 | N/ABS | |
| 1 -2 | 43421-77E10 | HUB, FRONT WHEEL | 2 | 2 | W/ABS | |
| 2 | 09119-12012 | BOLT | 10 | 10 | | |
| 3 | 43241-80001 | CAP, FRONT AXLE | 2 | - | N/FREE WHEEL | |
| 4 | 43471-60A00 | FLANGE, FRONT AXLE SHAFT | 2 | - | N/FREE WHEEL | |
| 5 | 01 <i>5</i> 70-08253 | BOLT | 12 | - | | |
| 6 | 43841-80001 | WASHER | 12 | - | | |
| 7 | 43800-60811 | HUB ASSY, LOCKING | 2 | 2 | MANUAL FREE | |
| | | | | | WHEEL | |
| 8 | 43813-60A00 | .GASKET | 2 | 2 | | |
| 9 | 43838-60A00 | .O RING | 2 | 2 | | |
| 10 | 43814-60A01 | .BOLT, COVER | 12 | 12 | | |
| 11 | 01 <i>5</i> 70-082 <i>5</i> 3 | .BOLT | 12 | 12 | | |
| 12 | 43841-80001 | .WASHER | 12 | 12 | | |
| 13 | 43810-60A10 | HUB ASSY, AUTO FREE WHEEL | 2 | 2 | AUTO FREE WHEEL | |
| 14 | 43814-60A10 | .COVER | 2 | 2 | | |
| 15 | 43815-83000 | O RING, COVER | 2 | 2 | | |
| 16 | 43838-83000 | .O RING | 2 | 2 | | |
| 1 <i>7</i> | 43811-85C00 | BOLT | 12 | 12 | | |
| 18 | 44141-85C00 | CIRCLIP | 2 | 2 | | |
| 19 | 44182-60A01 | WASHER, SPINDLE THRUST | 2 | 2 | | |
| 20 | 43466-60A00 | WASHER, BEARING LOCK | 2 | 2 | | |
| 21 | 02122-04083 | SCREW | 8 | 8 | | |
| 22 | 43461-60A01 | NUT, BEARING LOCK | 2 | 2 | | |
| 23 | 43465-60A00 | WASHER, WHEEL BEARING | 2 | 2 | | |
| 24 | 09269-41001 | BEARING, FRONT WHEEL | 2 | 2 | | |
| 25 | 43486-85C00 | CIRCLIP | 2 | 2 | | |
| 26 | 09283-54001 | SEAL, WHEEL BEARING OIL | 2 | 2 | | |
| 27 | 09286-75001 | SEAL, WHEEL HUB | 2 | 2 | | |

FIG. 94

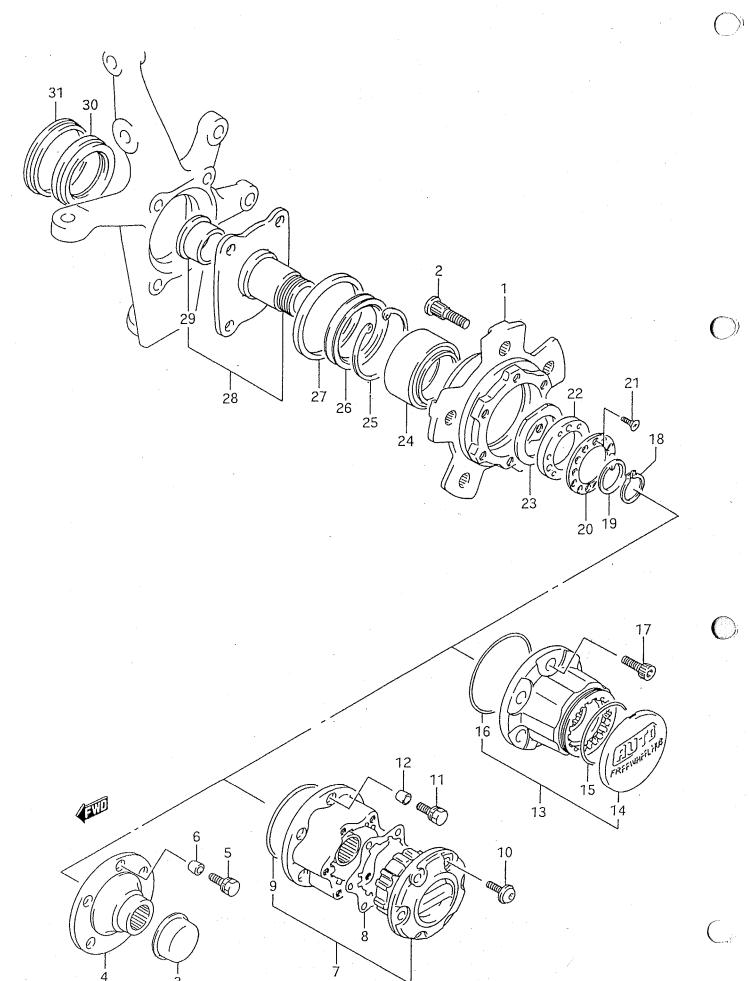

| REF. | | | Q, TY | | |
|--------|---------------|-----------------------|-------|---------|--|
| N.º | PART Nº | DESCRIPTION | C V | REMARKS | |
| | | | | | |
| 28 - 1 | 43440-85C00 | SPINDLE, FRONT WHEEL | 2 2 | N/ABS | |
| 28 - 2 | 2 43440-77E00 | SPINDLE, FRONT WHEEL | 2 2 | W/ABS | |
| 29-1 | 43445-85C00 | .BUSHING | 2 2 | N/ABS | |
| 29-2 | 2 43445-60A11 | .BUSHING | 2 2 | W/ABS | |
| 30 | 09289-48004 | SEAL, OIL INNER | 2 2 | | |
| 31 | 09286-64001 | SEAL, DRIVE SHAFT OIL | 2 2 | | |
| | | | | | |

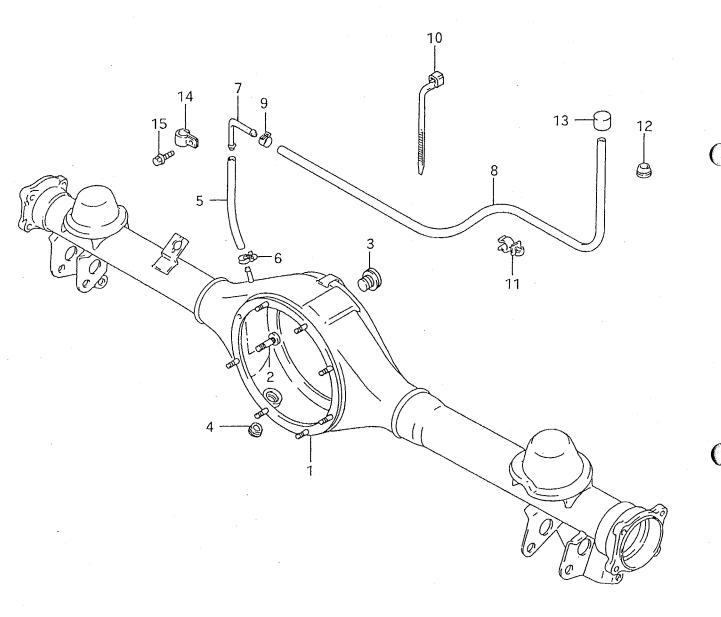

1330

| REF. | | | | TY | | |
|------|-----------------|---------------------------------|-----|-----|---------|--|
| N.º | PART Nº | DESCRIPTION | C - | ٧ | REMARKS | |
| | | | | | | |
| 1 | 46500-85C10 | HOUSING ASSY, REAR AXLE | 1 | 1 | | |
| 2 | 46517-85C00 | .BOLT | 8 | 8 | | |
| 3 | 21947-85C70 | PLUG, OIL LEVEL | 1 | 1 | | |
| 4 | 21947-85C50 | PLUG, DRAIN | 1 | 1 | | |
| 5 | 46520-60A00 | HOSE, BREATHER | 1 | 1 | | |
| 6 | 46528-85C00 | CLAMP | 1 | 1 | | |
| 7 | 09367-08003 | UNION, BREATHER HOSE | 1 | . 1 | | |
| 8-1 | 46581-85C00 | HOSE, BREATHER NO.2 | 1 | 1 | 3DR | |
| 8-2 | 09352-70113-00B | HOSE, BREATHER NO.2 (2000>1390) | - | 1 | 5DR | |
| 9 | 46583-85C00 | CLAMP | 1 | 1 | | |
| 10 | 36990-85C00 | BAND | 1 | 1 | | |
| 11-1 | 09407-14408 | CLAMP | 1 | 1 | 3DR | |
| 11-2 | 09407-14408 | CLAMP | - | 2 | 5DR | |
| 12 | 09308-11009 | GROMMET (ID:11) | 1 | 1 | • | |
| 13 | 46543-85C00 | PLUG, BREATHER | 1 | 1 | | |
| 14 | 09403-14408 | CLAMP | 1 | 1 | | |
| 15 | 01550-06123 | BOLT | 1 | 1 | | |


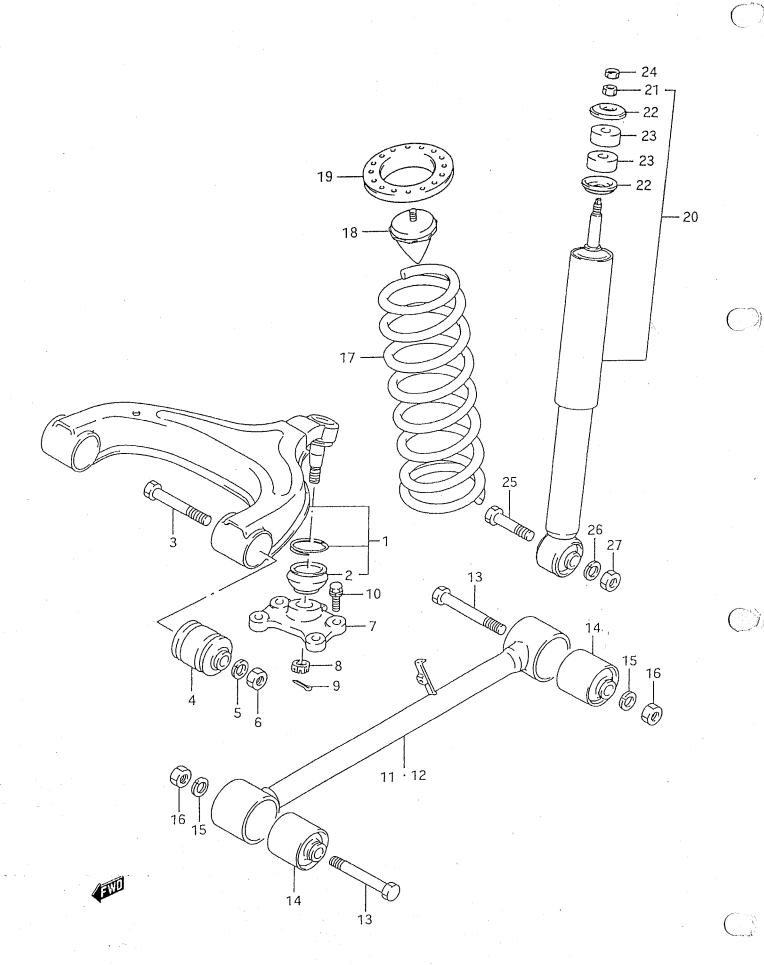




FIG. 096 (1-L-09) REAR SUSPENSION

| | REF. | | | Q, | TY | | |
|----------|---------------|-------------------------------|-------------------------------|----|---------|-----|--|
| N.º | PART Nº | DESCRIPTION | C | V | REMARKS | | |
| | 1 | 1/200 E/R00 | ADAA ACCV CHICDENICIONH IDDED | 7 | 1 | | |
| | 1 | 46200-56B00 | ARM ASSY, SUSPENSION UPPER | 1 | 1 | | |
| | 2 3 | 46206-60A00 09103-12048 | .SEAL SET BOLT | • | • | | |
| | 4 | 4321 <i>5</i> -8 <i>5</i> C00 | BUSHING [*] | 2 | 2 | | |
| | 5 | 08321-01123 | LOCK WASHER | 2 | 2 | | |
| | 6 | 08310-00123 | NUT | 2 | 2 | | |
| | 7 | 46411-60A00 | BOSS, BALL JOINT | 1 | . 1 | | |
| | 8 | 08314-40143 | NUT | 1 | 1 | | |
| | 9 | 04111-30208 | PIN | 1 | 1 | | |
| | 10 | 01 <i>57</i> 0-10303 | BOLT | 4 | 4 | • . | |
| | 11 | 46310-85C00 | ROD, TRAILING RH | 1 | 1 | | |
| ļ | 12 | 46320-85C00 | ROD, TRAILING LH | 1 | 1 | | |
| | 13 | 09103-12048 | BOLT | 4 | 4 | | |
| | 14 | 46314-85C00 | BUSHING | 4 | 4 | | |
| | 15 | 08321-01123 | LOCK WASHER | 4 | 4 | | |
| | 16 | 08310-00123 | NUT | 4 | 4 | | |
| | 1 <i>7-</i> 1 | | SPRING, REAR COIL | 2 | 2 | 3DR | |
| | 1 <i>7</i> -2 | 41311-77E00 | SPRING, REAR COIL | _ | 2 | 5DR | |
| | 18 | 42110-85C00 | STOPPER, BUMPER REAR | 2 | 2 | | |
| | 19 | 41211-60A00 | SEAT, COIL SPRING RUBBER | 2 | 2 | | |
| | 20-1 | 41700-85C10 | ABSORBER ASSY, REAR SHOCK | 2 | 2 | 3DR | |
| | 20-2 | 41700-85C20 | ABSORBER ASSY, REAR SHOCK | _ | 5 | 5DR | |
| | 21 | 08310-00103 | .NUT | 2 | 2 | | |
| | 22 | 09165-10003 | .WASHER | 4 | 4 | | |
| <u>}</u> | 23 | 09320-10040 | .BUSHING | 4 | 4 | | |
| i | 24 | 08310-00103 | NUT | 2 | 2 | i e | |
| | 25 | 09100-12067 | BOLT | 2 | 2 | | |
| | 26 | 08321-01123 | LOCK WASHER | 2 | 2 | | |
| | 27 | 08310-00123 | NUT | 2 | 2 | | |
| | | | | | | | |

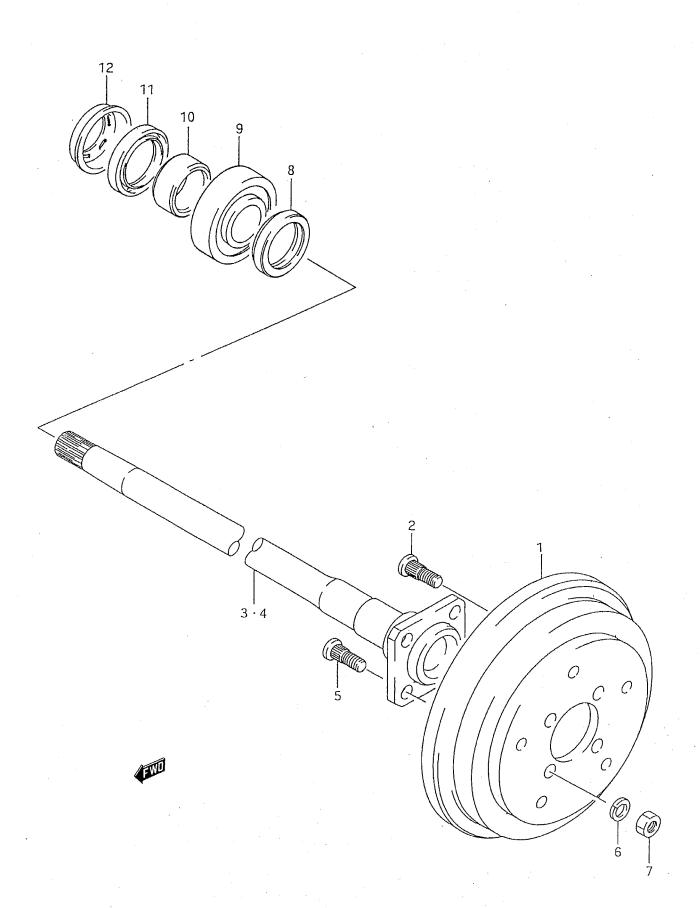

| REF. N.º | PART Nº | DESCRIPTION | Q, C | TY V | REMARKS |
|-------------|-------------|------------------------|---------|---------|---------|
| 1 | 43511-60A00 | DRUM, REAR BRAKE | 2 | 2 | |
| 2 | 44231-85C00 | BOLT | 10 | 10 | |
| 3 | 44210-56B00 | SHAFT, REAR AXLE RH | 1 | 1 | |
| 4 | 44220-56B00 | SHAFT, REAR AXLE LH | 1 | 1 | |
| 5 | 44231-85C00 | BOLT | 8 | 8 | |
| 6 | 08321-01123 | LOCK WASHER | 8 | 8 | |
| 7 | 08310-00123 | NUT, REAR HUB | 8 | 8 | |
| 8 | 09284-45001 | SEAL, OIL OUTER | 2 | 2, | |
| 9 | 09269-35010 | BEARING, REAR WHEEL | 2 | 2 | |
| 10 | 43485-73000 | RING, BEARING RETAINER | 2 | 2 | |
| 11 | 09282-48003 | SEAL, OIL INNER | 2 | 2 | |
| 12 | 43588-73000 | PROTECTOR, OIL SEAL | 2 | 2 | |


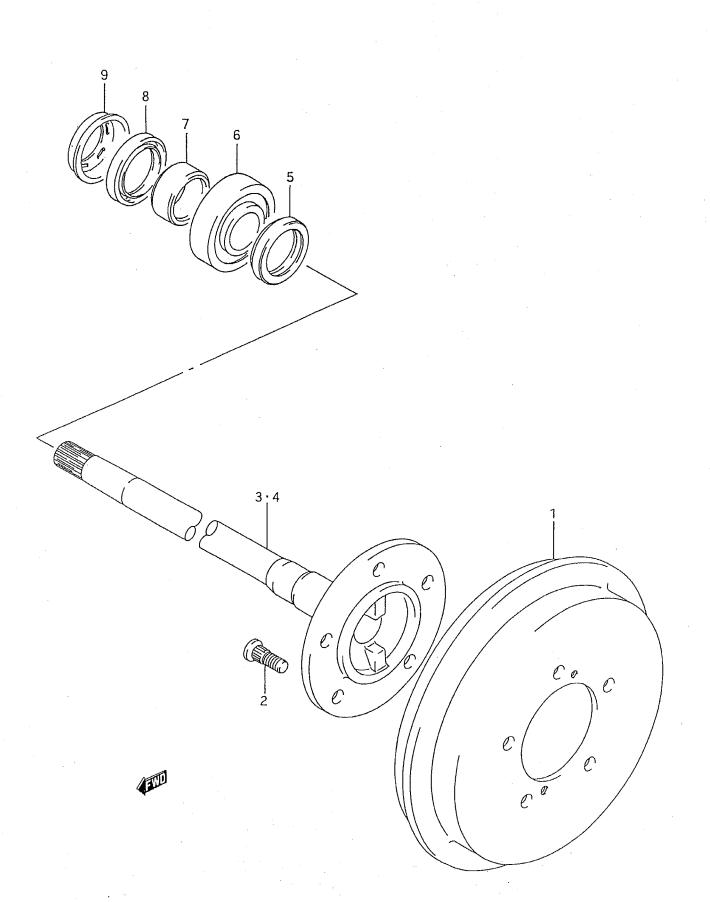


FIG. 098 (1-L-11) REAR AXLE AND BRAKE DRUM (4 VALVE)

| REF. | | Q, TY | | | |
|------|---------------|--------------------------------|----|----|---------|
| N.º | PART Nº | DESCRIPTION | С | ٧ | RÉMARKS |
| | | | | | |
| 1 -1 | 43511-60A10 | DRUM, REAR BRAKE | 2 | 2 | 3DR |
| 1 -2 | 43511-77E00 | DRUM, REAR BRAKE | | 2 | 5DR |
| 2 | 09119-12012 | BOLT | 10 | 10 | |
| 3 | 44211-60A10 → | SHAFT, REAR AXLE RH USE &5 C10 | 1 | 1 | |
| 4 | 44221-60A10 | SHAFT, REAR AXLE LH | 1 | 1 | |
| 5 | 09284-45001 | SEAL, OIL OUTER | 2 | 2 | |
| 6 | 09269-35010 | BEARING, REAR WHEEL | 2 | 2 | |
| 7 | 43485-73000 | RING, BEARING RETAINER | 2 | 2 | |
| 8 | 09282-48003 | SEAL, OIL INNER | 2 | 2 | |
| 9 | 43588-73000 | PROTECTOR, OIL SEAL | 2 | 2 | |

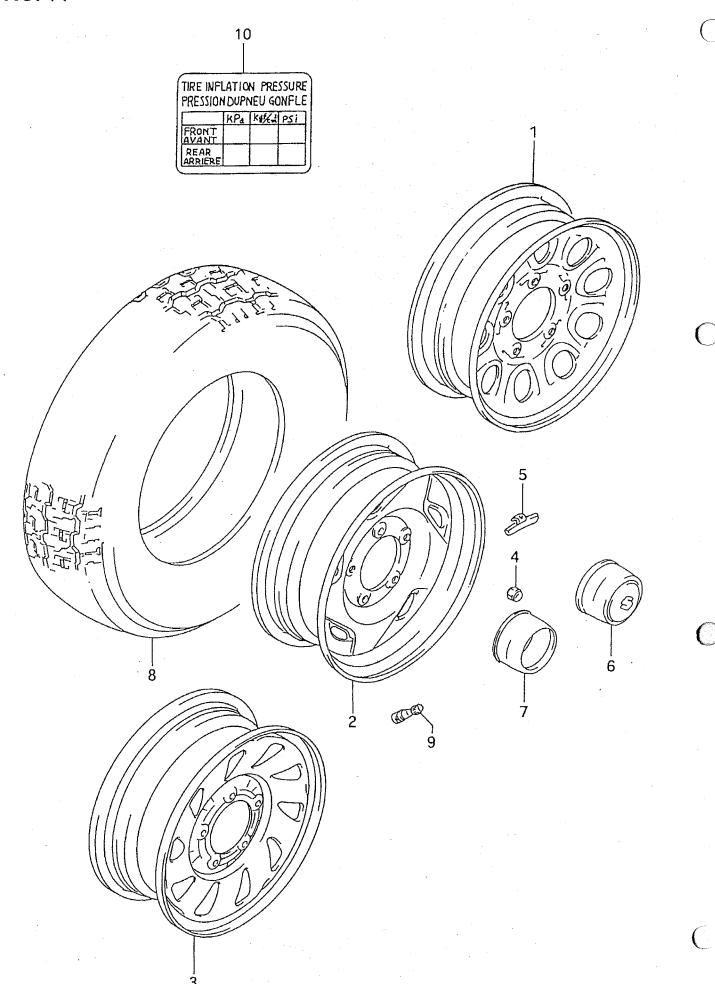

| REF. N.º | PART Nº | DESCRIPTION | <u>Q,</u> C | TY V | REMARKS |
|-------------|-----------------|---------------------------|----------------|------|---------------|
| | | | | | |
| . 1 | 43210-60A20-27S | WHEEL, 15X51/2JJ (SILVER) | 5 | 5 | 3DR |
| 2 | 43210-85C00-27S | WHEEL, 15X51/2JJ (SILVER) | 5 | 5 | 3DR:E22:JLX |
| 3 | 43210-56B20-27S | WHEEL, 15X51/2JJ (SILVER) | - | 5 | 5DR |
| 4 | 09159-12024 | NUT | 20 | 20 | |
| 5-1 | • | WEIGHT, BALANCE (10GRAM) | AR | AR | |
| 5-2 | | WEIGHT, BALANCE (20GRAM) | AR | AR | |
| 5-3 | | WEIGHT, BALANCE (30GRAM) | AR | AR | |
| 5-4 | | WEIGHT, BALANCE (40GRAM) | ΑŔ | AR | |
| 5-5 | | WEIGHT, BALANCE (50GRAM) | AR | AR | |
| 5-6 | | WEIGHT, BALANCE (60GRAM) | AR | AR | |
| 5-7 | | WEIGHT, BALANCE (70GRAM) | AR | AR | |
| 5-8 | | WEIGHT, BALANCE (80GRAM) | AR | AR | |
| 6-1 | 43252-85C00 | CAP, WHEEL CENTER | 4 | 4 | N/LOCKING HUB |
| 6-2 | 43252-85C00 | CAP, WHEEL CENTER | 2 | 2 | W/LOCKING HUB |
| 7 | 43252-60A10 | CAP, WHEEL HUB | 2 | 2 | W/LOCKING HUB |
| 8 | 43110-85C10 | TIRE, 195R15 | 5 | 5 | |
| 9 | 43130-78030 | VALVE, TIRE (TR413) | 5 | 5 | |
| 10 | 79161-85C10 | PLACARD, TIRE INFORMATION | 1 | 1 | |

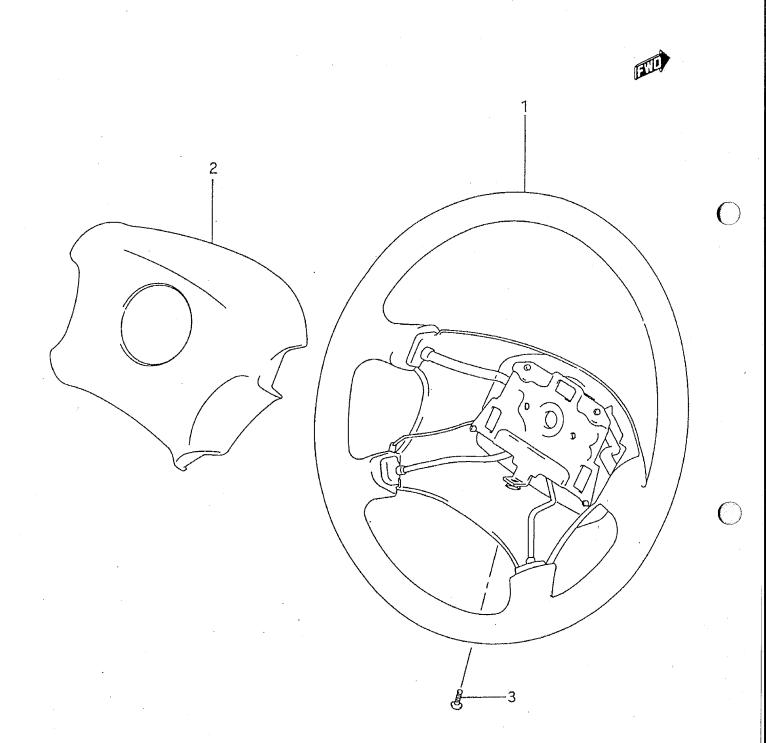


FIG. 100 (1-L-13)

STEERING WHEEL (N/AIR BAG)

| REF. | | | Q, | TY | |
|------|-----------------|-----------------------------|----|----|---------|
| N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS |
| | | | | | |
| 1 | 48110-62G00-5ES | WHEEL, STEERING (BLACK) | 1 | 1 | |
| 2 | 48120-62G50-5ES | PAD, STEERING WHEEL (BLACK) | 1 | 1 | |
| 3 | 02112-75163 | SCREW | 1 | 1 | : |


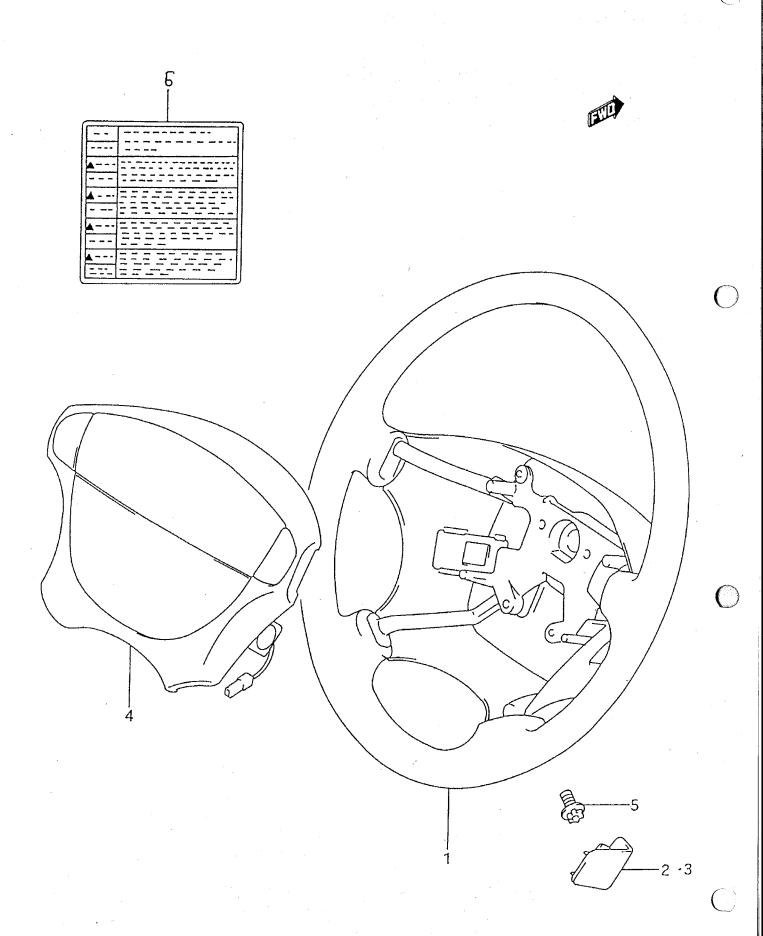



FIG. 101 (1-L-14) STEERING WHEEL (W/AIR BAG)

| REF. N.º | PART Nº | DESCRIPTION | Q, C | TY | REMARKS |
|-------------|--------------------------|------------------------------|------|----|---------|
| | | | | | |
| 1 | 48110-50G00-5ES | WHEEL, STEERING (BLACK) | , 1 | 1 | |
| 2 | 48118-50G00-5ES | CAP, SIDE COVER RH (BLACK) | 1 | 1 | |
| 3 | 48119-50G00-5ES | CAP, SIDE COVER LH (BLACK) | 1 | 1 | |
| 4 | 481 <i>50-77</i> E70-5ES | MODULE ASSY, AIR BAG (BLACK) | 1 | 1 | |
| 5 | 09119-08084 | BOLT, AIR BAG MODULE | 2 | 2 | |
| 6 | 79171-50G70 | LABEL, AIR BAG | 1 | 1 | |


FIG. 102

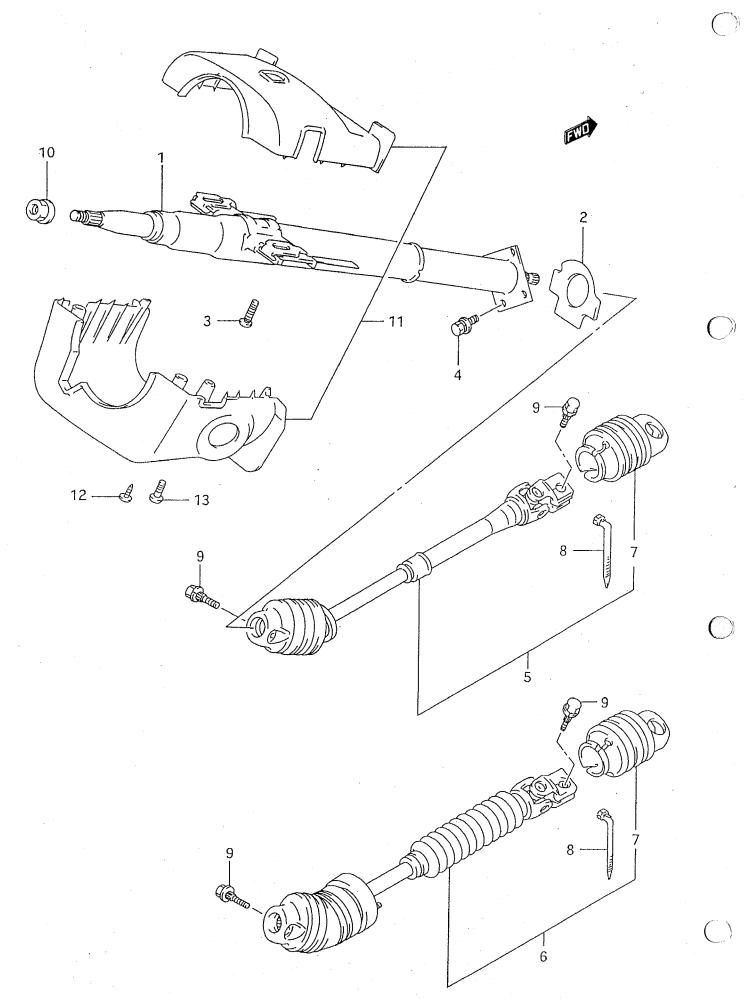

| REF. | | | Q, TY | | _ | |
|------|----------------------|-------------------------------|---|---|-----------|--|
| N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS | |
| | | | a pa 144 444 444 444 444 444 444 444 444 44 | | | |
| 1 -1 | 48200-77E00 | COLUMN ASSY, STEERING | 1 | 1 | N/AIR BAG | |
| 1 -2 | 48200-77E10 | COLUMN ASSY, STEERING | 1 | 1 | W/AIR BAG | |
| 2 | 48491-77E00 | SEAL, STEERING COLUMN RUBBER | 1 | 1 | | |
| 3 | 09139-08015 | SCREW, STEERING COLUMN (8X30) | 2 | 2 | | |
| 4 | 01 <i>5</i> 70-08203 | BOLT, STEERING COLUMN LOWER | 4 | 4 | | |
| 5 | 48220-77E10 | SHAFT, STEERING,LOWER | 1 | 1 | N/AIR BAG | |
| 6 | 48220-62A11 | SHAFT, STEERING LOWER | 1 | 1 | W/AIR BAG | |
| 7 | 48228-60A00 | .BOOT, JOINT,LOWER | 1 | 1 | • | |
| 8 | 48229-60A00 | .STRAP, BOOT | 1 | 1 | | |
| 9 | 09117-08068 | BOLT, JOINT | 2 | 2 | | |
| 10 | 09159-12025 | NUT, STEERING SHAFT | 1 | 1 | | |
| 11-1 | 48400-77E50-5ES | COVER SET, STEERING COLUMN | 1 | 1 | LHD | |
| | | (BLACK) | | | | |
| 11-2 | 48400-77E00-5ES | COVER SET, STEERING COLUMN | 1 | 1 | RHD | |
| | | (BLACK) | | | | |
| 12 | 03211-05163 | SCREW, STEERING COVER | 4 | 4 | | |
| 13 | 09136-05030 | SCREW, STEERING COVER LOWER | 1 | 1 | | |

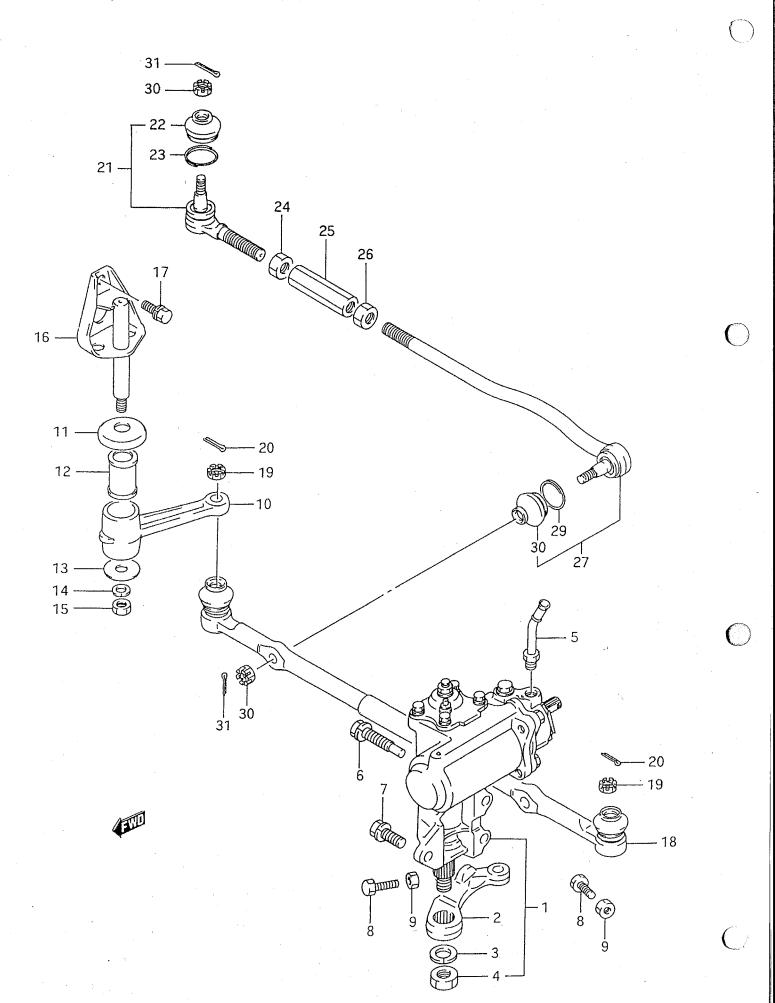


| REF. | | | Q, | TY | | |
|------------|-------------------------------|----------------------------|------|----|-----|---------|
| N.º | PART Nº | DESCRIPTION | С | ٧ | . [| REMARKS |
| | | | | | | |
| 1 | 48600-56B70 | BOX ASSY, STEERING GEAR | 1 | 1 | | |
| 2 | 48671-60A70 | .ARM, PITMAN | 1 | 1 | | |
| 3 | 08321-21208 | .LOCK WASHER | 1 | 1 | | |
| 4 | 48674-63240 | .NUT, PITMAN ARM | 1 | 1 | | |
| 5 | 48691-56B70 | .TUBE, RETURN | 1 | 1 | | |
| 6 | 01 <i>57</i> 0-123 <i>5</i> 3 | BOLT, GEAR BOX PILOT | 1 | 1 | | |
| 7 | 01 <i>57</i> 0-12353 | BOLT | 2 | 2 | | |
| 8 | 48775-60A00 | BOLT, STOPPER | 2 | 2 | | |
| 9 | 08310-00103 | NUT | 2 | 2 | | |
| 10 | 48721-60A00 | ARM, IDLER | 1 | 1 | | |
| 11 | 48771-60A00 | WASHER, IDLER ARM UPPER | 1 | 1 | | |
| 12 | 48750-60A00 | BUSHING, IDLER ARM | 1 | 1 | | |
| 13 | 09160-12079 | WASHER (12.2X40X2.6) | 1 | 1 | | |
| 14 | 08321-01123 | LOCK WASHER | 1 | 1 | | |
| 15 | 08310-00123 | NUT | 1 | 1 | | |
| 16 | 48760-60A01 | BRACKET, IDLER ARM | 1 | 1 | | |
| 1 <i>7</i> | 01 <i>57</i> 0-10203 | BOLT | 3 | 3 | | |
| 18 | 48850-85C00 | LINK ASSY, STEERING CENTER | 1 | 1 | | |
| 19 | 08314-40123 | NUT | 2 | 2 | | |
| 20 | 04111-30208 | COTTER PIN | 2 | 2 | | |
| 21 | 48810-85C00 | END, STEERING TIE ROD RH | 2 | 2 | | |
| 22 | 48814-85C00 | .SEAL, DUST | 2 | 2 | | A |
| 23 | 48815-85C00 | .CLIP, DUST SEAL | 2 | 2 | | |
| 24 | 09140-16022 | NUT, TIE ROD END RH | 2 | 2 | | |
| 25 | 48836-85C00 | CONNECTOR, TIE ROD END | 2 | 2 | | |
| 26 | 09140-16023 | NUT, TIE ROD END LH | 2 | 2 | | |
| 27 | 48820-85C00 | END, STEERING TIE ROD LH | 2 | 2 | | |
| 28 | 48814-85C00 | .SEAL, DUST | 2 | 2 | | |
| 29 | 48815-85C00 | .CLIP, DUST SEAL | 2 | 2 | | |
| 30 | 08314-40123 | NUT | 4 | 4 | | |
| 31 | 04111-30208 | COTTER PIN | 4 | 4 | | |

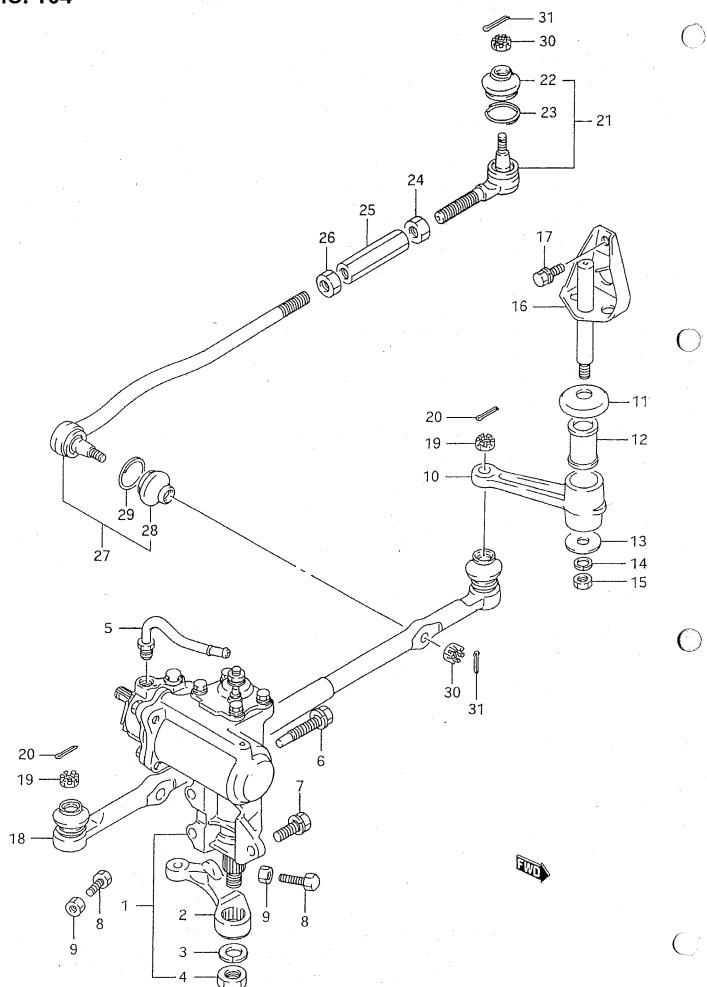


| - 1 | IG. | 1. | \wedge | (1 | |
|------------|-----|----|----------|-----|---|
| | (7 | 1 | UZL | | - |
| | | | | | |

| REF. | PART Nº | DESCRIPTION | Q, TY | | | |
|------------|-------------------------------|----------------------------|-------|-----|---------|--|
| N.º | | | | : V | REMARKS | |
| | | | | | | |
| 1 | 48600-60A22 | BOX ASSY, STEERING GEAR | 1 | 1 | | |
| 2 | 48671-60A20 | .ARM, PITMAN | 1 | 1 | | |
| 3 | 08321-21208 | .LOCK WASHER | 1 | 1 | | |
| 4 | 48674-63240 | .NUT, PITMAN ARM | 1 | 1 | | |
| 5 | 48691-60A21 | .TUBE, RETURN | 1 | 1 | | |
| 6 | 01 <i>57</i> 0-123 <i>5</i> 3 | BOLT, GEAR BOX PILOT | 1 | 1 | | |
| 7 | 01 <i>57</i> 0-12353 | BOLT | 2 | 2 2 | | |
| 8 | 48775-60A00 | BOLT, STOPPER | 2 | 2 2 | | |
| 9 | 08310-00103 | NUT | 2 | 2 2 | | |
| 10 | 48721-60A00 | ARM, IDLER | 1 | 1 | | |
| 11 | 48771-60A00 | WASHER, IDLER ARM UPPER | 1 | 1 | | |
| 12 | 48750-60A00 | BUSHING, IDLER ARM | 1 | 1 | | |
| 13 | 09160-12079 | WASHER (12.2X40X2.6) | 1 | 1 | | |
| 14 | 08321-01123 | LOCK WASHER | 1 | 1 | | |
| 15 | 08310-00123 | NUT | 1 | 1 | | |
| 16 | 48760-60A01 | BRACKET, IDLER ARM | 1 | 1 | | |
| 1 <i>7</i> | 01 <i>57</i> 0-10203 | BOLT | 3 | 3 | | |
| 18 | 48850-85C00 | LINK ASSY, STEERING CENTER | 1 | 1 | | |
| 19 | 08314-40123 | NUT | 2 | 2 2 | | |
| 20 | 04111-30208 | COTTER PIN | 2 | 2 2 | | |
| 21 | 48810-85C00 | END, STEERING TIE ROD RH | 2 | 2 2 | | |
| 22 | 48814-85C00 | .SEAL, SET, DUST | 2 | 2 2 | | |
| 23 | 48815-85C00 | .CLIP, DUST SEAL | 2 | 2 2 | | |
| 24 | 09140-16022 | NUT, TIE ROD END RH | 2 | 2 2 | | |
| 25 | 48836-85C00 | CONNECTOR, TIE ROD END | 2 | 2 2 | | |
| 26 | 09140-16023 | NUT, TIE ROD END LH | 2 | 2 2 | · · | |
| 27 | 48820-85C00 | END, STEERING TIE ROD LH | 2 | 2 2 | | |
| 28 | 48814-85C00 | .SEAL, SET, DUST | 2 | 2 2 | | |
| 29 | 48815-85C00 | .CLIP, DUST SEAL | 2 | 2 2 | | |
| 30 | 08314-40123 | NUT | 4 | 4 | | |
| 31 | 04111-30208 | COTTER PIN | 2 | 4 | | |

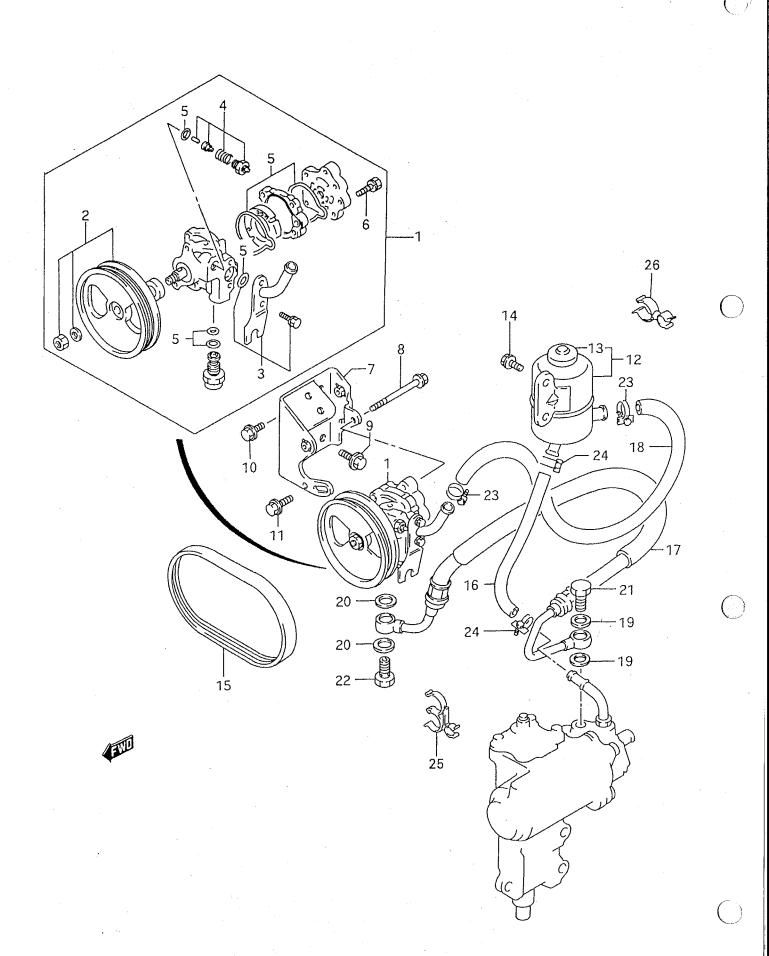

| REF. | | | Q, TY | | |
|------------|-------------|-------------------------------|-------|------|------------|
| N.º | PART Nº | DESCRIPTION | C | | REMARKS |
| | | | | | |
| 1 | 49100-56B20 | PUMP ASSY, POWER STEERING | 1 | 1 | |
| 2 | 49111-56B20 | .PULLEY SET | 1 | 1 | |
| 3 | 49112-56B20 | .CONNECTOR SET | 1 | 1 | |
| 4 | 49113-56B20 | .TERMINAL SET | 1 | 1 | |
| 5 | 49114-56B20 | .SEAL SET | 1 | . 1 | |
| 6 6 | 49115-56B20 | .BOLT SET | 1 | 1 | |
| 7-1 | 49120-56B11 | BRACKET, PUMP | 1 | 1 | 2 VALVE |
| 7-2 | 49120-56B00 | BRACKET, PUMP | 1 | 1 | 4 VALVE |
| 8 | 09103-08132 | BOLT, PUMP | 1 | 1 | |
| 9 | 01550-10203 | BOLT, BRACKET NO.1 | 2 | 2 | |
| 10 | 01550-08203 | BOLT, PUMP HOLDER | 1 | 1 | |
| 11 | 01550-08203 | BOLT, BRACKET NO.2 | 1 | 1 | |
| 12-1 | 49140-56B00 | TANK ASSY, POWER STEERING OIL | 1 | 1 | |
| 12-2 | 49140-60A01 | TANK ASSY, POWER STEERING OIL | 1 | 1 | 1.9 DIESEL |
| 13 | 49141-60A00 | .CAP, TANK | 1 1 | 1 | |
| 14 | 01550-06103 | BOLT, TANK | 2 | 2 | |
| 15 | 17521-85C00 | BELT, POWER STEERING | 1 | 1. | N/AIR CON |
| 16 | 49211-60A70 | HOSE, RETURN | 1 | 1 | |
| 1 <i>7</i> | 49230-79E00 | HOSE, PRESSURE | 1 | 1 | |
| 18-1 | 49214-56B00 | HOSE, SUCTION | 1 | 1 | er er |
| 18-2 | 49214-86CA0 | HOSE, SUCTION | 1 | 1 | 1.9 DIESEL |
| 19 | 09168-14009 | GASKET, GEAR BOX (14X18X1.5) | 2 | 2 | |
| 20 | 09168-16002 | GASKET, POWER STRG PUMP | 2 | 2 | |
| 21 -1 | 49251-85C00 | BOLT, UNION GEAR BOX (14X27) | a.] . | s. 1 | |
| 21 -2 | 09360-14011 | BOLT, UNION GEAR BOX | 1 | 1 | 1.9 DIESEL |
| 22-1 | 49252-85C00 | BOLT, UNION PUMP | 1 | 1 | |
| 22-2 | 49252-86CA0 | BOLT, UNION PUMP | /1 | 1 | 1.9 DIESEL |
| 23 | 09400-24301 | CLAMP, SUCTION | 2 | 2 | |
| 24 | 49253-85C00 | CLAMP, RETURN | 2 | 2. | |
| 25 | 09408-00126 | CLAMP | 1 | 1 | |
| 26 | 09408-00176 | CLAMP | 1 | 1 | · · |

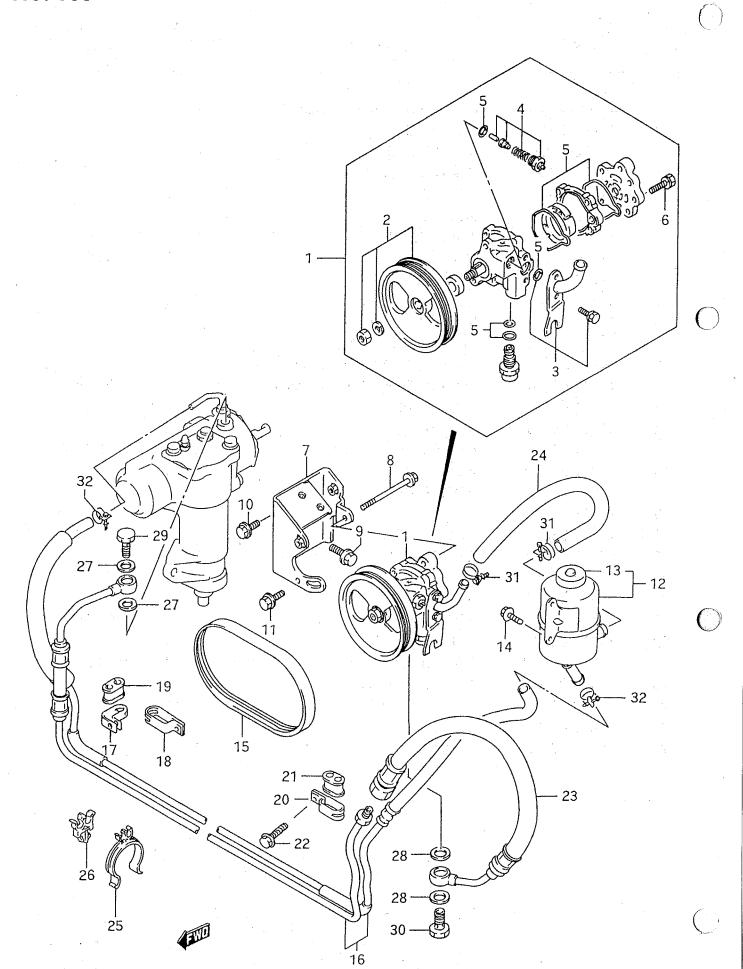

| REF. | | | Q, TY | | |
|------|-------------|-------------------------------|-------|-----|-----------|
| N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS |
| | | | | | |
| 1 | 49100-56B20 | PUMP ASSY, POWER STEERING | 1 | 1 | |
| 2 | 49111-56B20 | .PULLEY SET | 1 | 1 | |
| 3 | 49112-56B20 | .CONNECTOR SET | 1 | 1 | |
| 4 | 49113-56B20 | .TERMINAL SET | 1 | 1 | |
| 5 | 49114-56B20 | .SEAL SET | 1 | 1 | |
| 6 | 49115-56B20 | BOLT SET | 1 | 1 | |
| 7-1 | 49120-56B11 | BRACKET, PUMP | 1 | 1 | 2 VALVE |
| 7-2 | 49120-56B00 | BRACKET, PUMP | 1 | 1 | 4 VALVE |
| 8 | 09103-08132 | BOLT, PUMP | 1 | 1 | |
| 9 | 01550-10203 | BOLT, BRACKET NO.1 | 2 | 2 | |
| 10 | 01550-08203 | BOLT, BRACKET NO.2 | 1 | 1 | |
| 11 | 01550-08203 | BOLT | 1 | 1 | |
| 12 | 49140-56B00 | TANK ASSY, POWER STEERING OIL | 1 | 1 | |
| 13 | 49141-60A00 | CAP, TANK | 1 | 1 | |
| 14 | 01550-06103 | BOLT, TANK | 2 | 2 | |
| 15 | 17521-85C00 | BELT, POWER STEERING | 1 | 1 | N/AIR CON |
| 16-1 | 49200-60A21 | HOSE, RETURN | 1 | 1 | 3DR |
| 16-2 | 49200-56B10 | HOSE, RETURN | 1 | 1 | 5DR |
| 17 | 49222-60A00 | .BRACKET, PIPE | 1 | 1 | 3DR |
| 18 | 49226-56B00 | BRACKET, PIPE | 1. | 1 | 5DR |
| 19-1 | 49224-60A00 | .BUSH, PIPE | 1 | - 1 | 3DR |
| 19-2 | 49227-56B00 | .BUSH, PIPE | 1 | 1 | 5DR |
| 20 | 49223-60A00 | .BRACKET, PIPE | 1 | 1 | • |
| 21 | 49224-60A00 | BUSH, PIPE | 1 | 1 | |
| 22 | 01550-08253 | BOLT, PIPE, BRACKET | 2 | 2 | 5DR |
| 23 | 49210-60A21 | HOSE, PRESSURE | 1 | 1 | |
| 24 | 49214-56B00 | HOSE, SUCTION | 1 | 1 | |
| 25 | 49225-60A00 | CLAMP, PIPE | 2 | 2 | 3DR |
| 26 | 49225-56B00 | CLAMP, PIPE | 2 | 2 | 5DR |



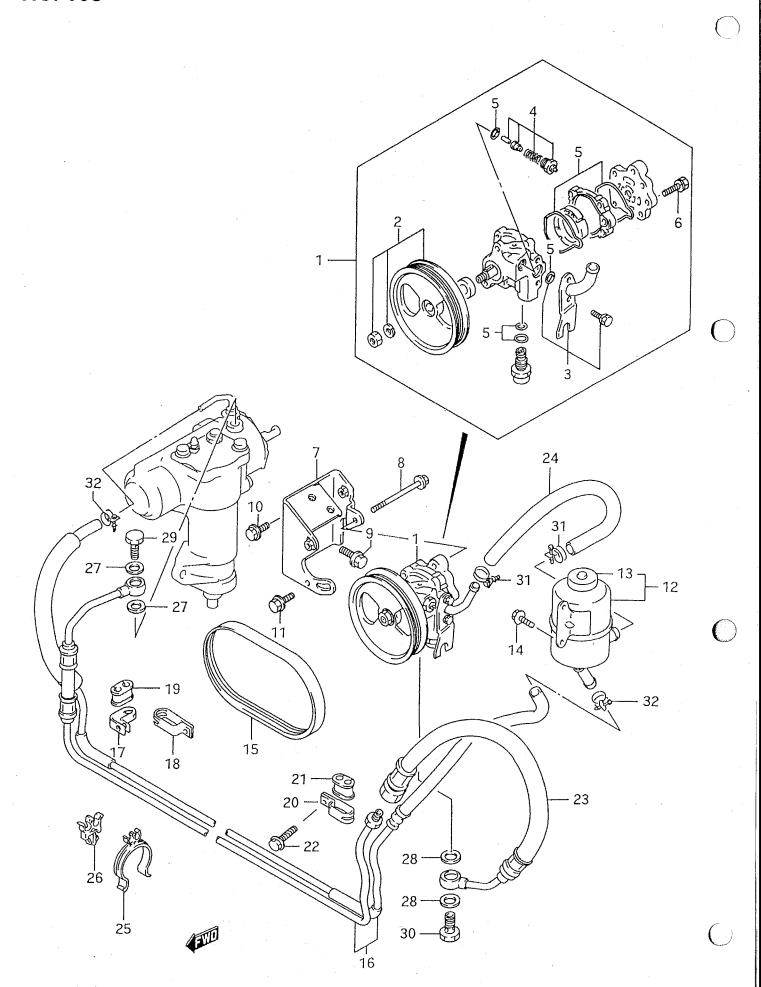


FIG. 106 (1-M-06) POWER STEERING OIL PUMP (RHD)

| REF. N.º | PART Nº | DESCRIPTION | Q, C | TY V | REMARKS |
|-------------|-------------|------------------------------|---------|---------|---------|
| | | 010/57 05 10 00/ /1 //10/1 5 | | | |
| 27 | 09168-14009 | GASKET, GEAR BOX (14X18X1.5) | 2 | 2 | |
| 28 | 09168-16002 | GASKET, POWER STRG PUMP | 2 | 2 | |
| 29 | 49251-85C00 | BOLT, UNION GEAR BOX | 1 | 1 | |
| 30 | 49252-85C00 | BOLT, UNION PUMP | 1 | . 1 | |
| 31 | 09400-24301 | CLAMP, SUCTION | 2 | 2 | |
| 32 | 49253-85C00 | CLAMP, RETURN | 2 | 2 | |

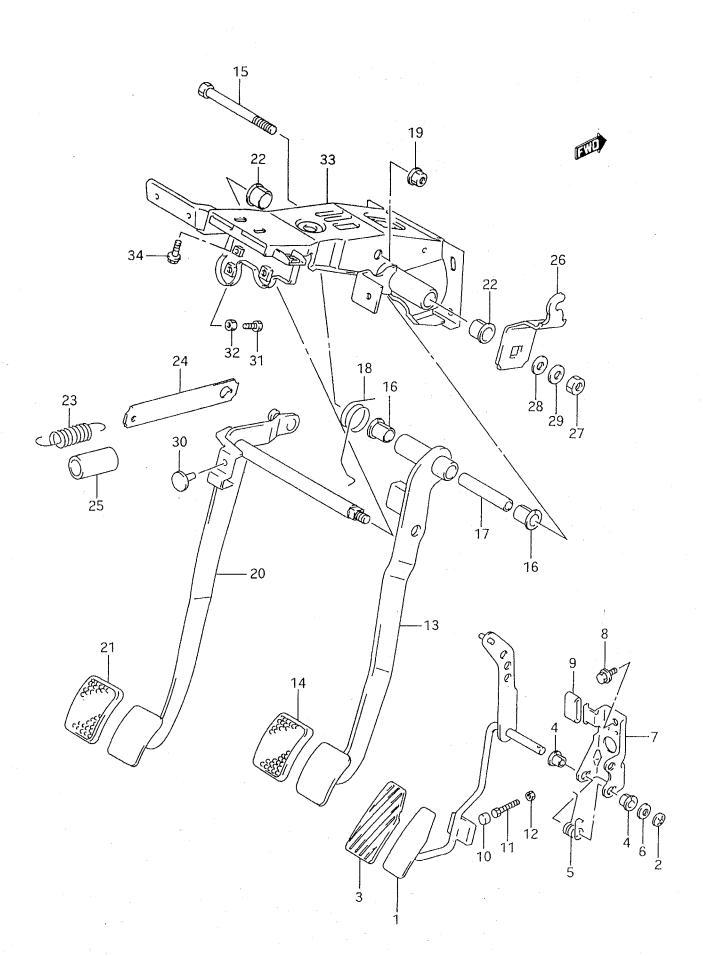

| REF. | PART Nº | DESCRIPTION | Q, TY | |
|------------|-------------|--------------------------------|-------|---------|
| N.º | | | CV | REMARKS |
| | | | | |
| 1 | 49410-62A51 | PEDAL SET, ACCELERATOR | 1 1 | |
| 2 | 09148-09001 | NUT, PUSH | 1 1 | |
| 3 | 49451-60B00 | PAD, ACCELERATOR PEDAL | 1 1 | |
| 4 | 09307-09001 | BUSH, PEDAL SHAFT | 2 2 | |
| 5 | 09448-21003 | SPRING, PEDAL RETURN | 1 1 | |
| 6 | 09160-09007 | WASHER, PEDAL SHAFT (9.5X20X1) | 1 1 | |
| 7 | 49511-60A00 | BRACKET, ACCELERATOR | 1 1 | |
| 8 | 01570-06123 | BOLT, BRACKET (6X10) | 2 2 | |
| 9 | 49416-60A00 | CUSHION, PEDAL RETURN | 1 1 | |
| 10 | 09251-09002 | CUSHION, PEDAL STOPPER | 1 1 | |
| 11 | 09100-06150 | BOLT, PEDAL STOPPER | 1 1 | |
| 12 | 08310-00063 | NUT | 1 1 | |
| 13 | 49610-62A51 | PEDAL, BRAKE | 1 1 | |
| 14 | 49751-79001 | PAD, PEDAL | 1 1 | |
| 15 | 09100-10226 | BOLT, PEDAL SHAFT (10X96) | 1 1 | |
| 16 | 09306-13004 | BUSH, PEDAL SHAFT | 2 2 | |
| 1 <i>7</i> | 09180-10118 | SPACER, PEDAL (10.1X13X81) | 1 1 | |
| 18 | 49691-62A00 | SPRING, PEDAL RETURN | 1 1 | |
| 19 | 08316-20103 | NUT, PEDAL | 1 1 | |
| 20 | 49810-62A51 | PEDAL, CLUTCH | 1 1 | |
| 21 | 49751-79001 | PAD, PEDAL | 1: 1 | |
| 22 | 09306-13004 | BUSHING, PEDAL SHAFT | 2 2 | |
| 23 | 49818-77500 | SPRING, CLUTCH PEDAL | 1 1 | |
| 24 | 49831-62A50 | ARM, RETURN SPRING | 1 1 | |
| 25 | 49821-77500 | TUBE, RETURN SPRING | 1 1 | |
| 26 | 49821-62A51 | LEVER, CLUTCH PEDAL | 1 1 | |
| 27 | 08310-00103 | NUT, PEDAL LEVER | 1 1 | |
| 28 | 08322-01103 | WASHER, PEDAL LEVER | 1 1 | |
| 29 | 08321-01103 | LOCK WASHER | 1 1 | |
| 30 | 09321-06026 | CUSHION, PEDAL RETURN | 1 1 | |
| 31 | 09100-06088 | BOLT, PEDAL RETURN STOP | 1 1 | |
| 32 | 08310-00063 | NUT, PEDAL RETURN STOP | 1 1 | |
| 33 | 49710-62A53 | BRACKET, PEDAL | 1 1 | |
| 34 | 01550-08203 | BOLT, BRACKET | 2 2 | |

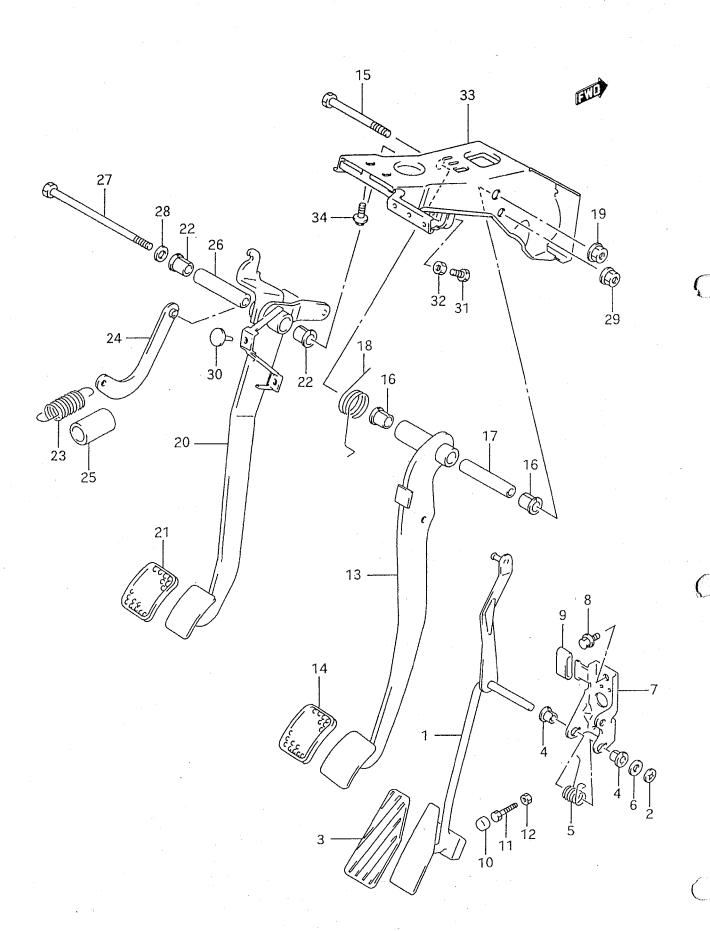

| חרר | | | Q, TY | | |
|-------------|----------------------|--------------------------------|-------|-----|---------|
| REF. N.º | PART Nº | DESCRIPTION | C | V | REMARKS |
| 1 | 49410-62A01 | PEDAL SET, ACCELERATOR | 1 | 1 | |
| 2 | 09148-09001 | NUT, PUSH | 1 | 1 | |
| 3 | 49451-60B00 | PAD, ACCELERATOR PEDAL | 1 | 1 | |
| 4 | 09307-09001 | BUSH, PEDAL SHAFT | 2 | 2 | |
| 5 | 09448-21003 | SPRING, PEDAL RETURN | 1 | 1 | |
| 6 | 09160-09007 | WASHER, PEDAL SHAFT (9.5X20X1) | 1 | 1 | |
| 7 | 49511-60A00 | BRACKET, ACCELERATOR | 1 | 1 | • |
| 8 | 01 <i>57</i> 0-06123 | BOLT, BRACKET | 2 | 2 | |
| 9 | 49416-60A00 | CUSHION, PEDAL RETURN | 1 | 1 | |
| 10 | 09251-09002 | CUSHION, PEDAL STOPPER | 1 | 1 | • |
| 11 | 09100-06150 | BOLT, PEDAL STOPPER | 1 | 1 | |
| 12 | 08310-00063 | NUT, PEDAL SPOPPER | 1 | 1 | |
| 13 | 49610-62A00 | PEDAL, BRAKE | 1 | 1 | |
| 14 | 49751-79001 | PAD, PEDAL | 1 | 1 | |
| 15 | 09100-10226 | BOLT, PEDAL SHAFT | 1 | 1 | |
| 16 | 09306-13004 | BUSH, PEDAL SHAFT | 2 | 2 | |
| 17 | 09180-10118 | SPACER, PEDAL (10.1X13X81) | 1 | 1 . | |
| 18 | 49691-62A00 | SPRING, PEDAL RETURN | 1 | 1 | |
| 19 | 08316-20103 | NUT, PEDAL | . 1 | 1 | |
| 20 | 49810-62A51 | PEDAL, CLUTCH | 1 | 1 | |
| 21 | 49751-79001 | PAD, PEDAL | 1 | 1 | |
| 22 | 09306-13004 | BUSHING, PEDAL SHAFT | 2 | 2 | |
| 23 | 49818-77500 | SPRING, CLUTCH PEDAL | 1 | 1 | |
| 24 | 49831-62A00 | ARM, RETURN SPRING | 1 | 1 | |
| 25 | 49821-77500 | TUBE, RETURN SPRING | 1 | 1 | |
| 26 | 09180-10135 | SPACER, CLUTCH PEDAL SHAF | 1 | 1 | • |
| 27 | 09103-10122 | BOLT, CLUTCH PEDAL SHAF | 1 | 1 | |
| 28 | 08322-01103 | WASHER, ARM | 1 | 1 | |
| 29 | 08316-20103 | NUT, PEDAL | 1 | 1 | |
| 30 | 09321-06026 | CUSHION, PEDAL RETURN | 1 | 1 | |
| 31 | 09100-06088 | BOLT, PEDAL RETURN STOP | 1 | 1 | |
| 32 | 08310-00063 | NUT, PEDAL RETURN STOP | 1 | 1 | |
| 33 | 49710-62A01 | BRACKET, PEDAL | 1 | 1 | |
| 34 | 01550-08203 | BOLT, BRACKET | 2 | 2 | |


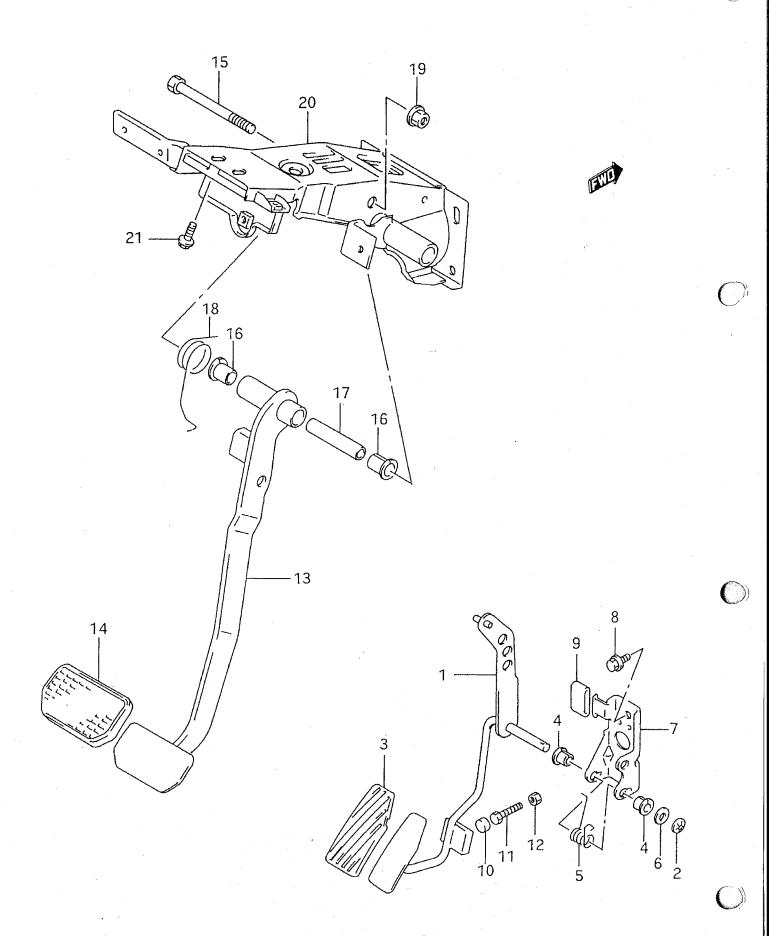


FIG. 109 (1-M-09) PEDAL AND PEDAL BRACKET (AT:LHD)

| REF. | PART Nº | DESCRIPTION | Q, TY | |
|------------|----------------------|--------------------------------|-------|---------|
| N.º | | | CV | REMARKS |
| | | | | |
| 1 | 49410-62A51 | PEDAL, ACCELERATOR | 1 1 | |
| 2 | 09148-09001 | NUT, PUSH | 1 1 | |
| 3 | 49451-60B00 | PAD, ACCELERATOR PEDAL | 1 1 | |
| 4 | 09307-09001 | BUSH, PEDAL SHAFT | 2 2 | |
| 5 | 09448-21003 | SPRING, PEDAL RETURN | 1 1 | |
| 6 | 09160-09007 | WASHER, PEDAL SHAFT (9.5X20X1) | 1 1 | |
| 7 | 49511-60A00 | BRACKET, ACCELERATOR | 1 1 | |
| 8 | 01 <i>5</i> 70-06123 | BOLT, BRACKET | 2 2 | |
| 9 | 49416-60A00 | CUSHION, PEDAL RETURN | 1 1 | |
| 10 | 09251-09002 | CUSHION, PEDAL STOPPER | 1 1 | |
| 11 | 09100-06150 | BOLT, PEDAL STOPPER | 1 1 | |
| 12 | 08310-00063 | NUT | 1 1 | |
| 13 | 49610-62A62 | PEDAL, BRAKE | 1 1 | |
| 14 | 49751-86300 | PAD, PEDAL | 1 1 | |
| 15 | 09100-10226 | BOLT, PEDAL SHAFT (10X96) | 1 1 | |
| 1.6 | 09306-13004 | BUSH, PEDAL SHAFT | 2 2 | |
| 1 <i>7</i> | 09180-10121 | SPACER, PEDAL (10.1X13X81) | 1 1. | |
| 18 | 49691-62A00 | SPRING, PEDAL RETURN | 1 1 | |
| 19 | 08316-20103 | NUT, PEDAL | 1 1 | |
| 20 | 49710-62A63 | BRACKET, PEDAL | 1 1 | |
| 21 | 01550-08203 | BOLT, BRACKET | 2 2 | |

NO USAR ESTA PAGINA PARA MERCADO ESPAÑOL DO NOT USE THIS PAGE FOR SPANISH MARKET

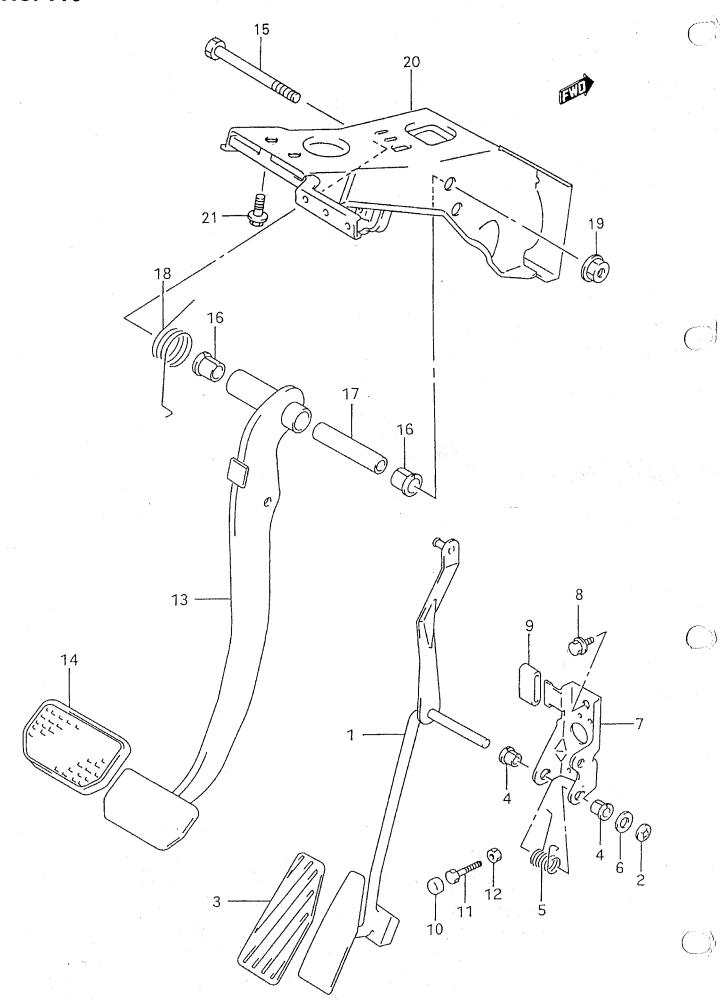

| REF. | D1 DT 110 | | Q, | TY | | |
|------------|----------------------|--------------------------------|----|----|---------|---|
| N.º | PART Nº | DESCRIPTION | C | ٧ | REMARKS | |
| | | · | | | | |
| 1 | 49410-62A01 | PEDAL, ACCELERATOR | 1 | 1 | | |
| 2 | 09148-09001 | NUT, PUSH | 1 | 1 | | |
| 3 | 49451-60B00 | PAD, ACCELERATOR PEDAL | 1 | 1 | | |
| 4 | 09307-09001 | BUSH, PEDAL SHAFT | 2 | 2 | | |
| 5 | 09448-21003 | SPRING, PEDAL RETURN | 1 | 1 | | |
| 6 | 09160-09007 | WASHER, PEDAL SHAFT (9.5X20X1) | 1 | 1 | | |
| 7 | 49511-60A00 | BRACKET, ACCELERATOR | 1 | 1 | | |
| 8 | 01 <i>57</i> 0-06123 | BOLT, BRACKET (6X10) | 2 | 2 | | |
| 9 | 49416-60A00 | CUSHION, PEDAL RETURN | 1 | 1 | | |
| 10 | 09251-09002 | CUSHION, PEDAL STOPPER | 1 | 1 | | |
| 11 | 09100-06150 | BOLT, PEDAL STOPPER | 1 | 1 | | |
| 12 | 08310-00063 | NUT, PEDAL STOPPER | 1 | 1 | | |
| 13 | 49610-62A00 | PEDAL, BRAKE | 1 | 1 | | |
| 14 | 49751-86300 | PAD, PEDAL | ī | 1 | | |
| 15 | 09100-10226 | BOLT, PEDAL SHAFT | 1 | 1 | | |
| 16 | 09306-13004 | BUSH, PEDAL SHAFT | 2 | 2 | | |
| 1 <i>7</i> | 09180-10121 | SPACER, PEDAL | 1 | 1 | | |
| 18 | 49691-62A00 | SPRING, PEDAL RETURN | 1 | 1 | | |
| 19 | 08316-20103 | NUT, PEDAL | 1 | 1 | | |
| 20 | 49710-62A11 | BRACKET, PEDAL | 1 | 1 | | |
| 21 | 01 <i>55</i> 0-08203 | BOLT, BRACKET | 2 | 2 | • | , |

NO USAR ESTA PAGINA PARA MERCADO ESPAÑOL DO NOT USE THIS PAGE FOR SPANISH MARKET


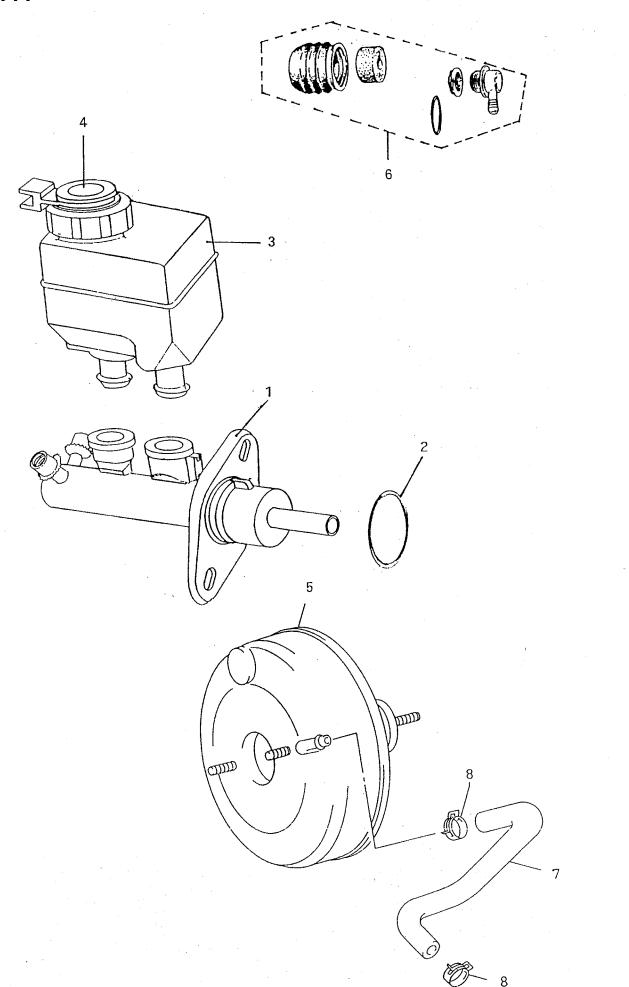


FIG. 111 (2-A-02)

BK MASTER CYLINDER (LHD:2 VALVE)

| REF. | | | Q, | TY | | |
|-------------------------------------|-----------------|--------------------|------|-----|---------|--|
| N.º | PART Nº | DESCRIPTION | C | V | REMARKS | |
| has not first and first and and and | | | | | | |
| | 51000A56B00 | MAIN CYLSERVO ASSY | 1 | 1 | | |
| 1 | 00000A00721 | MAIN CYLINDER | 1 | 1 | | |
| 2 | 00000A00722 | SEAL GASKET | 1 | 1 | | |
| 3 | 00000A00723 | .TANK ASSY | 1 | 1 | | |
| 4 | 00000A00283 | PLUG | 1 | 1 . | | |
| 5 | 00000A00983 | .BOOSTER ASSY | 1 | 1 | | |
| 6 | 00000A00720F.U. | REPAIR EQUIPEMENT | 1 | 1 | | |
| 7 | 51020A56B20 | .VACUUM HOSE | 1 | 1 | ì | |
| 8 | 09400A19302 | CLAMP | 2 | 2 | | |

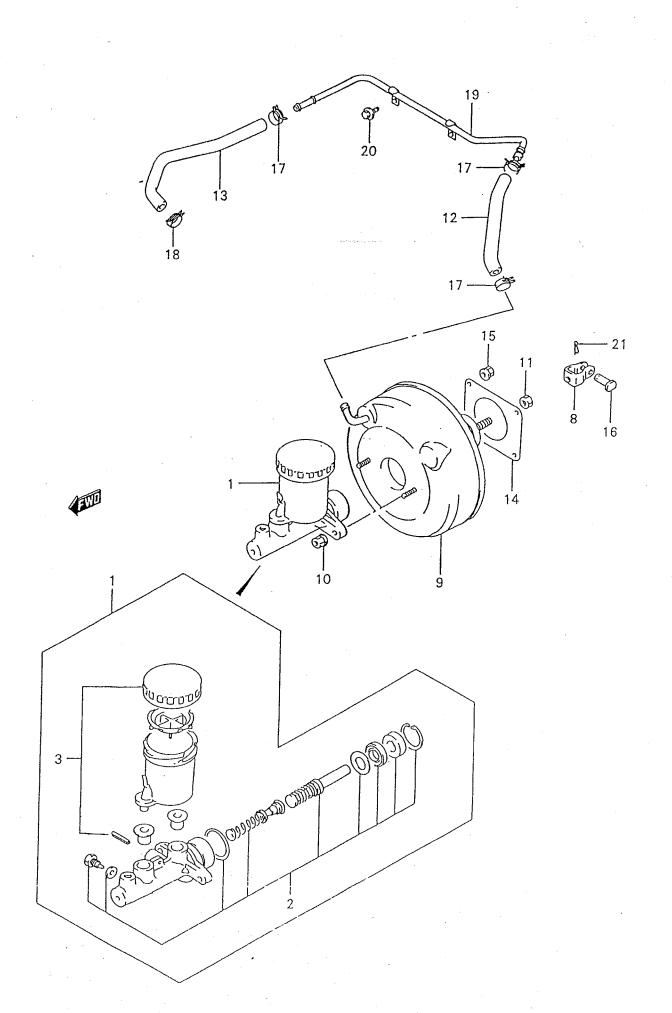

| REF. | | | Q, | TY | | |
|------------|----------------------|--|-----|----|---------|--|
| N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS | |
| | · | ······································ | | | | |
| 1 - 1 | 51100-57B00 | CYLINDER ASSY, BRAKE MASTER | . 1 | 1 | N/ABS | |
| 1 -2 | 51100-57B50 | CYLINDER ASSY, BRAKE MASTER | 1 | 1 | W/ABS | |
| 2 | 51810- <i>57</i> B00 | .PISTON SET, BRAKE MASTER | 1 | 1 | | |
| 3 | 51200-77E00 | .RESERVOIR SET, MASTER CYL | 1 | 1 | | |
| 4 | | | | | | |
| 5 | | | | | | |
| 6 | | | | | | |
| 7 | | | | | 3 | |
| 8 | 51182-60A60 | CLEVIS, CYLINDER PUSH ROD | 1 | 1 | | |
| 9 | 51300-77E00 | BOOSTER ASSY, BRAKE MASTER | 1 | 1 | | |
| 10 | 08310-12083 | NUT, BOOSTER | 2 | 2 | | |
| 11 | 09140-10019 | NUT, CYLINDER PUSH ROD | 1 | 1 | | |
| 12 | 51020-58B00 | HOSE, BRAKE VACUUM | 1 | 1 | | |
| 13 | 51831-57B10 | HOSE, BRAKE VACUUM INTAKE | 1 | 1 | | |
| 14 | 51132-82003 | PACKING, BRAKE MASTER CYLINDER | 1 | 1 | | |
| 15 | 09159-08069 | NUT, BRAKE MASTER CYLINDER | 4 | 4 | | |
| 16 | 09200-10021 | PIN, BRAKE MASTER CYLINDER | 1 | 1. | | |
| 1 <i>7</i> | 49253-85C00 | CLAMP, BRAKE VACUUM HOSE | 3 | 3 | | |
| 18 | 49253-85C00 | CLAMP, BK VACUUM HOSE INTAKE | 1 | 1 | | |
| 19 | 51380-60A11 | PIPE, BRAKE VACUUM | 1 | 1 | | |
| 20 | 02162-06123 | BOLT | 2 | 2 | | |
| 21 | 09385-10006 | CLIP | 1 |] | | |


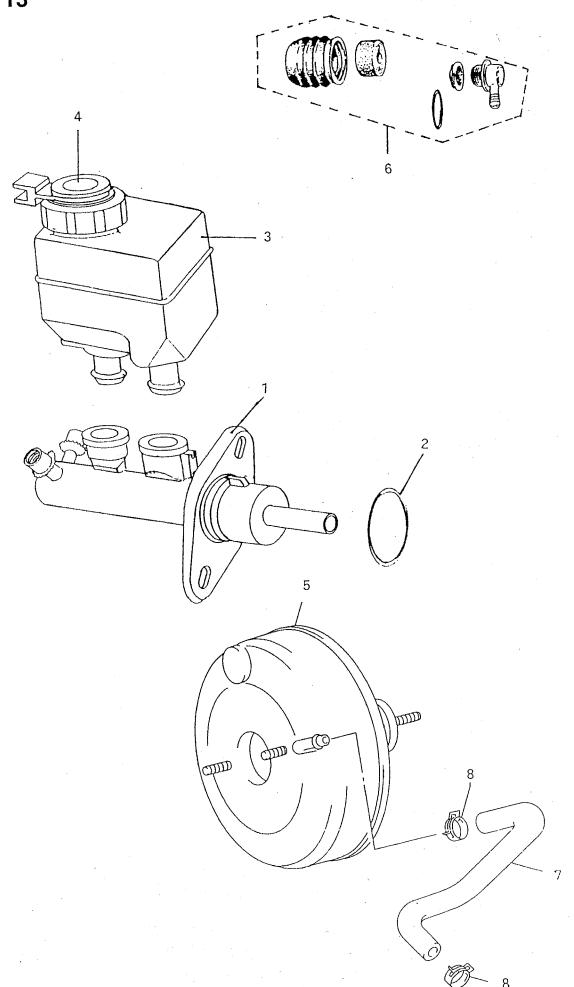



FIG. 113 (2-A-04) BK MASTER CYLINDER (RHD:2 VALVE)

| REF. | | | Q, TY |
|------|-------------|-------------------|-------------|
| N.º | PART Nº | DESCRIPTION | C V REMARKS |
| | | 1 e | |
| | 00000A00803 | SERVO-GIRLING KIT | 1 1 |
| 1 | 00000A00721 | .MAIN CYLINDER | 1 1 |
| 2 | 00000A00722 | SEAL GASKET | 1 1 |
| 3 | 00000A00967 | .TANK ASSY | 1 1 |
| 4 | 00000A00283 | PLUG | 1 1 : |
| 5 | 00000A00983 | .BOOSTER ASSY | 1 1 |
| 6 | 00000A00720 | REPAIR EQUIPEMENT | 1 1 |
| 7 | 51020A56B20 | .VACUUM HOSE | 1 1 |
| 8 | 09400A19302 | CLAMP | 2 2 |

FIG. 114

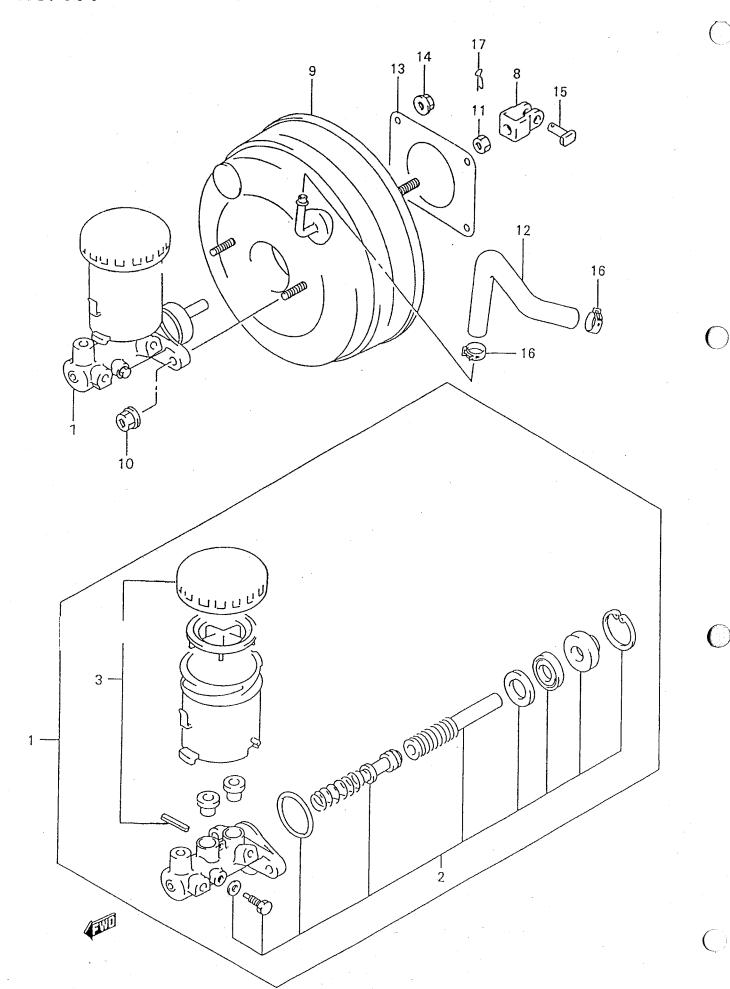


| REF. | | | Q, | TY | |
|------|----------------------|-----------------------------|-----|----------|---------|
| N.º | PART Nº | DESCRIPTION | C | ٧ | REMARKS |
| | | | ` | <u>-</u> | |
| 1 -1 | 51100-57B10 | CYLINDER ASSY, BRAKE MASTER | 1 | 1 | N/ABS |
| 1 -2 | 51100-57B60 | CYLINDER ASSY, BRAKE MASTER | 1 | 1 | W/ABS |
| 2 | 51810- <i>57</i> B00 | .PISTON SET, BRAKE MASTER | 1 | 1 | |
| 3 | 51200-77E00 | RESERVOIR SET, MASTER CYL | 1 | 1 | |
| 4 | | | | | |
| 5 | | | | | |
| 6 | | | | | |
| 7 | | | | | |
| 8 | 51182-60A60 | CLEVIS, CYLINDER PUSH ROD | 1 | 1 | |
| 9 | 51300-77E10 | BOOSTER ASSY, BRAKE MASTER | 1 | 1 | |
| 10 | 09159-08075 | NUT, BOOSTER | 2 | 2 | |
| 11 | 09140-10019 | NUT, CYLINDER PUSH ROD | 1 | 1 | |
| 12 | 51010-58B00 | HOSE, BRAKE VACUUM INTAKE | 1 | 1 | |
| 13 | 51132-82003 | GASKET, BRAKE MASTER BRAC | 1 | 1 | |
| 14 | 09159-08069 | NUT, BRAKE MASTER CYLINDER | 4 | 4 | |
| 15 | 09200-10021 | PIN, BRAKE MASTER CYLINDER | 1 . | 1 | |
| 16 | 51911-85C00 | CLAMP, BRAKE VACUUM HOSE | 2 | 2 | |
| 17 | 09385-10006 | CLIP | 1 | 1 | |

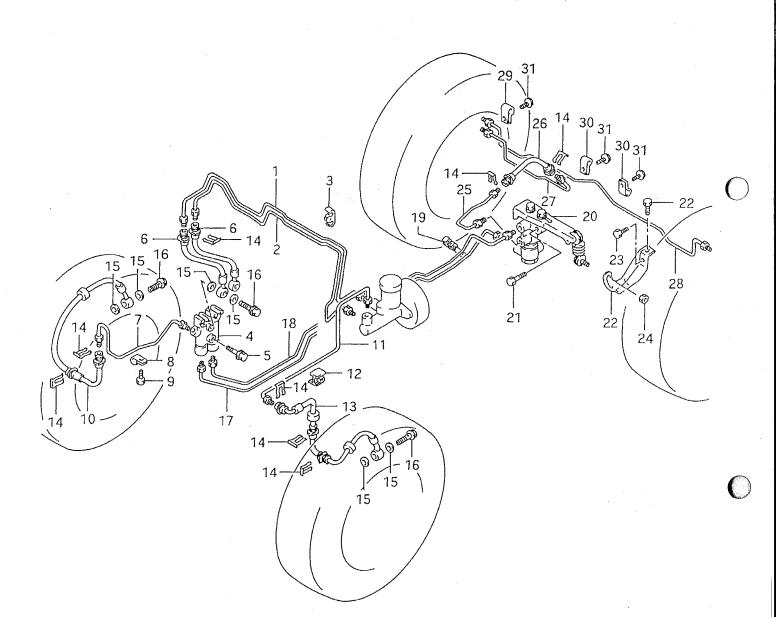

1311


| REF. | | | Q, | TY | |
|-------------|----------------------|--------------------------------|-------|-----|--|
| N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS |
| | · | | | | |
| 1 -1 | 51410-85C00 | PIPE, MA PRIMARY TO JOINT | 1 | 1 | 2 VALVE |
| 1 -2 | 51410-57B00 | PIPE, MA PRIMARY TO JOINT | 1 | 1 ' | 4 VALVE |
| 2-1 | 51520-85C00 | PIPE, MA SECONDARY TO JOINT | 1 | 1 | 2 VALVE |
| 2-2 | 51520-57B00 | PIPE, MA SECONDARY TO JOINT | 1 | 1 | 4 VALVE |
| 3 | 51751-60B00 | CLAMP | 3 | 3 | |
| 4-1 | 51640-60A30 | JOINT, BRAKE 5 WAY | 1 | 1 | |
| 4-2 | 51640-85C00 | JOINT, BRAKE 5 WAY | 1 | 1 | 1.9 DIESEL |
| 5 | 01550-06403 | BOLT | 2 | 2 | |
| 6 | 51570-85C00 | HOSE, MASTER CYLINDER FLEXIBLE | 2 | 2 | |
| <i>7-</i> 1 | 51420-77E10 | PIPE, JOINT TO BRAKE HOSE | 1 | 1 | |
| 7-2 | 51420A60A00 | PIPE, JOINT TO BRAKE HOSE | 1 | 1 | 1.9 DIESEL |
| 8 | 51781-85C00 | CLAMP | -1 | 1 | |
| 9 | 01 <i>57</i> 0-06123 | BOLT | 1 | 1 | |
| 10 | 51540-85C00 | HOSE, FRONT FLEXIBLE RH | 1 | 1 | en e |
| 11-1 | 51430A60A60 | PIPE, CYLINDER TO FR HOSE | 1 | . 1 | 2 VALVE |
| 11-2 | 51430-57B00 | PIPE, CYLINDER TO FR HOSE | 1 | 1 | 4 VALVE |
| 12 | 51435-60A00 | CLAMP | . 1 | 1 | |
| 13 | 51550-85C00 | HOSE, FRONT FLEXIBLE LH | . 1 . | 1 | |
| 14 | 51593-85C00 | E RING | 9 | 9 | |
| 15 | 51591-85C00 | GASKET, FLEXIBLE HOSE | 8 | 8 | |
| 16 | 51592-85C00 | BOLT | 4 | 4 | |
| 17-1 | 51340-60A00 | PIPE, JOINT VALVE FRONT | 1 | 1 | 3DR, 4 VALVE |
| 17-2 | 51340-56B20 | PIPE, JOINT VALVE FRONT | - | 1 | 5DR |
| 18-1 | 51460-60A00 | PIPE, JOINT TO VALVE REAR | . 1 | 1 | 3DR, 4 VALVE |
| 18-2 | 51460-56B20 | PIPE, JOINT TO VALVE REAR | - | 1 | 5DR |
| 18-3 | 51460A60A00 | PIPE, JOINT VALVE FRONT | 1 | 1 | 3DR, 2 VALVE |
| 19 | 51465-60A00 | CLAMP | 1 | 1 - | |

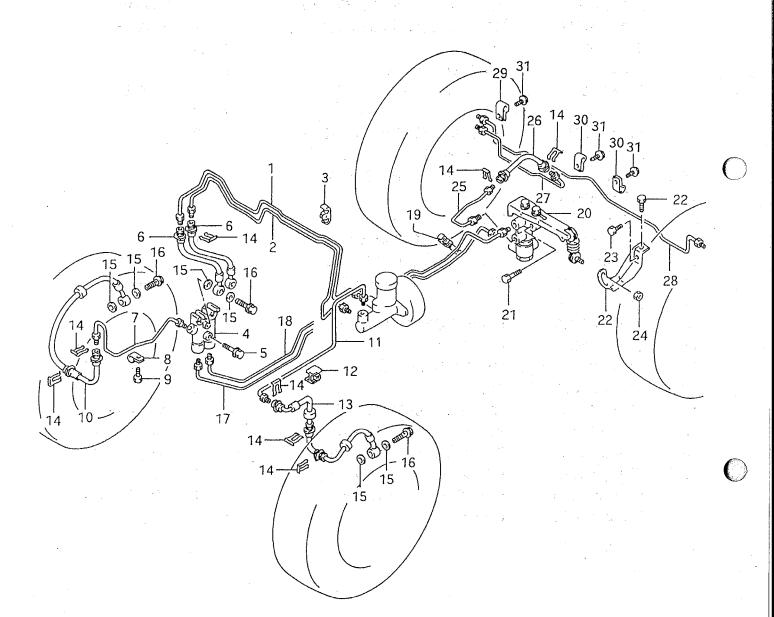

43110


| REF. | | | Q, TY | | | |
|------|-------------------------------|--------------------------------|-------|-----|-----------------|--|
| N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS | |
| | | | | | | |
| 20-1 | 51930-60A20 | VALVE ASSY, LOAD SENSING PROPN | 1 | 1 | 3DR, 4 VALVE | |
| 20-2 | 51930-56B20 | VALVE ASSY, LOAD SENSING PROPN | - | 1 | 5DR | |
| 20-3 | 00000A00922 | VALVE ASSY, LOAD SENSING | 1 | 1 | 3DR, 2 VALVE, | |
| | | | | | NOT ILLUSTRATED | |
| 21 | 01 <i>57</i> 0-08 <i>4</i> 03 | BOLT | 2 | 2 | 4 VALVE | |
| 22 | 51955-60A20 | STAY, PROPORTIONING VALVE | 1 | 1 | 4 VALVE | |
| 23 | 01 <i>55</i> 0-08163 | BOLT, STAY | 2 | 2 | 4 VALVE | |
| 24 | 08316-10083 | NUT | 1 | 1 | 4 VALVE | |
| 25-1 | 51350-60A00 | PIPE, VALVE TO REAR BRAKE HOSE | 1 | 1 | 3DR, 4 VALVE | |
| 25-2 | 51350-56B20 | PIPE, VALVE TO REAR BRAKE HOSE | - | 1 | 5DR | |
| 25-3 | 51350A60A00 | PIPE, VALVE TO REAR BRAKE | _ 1 | . 1 | 3DR, 2 VALVE | |
| 26-1 | 51560-83031 | HOSE, REAR BRAKE FLEXIBLE | 1 | . 1 | 4 VALVE | |
| 26-2 | 51560B83031 | HOSE, REAR BRAKE FLEXIBLE | 1 | 1 | 2 VALVE | |
| 26-3 | 51560-86CA0 | HOSE, REAR BRAKE FLEXIBLE | 1 | 1 | 1.9 DIESEL | |
| 27-1 | 51470-60A10 | PIPE, HOSE TO REAR RH BRAKE | 1 | 1 | 3DR, 4 VALVE | |
| 27-2 | 51 <i>4</i> 70-56B01 | PIPE, HOSE TO REAR RH BRAKE | - | 1 | 5DR | |
| 27-3 | 51470A60A00 | PIPE, HOSE TO REAR RH BRAKE | 1 |] | 3DR, 2 VALVE | |
| 28-1 | 51480-60A11 | PIPE, RH BRAKE TO LH BRAKE |] | 1 | 3DR, 4 VALVE | |
| 28-2 | 51480-56B01 | PIPE, RH BRAKE TO LH BRAKE | - | 1 | 5DR | |
| 28-3 | 51480A60A00 | PIPE, RH BRAKE TO LH BRAKE | 1 |] | 3DR, 2 VALVE | |
| 29 | 09403-06404 | CLAMP | 1 | 1 | | |
| 30 | 51781-85C10 | CLAMP | 4 | 4 | | |
| 31 | 51791-85C00 | SCREW | 5 | 5 | | |
| . 32 | <i>51755-67</i> 000 | PROTECTOR BRAKE PIPE | 5 | 5 | 1.9 DIESEL | |
| | | | | | NOT ILLUSTRATED | |

FIG. 116

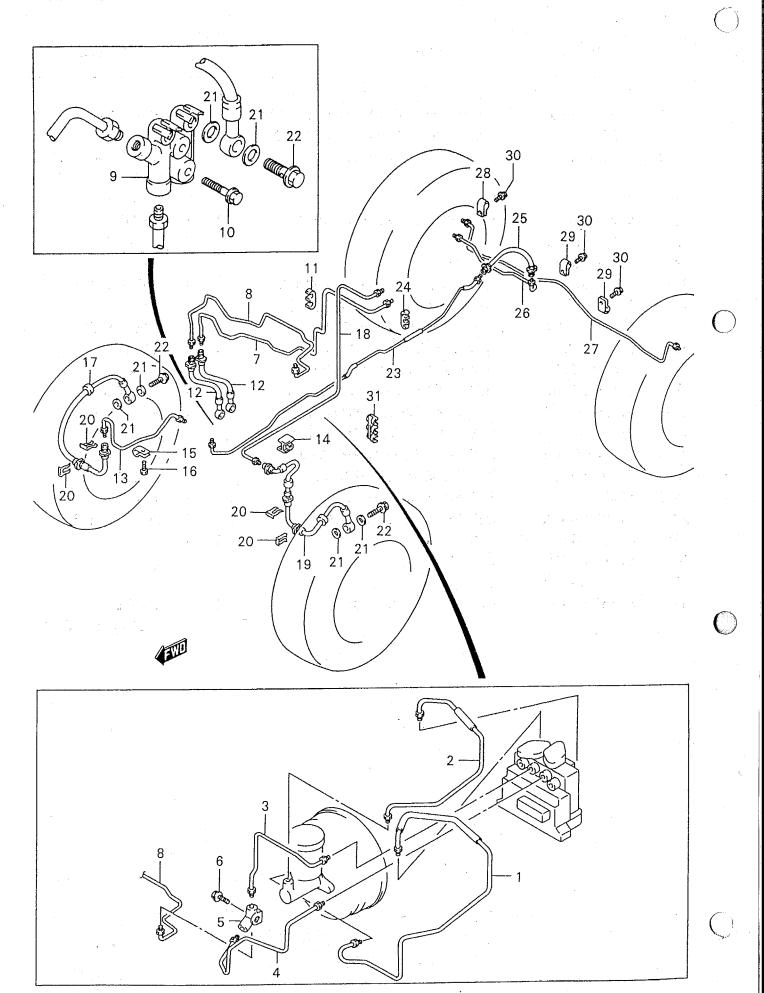


| Đ | EF. | | Q, | TY | | |
|-----|------|-------------|----------------------------------|-----|----|---------|
| N.º | | PART Nº | DESCRIPTION | C | ٧ | REMARKS |
| | 1 | 51410-57B50 | PIPE, MA PRIMARY TO UNIT | 1 | 1 | |
| | 2 | 51520-57B50 | PIPE, MA SECONDARY TO UNIT | 1 | 1 | |
| | 3 | 51440-57B50 | PIPE, UNIT TO 3 WAY JOINT | 1 | 1 | |
| | 4 | 51450-57B50 | PIPE, UNIT TO 3 WAY JOINT | 1 | 1 | |
| | 5 | 51620-60B00 | JOINT, BRAKE 3 WAY | 1 | 1 | |
| | 6 | 01550-06253 | BOLT | 1 | 1 | |
| | 7 | 51490-57B50 | PIPE, UNIT TO 4 WAY JOINT | 1 | 1 | |
| | 8 | 51510-57B50 | PIPE, 3 WAY JOINT TO 4 WAY JOINT | 1 | 1 | |
| | 9 | 51640-60A60 | JOINT, BRAKE 4 WAY | 1 | 1 | |
| | 10 | 01550-06403 | BOLT | 2 | 2 | |
| , | 11 | 51751-60B00 | CLAMP | 3 | 3 | |
| 1 | 12 | 51570-85C00 | HOSE, MASTER CYLINDER FLEXIDLE | 2 | 2 | |
| | 13 | 51420-77E10 | PIPE, JOINT TO BRÂKE HOSE | 1 | 1 | |
| | 14 | 51435-60A00 | CLAMP | 1 | 1 | |
| | 15 | 51781-85C00 | CLAMP | 1 | 1 | |
| | 16 | 01570-06123 | BOLT | 1 . | 1 | |
| | 17 | 51540-85C00 | HOSE, FRONT FLEXIBLE RH | 1 | 1 | |
| | 18 | 51430-57B50 | PIPE, CYLINDER TO FR HOSE | 1 | 1. | |
| | 19 | 51550-85C00 | HOSE, FRONT FLEXIBLE LH | 1 | 1 | |
| | 20 | 51593-85C00 | E RING | 9 | 9 | |
| | 21 | 51591-85C00 | GASKET, FLEXIBLE HOSE | 8 | 8 | |
| | 22 | 51592-85C00 | BOLT | 4 | 4 | |
| | 23-1 | 51340-60A60 | PIPE, JOINT TO RR BK HOSE | 1 | 1 | 3DR |
| | 23-2 | 51460-56B60 | PIPE, JOINT TO RR BK HOSE | - | 1 | 5DR |
|) | 24 | 51465-60A00 | CLAMP | 1 | 1 | |
| , | 25 | 51560-83031 | HOSE,REAR BRAKE FLEXIBLE | 1 | 1 | 1 |
| | | | | | | |

FIG. 116

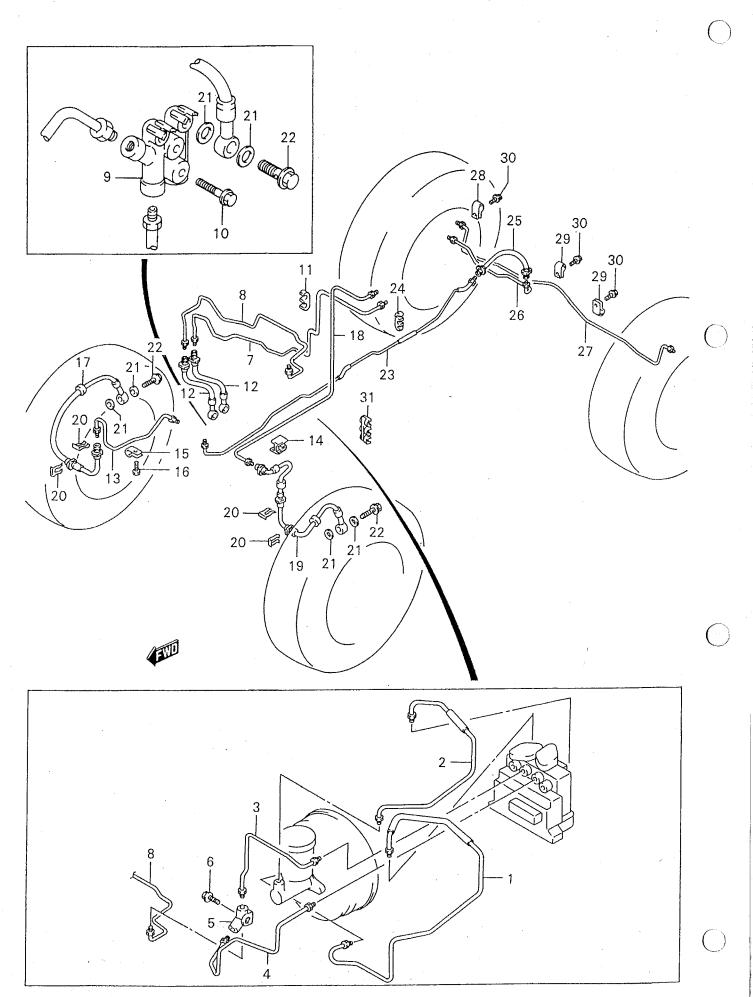

| REF. | _, , | | Q, TY | | | |
|------|----------------------|-----------------------------|-------|---|---------|--|
| N.º | PART Nº | DESCRIPTION | C | ٧ | REMARKS | |
| 26-1 | 51470-60A10 | | 1 | 1 | 200 | |
| | | PIPE, HOSE TO REAR RH BRAKE | ,1 | 1 | 3DR | |
| 26-2 | 51 <i>47</i> 0-56B01 | PIPE, HOSE TO REAR RH BRAKE | - | ı | 5DR | |
| 27-1 | 51480-60A11 | PIPE, RH BRAKE TO LH BRAKE | 1 | 1 | 3DR | |
| 27-2 | 51480-56B01 | PIPE, RH BRAKE TO LH BRAKE | _ | 1 | 5DR | |
| 28 | 09403-06404 | CLAMP | 1 | 1 | | |
| 29 | 51781-85C10 | CLAMP | 4 | 4 | | |
| 30 | 51791-85C00 | SCREW, BRAKE PIPE | 5 | 5 | | |
| 31 | 51791-50G50 | CLAMP | 2 | 2 | | |

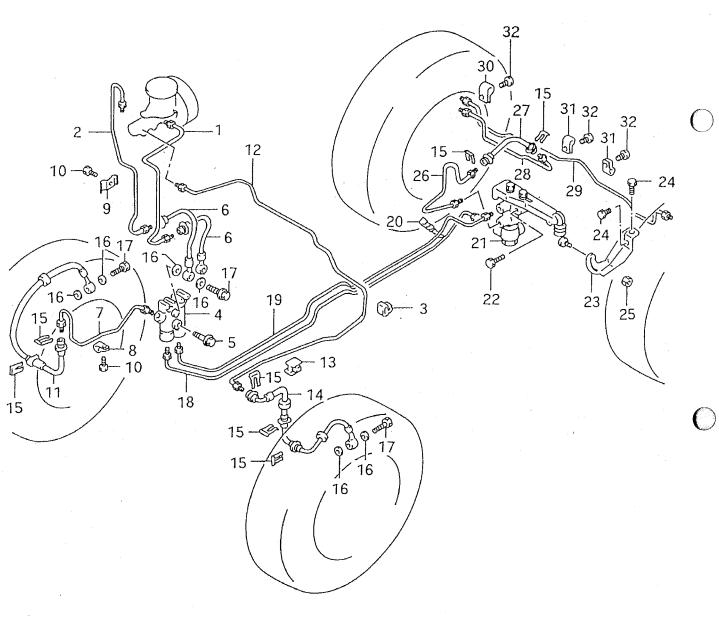

1310

| REF. | | PL PT A LO | | Q, TY | | | |
|------|------|----------------------|--------------------------------|-------|---|--------------|--|
| | N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS | |
| | | | | | | | |
| | 1 -1 | 51410A56B00 | PIPE, MA PRIMARY TO JOINT | .1 | 1 | 2 VALVE | |
| | 1 -2 | 51410-57B10 | PIPE, MA PRIMARY TO JOINT | 1 | 1 | 4 VALVE | |
| | 2-1 | 51520A56B00 | PIPE, MA SECONDARY TO JOINT | 1 | 1 | 2 VALVE | |
| | 2-2 | 51520-57B10 | PIPE, MA SECONDARY TO JOINT | 1 | 1 | 4 VALVE | |
| | 3 | 51752-70B00 | CLAMP | 3 | 3 | • | |
| | 4 | 51640-60A30 | JOINT, BRAKE 5 WAY | 1 | 1 | | |
| | 5 | 01550-06403 | BOLT | 2 | 2 | | |
| | 6-1 | 51 <i>57</i> 0-77E00 | HOSE, MASTER CYLINDER FLEXIBLE | 2 | 2 | 4 VALVE | |
| | 6-2 | 51570-85C00 | HOSE, MASTER CYLINDER FLEXIBLE | 2 | 2 | 2 VALVE | |
| | 7 | 51420-77E10 | PIPE, JOINT TO BRAKE HOSE | 1 | 1 | | |
| | 8 | 51781-85C00 | CLAMP | 1 | 1 | | |
| | 9 | 09403-07312 | CLAMP | 1 | 1 | | |
| | 10 | 01570-06123 | BOLT | 2 | 2 | | |
| | 11 | 51540-85C00 | HOSE, FRONT FLEXIBLE RH | 1 | 1 | | |
| | 12-1 | 51430A60A00 | PIPE, CYLINDER TO FR HOSE | 1 | 1 | 2 VALVE | |
| | 12-2 | 51430-57B10 | PIPE, CYLINDER TO FR HOSE | . 1 | 1 | 4 VALVE | |
| | 13 | 51435-60A00 | CLAMP | 1. | 1 | • | |
| | 14 | 51550-85C00 | HOSE, FRONT FLEXIBLE LH | 1 | 1 | | |
| | 15 | 51593-85C00 | E RING | 9 | 9 | | |
| | 16 | 51591-85C00 | GASKET, FLEXIBLE HOSE | 8 | 8 | | |
| | 17 | 51592-85C00 | BOLT | 4 | 4 | | |
| | 18-1 | 51340-60A00 | PIPE, JOINT VALVE FRONT | 1 | 1 | 3DR, 4 VALVE | |
| | 18-2 | 51340-56B20 | PIPE, JOINT VALVE FRONT | ÷ | 1 | 5DR | |
| | 19-1 | 51460-60A00 | PIPE, JOINT TO VALVE REAR | . 1 | 1 | 3DR, 4 VALVE | |
| | 19-2 | 51460-56B20 | PIPE, JOINT TO VALVE REAR | - | 1 | 5DR | |
| | 19-3 | 51460A60A00 | PIPE, JOINT TO VALVE REAR | 1 | 1 | 3DR, 2 VALVE | |
| | 20 | 51465-60A00 | CLAMP | 1 | 1 | · | |
| | | | | | | | |


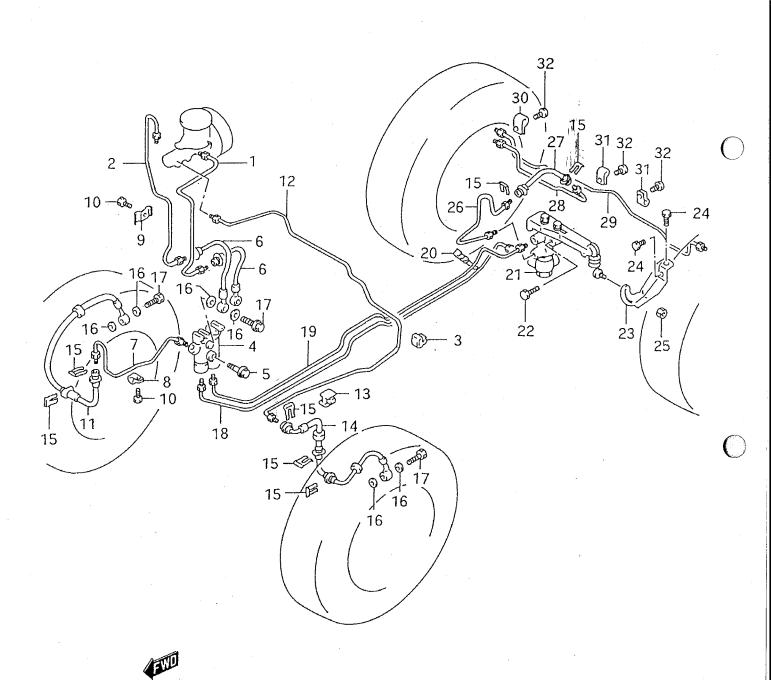


FIG. 117 (2-A-11) BRAKE PIPING (RHD:N/ABS)


| REF. | | | Q, TY | | | |
|-------|----------------------|--------------------------------|-------|---|-----------------|--|
| N.º | PART Nº | DESCRIPTION | С | V | REMARKS | |
| | | | | | | |
| 21-1 | 51930-60A20 | VALVE ASSY, LOAD SENSING PROPN | 1 | 1 | 3DR, 4 VALVE | |
| 21-2 | 51930-56B20 | VALVE ASSY, LOAD SWNSING PROPN | - | 1 | 5DR | |
| 21 -3 | 00000A00922 | VALVE ASSY, LOAD SENSING | 1 | 1 | 3DR, 2 VALVE, | |
| | | | | | NOT ILLUSTRATED | |
| 22 | 01 <i>5</i> 70-08403 | BOLT | 2 | 2 | 4 VALVE | |
| 23 | 51955-60A20 | STAY, PROPORTIONING VALVE | 1 | 1 | 4 VALVE | |
| 24 | 01550-08163 | BOLT, STAY | 2 | 2 | 4 VALVE | |
| 25 | 08316-10083 | NUT | 1 | 1 | 4 VALVE | |
| 26-1 | 51350-60A00 | PIPE, VALVE TO REAR BRAKE HOSE | 1 | 1 | 3DR, 4 VALVE | |
| 26-2 | 51350-56B20 | PIPE, VALVE TO REAR BRAKE HOSE | - | 1 | 5DR | |
| 26-3 | 51350A60A00 | PIPE, VALVE TO REAR BRAKE | 1 | 1 | 3DR, 2 VALVE | |
| 27-1 | 51 <i>5</i> 60-83031 | HOSE, REAR BRAKE FLEXIBLE | 1 | 1 | 4 VALVE | |
| 27-2 | 51560B83031 | HOSE, REAR BRAKE FLEXIBLE | 1 | 1 | 2 VALVE | |
| 28-1 | 51470-60A10 | PIPE, HOSE TO REAR RH BRAKE | 1 | 1 | 3DR, 4 VALVE | |
| 28-2 | 51470-56B01 | PIPE, HOSE TO REAR RH BRAKE | - | 1 | 5DR | |
| 28-3 | 51470A60A00 | PIPE, HOSE TO REAR RH BRAKE | 1 | 1 | 3DR, 2 VALVE | |
| 29-1 | 51480-60A11 | PIPE, RH BRAKE TO LH BRAKE | 1 | 1 | 3DR, 4 VALVE | |
| 29-2 | 51480-56B01 | PIPE, RH BRAKE TO LH BRAKE | - | 1 | 5DR | |
| 29-3 | 51480A60A00 | PIPE, RH BRAKE TO LH BRAKE | 1 | 1 | 3DR, 2 VALVE | |
| 30 | 09403-06404 | CLAMP | 1 | 1 | | |
| 31 | 51781-85C10 | CLAMP | 4 | 4 | | |
| 32 | 51791-85C00 | SCREW | 5 | 5 | | |

FIG. 118

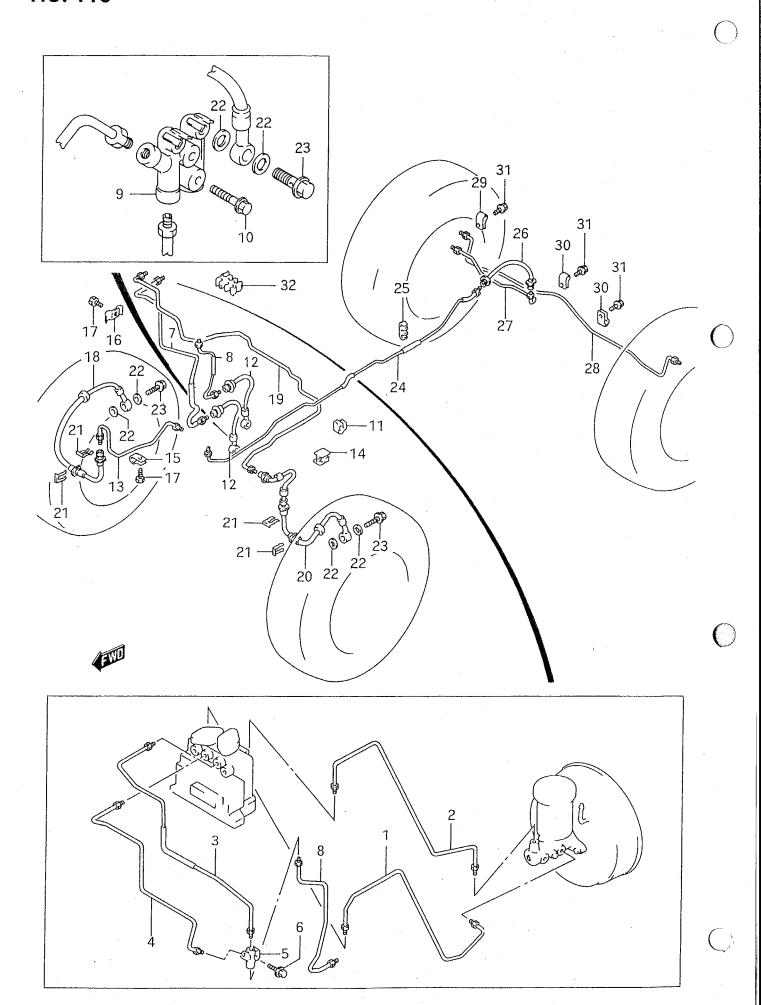


| REF. | PART Nº | DESCRIPTION | Q, TY | | | |
|------------|----------------------------|--|-------|---|---------|--|
| N.º | | | С | ٧ | REMARKS | |
| 1 | 51410-57B60 | DIDE AAA DDIAAADV TO LINIIT | 1 | 1 | | |
| 1 2 | 51520-57B60 | PIPE, MA PRIMARY TO UNIT PIPE, MA SECONDARY TO UNIT | 1 | 1 | | |
| 3 | 51440-57B60 | PIPE, UNIT TO 3 WAY JOINT | 1 | 1 | | |
| 3 4 | 51440-57B60 51450-57B60 | PIPE, UNIT TO 3 WAY JOINT | 1 | 1 | | |
| 5 | 51620-60B00 | JOINT, BRAKE 3 WAY | 1 | 1 | | |
| 6 | 01550-06253 | BOLT | 1 | 1 | | |
| 7 | 51490-57B60 | PIPE, UNIT TO 4 WAY JOINT | 1 | 1 | | |
| 8 | 51510-57B60 | PIPE, 3 WAY JOINT TO 4 WAY JOINT | 1 | 1 | | |
| 9 | 51640-60A60 | JOINT, BRAKE 4 WAY | 1 | 1 | | |
| 10 | 01550-06403 | BOLT | 2 | 2 | | |
| 11 | 51752-70B00 | CLAMP | 3 | 3 | | |
| 12 | 51570-77E00 | HOSE, MASTER CYLINDER FLEXIDLE | 2 | 2 | | |
| 13 | 51420-77E10 | PIPE, JOINT TO BRAKE HOSE | 1 | 1 | | |
| 14 | 51435-60A00 | CLAMP | 1 | 1 | | |
| 15 | 51781-85C00 | CLAMP | 1 | 1 | | |
| 16 | 09403-07312 | CLAMP | 1 | 1 | | |
| 1 <i>7</i> | 01 <i>57</i> 0-06123 | BOLT | 2 | 2 | | |
| 18 | 51540-85C00 | HOSE, FRONT FLEXIBLE RH | 1 | 1 | | |
| 19 | 51430-57B60 | PIPE, CYLINDER TO FR HOSE | 1 | 1 | | |
| 20 | 51550-85C00 | HOSE, FRONT FLEXIBLE LH | 1 | 1 | | |
| 21 | 51593-85C00 | E RING | 9 | 9 | | |
| 22 | 51591-85C00 | GASKET, FLEXIBLE HOSE (10X15X1) | 8 | 8 | | |
| 23 | 51592-85C00 | BOLT | 4 | 4 | | |
| 24-1 | 51340-60A60 | PIPE, JOINT TO RR BK HOSE | 1 | 1 | 3DR | |
| 24-2 | 51460-56B60 | PIPE, JOINT TO RR BK HOSE | - | 1 | 5DR | |
| 25 | 51465-60A00 | CLAMP | 1 | 1 | · | |
| 26 | 51560-83031 | HOSE, REAR BRAKE FLEXIBLE | 1 | 1 | | |


FIG. 118

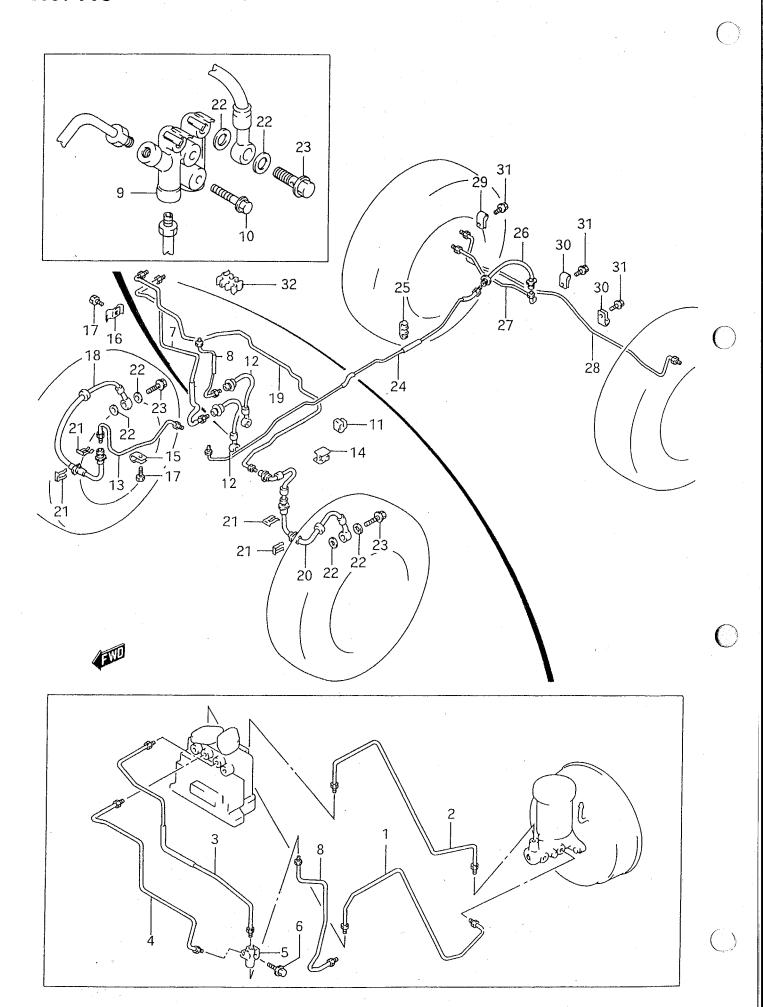


| REF. N.º | PART Nº | DESCRIPTION | Q, 1 | <u>ry</u> | REMARKS | |
|-------------|----------------------|-----------------------------|------|---------------|---------|--|
| | | | | | | |
| 27-1 | 51470-60A10 | PIPE, HOSE TO REAR RH BRAKE | .1 | 1 | 3DR | |
| 27-2 | 51 <i>47</i> 0-56B01 | PIPE, HOSE TO REAR RH BRAKE | - | 1 | 5DR | |
| 28-1 | 51480-60A11 | PIPE, RH BRAKE TO LH BRAKE | 1 | 1 | 3DR | |
| 28-2 | 51480-56B01 | PIPE, RH BRAKE TO LH BRAKE | - | 1 | 5DR | |
| 29 | 09403-06404 | CLAMP | 1 | 1 | | |
| 30 | 51781-85C10 | CLAMP | 4 | 4 | | |
| 31 | 51791-85C00 | SCREW, BRAKE PIPE | 5 | 5 | | |
| 32 | 51753-60G00 | CLAMP | 2 | 2 | | |
| | | | | | | |

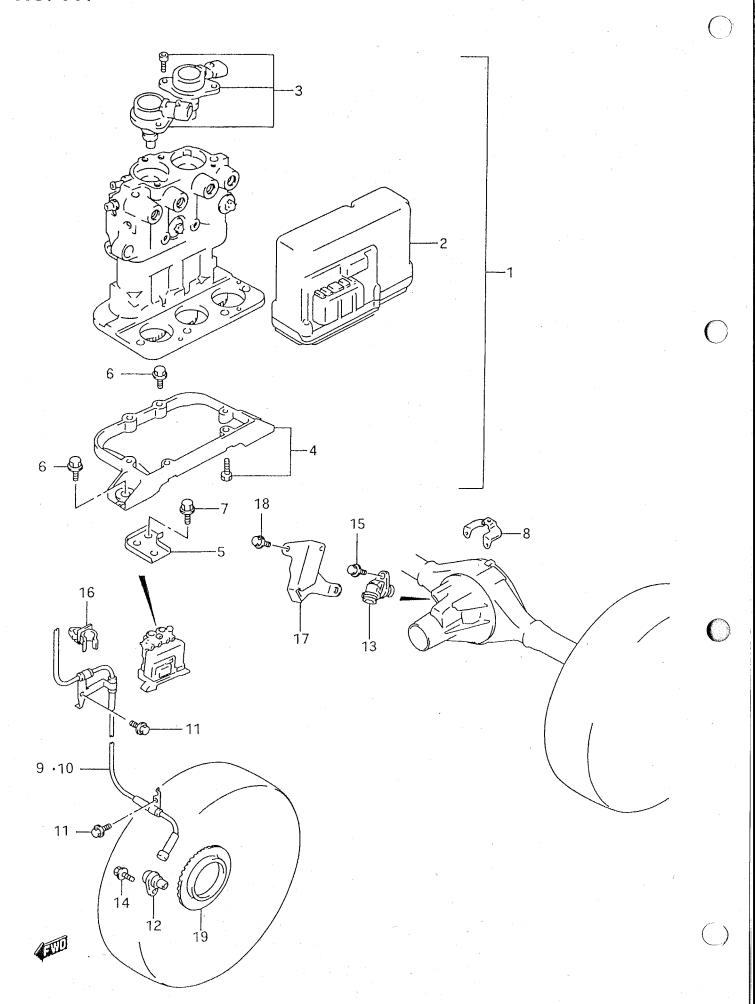


| REF. | PART Nº | DESCRIPTION | Q, TY | | | | |
|------------|-------------|-----------------------------|-------|---|---------|--|--|
| N.º | | | C | ٧ | REMARKS | | |
| | ·. | | | | | | |
| 1 | 56100-61A00 | ACTUATOR ASSY, ABS | . 1 |] | | | |
| 2 | 56110-61A00 | .PACK KIT, MOTOR | 1 | 1 | | | |
| 3 | 56120-50G50 | .VALVE KIT, SOLENOID | 1 | 1 | | | |
| 4 | 56130-50G50 | .COVER KIT, UNDER | . 1 | 1 | | | |
| 5 | 56150-61A00 | BRACKET, ABS ACTUATOR | 1 | 1 | | | |
| 6 | 56160-61A00 | BOLT, ACTUATOR | 3 | 3 | | | |
| 7 | 01550-06123 | BOLT, ACTUATOR BRACKET | 1 | 1 | | | |
| 8 | 56140-60A00 | BRACKET, HARNESS | 1 | 1 | | | |
| 9 | 56210-61A00 | HARNESS ASSY, FR SENSOR RH | 1 . | 1 | | | |
| 10 | 56220-61A00 | HARNESS ASSY, FR SENSOR LH | 1 | 1 | | | |
| 11 | 01550-06123 | BOLT, SENSOR HARNESS | 4 | 4 | | | |
| 12 | 56360-50G50 | SENSOR, FRONT | 2 | 2 | | | |
| 13 | 56300-60A00 | SENSOR, REAR | 1 | 1 | | | |
| 14 | 01550-06123 | BOLT, FRONT SENSOR | 2 | 2 | | | |
| 15 | 01550-08123 | BOLT, REAR SENSOR | 1 | 1 | | | |
| 16 | 09403-08313 | CLAMP, FRONT SENSOR HARNESS | 2 | 2 | | | |
| 1 <i>7</i> | 56320-60A00 | COVER, REAR SENSOR | . 1 | } | | | |
| 18 | 09103-08275 | BOLT, COVER (8X12) | 2 | 2 | | | |
| 19 | 56411-61A00 | RING, FRONT WHEEL SENSOR | 2 | 2 | | | |

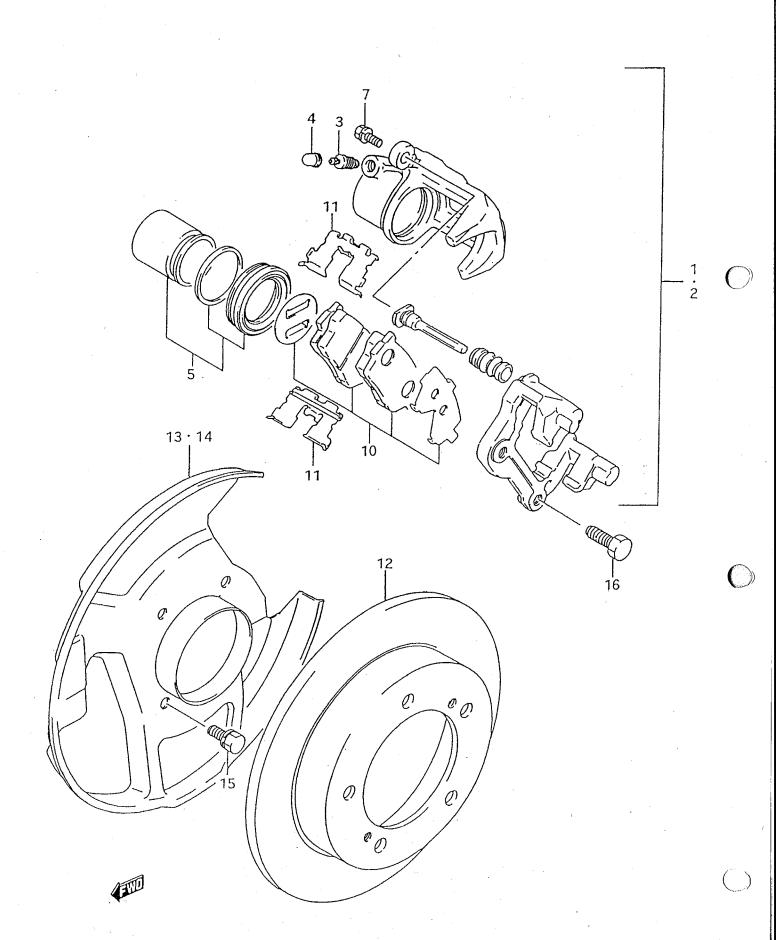

| REF. | | | Q, | , TY | | |
|-------|-------------|------------------------------|-----|------|---------|--|
| N.º | PART Nº | DESCRIPTION | - C | ٧ | REMARKS | |
| | | | | | | |
| 1 - 1 | | CALIPER ASSY, FRONT BRAKE RH | .1 |] | 4 VALVE | |
| 1 -2 | 55101B60A00 | CALIPER ASSY, FRONT BRAKE RH | 1 | 1 | 2 VALVE | |
| 2-1 | 55102-60A30 | CALIPER ASSY, FRONT BRAKE LH | 1 | 1 | 4 VALVE | |
| 2-2 | 55102B60A00 | CALIPER ASSY, FRONT BRAKE LH | 1 | 1 | 2 VALVE | |
| 3-1 | 55473-82030 | .PLUG, BLEEDER | 2 | 2 | 4 VALVE | |
| 3-2 | 00000A00236 | .PLUG, BLEEDER | 2 | 2 | 2 VALVE | |
| 4-1 | 55156-66310 | .CAP, BLEEDER PLUG | 2 | 2 | 4 VALVE | |
| 4-2 | 00000A00718 | .REPAIR SET | 1 | 1 | 2 VALVE | |
| 5-1 | 55100-60810 | PISTON & SEAL SET | 2 | 2 | 4 VALVE | |
| 5-2 | 00000A00718 | .REPAIR SET | 1: | 1 | 2 VALVE | |
| 6 | | | | | | |
| 7-1 | 55206-60A00 | BOLT, BRAKE CALIPERS | 4 | 4 | 4 VALVE | |
| 7-2 | 00000A00718 | .REPAIR SET | 1 | 1 | 2 VALVE | |
| 8 | | | | | | |
| 9 | | | | | | |
| 10-1 | 55200-63810 | .PAD SET, DISK BRAKE | 1 | 1 | 4 VALVE | |
| 10-2 | 00000A00906 | .PAD SET, DISK BRAKE | 1 | 1 | 2 VALVE | |
| 11 | 55234-60A00 | .SPRING, ANTI RATTLE OUTER | 4 | 4 | 4 VALVE | |
| 12 | 55211-60A00 | DISK, FRONT BRAKE | 2 | 2 | | |
| 13 | 55221-56B10 | COVER, BRAKE DISK DUST RH | 1 | 1 | | |
| 14 | 55222-56B10 | COVER, BRAKE DISK DUST LH | 1 | 1 | | |
| 15 | 55391-85C00 | BOLT, SPINDLE | 8 | 8 | | |
| 16 | 09100A12111 | BOLT, BRAKE CALIPER | 4 | 4 | | |
| | 08321-01123 | SPRING WASHER | 4 | 4 | | |
| | | | | | | |

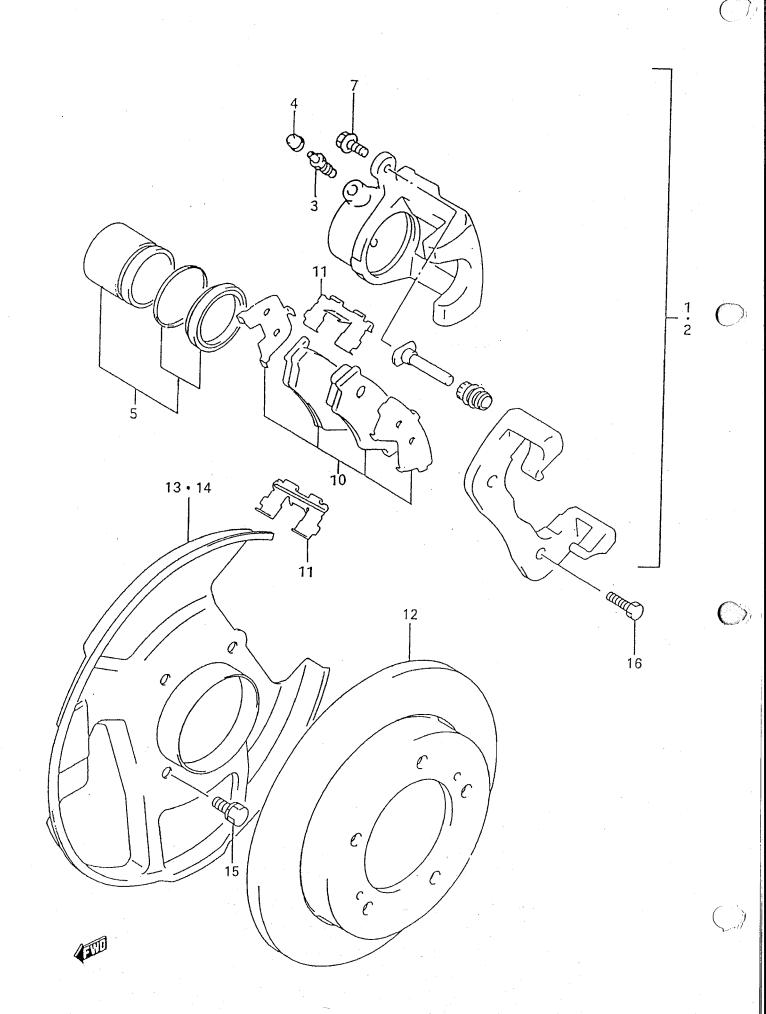


| REF. | PART Nº | DESCRIPTION | Q, | TY | | |
|------|------------------------------|----------------------------|----|-----|---------|--|
| N.º | | | C | V | REMARKS | |
| | | | | | | |
| 1 | 55101-56B30 | CALIPER ASSY, FRONT BRAKE | 1 | 1 | | |
| 2 | 55102-56B30 | CALIPER ASSY, FRONT BRAKE | 1. | 1 | | |
| 3 | 55473-82030 | .PLUG, BLEEDER | 2 | 2 | | |
| 4 | <i>55</i> 1 <i>5</i> 6-66310 | .CAP, BLEEDER PLUG | 2 | 2 | | |
| 5 | 55100-56810 | .PISTON & SEAL SET | 2 | 2 | | |
| 6 | | | | | | |
| 7 | 55206-60A00 | .BOLT, BRAKE CALIPERS | 4 | 4 | | |
| 8 | | | | | | |
| 9 | | | | | | |
| 10 | 55200-56870 | .PAD SET, DISK BRAKE | 1 | . 1 | | |
| 11 | 55234-56B00 | .SPRING, ANTI RATTLE OUTER | 4 | 4 | | |
| 12 | 55211-56B00 | DISK, FRONT BRAKE | 2 | 2 | | |
| 13 | 55221-56B10 | COVER, BRAKE DISK DUST RH | 1 | 1 | | |
| 14 | 55222-56B10 | COVER, BRAKE DISK DUST LH | 1 | 1 | | |
| 15 | 55391-85C00 | BOLT, SPINDLE | 8 | 8 | | |
| 16 | 09100A12111 | BOLT, BRAKE CALIPER | 4 | 4 | | |
| | 08321-01123 | SPRING WASHER | 1 | 4 | | |

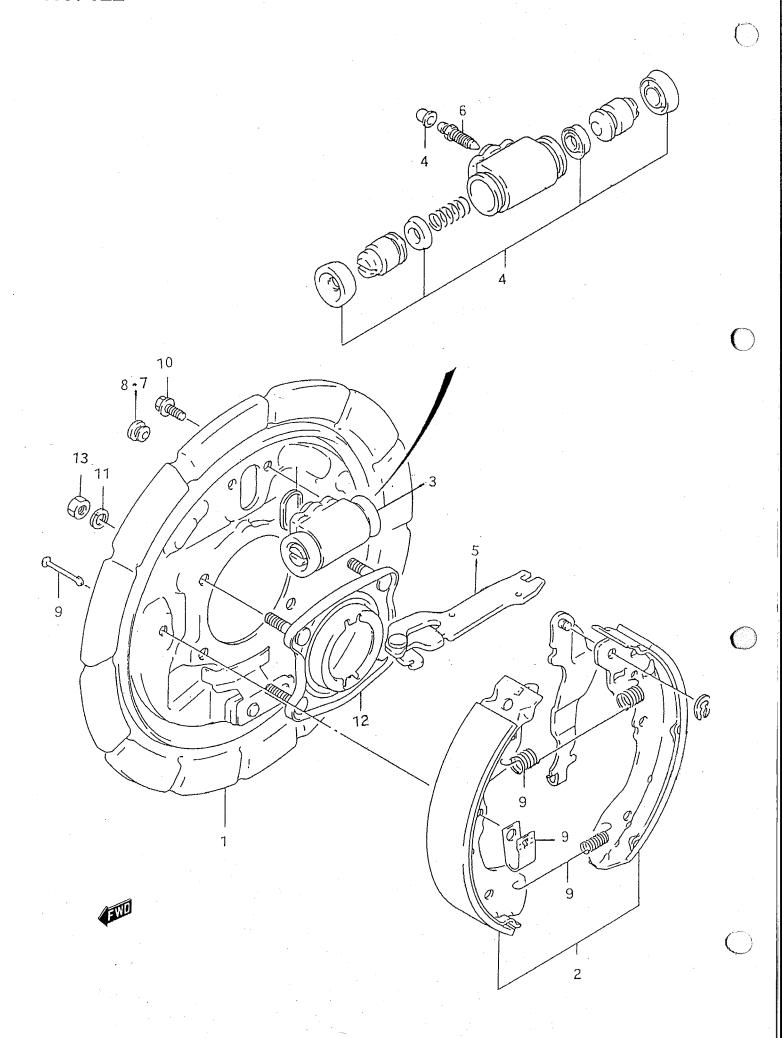


| REF. | PART Nº | DESCRIPTION | Q, TY | | |
|------|---------------|-----------------------------|-------|---|---------|
| N.º | | | С | ٧ | REMARKS |
| | · | → 53001-85C00 | | | |
| 0 | 53001B60A00 | BRAKE ASSY, RH | 1 | 1 | |
| 0 | 53002B60A00 < | BRAKE ASSY, LH | 1 | 1 | |
| 1 | 00000A00725 | PLATE, RH | 1 | 1 | |
| 1 | 00000A00724 | PLATE, LH | 1 | 1 | |
| 2 | 00000A00899 | BRAKE SHOES SET | 1 | 1 | |
| 3 | 00000A00159 | WEEL CYLINDER ASSY | 1 | 1 | • |
| 4 | 00000A00160 | CYLINDER REPAIR SET | 1 | 1 | |
| 5 | 00000A01137 | ADJUSTER ASSY RH | 1 | 1 | ·., |
| 5 | 00000A01136 | ADJUSTER ASSY LH | 1 | 1 | |
| 6 | 00000A00236 | BLEDD SCREW | 1 | 1 | |
| 7 | 00000A00235 | INSPECCION PLUG | 1 | 1 | |
| 8 | 00000A01049 | PROCTECTIVE PLUG | 1 | 1 | |
| 9 | 00000A01135 | STEADY REST KIT | 1 | 1 | |
| 10 | 00000A00237 | SCREW | 2 | 2 | |
| 11 | 00000A00239 | SPRING WASHER | 2 | 2 | |
| 12 | 53820A60A00 | RETAINER, REAR WEEL BEARING | 2 | 2 | |
| 13 | 08310-00083 | NUT | . 8 | 8 | |

FIG. 123

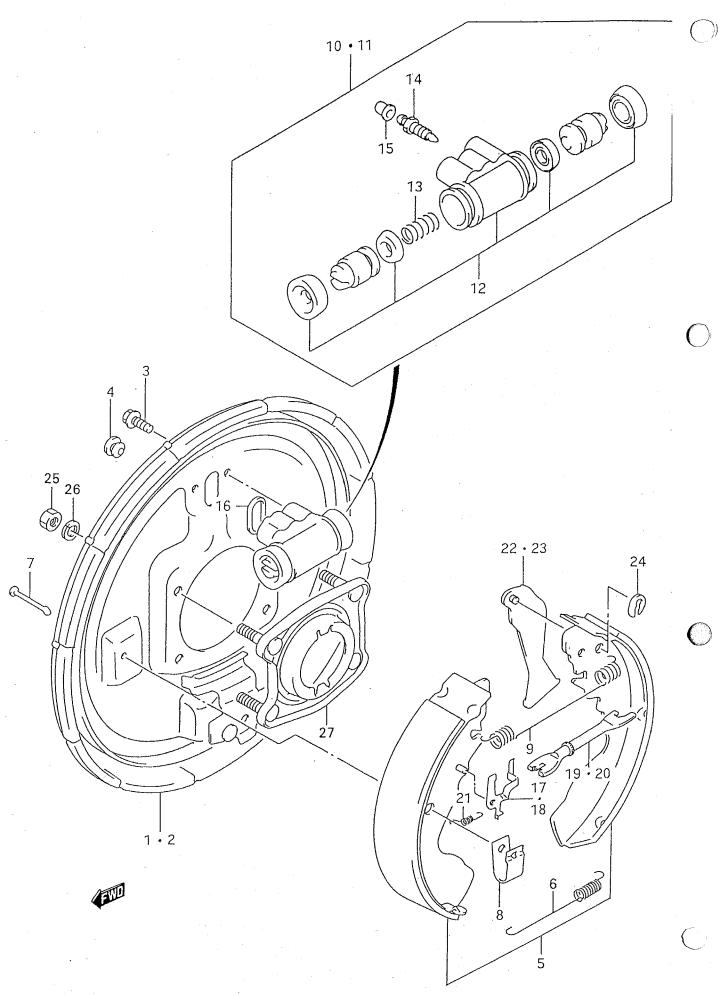



| REF. | | | Q, | TY | |
|------|-------------------------|------------------------------|-----|------|----------|
| N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS |
| | | | | | |
| 1 | 53110-60A40 | PLATE, BACKING RH | 1 | 1 | |
| 2 | 53120-60A40 | PLATE, BACKING LH | 1 | 1 | |
| 3 | 01550-06103 | BOLT, WHEEL CYLINDER | 4 | 4 | |
| 4 | 53141-84010 | PLUG, BACKING PLATE | 2 | 2 | |
| 5 | 53200-60880 ₺ ऽ€ | SHOE SET, BRAKE \$3200-60451 | 1 | 1 | |
| 6 | 53232-85120 | SPRING, SHOE RETURN LOWER | 2 | 2 | |
| 7 | 53241-82030 | PIN, SHOE HOLD DOWN | 4 | 4 | |
| 8 | 53243-85010 | SPRING, SHOE HOLD DOWN | 4 | 4 | |
| 9 | 53331-60A70 | SPRING, SHOE RETURN UPPER | 2 | 2 | |
| 10 | 53401-56B60 | CYLINDER ASSY, REAR WHEEL RH | 1 | 1 | |
| 11 | 53402-56B60 | CYLINDER ASSY, REAR WHEEL LH | 1 | 1 | |
| 12 | 53400-60830 | .CUP SET, WHEEL CYLINDER | 2 | 2 | |
| 13 | 53441-56B00 | .SPRING, WHEEL CYLINDER | 2 | 2 | |
| 14 | 55473-82030 | .PLUG, BLEEDER LH | 1 | 1 | |
| 15 | 55156-66310 | .CAP, BLEEDER PLUG LH | 1 | 1 | 0 |
| 16 | 53417-82030 | GASKET, REAR WHEEL CYLINDER | 2 | 2 | |
| 17 | 53781-77E01 | LEVER, PAWL RH | 1 | 1 | |
| 18 | 53782-77E01 | LEVER, PAWL LH | 1 | 1 | |
| 19 | 53810-77E00 | ADJUSTER ASSY, RH | 1 | - 1. | |
| 20 | 53820-77E00 | ADJUSTER ASSY, LH | 1 | 1 | |
| 21 | 53791-77E01 | SPRING, ADJUSTER | 2 | 2 | |
| 22 | 53720-60A40 | LEVER, PARKING SHOE RH | 1 | 1 | |
| 23 | 53730-60A40 | LEVER, PARKING SHOE LH | 1 | 1 | |
| 24 | 53753-82030 | E RNG, PARKING LEVER | 2 . | 2 | , |
| 25 | 08310-00083 | NUT | 8 | 8 | |
| 26 | 08321-01083 | WASHER | 8 | 8 | 1 |
| 27 | 53820-60A00 | RETAINER, REAR WHEEL OUTER | 2 | 2 | |
| | | | | | |

FIG. 124

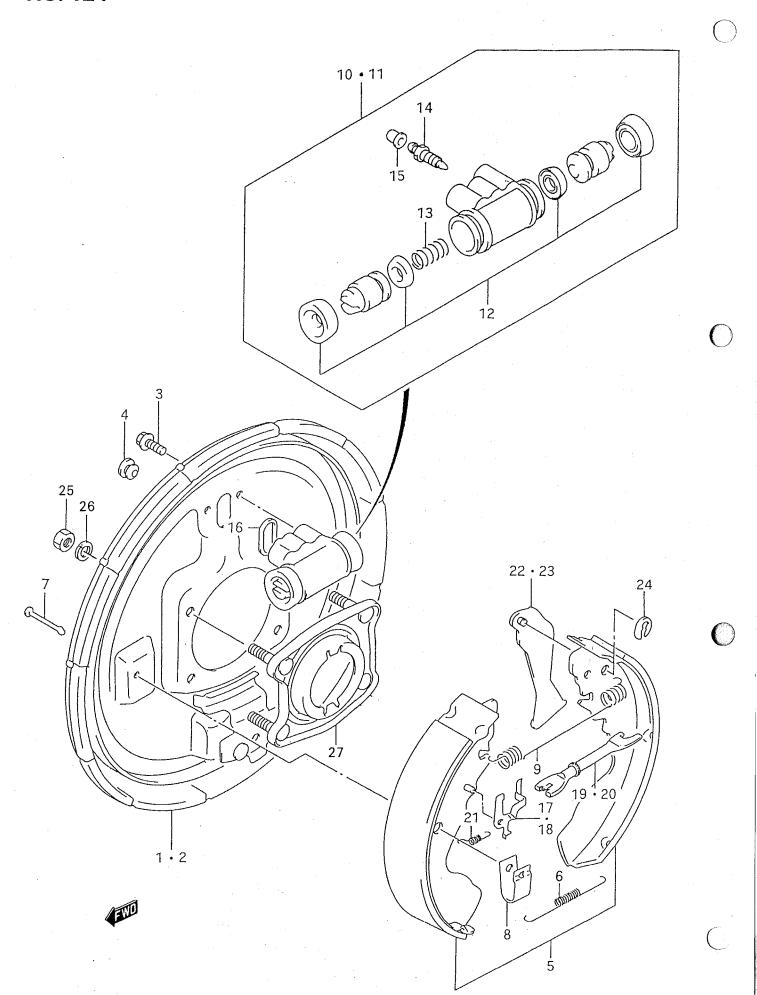

| REF. | | | Q, TY | |
|------|--------------|------------------------------|-------|---------|
| N.º | PART Nº | DESCRIPTION | C V | REMÅRKS |
| 1 | 53110-77E50 | PLATE, BACKING RH | 1 | |
| 2 | 53120-77E500 | PLATE, BACKING LH | 1 | |
| 3 | 01550-06103 | BOLT | 4 | |
| 4 | 53141-84010 | PLUG, BACKING PLATE | 2 | |
| 5 | 53200-77811 | SHOE SET, BRAKE | 1 | |
| 6 | 53232-85120 | SPRING, SHOE RETURN LOWER | 2 | |
| 7 | 53241-82030 | PIN, SHOE HOLD DOWN | 4 | |
| 8 | 53243-85010 | SPRING, SHOE HOLD DOWN | 4 | |
| 9 | 53331-60A70 | SPRING, SHOE RETURN UPPER | 2 | |
| 10 | 53401-56B60 | CYLINDER ASSY, REAR WHEEL RH | 1 | |
| 11 | 53402-56B60 | CYLINDER ASSY, REAR WHEEL LH | 1 | |
| 12 | 53400-60830 | .CUP SET, WHEEL CYLINDER | 2 | |
| 13 | 53441-56B00 | .SPRING, WHEEL CYLINDER | . 2 | |
| 14 | 55473-82030 | .PLUG, BLEEDER LH | . 1 | |
| 15 | 55156-66310 | .CAP, BLEEDER PLUG LH | 1 | |
| 16 | 53417-82030 | GASKET, REAR WHEEL CYLINDER | 2 | |
| 17 | 53781-77E01 | LEVER, PAWL RH | 1. | |
| 18 | 53782-77E01 | LEVER, PAWL LH | 1 | |
| 19 | 53810-77E00 | ADJUSTER ASSY, RH | 1 | |
| 20 | 53820-77E00 | ADJUSTER ASSY, LH | . 1 | |
| · 21 | 53791-77E01 | SPRING, ADJUSTER | 2 | |
| 22 | 53720-77E00 | LEVER, PARKING SHOE RH | 1 | |
| 23 | 53730-77E00 | LEVER, PARKING SHOE LH | 1 | |
| 24 | 53753-82030 | E RNG, PARKING LEVER | 2 | |
| 25 | 08310-00083 | NUT | 8 | |
| 26 | 08321-01083 | LOCK WASHER | 8 | |
| 27 | 53820-60A00 | RETAINER, REAR WHEEL OUTER | 2 | |

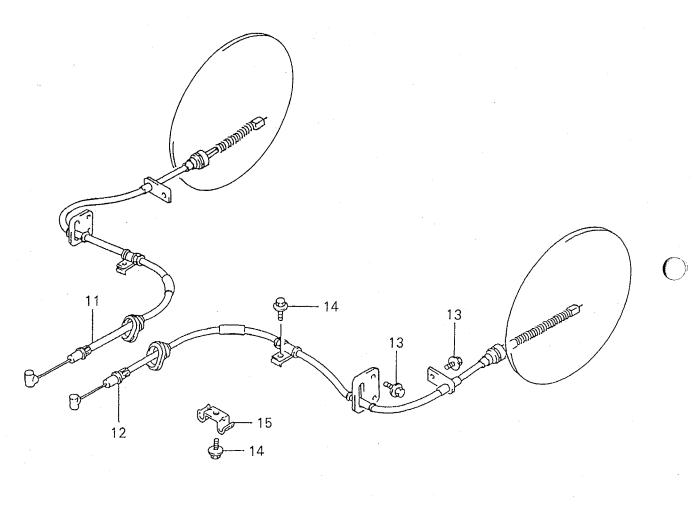


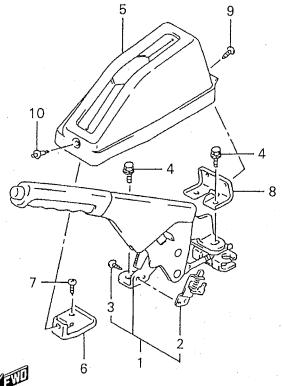

| _ | | , |
|---|---|---|
| Ì | | |
| 4 | | |
| | ı | |

| | REF. | PART Nº | DESCRIPTION | Q, | TY | |
|---|------|----------------------|------------------------------|----|-----|---------------|
| | N.º | | | С | ٧ | REMARKS |
| | 1 | 54100-86C00 | LEVER ASSY, PARKING BRAKE | 1 | 1 | |
| | 2 | 37940-60A10 | .SWITCH ASSY | 1 | 1 | |
| | 3 | -02142-04103- | SCREW 54/51-60A10 | 1 | 1 | SANT-005/09-E |
| | 4 | 01 <i>57</i> 0-08203 | BOLT, PARKING BRAKE LEVER | 3 | 3 | |
| | 5 | 54510-60A00-5ES | COVER ASSY, PARKING LEVER | 1 | 1 | 3DR:JA,JX |
| | | | (BLACK) | | | |
| | 6 | 54611-60A00 | BRACKET, PARKING COVER FRONT | 1 | 1 | 3DR:JA,JX |
| | 7 | 03241-06123 | SCREW, BRACKET COVER | 1 | 1 | 3DR:JA,JX |
| | 8 | 54711-60A00 | BRACKET, PARKING COVER REAR | 1 | 1 | 3DR:JA,JX |
| | 9 | 03241-05125 | SCREW, BRACKET COVER | 2 | 2 | 3DR:JA,JX |
| | 10 | 09409-06314-5PK | RIVET, PARKING BRAKE COVER | 1 | . 1 | 3DR:JA,JX |
| j | | | (BLACK) | | | |
| | 11-1 | 54410-60A60 | CABLE, PARKING BRAKE RH | 1 | 1 | 3DR |
| | 11-2 | 54410-56B60 | CABLE, PARKING BRAKE RH | - | 1 | 5DR |
| | 12-1 | 54420-60A60 | CABLE, PARKING BRAKE LH | 1 | 1 | 3DR |
| | 12-2 | 54420-56B60 | CABLE, PARKING BRAKE LH | - | 1 | 5DR |
| | 13 | 09136-06134 | BOLT, PARKING CABLE HANGER | 6 | 6 | |
| | 14-1 | 01550-08123 | BOLT, PARKING CABLE CLAMP | 2 | 2 | 3DR |
| | 14-2 | 01550-08123 | BOLT, PARKING CABLE CLAMP | - | 3 | 5DR |
| | 15 | 54431-56B00 | CLAMP, PARKING CABLE | - | 1 | 5DR |

FIG. 126

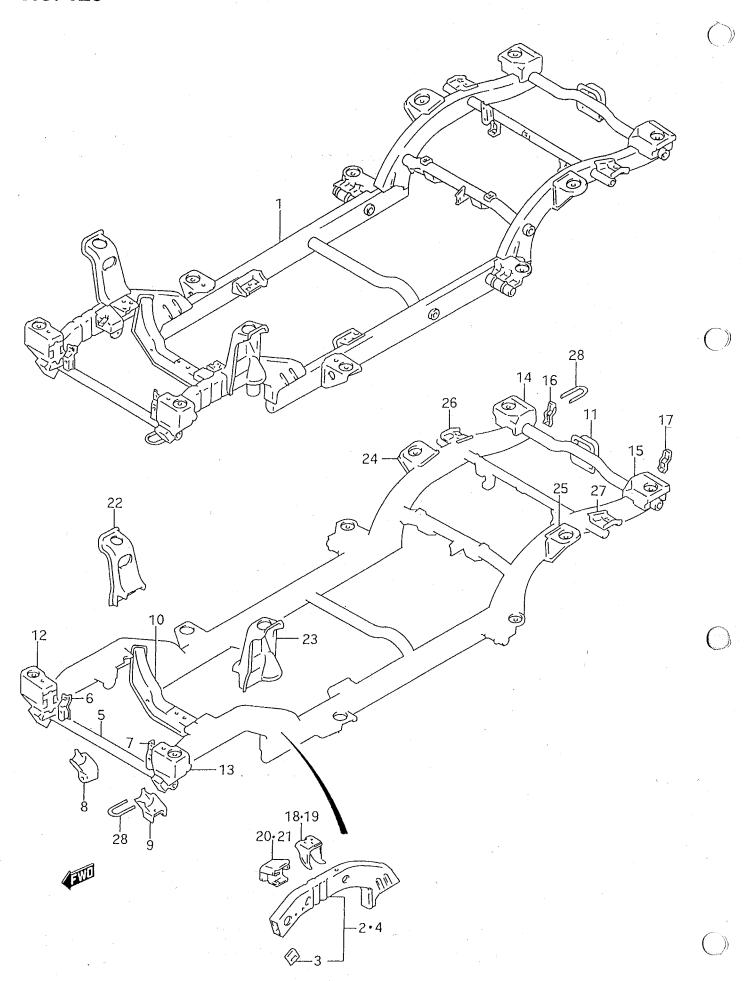

| REF. | D1 D7 110 | | Q, TY | | |
|------------|--------------------------|-------------------------------|-------|---|---------|
| N.º | PART Nº | DESCRIPTION | С | | REMARKS |
| | | | | | |
| 1 - 1 | 57000-85C21 ∪ <i>S</i> E | FRAME ASSY 57000-85040 | 1 | 1 | LHD |
| 1-2 | 57000-85C30 USE | FRAME ASSY \$7000-85 < 50 | 1 | 1 | RHD |
| 2-1 | 57110-60A21 | .MEMBER, SIDE FRAME FRONT RH | 1 | 1 | LHD |
| 2-2 | <i>57</i> 110-60A31 | .MEMBER, SIDE FRAME FRONT RH | 1 | 1 | RHD |
| 3 | 57942-60A00 | HOOK, SHIPPING FRONT | 1 | 1 | |
| 4-1 | 57160-60A20 | .MEMBER, SIDE FRAME FRONT LH | 7 | 1 | LHD |
| 4-2 | <i>57</i> 160-60A30 | .MEMBER, SIDE FRAME FRONT LH | 1 | 1 | RHD |
| 5 | 57211-60A20 | .CROSSMEMBER, 1ST | 1 | 1 | |
| 6-1 | 57551-60A00 | .BRACKET, RADIATOR STAY RH | 1 | 1 | LHD |
| 6-2 | <i>5</i> 7551-60A00 | .BRACKET, RADIATOR STAY RH | 1 | 1 | RHD |
| 7 | <i>5</i> 7561-60A00 | .BRACKET, RADIATOR STAY LH | 1 | 1 | |
| 8-1 | <i>577</i> 10-60A10 | .HANGER, FR SPNSN ARM RH | 1 | 1 | LHD |
| 8-2 | <i>577</i> 10-60A10 | .HANGER, FR SPNSN ARM RH | .1 | 1 | RHD |
| 9-1 | 57720-60A10 | .HANGER, FR SPNSN ARM LH | 1 | 1 | LHD |
| 9-2 | <i>577</i> 20-60A10 | .HANGER, FR SPNSN ARM LH | 1 | 1 | RHD |
| 10 | 57220-56B00 | .CROSSMEMBER, 2ND | 1 | 1 | |
| 11 | 57260-60A00 | .CROSSMEMBER, TAIL | 1 | 1 | |
| 12 | <i>5</i> 7310-60A01 | .BRACKET, 1ST MOUNTING RH | 1 | 1 | |
| 13 | <i>57</i> 320-60A01 | .BRACKET, 1ST MOUNTING LH | 1 | 1 | |
| 14 | <i>57</i> 370-60A00 | .BRACKET, 4TH MOUNTING RH | 1 | 1 | |
| 15 | <i>5</i> 7380-60A00 | .BRACKET, 4TH MOUNTING LH | 1 | 1 | |
| 16 | 57481-60A00 | .BRACKET, REAR BUMPER SIDE RH | 1 | 1 | |
| 1 <i>7</i> | 57482-60A00 | .BRACKET, REAR BUMPER SIDE LH | 1 | 1 | |
| 18 | 57511-60A00 | .BRACKET, ENG MOUNTING RH | 1 | 1 | |
| 19 | 57521-60A00 | .BRACKET, ENG MOUNTING LH | 1 | 1 | |


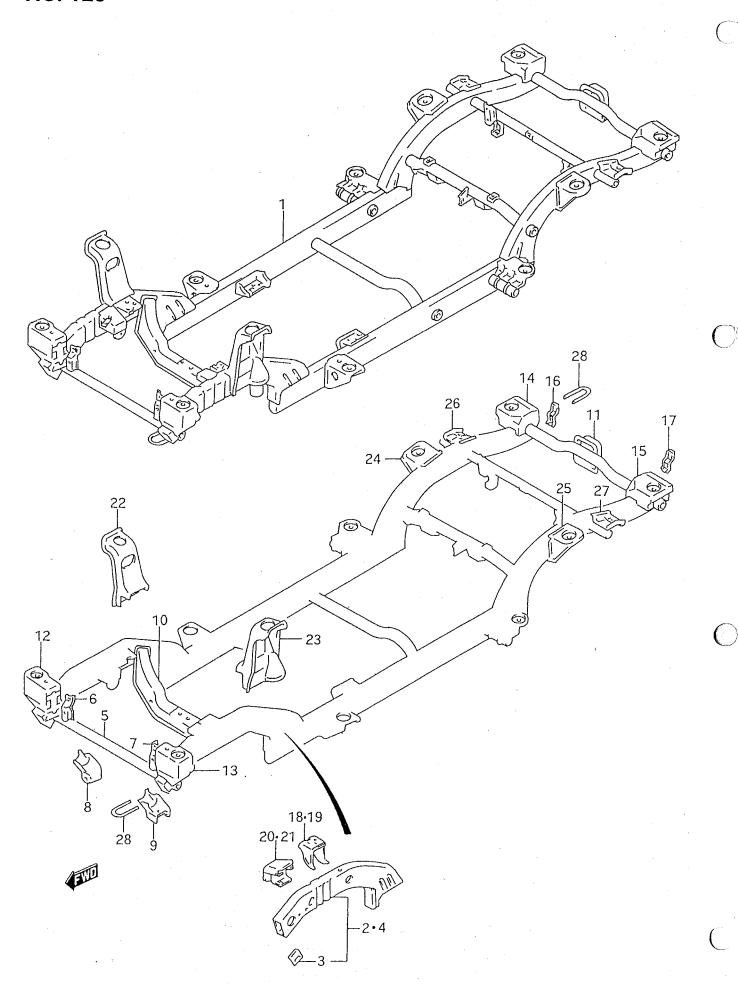


FIG. 126 (2-C-03) CHASSIS FRAME (3DR)


| REF. | | | Q, TY | | |
|------|------------------------------|--------------------------------|-------|---|---------|
| N.º | PART Nº | DESCRIPTION | C | ٧ | REMARKS |
| | | | | | |
| 20 | 57620-60A00 | .BRACKET, FR DIFF MTG RH | 1 | 1 | |
| 21 | 57630-60A00 | .BRACKET, FR DIFF MTG LH | 1 | 1 | |
| 22 | 57730-56B10 | .BRACKET, FRONT STRUT RH | 1 | 1 | |
| 23 | 57740-56B00 | .BRACKET, FRONT STRUT LH | 1 | 1 | • |
| 24 | <i>57</i> 810- <i>77</i> E00 | .BRACKET, REAR COIL SPRING RH | 1 | 1 | |
| 25 | 57820-77E00 | .BRACKET, REAR COIL SPRING LH | 1 | 1 | |
| 26 | 57831-56B00 | .BRACKET, RR SHOCK ABSORBER RH | 1 | 1 | |
| 27 | 57841-56B00 | .BRACKET, RR SHOCK ABSORBER LH | 1 | 1 | |
| 28 | 57941-60A00 | .HOOK, TOWING | 2 | 2 | |
| | | | | | |

FIG. 127

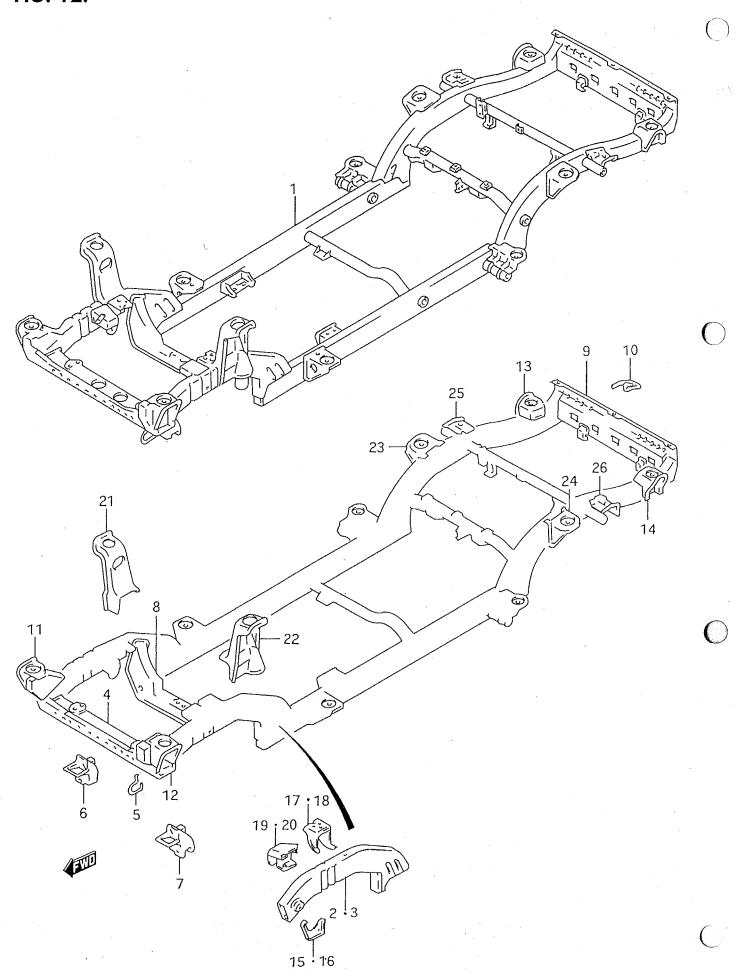


| REF. | | | Q, TY | | |
|-------------|------------------------------|----------------------------------|-------|---------|--|
| N.º | PART Nº | DESCRIPTION | C. V | REMARKS | |
| | - 1) | | | | |
| 1 -1 | 57000-57B50 F.V | FRAME ASSY OB 18 | 1 | LHD | |
| 1-2 | 57000-57B40 4.V | FRAME ASSY OBP'8 | 1 | RHD | |
| 2-1 | <i>57</i> 110- <i>56</i> B21 | .MEMBER, SIDE FRAME FRONT RH | 1 | LHD | |
| 2-2 | <i>57</i> 110- <i>5</i> 6B31 | .MEMBER, SIDE FRAME FRONT RH | 1 | RHD | |
| 3-1 | 57160-56B20 | .MEMBER, SIDE FRAME FRONT LH | 1 | LHD | |
| 3-2 | <i>57</i> 160- <i>5</i> 6B30 | .MEMBER, SIDE FRAME FRONT LH | 1 | RHD | |
| 4-1 | 57210-56B20 | .CROSSMEMBER, 1ST | 1 | LHD | |
| 4-2 | <i>57</i> 210-56B30 | .CROSSMEMBER, 1ST | 1 | RHD | |
| 5 | 57213-56B00 | HOOK, FRONT TOWING | 1 | | |
| 6-1 | 57710-56B20 | HANGER, FR SPNSN ARM RH | 1 | LHD | |
| 6-2 | <i>577</i> 10- <i>5</i> 6B30 | HANGER, FR SPNSN ARM RH | 1 | RHD | |
| <i>7-</i> 1 | 57720-56B20 | HANGER, FR SPNSN ARM LH | 1 | LHD | |
| 7-2 | 57720-56B30 | HANGER, FR SPNSN ARM LH | . 1 | RHD | |
| 8 | 57220-56B00 | .CROSSMEMBER, 2ND | 1 . | | |
| 9 | <i>5</i> 7260-56B01 | .CROSSMEMBER, TAIL | 1 | | |
| 10 | 57264-56B00 | HOOK, REAR TOWING | 1 | | |
| 11 | 57310-56B00 | BRACKET, 1ST MOUNTING RH | 1 | | |
| 12 | 57320-56B00 | BRACKET, 1ST MOUNTING LH | 1 | | |
| 13 | <i>57371-56</i> B00 | .BRACKET, 4TH MOUNTING RH | 1 | | |
| 14 | 57381-56B01 | BRACKET, 4TH MOUNTING LH | 1 | | |
| 15 | 57411-56B00 | .GUSSET, 1ST CROSSMEMBER SIDE RH | 1 | | |
| 16 | 57412-56B00 | .GUSSET, 1ST CROSSMEMBER SIDE LH | 1 | | |
| 1 <i>7</i> | 57511-60A00 | .BRACKET, ENG MOUNTING RH | 1 | | |
| 18 | 57521-60A00 | .BRACKET, ENG MOUNTING LH | 1 | | |


FIG. 127

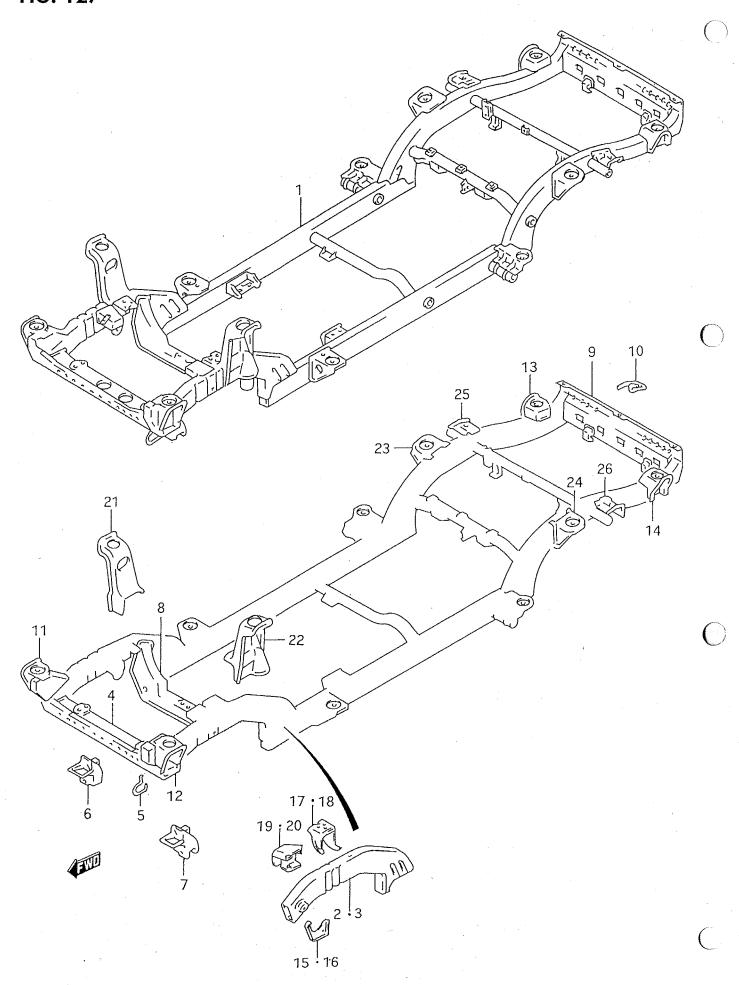


| REF. | | | Q, TY | |
|------|---------------------|--------------------------------|-------|---------|
| N.º | PART Nº | DESCRIPTION | C V | REMARKS |
| | | | | |
| 19 | 57620-60A00 | BRACKET, FR DIFF MTG RH | 1 | |
| 20 | 57630-60A00 | .BRACKET, FR DIFF MTG LH | 1 | |
| 21 | 57730-56B10 | .BRACKET, FRONT STRUT RH | 1 | |
| 22 | 57740-56B00 | .BRACKET, FRONT STRUT LH | 1 | |
| 23 | <i>5</i> 7810-77E00 | BRACKET, REAR COIL SPRING RH | 1 | |
| 24 | 57820-77E00 | .BRACKET, REAR COIL SPRING LH | 1 | |
| 25 | 57831-56B00 | .BRACKET, RR SHOCK ABSORBER RH | . 1 | |
| 26 | 57841-56B00 | .BRACKET, RR SHOCK ABSORBER LH | 1 | |

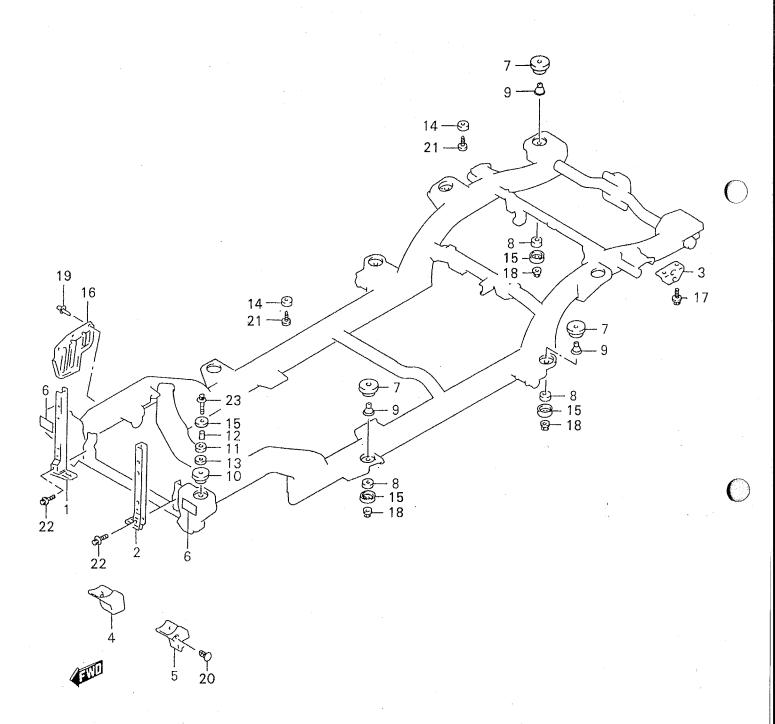

| REF. | | | Q, TY | | | |
|------|-------------------------------|--------------------------------|-------|----|-------------|--|
| N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS | |
| | | | | | | |
| 1 -1 | 71410-60A21 | STAY, RADIATOR RH | 1 | 1 | LHD | |
| 1-2 | 71410-60A01 | STAY, RADIATOR RH | 1 | 1 | RHD | |
| 2-1 | 71420-60A11 | STAY, RADIATOR LH | 1 | 1 | | |
| 2-2 | 71420-86CA0 | STAY, RADIATOR LH | 1 | 1 | 1.9 DIESEL | |
| 3 | 71451-60A00 | HOOK, SHIPPING REAR | 1 | 1 | | |
| 4 | 71461-60A00 | COVER, FRONT SUSPENSION ARM | 1 | 1 | | |
| | | HANGER RH | | | | |
| 5 | 71471-60A00 | COVER, FRONT SUSPENSION ARM | 1 | 1 | | |
| | | HANGER LH | | | | |
| 6 | 71481-60A00 | PROTECTOR, 1ST MOUNTING | 2 | 2 | | |
| | | BRACKET | | | | |
| 7 | 71511-60A00 | CUSHION, BODY MOUNTING NO.1 | 6 | 6 | | |
| 8 | 71512-60A10 | CUSHION, BODY MOUNTING NO.2 | 6 | .6 | | |
| 9 | 71513-60A00 | COLLOR, BODY MOUNTING | 6 | 6 | | |
| 10 | 71514-60A00 | CUSHION, BODY FR MOUNTING NO.1 | 2 | 2 | | |
| 11 | 71515-60A00 | CUSHION, BODY FR MOUNTING NO.2 | 2 | 2 | | |
| 12 | 71516-85C00 | COLLOR, BODY FRONT MOUNTING | 2 | 2 | | |
| 13 | 71517-56B01 | SPACER, BODY FRONT MOUNTING | 2 | 2 | | |
| 14 | 71521-56B00 | PAD, BODY MOUNTING | 4 | 4 | | |
| 15 | 71632-83010 | BOTTOM, BODY MOUNTING | 8 | 8 | | |
| 16 | 72211-56B00 | FLAP, FRONT FRAME SIDE RH | 1 | 1 | | |
| 17 | 09103-12043 | BOLT, SHIPPING HOOK (12X20) | 2 | 2 | • • • • • • | |
| 18 | 59119-85C00 | NUT, BODY MOUNTING | 6 | 6 | | |
| 19 | 09409-06318 | CLIP, FR FRAME FLAP | 2 | 2 | | |
| 20 | 59931-85C00 | CLIP, HANGER COVER | 2 | 2 | | |
| 21 | 09409-10302-5PK | CLIP, BODY MOUNTING (BLACK) | 4 | 4 | | |
| 22 | 01 <i>5</i> 70-08203 | BOLT, RADIATOR STAY | 4 | 4 | | |
| 23 | 01 <i>57</i> 0-108 <i>5</i> 3 | BOLT, BODY MOUNTING | 2 | 2 | | |

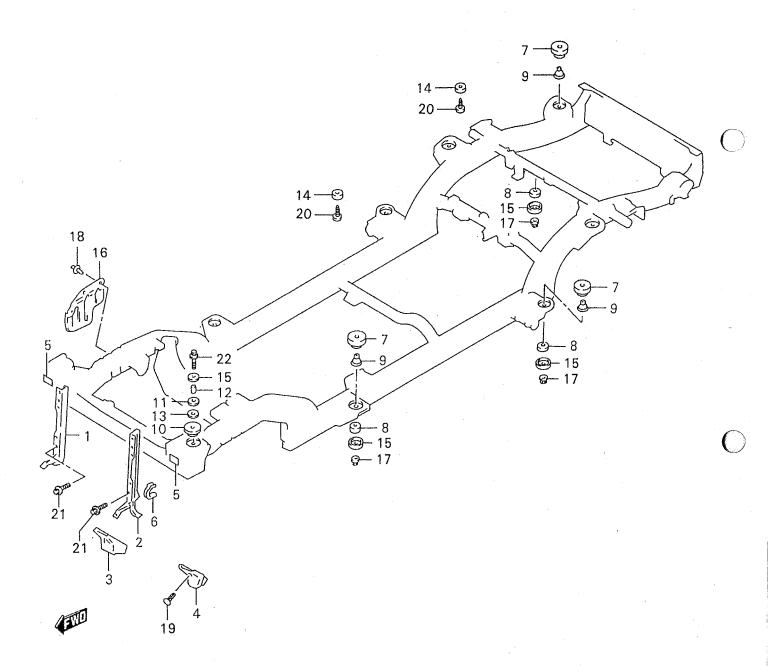

| REF. | | | | Q, TY | | |
|------|------------|-------------------------------|--------------------------------|-------|---|---------|
| | N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS |
| | | | · | | | · |
| | 1 | 71410-56B00 | STAY, RADIATOR RH | | 1 | |
| | 2 | 71420-56B21 | STAY, RADIATOR LH | | 1 | |
| | 3 | 71461-56B00 | COVER, FRONT SUSPENSION ARM | | 1 | |
| | | | HANGER RH | | | |
| | 4 | 71471-56B00 | COVER, FRONT SUSPENSION ARM | | 1 | |
| | | | HANGER LH | | | |
| | 5 | 71481-56B00 | PROTECTOR, FRONT BUMPER | | 2 | |
| | | | MOUNTING | | | |
| | 6 | 71491-56B00 | PROTECTOR, FRONT TOWING | | 1 | |
| N. | | | BUMPER | | | |
|) | 7 | 71511-56B00 | CUSHION, BODY MOUNTING NO.1 | | 6 | |
| | 8 | 71512-60A10 | CUSHION, BODY MOUNTING NO.2 | | 6 | |
| | 9 | 71513-60A00 | COLLOR, BODY MOUNTING | | 6 | |
| | 10 | 71514-56B00 | CUSHION, BODY FR MOUNTING NO.1 | | 2 | |
| | 11 | 71515-60A00 | CUSHION, BODY FR MOUNTING NO.2 | | 2 | |
| | 12 | 71516-85C00 | COLLOR, BODY FRONT MOUNTING | | 2 | |
| | 13 | 71517-56B01 | SPACER, BODY FRONT MOUNTING | | 2 | |
| | 14 | 71521-56B00 | PAD, BODY MOUNTING | | 4 | |
| | 15 | 71632-83010 | BOTTOM, BODY MOUNTING | | 8 | |
| | 16 | 72211-56B00 | FLAP, FRONT FRAME SIDE RH | | 1 | |
| | 1 <i>7</i> | 59119-85C00 | NUT, BODY MOUNTING | | 6 | |
| | 18 | 09409-06318 | CLIP, FR FRAME FLAP | | 3 | |
| | 19 | 59931-85C00 | CLIP, HANGER COVER | | 2 | |
| | 20 | 09409-10302-5PK | CLIP, BODY MOUNTING (BLACK) | | 4 | |
|) | 21 | 01570-08203 | BOLT, RADIATOR STAY | | 4 | |
| | 22 | 01 <i>5</i> 70-108 <i>5</i> 3 | BOLT, BODY MOUNTING | | 2 | |

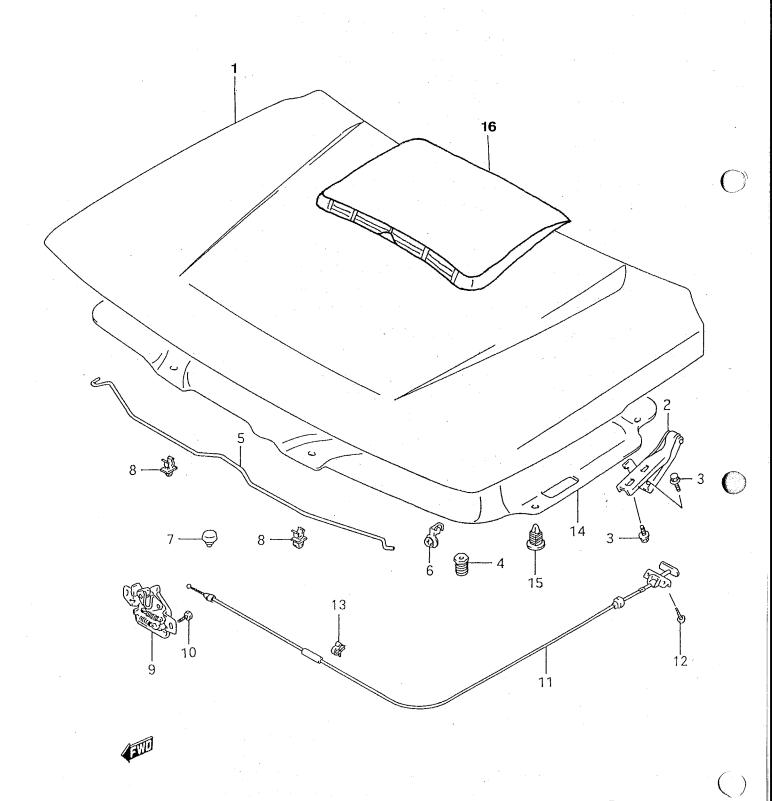

| | Q, TY | | | |
|----------------------|---|--|--|--|
| PART Nº | DESCRIPTION | С | ٧ | REMARKS |
| · | | | | |
| 58300-63A20 | PANEL ASSY, FRONT HOOD | 1 | 1 | |
| 58300-86CA0 | PANEL ASSY, FRONT HOOD | 1 | 1 | 1.9 DIESEL |
| 58410-60A30 | HINGE, FRONT HOOD | 2 | 2 | |
| 01580-06163 | BOLT, HINGE | 8 | 8 | |
| 72372-85C00 | CUSHION, FRONT HOOD | 2 | 2 | |
| 72431-60A02 | STAY, FRONT HOOD | 1 | 1 | |
| 09209-14001 | LINKAGE, FRONT HOOD STAY | 1 | 1 | |
| 09321-10023 | CUSHION, FRONT HOOD | 1 | 1 | |
| 09403-07307-5PK | CLAMP, HOOD STAY (BLACK) | 2 | 2 | |
| 82110-77E10 | LATCH, HOOD | 1 | 1 | LHD |
| 82110-77E00 | LATCH, HOOD | 1 | 1 | RHD |
| 01 <i>5</i> 80-06123 | BOLT, LATCH | 2 | 2 | |
| 82160-85C00 | CABLE, LATCH RELEASE | 1 | 1 | |
| 02142-05123 | SCREW | 2 | 2 | • |
| 82192-85C00 | CLAMP, CABLE | 2 | 2 | |
| 75270-56B01 | SILENCER, FR HOOD | 1 | 1 | |
| 75270-86CA0 | SILENCER, FRONT HOOD | 1 | 1 | 1.9 DIESEL |
| | 58300-86CA0 58410-60A30 01580-06163 72372-85C00 72431-60A02 09209-14001 09321-10023 09403-07307-5PK 82110-77E10 82110-77E00 01580-06123 82160-85C00 02142-05123 82192-85C00 75270-56B01 | 58300-63A20 PANEL ASSY, FRONT HOOD 58300-86CA0 PANEL ASSY, FRONT HOOD 58410-60A30 HINGE, FRONT HOOD 01580-06163 BOLT, HINGE 72372-85C00 CUSHION, FRONT HOOD 72431-60A02 STAY, FRONT HOOD 09209-14001 LINKAGE, FRONT HOOD STAY 09321-10023 CUSHION, FRONT HOOD 09403-07307-5PK CLAMP, HOOD STAY (BLACK) 82110-77E10 LATCH, HOOD 82110-77E00 LATCH, HOOD 01580-06123 BOLT, LATCH 82160-85C00 CABLE, LATCH RELEASE 02142-05123 SCREW 82192-85C00 CLAMP, CABLE 75270-56B01 SILENCER, FR HOOD | DESCRIPTION 58300-63A20 PANEL ASSY, FRONT HOOD 1 58300-86CA0 PANEL ASSY, FRONT HOOD 1 58410-60A30 HINGE, FRONT HOOD 2 01580-06163 BOLT, HINGE 8 72372-85C00 CUSHION, FRONT HOOD 2 72431-60A02 STAY, FRONT HOOD 1 09209-14001 LINKAGE, FRONT HOOD STAY 1 09321-10023 CUSHION, FRONT HOOD 1 09403-07307-5PK CLAMP, HOOD STAY (BLACK) 2 82110-77E10 LATCH, HOOD 1 82110-77E00 LATCH, HOOD 1 01580-06123 BOLT, LATCH 2 82160-85C00 CABLE, LATCH RELEASE 1 02142-05123 SCREW 2 82192-85C00 CLAMP, CABLE 2 75270-56B01 SILENCER, FR HOOD 1 | DESCRIPTION C V 58300-63A20 PANEL ASSY, FRONT HOOD 1 1 58300-86CA0 PANEL ASSY, FRONT HOOD 1 1 58410-60A30 HINGE, FRONT HOOD 2 2 01580-06163 BOLT, HINGE 8 8 72372-85C00 CUSHION, FRONT HOOD 2 2 72431-60A02 STAY, FRONT HOOD 1 1 09209-14001 LINKAGE, FRONT HOOD STAY 1 1 09321-10023 CUSHION, FRONT HOOD 1 1 09403-07307-5PK CLAMP, HOOD STAY (BLACK) 2 2 82110-77E10 LATCH, HOOD 1 1 82110-77E00 LATCH, HOOD 1 1 01580-06123 BOLT, LATCH 2 2 82160-85C00 CABLE, LATCH RELEASE 1 1 02142-05123 SCREW 2 2 82192-85C00 CLAMP, CABLE 2 2 75270-56B01 SILENCER, FR HOOD 1 1 |

8

8

1

1.9 DIESEL

CLIP, SILENCER (BLACK)


AIR SCOOP

15


16

09409-06309-5ES


77300-86CA0

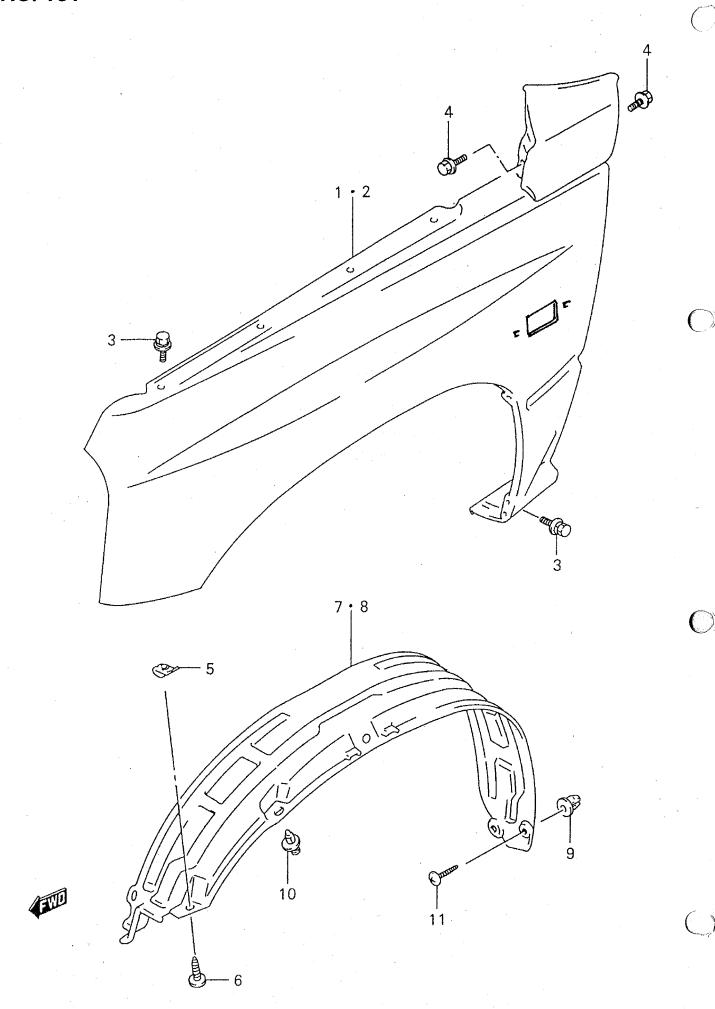


| REF. | | | Q, TY | | |
|------|-------------|-----------------------------|-------|----|---------|
| N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS |
| | | | | | |
| 1 | 58600-60A21 | PANEL ASSY, FRONT FENDER RH | 1 | 7 | |
| 2 | 58800-60A21 | PANEL ASSY, FRONT FENDER LH | 1 | 1 | |
| 3 | 09136-06078 | SCREW, FRONT FENDER (6X10) | 12 | 12 | |
| 4 | 09136-06078 | SCREW, COWL SIDE GARNISH | 4 | 4 | |
| | | (6X10) | | | |
| 5 | 59911-85C00 | NUT, FRONT FENDER | 2 | 2 | |
| 6 | 03241-06103 | SCREW, FRONT FENDER | 2 | 2 | |
| 7 | 72481-85C00 | LINING, FRONT FENDER RH | 1 | 1 | |
| 8 | 72482-85C00 | LINING, FRONT FENDER LH | 1 | 1 | |
| 9 | 59981-85C00 | NUT, FENDER LINING | 4 | 4 | |
| 10 | 59932-85C00 | CLIP, FENDER LINING | 12 | 12 | |
| 11 | 03242-06163 | SCREW, FENDER LINING | 4 | 4 | |

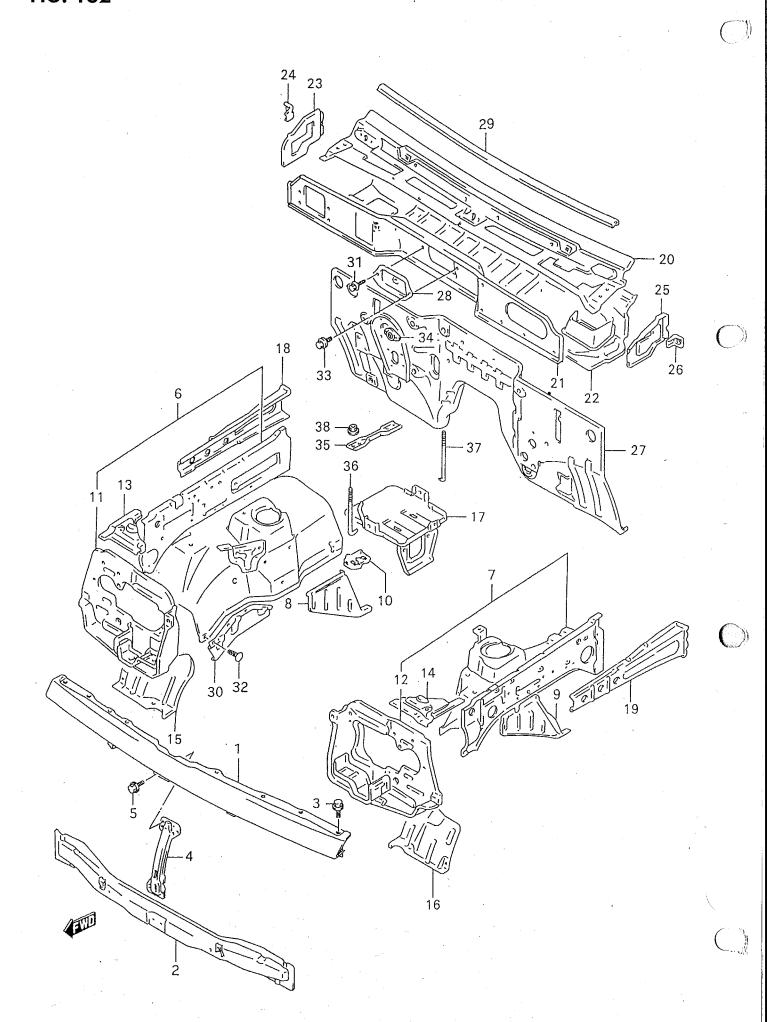


| | REF. | B) BT) (0 | N. D. T. V. C. | Q, TY | | | |
|-----|------------|-------------|--------------------------------|-------|-----|------------|--|
| | N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS | |
| | | | | | | | |
| | 1 | 58110-85C00 | PANEL, FRONT | 1 | 1 | | |
| | 2 | 58190-56B00 | MEMBER, FRONT PANEL LOWER | 1 | 1 | | |
| | 3 | 09136-06078 | SCREW, FRONT PANEL (6X10) | 10 | 10 | | |
| | 4 | 72411-60A01 | MEMBER, FRONT PANEL CENTER | 1 | 1 | | |
| | 5 | 01550-06123 | SCREW, FRONT PANEL CTR MEMBER | 4 | 4 | | |
| | 6-1 | 58700-63A90 | PANEL, FRONT WHEEL HOUSING RH | 1 | 1 | E22 - | |
| | 6-2 | 58700-63A40 | PANEL, FRONT WHEEL HOUSING RH | 1 | 1 | E53:= | |
| | 6-3 | 58700-86CA0 | PANEL, FRONT WHEEL HOUSING RH | 1 | 1 | 1.9 DIESEL | |
| | 7-1 | 58900-63A20 | PANEL, FRONT WHEEL HOUSING LH | 1 | 1 | N/ABS | |
| | 7-2 | 58900-63A00 | PANEL, FRONT WHEEL HOUSING LH | 1 | 1 | W/ABS | |
| ,) | 7-3 | 58900-86CA0 | PANEL, FRONT WHEEL HOUSING LH | 1 | 1 | 1.9 DIESEL | |
| | 8 | 58712-60A10 | EXTENSION, WHEEL HOUSING RH | 1 | 1 | | |
| | 9 | 58912-60A10 | EXTENSION, WHEEL HOUSING LH | 1 | 1 | | |
| | 10 | 58717-60A00 | .BRACKET, BRAKE PIPE | 1 | 1 | · . | |
| | 1,1 | 58730-85C00 | .PANEL, LAMP SUPPORT RH | 1 | 1 | # | |
| | 12 | 58930-56B01 | .PANEL, LAMP SUPPORT LH | 1 | 1 | | |
| | 13 | 58740-60A00 | .GUSSET, FRONT CORNER RH | 1 | 1 | | |
| | 14 | 58941-60A00 | .GUSSET, FRONT CORNER LH | 1 | 1 | | |
| | 15 | 58755-60A00 | .GUSSET, FRONT LOWER MEMBER RH | 1 | 1 | | |
| | 16 | 58955-60A00 | .GUSSET, FRONT LOWER MEMBER LH | 1 | 1 | | |
| | 1 <i>7</i> | 58760-60A01 | .BRACKET, BATTERY | - 1 | 1 | | |
| | 18 | 58771-56B00 | MEMBER, FRONT BODY SIDE RH | 1 | 1 | | |
| | 19 | 58970-56B01 | MEMBER, FRONT BODY SIDE LH | 1 | 1 | | |
| | 20 | 59110-56B00 | PANEL, COWL TOP | 1 | 1 | | |
|) | 21 -1 | 59211-60A01 | PANEL, FRONT | 1 | 1 | , | |
| | 21-2 | 59211-86CA0 | PANEL, FRONT | 1 | 1 | 1.9 DIESEL | |
| | 22 | 59310-56B21 | PANEL, COWL UPPER | 1 | 1 | | |
| | 23 | 59411-60A01 | PANEL, SIDE RH | 1 | - 1 | | |
| | 24 | 59412-60A00 | BRACKET, SIDE FRONT RH | 1 | 1 | | |
| | 25 | 59421-60A01 | PANEL, SIDE LH | 1 | 1 | | |
| | 26 | 59422-60A00 | BRACKET, SIDE FRONT LH | 1 | 1 | | |
| | | | | | | | |

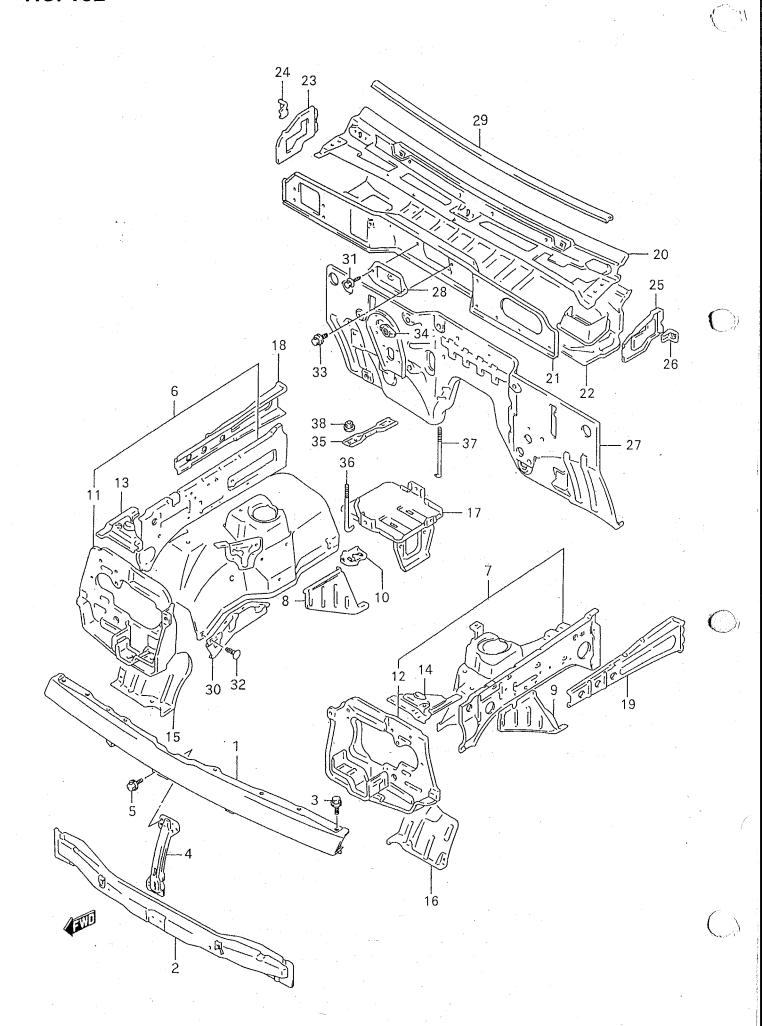


| REF. | | Lº DESCRIPTION - | Q, | TY | | |
|----------------|-----------------|-------------------------------|-----|-----|------------|---|
| N.º | PART Nº | | С | ٧ | REMARKS | |
| | | | | | | |
| 27 | 61100-57B00 | PANEL, DASH | 1 | 1 | | |
| 28 | 72421-60A00 | LID, WIPER LINK SERVICE HOLE | 1 | 1 | | |
| 29 | 72471-60A00 | WEATHERSTRIP, COWL TOP FRONT | 1 | 1. | - | - |
| 30 | 72485-60A00 | FLAP, FRONT WHEEL HOUSING RH | 1 | 1 | | |
| 31 | 09115-06001 | BOLT, WIPER SERVICE HOLE RH | 1. | 1 | | |
| | | (6X16) | | | | |
| 32 | 09409-10304-5ES | CLIP, FR HOUSING FLAP (BLACK) | 2 | 2 | • | |
| 33. | 01550-06123 | BOLT, WIPER SERVICE HOLE | 1 | 1 | | |
| 34 | 72491-60A00 | CAP, CLUTCH CABLE HOSE | .] | 1 | AT | |
| 35 | 72511-85C00 | BAND, BATTERY | 1 | 1 | | - |
| 36 | 72512-85C00 | BOLT, BATTERY | 1 | 1 | | |
| 3 <i>7</i> - 1 | 72512-85C10 | BOLT, BATTERY | 1 | 1 | | |
| 37-2 | 72512-86CA0 | BOLT, BATTERY | 1 | . 1 | 1.9 DIESEL | |
| 38 | 08361-15063 | NUT, BATTERY | 2 | 2 | | |

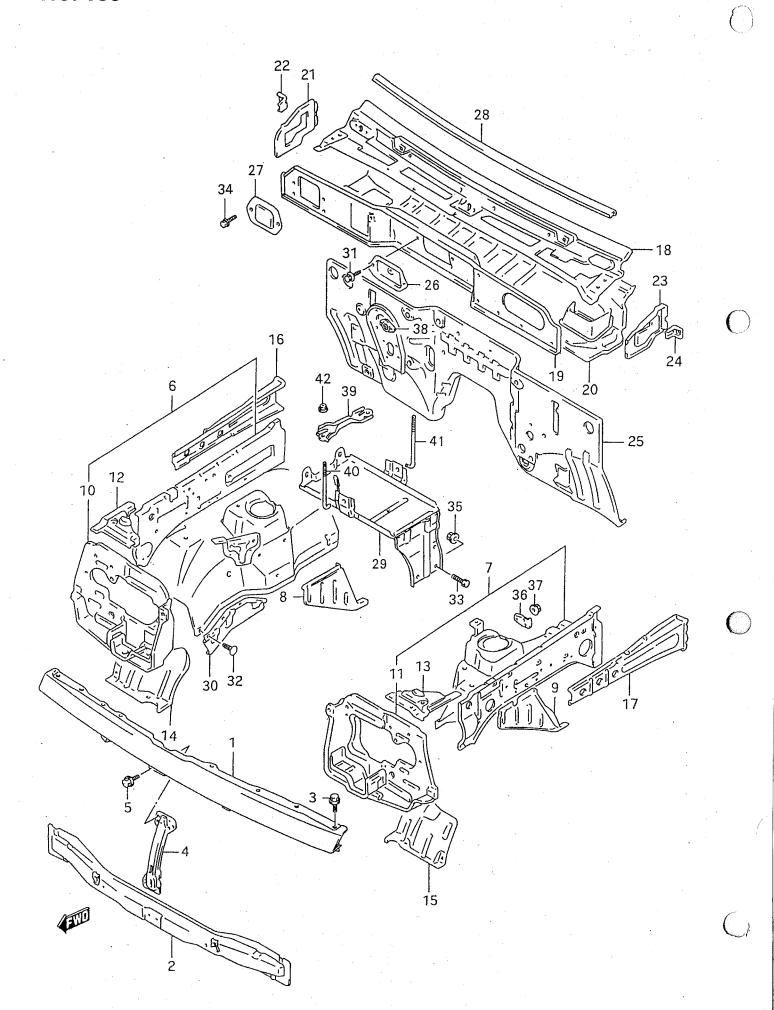

| REF. | | | Q, TY | | | |
|-------------|---------------------|-------------------------------|-------|-----|---------|--|
| N.º | PART Nº DESCRIPTION | DESCRIPTION | С | ٧ | REMARKS | |
| | · | | | | | |
| 1 | 58110-85C00 | PANEL, FRONT | 1 | 1 | | |
| 2 | 58190-56B00 | MEMBER, FRONT PANEL LOWER | 1 | 1 | • | |
| 3 | 09136-06078 | SCREW, FRONT PANEL (6X10) | 10 | 10 | | |
| 4 | 72411-60A01 | MEMBER, FRONT PANEL CENTER | 1 | 1 | | |
| 5 | 01550-06123 | SCREW, FRONT PANEL CTR MEMBER | 4 | 4 | | |
| 6-1 | 58700-63A30 | PANEL, FRONT WHEEL HOUSING | 1 | 1 | N/ABS | |
| 6-2 | 58700-63A30 | PANEL, FRONT WHEEL HOUSING | 1 | 1 | W/ABS | |
| <i>7-</i> 1 | 58900-63A30 | PANEL, FRONT WHEEL HOUSING | 1 | 1 | N/ABS | |
| 7-2 | 58900-63A10 | PANEL, FRONT WHEEL HOUSING | 1 | 1 | W/ABS | |
| 8 | 58712-60A10 | EXTENSION, WHEEL HOUSING | 1 | 1 | | |
| 9 | 58912-60A10 | EXTENSION, WHEEL HOUSING | .1 | 1 | | |
| 10 | 58730-56B00 | .PANEL, LAMP SUPPORT RH | 1 | 1 | | |
| 11 | 58930-56B01 | .PANEL, LAMP SUPPORT LH | 1 | 1 | | |
| 12 | 58740-60A00 | .GUSSET, FRONT CORNER RH | 1 | 1 | | |
| 13 | 58941-60A00 | .GUSSET, FRONT CORNER LH | 1 | 1 | | |
| 14 | 58755-60A00 | .GUSSET, FRONT LOWER MEMBER | 1 | 1 | | |
| 15 | 58955-60A00 | .GUSSET, FRONT LOWER MEMBER | 1 | 1 | | |
| 16 | 58771-56B00 | MEMBER, FRONT BODY SIDE RH | 1 | 1 . | | |
| 1.7 | 58970-56B01 | MEMBER, FRONT BODY SIDE LH | 1 | 1 | | |
| 18 | 59110-56B00 | PANEL, COWL TOP | 1 | 1 | (| |
| 19 | 59211-60A11 | PANEL, FRONT | 1 | 1 | | |
| 20 | 59310-56B31 | PANEL, COWL UPPER | 1 | 1 | | |
| 21 | 59411-60A01 | PANEL, SIDE RH | 1 | 1 | | |
| 22 | 59412-60A00 | BRACKET, SIDE FRONT RH | 1 | 1 | | |
| 23 | 59421-60A01 | PANEL, SIDE LH | 1 | 1 | | |
| 24 | 59422-60A00 | BRACKET, SIDE FRONT LH | 1 | . 1 | | |

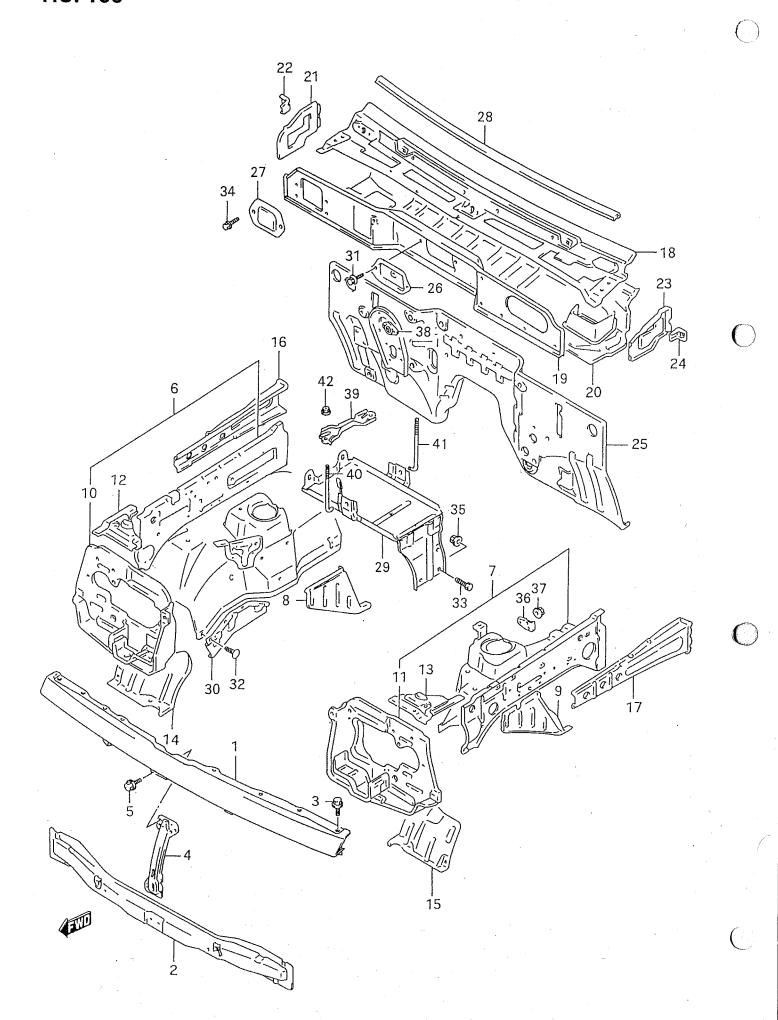


| REF. | | | Q, TY | | | |
|-----------------|----------------------|--------------------------------|-------|---|---------|--|
| N' _ō | PART Nº | DESCRIPTION | С | ٧ | REMARKS | |
| | | | | | | |
| 25 | 61100- <i>57</i> B20 | PANEL, DASH | 1 | 1 | | |
| 26 | 72421-60A00 | LID, WIPER LINK SERVICE HOLE | 1 | 1 | | |
| 27 | 72422-60A10 | LIDK WIPER LINK SVCE HOLE SIDE | 1 | 1 | | |
| 28 | 72471-60A00 | WEATHERSTRIP, COWL TOP FRONT | 1 | 1 | | |
| 29 | 72450-60A11 | BRACKET, BATTERY | 1 | 1 | 2 VALVE | |
| 30 | 72485-60A00 | FLAP, FRONT WHEEL HOUSING RH | 1 | 1 | | |
| 31 | 09115-06001 | BOLT, WIPER SERVICE HOLE LH | 1 | 1 | | |
| | | (6X16) | | | | |
| 32 | 09409-10304-5ES | CLIP, FR HOUSING FLAP (BLACK) | 2 | 2 | | |
| 33 | 01550-06123 | SCREW, BATTERY BRACKET | 2 | 2 | | |
| 34 | 01550-06123 | SCREW, WIPER SERVICE HOLE | 3 | 3 | | |
| 35 | 08316-10063 | NUT, BATTERY BARCKET | 2 | 2 | | |
| 36 | 72311-60A00 | BRACKET, BATTERY BOLT | 1 | 1 | 4 VALVE | |
| 37 | 08316-10063 | NUT, BATTERY BOLT BRAKET | 1 | 1 | 4 VALVE | |
| 38 | 72491-60A00 | CAP, CLUTCH CABLE HOLE | 1 | 1 | AT | |
| 39 | 72511-86000 | BAND, BATTERY | 1 | 1 | | |
| 40-1 | 72512-82011 | BOLT, BATTERY | 1 | 1 | 2 VALVE | |
| 40-2 | 72512-85C00 | BOLT, BATTERY | 1 | 1 | 4 VALVE | |
| 41-1 | 72512-82011 | BOLT, BATTERY | 1 | 1 | 2 VALVE | |
| 41 -2 | 72512-85C00 | BOLT, BATTERY | 1 | 1 | 4 VALVE | |
| 42 | 08361-15063 | NUT, BATTERY | 2 | 2 | , | |

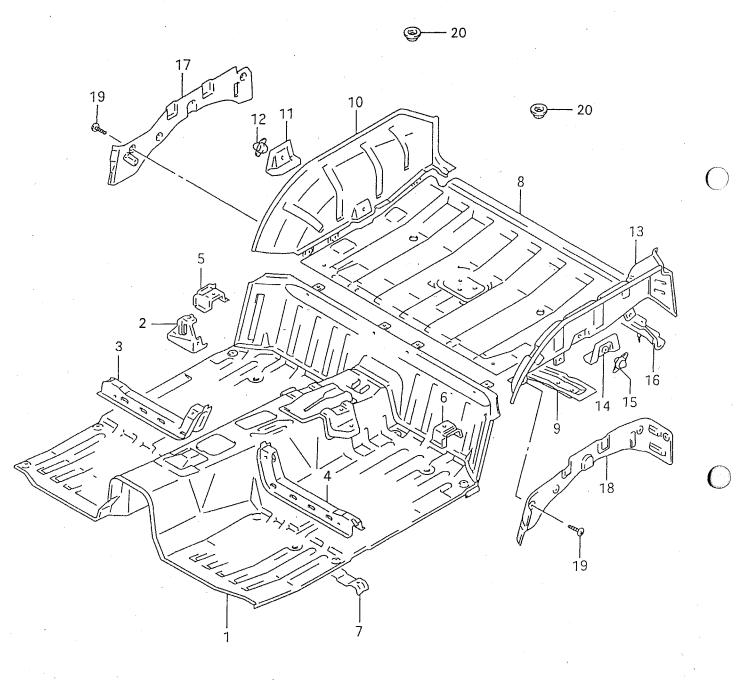


| REF. | D) DT) 10 | | Q, | Q, TY | | | |
|------------|-------------|------------------------------|-----|-------|----|---------|--|
| N.º | PART Nº | DESCRIPTION | | ٧ | | REMARKS | |
| | · | | | | | | |
| 1 - 1 | 61400-62850 | PANEL SET, FRONT FLOOR | 1 | 1 | MT | | |
| 1 -2 | 61400-62860 | PANEL SET, FRONT FLOOR | 1 | 1 | ΑT | | |
| 2 | 61440-60A00 | .BRACKET, JACK | 1 | 1 | | | |
| 3 | 61450-60A10 | .MEMBER, FRONT SEAT RH | 1 | 1 | | | |
| 4 | 61550-60A10 | .MEMBER, FRONT SEAT LH | 1 | 1 | | | |
| 5 | 61461-60A00 | .BRACKET, SEAT REAR OUTER RH | 1 | 1 | | | |
| 6 | 61561-60A00 | .Bracket, seat rear outer lh | 1 | 1 | | | |
| 7 | 61641-60A10 | .REINF, SEAT BELT CENTER | 1 | 1 - | | | |
| 8 | 62111-60A20 | PANEL, REAR FLOOR | 1 | 1 | | | |
| 9 | 62120-60A10 | MEMBER, REAR FLOOR | 1 | 1 | | | |
| 10-1 | 62210-60A30 | PANEL, WHEEL HOUSE INNER RH | . 1 | - | | | |
| 10-2 | 62210-60A20 | PANEL, WHEEL HOUSE INNER RH | | 1 | | | |
| 11 | 62131-60A00 | .REINF, SEAT BELT SIDE RH | 1 | 1 | | | |
| 12 | 62132-60A00 | .COVER, SEAT BELT SIDE | 1 | 1 | | | |
| 13-1 | 62310-85C30 | PANEL, WHEEL HOUSE INNER LH | 1 | - | | | |
| 13-2 | 62310-85C20 | PANEL, WHEEL HOUSE INNER LH | - | 1 | | | |
| 14 | 62331-85C00 | .REINF, SEAT BELT SIDE LH | 1 | 1. | | | |
| 15 | 62132-60A00 | .COVER, SEAT BELT SIDE | 1 | 1 | | | |
| 16 | 62510-62A40 | MEMBER, REAR FLOOR TAIL | 1 | 1 | | | |
| 1 <i>7</i> | 65995-60A01 | COVER, REAR WHEEL HOSE RH | 1 | 1 | | | |
| 18 | 65996-60A01 | COVER, REAR WHEEL HOSE LH | 1 | 1 | | | |
| 19 | 01550-06103 | SCREW | 7 | 1 | | | |
| 20 | 65971-77E00 | CAP, REAR FLOOR | 2 | 2 | | | |

©----15

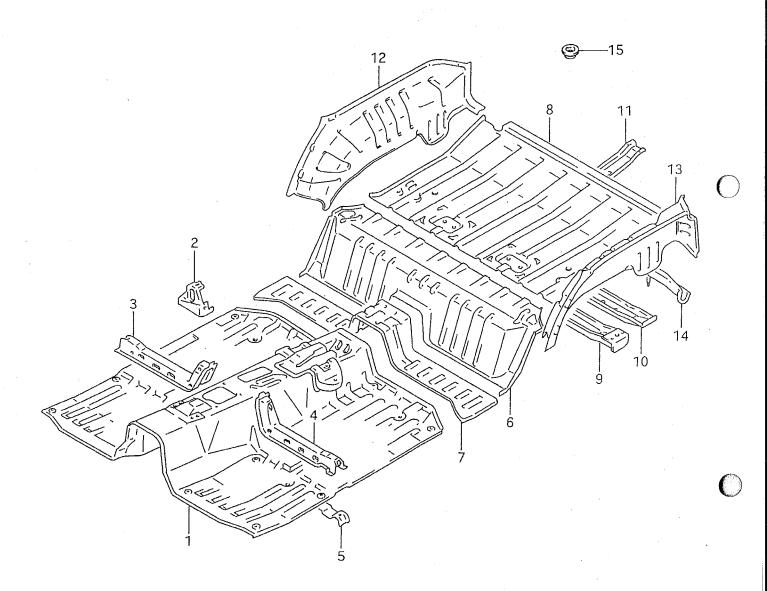


| REF. | F. | | Q, | TY | | |
|------|----------------------|---------------------------|----|-----|---------|--|
| N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS | |
| 3 1 | (1 (00 57070 | DANIEL ACCOVERDANT FLOOR | | 7 | | |
| 1-1 | 61400-57B70 | PANEL ASSY, FRONT FLOOR | | 1 - | MT | |
| 1 -2 | 61400- <i>57</i> B80 | PANEL ASSY, FRONT FLOOR | | 1 | AT | |
| 2 | 61440-60A00 | .BRACKET, JACK | | 1 | | |
| 3 | 61450-56B00 | .MEMBER, FRONT SEAT RH | | 1 | | |
| 4 | 61550-56B00 | .MEMBER, FRONT SEAT LH | | 1 | | |
| 5 | 61641-60A10 | .REINF, SEAT BELT CENTER | | 1 | | |
| 6 | 61700-56B10 | PANEL ASSY, CENTER FLOOR | | 1 | | |
| 7 | 61760-56B00 | PANEL, CENTER FLOOR FRONT | | 1 | | |
| 8 | 62111-56B10 | PANEL, REAR FLOOR | | 1 | | |
| 9 | 62120-56B00 | MEMBER, REAR FLOOR NO.1 | | 1 | | |
| 10 | 62131-56B00 | MEMBER, REAR FLOOR NO.2 | | 1 | | |
| 11. | 62141-56B00 | MEMBER, REAR FLOOR NO.3 | | 1 | | |
| 12 | 62210-56B10 | PANEL, REAR WHEEL HOUSING | | 1 | | |
| | | INNER RH | | | | |
| 13 | 62310-56B00 | PANEL, REAR WHEEL HOUSING | | 1 | | |
| | | INNER LH | | | | |
| 14 | 62510-57B20 | MEMBER, REAR FLOOR TAIL | | 1 | | |
| 15 | 65971-77E00 | CAP, REAR FLOOR | | 2 | | |
| | | | | | | |

FIG. 136

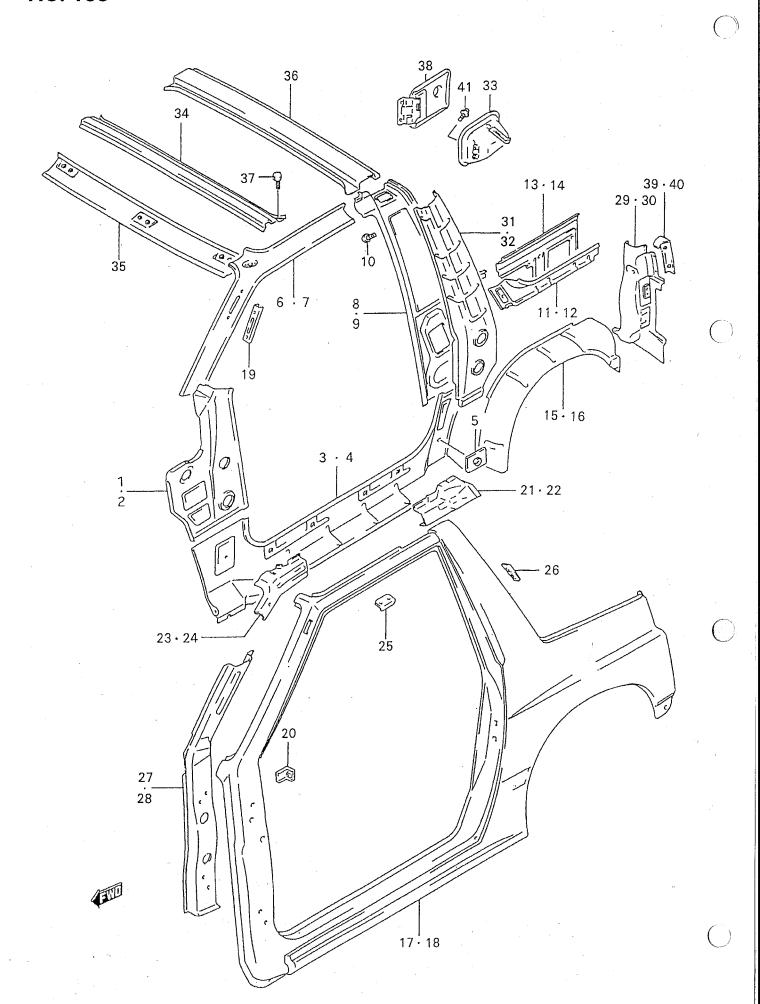


| REF. | | | Q, TY | |
|---------------|-------------|-------------------------------|-------|---------|
| N.º | PART Nº | DESCRIPTION | C V | REMARKS |
| | | | | |
| 1 | 61480-57B10 | PANEL, FRONT PILLAR INNER RH | . 1 | |
| 2 | 61580-57B10 | PANEL, FRONT PILLAR INNER LH | 1 | |
| 3 | 61490-60A00 | PANEL, SILL SIDE INNER RH | 1 | |
| 4 | 61590-60A00 | PANEL, SILL SIDE INNER LH | 1 | |
| 5 | 61492-80000 | .REINF, SEAT BELT LOWER | 2 | |
| 6-1 | 63111-60A10 | PANEL, ROOF SIDE INNER RH | 1 | JX |
| - 6-2 | 63111-60A20 | PANEL, ROOF SIDE INNER RH | 1 | JLX |
| 7-1 | 63511-60A00 | PANEL, ROOF SIDE INNER LH | 1 | JX |
| 7-2 | 63511-60A30 | PANEL, ROOF SIDE INNER LH | 1 | JLX |
| 8 | 63210-62A20 | PANEL, CENTER PILLAR INNER RH | . 1 | |
| 9 | 63610-62A20 | PANEL, CENTER PILLAR INNER LH | 1 | |
| 10 | 01550-06123 | SCREW, SEAT BELT REINF | 8 | |
| 11 | 63221-60A10 | reinf, rear otr inner rh | 1 | |
| 12 | 63621-60A10 | reinf, rear QTR inner RH | 1 | |
| 13 | 63310-60A10 | PANEL, REAR QTR INNER RH | 1 | |
| 14 | 63710-60A10 | PANEL, REAR QTR INNER LH | 1 | |
| 15 | 63410-60A00 | PANEL, WHEEL HOUSE OUTER RH | 1 | |
| 16 | 63811-60A00 | PANEL, WHEEL HOUSE OUTER LH | 1 | |
| 1 <i>7-</i> 1 | 64111-60A50 | PANEL, SIDE BODY OUTER RH | 1 | LHD |
| 17-2 | 64111-60A30 | PANEL, SIDE BODY OUTER RH | 1 | RHD |
| 18-1 | 64511-60A50 | PANEL, SIDE BODY OUTER LH | 1 | LHD |
| 18-2 | 64511-60A10 | PANEL, SIDE BODY OUTER LH | 1 | RHD |


FIG. 136

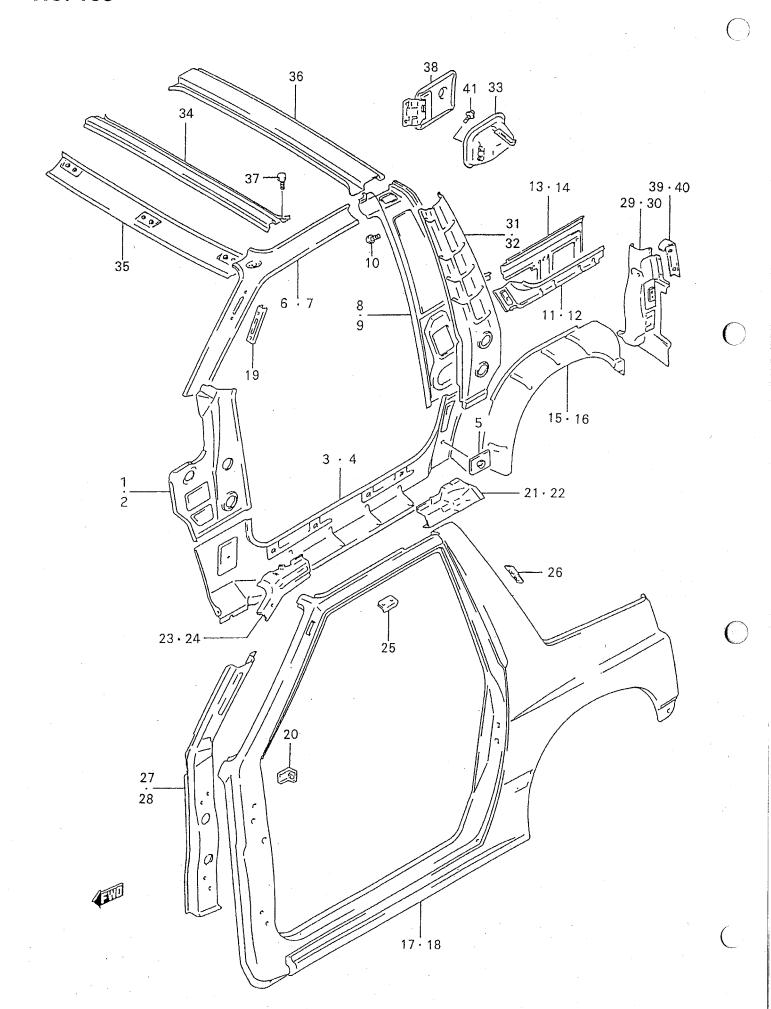


| REF. | | | | Q, TY | • |
|------|------------|-------------|------------------------------|-------|---------|
| | N.º | PART Nº | DESCRIPTION | C V | REMARKS |
| | 19 | 64151-60A00 | REINF, RADIO ANTENNA | 1 | |
| | 20 | 64214-60A00 | BRACKET, COWL SIDE GERNISH | 2 | |
| | 21 | 64215-60A02 | EXTENSION, SIDE BODY RH | 1 | |
| | 22 | 64515-60A02 | EXTENSION, SIDE BODY LH | 1 | |
| | 23 | 64216-60A00 | REINF, FR PILLAR UPPER RH | -1 | |
| | 24 | 64516-60A00 | REINF, FR PILLAR UPPER LH | 1 | |
| | 25 | 64217-60A00 | REINF, SOFT TOP HINGE | 2 | |
| | 26 | 64218-60A00 | REINF, SOFT TOP SIDE | 2 | |
| | 27 | 64120-60A10 | REINF, FRONT PILLAR RH | 1 | |
| | 28 | 64520-60A10 | REINF, FRONT PILLAR LH | 1 | |
| | 29 | 64310-60A00 | PANEL, REAR PILLAR OUTER RH | 1 | |
| | 30 | 64710-60A10 | PANEL, REAR PILLAR OUTER LH | 1 | |
| | 31 | 64250-62A20 | REINF, CENTER PILLAR RH | 1 | |
| | 32 | 64550-62A20 | REINF, CENTER PILLAR LH | 1. | |
| | 33 | 64230-60A00 | BOX, FUEL INLET | 1 | |
| | 34 | 65110-60A00 | PANEL, FRONT PILLER JOINT | 1 | |
| | 35-1 | 65115-60A00 | PANEL, FR PILLER JOINT INNER | 1 . | JX |
| | 35-2 | 65115-60A10 | PANEL, FR PILLER JOINT INNER | 1 . | JLX |
| | 36 | 65120-60A10 | PANEL, CENTER PILLER JOINT | 1 | |
| | 3 <i>7</i> | 09136-06078 | BOLT (6X10) | 2 | |
| | 38 | 65950-60A00 | LID, FUEL INLET | 1 | |
| | 39 | 65965-60A00 | GARNISH, REAR PILLAR RH | 1 | |
| | 40 | 65966-60A00 | GARNISH, REAR PILLAR LH | 1 | |
| | 41 | 02142-05123 | SCREW | 2 | |
| | | | | | |

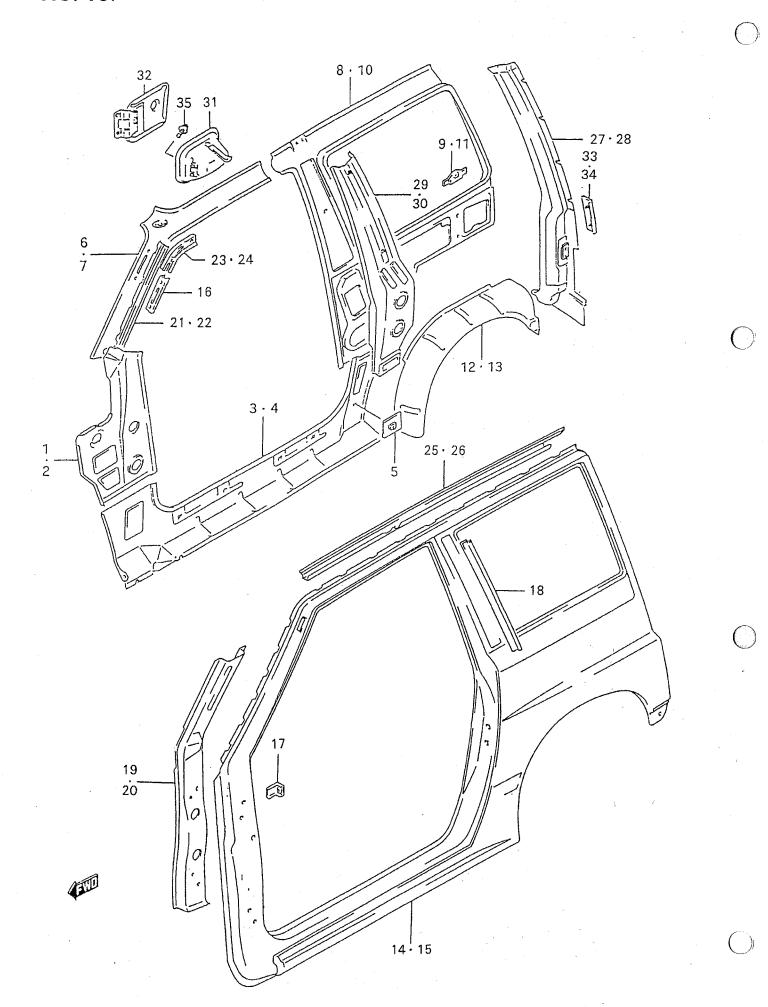


| REF. | PART Nº | | Q, | TY | | |
|------|-------------------------------|---------------------------|----|----|-------------|--|
| N.º | | DESCRIPTION | C | V | REMARKS | |
| .] | 61480-57B10 | PANEL, FRONT PILLAR INNER | | 1 | | |
| 2 | 61 <i>5</i> 80- <i>57</i> B10 | PANEL, FRONT PILLAR INNER | | 1 | | |
| 3 | 61490-60A00 | PANEL, SILL SIDE INNER RH | | 1 | | |
| 4 | 61590-60A00 | PANEL, SILL SIDE INNER LH | | 1 | | |
| 5 | 61492-80000 | .REINF, SEAT BELT LOWER | | 2 | | |
| 6-1 | 63111-61A30 | PANEL, ROOF SIDE INNER RH | | 1 | JX | |
| 6-2 | 63111-61A20 | PANEL, ROOF SIDE INNER RH | | 1 | JLX | |
| 7-1 | 63511-61A30 | PANEL, ROOF SIDE INNER LH | | 1 | JX | |
| 7-2 | 63511-61A20 | PANEL, ROOF SIDE INNER LH | | 1 | JLX | |
| 8-1 | 63210-63A60 | PANEL, SIDE BODY INNER RH | | 1 | JX: E2, E22 | |
| 8-2 | 63210-63A80 | PANEL, SIDE BODY INNER RH | | 1 | JX: E53 | |
| 8-3 | 63210-63A70 | PANEL, SIDE BODY INNER RH | | 1 | JLX | |
| 9 | 63312-56B00 | .REINF, RETRACTOR RH | | 1 | | |
| 10-1 | 63610-63A60 | PANEL, SIDE BODY INNER LH | | 1 | JX: E2, E22 | |
| 10-2 | 63610-63A80 | PANEL, SIDE BODY INNER LH | | 1 | JX: E53 | |
| 10-3 | 63610-63A70 | PANEL, SIDE BODY INNER LH | | 1 | JLX | |
| 11 | 63712-56B00 | .REINF, RETRACTOR LH | | 1 | | |
| 12 | 63410-60A00 | PANEL, WHEEL HOUSE OUTER | | 1 | * | |
| 13 | 63811-60A00 | PANEL, WHEEL HOUSE OUTER | | 1 | | |
| 14-1 | 64110-61A20 | PANEL, SIDE BODY OUTER RH | | 1 | LHD | |
| 14-2 | 64111-60A30 | PANEL, SIDE BODY OUTER RH | | 1 | RHD | |
| 15-1 | 64510-62A40 | PANEL, SIDE BODY OUTER LH | | 1 | LHD | |
| 15-2 | 54511-61A10 | PANEL, SIDE BODY OUTER LH | | 1 | RHD | |

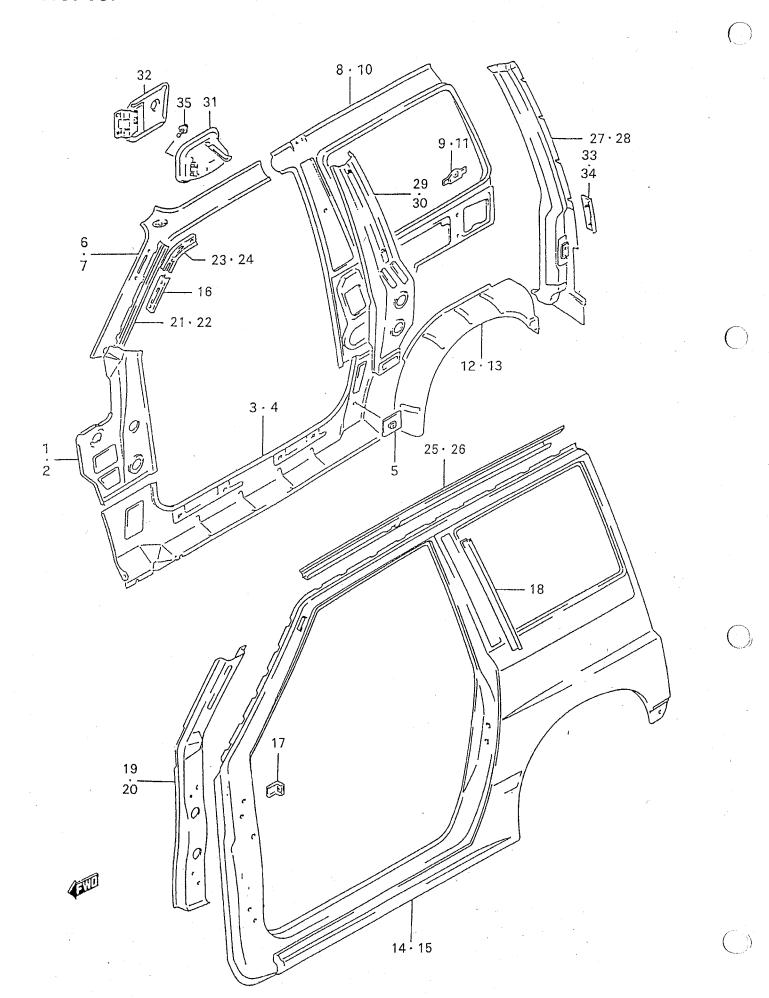


| REF. | PART Nº | DESCRIPTION | Q, TY | | |
|-------|-------------|------------------------------|-------|---------|--|
| N.º | | | C V | REMARKS | |
| 16 | 64151-60A00 | REINF, RADIO ANTENNA | . 1 | | |
| 17 | 64214-60A00 | BRACKET, COWL SIDE GARNISH | 2 | | |
| 18 | 64216-61A00 | BRACKET, CTR PILLAR GARNISH | 2 | E53 | |
| 19 | 64120-60A10 | REINF, FRONT PILLAR RH | 1 | | |
| 20 | 64520-60A10 | REINF, FRONT PILLAR LH | 1 | | |
| 21 | 64130-61A00 | PANEL, FRONT WINDOW SIDE RH | 1 | | |
| 22 | 64530-61A00 | PANEL, FRONT WINDOW SIDE LH | 1 | | |
| 23 | 64141-61A00 | REINF, FRONT PILLAR UPPER RH | 1. | | |
| 24 | 64541-61A00 | REINF, FRONT PILLAR UPPER LH | 1 | | |
| 25 | 64241-61A00 | RAIL, ROOF SIDE OUTER RH | 1 | | |
| 26 | 64641-61A00 | RAIL, ROOF SIDE OUTER LH | 1 | | |
| 27 | 64310-61A01 | PANEL, BACK PILLAR OUTER RH | 1 | | |
| 28 | 64710-61A21 | PANEL, BACK PILLAR OUTER LH | 1 | | |
| 29 | 64250-61A00 | REINF, CENTER PILLAR RH | 1 | | |
| 30 | 64650-61A00 | REINF, CENTER PILLAR LH | 1 | | |
| 31 -1 | 64230-60A00 | BOX, FUEL INLET | 1 | JX | |
| 31-2 | 64231-60A10 | BOX, FUEL INLET | 1 | JLX | |
| 32-1 | 65950-60A00 | LID, FUEL INLET | 1 | JX | |
| 32-2 | 65950-60A20 | LID, FUEL INLET | 1 | JLX | |
| 33 | 65965-61A00 | GARNISH, BACK PILLAR RH | 1 | | |
| 34 | 65966-61A00 | GARNISH, BACK PILLAR LH | 1 | | |
| 35 | 02142-05123 | SCREW | 2 | | |

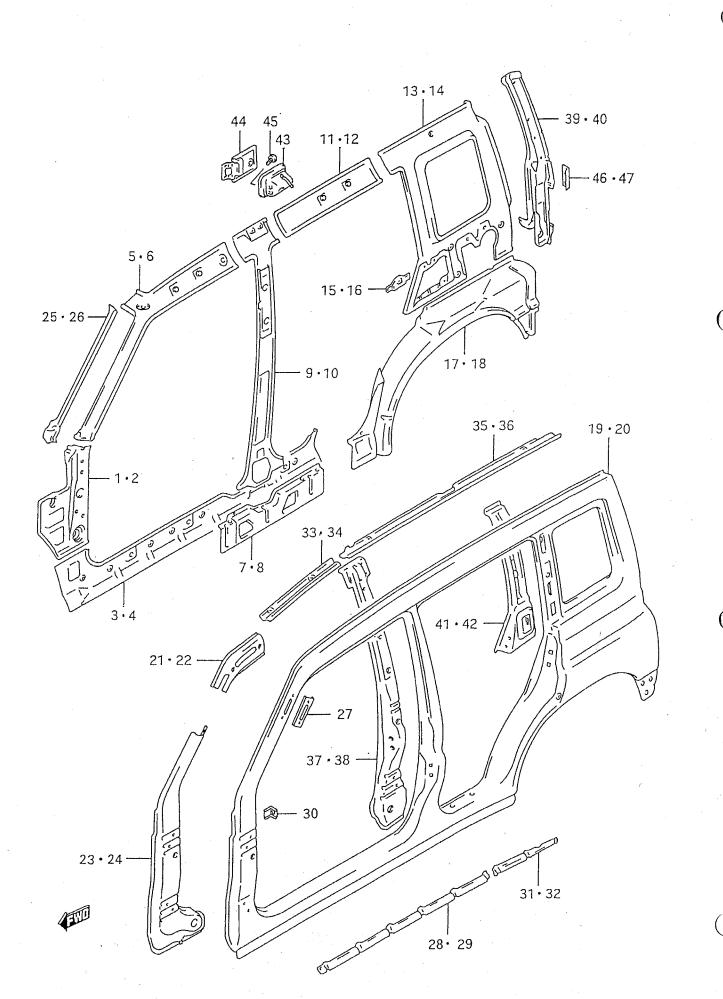

| REF. N.º | | | Q, TY | | | | |
|-------------|--------------|----------------------------|---|---|--------|-----------|----------|
| | | PART Nº DESCRIPTION | DESCRIPTION | С | V | REM | ÄRKS |
| | , | /1 400 E7010 | | | 1 | | |
| | 1 | 61480-57B10 | PANEL, FR PILLAR INNER RH | | 1 | | |
| | 2 3 | 61580-57B10 | PANEL, FR PILLAR INNER LH | | 1 | | |
| | 3 4 | 61491-56B00 | PANEL, SIDE SILL INNER RH | | 1 | | |
| | | 61591-56B00 | PANEL, SIDE SILL INNER LH | | 1 | IV | |
| | 5-1 5-2 | 63111-56B30 | PANEL, ROOF SIDE INNER RH | | 1 | JX | |
| | | 63111-56B20 | PANEL, ROOF SIDE INNER RH | | 1 3 | JLX | |
| | 6-1 6-2 | 63511-56B30 | PANEL, ROOF SIDE INNER LH | | 1 | JX JLX | |
| | 0-2 7 | 63511-56B20 | PANEL, ROOF SIDE INNER LH | | 1 | JLX | |
| | | 63121-56B00 | STRENGTH, SIDE SILL RH | | 1 | | |
| -\ | 8 9 | 63521-56B00 63210-56B40 | STRENGTH, SIDE SILL LH PANEL, CTR PILLAR INNER RH | | 1 | | |
| _) | 10 | | | | i 1 | | |
| | | 63610-56B40 63221-56B10 | PANEL, CTR PILLAR INNER LH | | 1 | | |
| | 11 12 | 63621-56B10 | PANEL, ROOF SIDE INNER RR RH PANEL, ROOF SIDE INNER RR LH | | 1 | | |
| | | | • | | 1 | JX | |
| | 13-1 13-2 | 63311-56B11 | PANEL, REAR OTR INNER RH | | 1 | JLX | |
| | 13-2 | 63311-56B01 | PANEL, REAR OTR INNER RH | | 1 | JLX | |
| | 14-1 | 63711-56B11 | PANEL, REAR OTR INNER LH | | 1 | | |
| | | 63711-56B01 | PANEL, REAR QTR INNER LH | | 1 | JLX | |
| | 15 | 63312-56B00 | REINFORCEMENT, RETRACTOR RH | | 1 | | |
| | 16 | 63712-56B00 | REINFORCEMENT, RETRACTOR LH | | 1 | | |
| | 17 | 63410-56B00 | PANEL, RR WHEEL HOUSING OUTER RH | | l T | | |
| | 18 | 63810-56B00 | PANEL, RR WHEEL HOUSING OUTER LH | | 1 | LUB | |
| | 19-1 | 64111-57B20 | PANEL, SIDE BODY OUTER RH | | 1 | LHD | |
| | 19-2 | 64111-57B10 | PANEL, SIDE BODY OUTER RH | | 1 | RHD | |
| | 20-1 | 64511-57B10 | PANEL, SIDE BODY OUTER LH | | 1 | LHD | |
| | 20-2 | 64511- <i>57</i> B20 | PANEL, SIDE BODY OUTER LH | | 1 | RHD | |

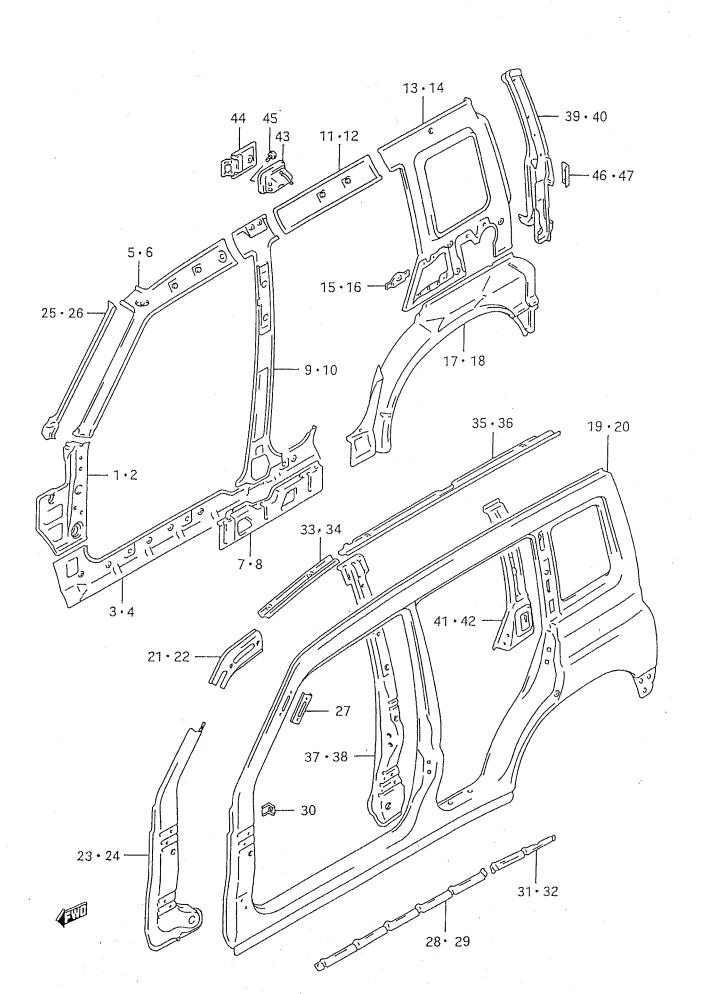


| | REF. | | | | |
|---|----------|----------------------------|---------------------------------|-----|---------|
| | N.º | PART Nº | DESCRIPTION | C V | REMARKS |
| | 01 | 44110 F4DOO | REINF, FR PILLAR UPPER RH | 1 | |
| | 21 22 | 64112-56B00 64512-56B00 | REINF, FR PILLAR UPPER LH | 1 | |
| | 23 | 64120-57B00 | PANEL, FRONT PILLAR OUTER RH | 1 | |
| | 23 24 | 64520-57B00 | PANEL, FRONT PILLAR OUTER LH | 1 | |
| | 25 | 64130-61A00 | PANEL, FRONT WINDOW SIDE RH | 1 | |
| | 26 | 64530-61A00 | PANEL, FRONT WINDOW SIDE LH | 1 | |
| | 27 | 64151-60A00 | REINF, RADIO ANTENNA | 1 | |
| | 28 | 64211-56B00 | BRACKET, SIDE SILL PROTECTOR | 1 | |
| | 20 | 04211 30000 | FRONT RH | ' | |
| | 29 | 64611-56B00 | BRACKET, SIDE SILL PROTECTOR | 1 | |
| | 27 | 04011 30800 | FRONT LH | ' | |
|) | 30 | 64214-60A00 | BRACKET, COWL SIDE GARNISH RR | 2 | |
| | 31 | 64221-56B00 | BRACKET, SIDE SILL PROTECTOR RH | 1 | |
| | 32 | 64621-56B00 | BRACKET, SIDE SILL PROTECTOR LH | 1 | |
| | 33 | 64231-56B10 | RAIL, ROOF SIDE OUTER FR RH | 1 | |
| | 34 | 64631-56B10 | RAIL, ROOF SIDE OUTER FR LH | 1 | |
| | 35 | 64241-56B10 | RAIL, ROOF SIDE OUTER RR RH | 1 | |
| | 36 | 64641-56B10 | RAIL, ROOF SIDE OUTER RR LH | 1 | |
| | 37 | 64250-56B00 | REINF, CENTER PILLAR RH | 1 | |
| | 38 | 64650-56B00 | REINF, CENTER PILLAR LH | 1 | |
| | 39 | 64310-56B01 | PANEL, BACK PILLAR OUTER RH | . 1 | |
| | 40 | 64710-56B11 | PANEL, BACK PILLAR OUTER LH | 1 | |
| | 41 | 64360-56B00 | REINF, RR PILLAR RH | 1 | |
| | 42 | 64760-56B00 | REINF, RR PILLAR LH | 1 | |
| | 43-1 | 64370-56B10 | BOX, FUEL INLET | 1 | JX |
| | 43-2 | 64370-56B00 | BOX, FUEL INLET | 1 | JLX , |
| | 44-1 | 65950-56B10 | LID, FUEL INLET | 1 | JX ' |
| | 44-2 | 65950-56B00 | LID, FUEL INLET | 1 | JLX |
| | 45 | 65965-61A00 | GARNISH, BACK PILLAR RH | 1 | |
| | 46 | 65966-61A00 | GARNISH, BACK PILLAR LH | 1 | |
| | 47 | 02142-05123 | SCREW | 2 | |
| | | | | | |

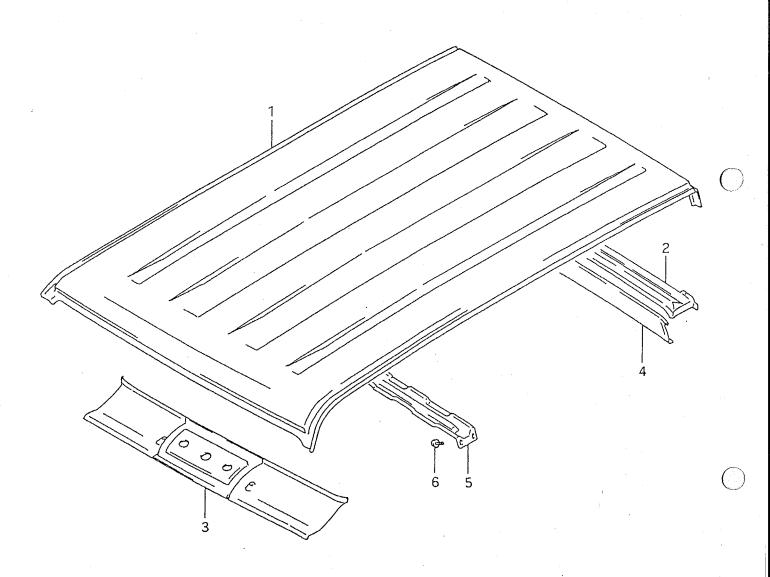

1


| REF. | | | Q, TY | |
|------|-------------|-------------------------|-------|---------|
| N.º | PART Nº | DESCRIPTION | CV | REMARKS |
| | | | | |
| 1 | 65111-61A10 | PANEL, ROOF | 1 | |
| 2 | 65120-61A00 | EXTENSION, ROOF REAR | 1 | |
| 3 | 65130-61A20 | PANEL, ROOF FRONT INNER | 1 | |
| 4 | 65141-61A00 | PANEL, ROOF BACK INNER | 1 | |
| 5-1 | 65981-61A00 | REINF, ROOF PANEL | 1 | JX |
| 5-2 | 65981-61A10 | REINF, ROOF PANEL | 1 | JLX |
| 6 | 02142-06103 | SCREW, ROOF PANEL | 4 | |

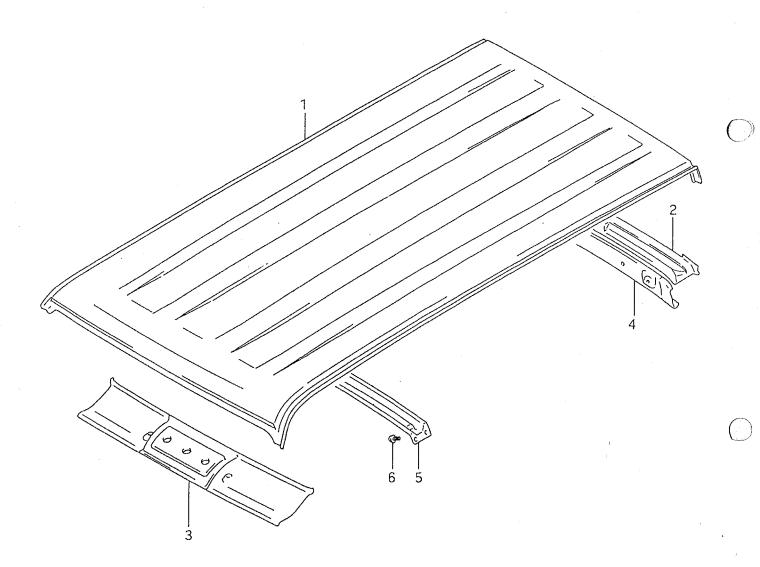

4310

FIG. 140 (2-D-09) ROOF PANEL (5DR)

| REF. | PART Nº | | Q, TY | |
|------|-------------|---------------------------|-------|---------|
| N.º | | DESCRIPTION | CV | REMARKS |
| | | · | | |
| 1 | 65111-56B00 | PANEL, ROOF | . 1 | |
| 2 | 65120-56B00 | EXTENTION, ROOF REAR | 1 | |
| 3 | 65130-61A20 | PANEL, ROOF FRONT INNER | 1 | |
| 4 | 65141-56B00 | PANEL, ROOF BACK INNER | 1 | |
| 5 | 65981-56B00 | REINFORCEMENT, ROOF PANEL | . 1 | |
| 6 | 02142-06103 | SCREW | 4 | |
| | | | | |

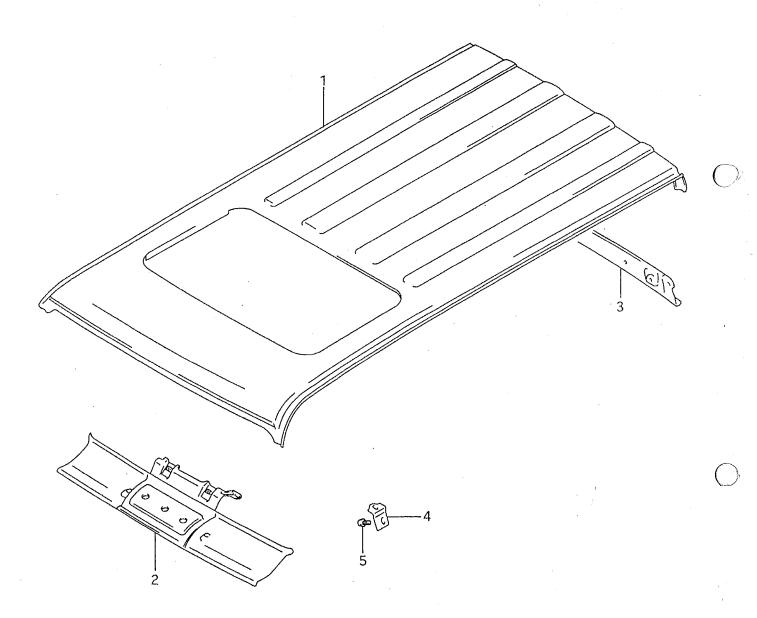

13111

FIG. 141 (2-D-10) ROOF PANEL (5DR:SUN ROOF)

| REF. N.º | PART Nº | DESCRIPTION | Q, TY C V | REMARKS |
|-------------|-------------|-------------------------|--------------|---------|
| | | | | |
| 1 | 65110-56B20 | PANEL, ROOF | 1 | |
| 2 | 65130-56B20 | PANEL, ROOF FRONT INNER | . 1 | |
| 3 | 65141-56B00 | PANEL, ROOF BACK INNER | 1 | |
| 4 | 65982-56B00 | BRACKET, SUN ROOF REINF | 2 | |
| 5 | 02142-06103 | SCREW | 2 | |

FIG. 142



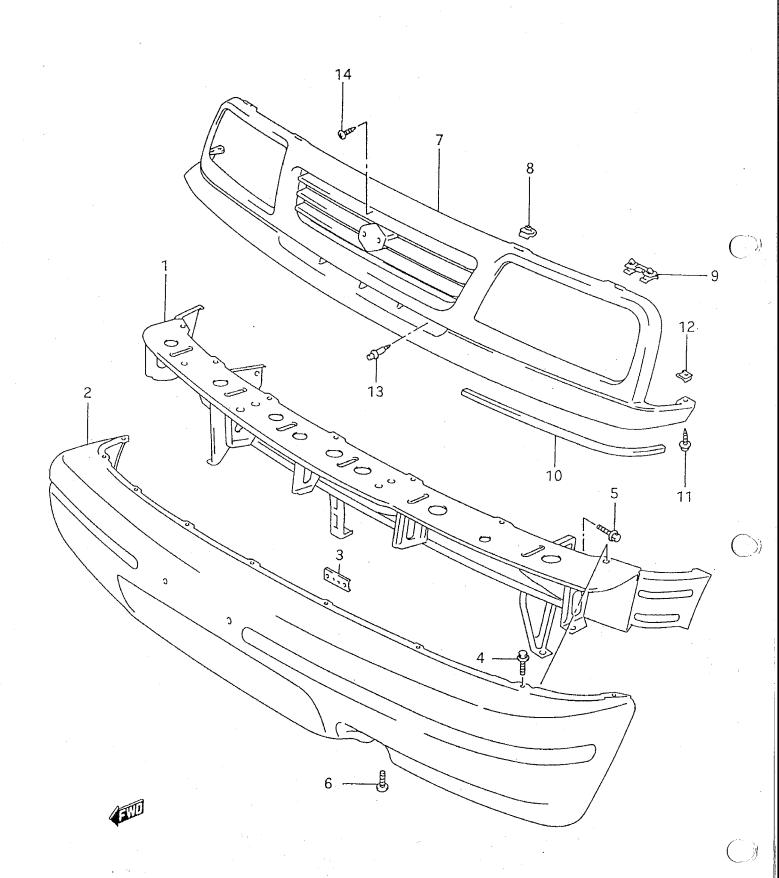


FIG. 142 (2-D-11) FRONT BUMPER AND GRILLE (3DR)


| REF. | | | Q, | TY | |
|------|-----------------|-------------------------------|-----|----|----------------|
| N.º | PART Nº | DESCRIPTION | - C | ٧ | REMARKS |
| | | | | | |
| 1 | 71700-63A00 | MEMBER ASSY, FRONT BUMPER | 1 | 1 | |
| 2 | 71711-63A90-799 | BUMPER, FRONT (PRIMARY COAT) | 1 | 1 | PAINT TO MATCH |
| 3 | 71771-60A00 | ERTAINER, FRONT LICENSE PLATE | 2 | 2 | |
| 4 | 59972-85C00 | BOLT, BUMPER | 9 | 9 | |
| 5 | 01550-08123 | BOLT, FRONT BUMPER MEMBER | 4 | 4 | |
| 6 | 02142-06123 | SCREW, FRONT BUMPER | 6 | 6 | |
| 7 | 72111-56B10 | GRILLE, FRONT | 1 | 1 | PAINT TO MATCH |
| 8 | 72115-56B01 | CLIP, FRONT GRILLE | 2 | 2 | |
| 9 | 72115-60A00 | CLIP, FRONT GRILLE | 2 | 2 | |
| 10 | 72121-56B00 | SEAL, FRONT GRILLE | 2 | 2 | |
| 11 | 59941-85C00 | SCREW, FRONT GRILLE SIDE | 2 | 2 | |
| 12 | 59915-85C00 | NUT, FRONT GRILLE | 3 | 3 | |
| 13 | 09409-07313 | CLIP, FRONT GRILLE | 2 | 2 | |
| 14 | 03212-05253 | SCREW, FRONT GRILLE CENTER | 1 | 1 | |

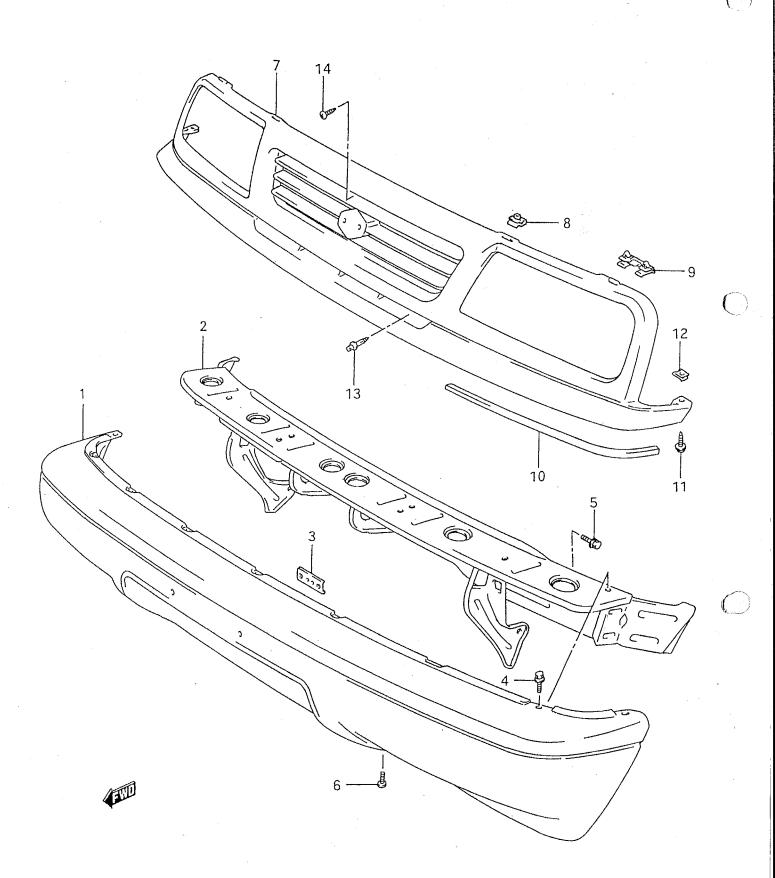


| REF. | DA DT. N.O. | | Q, TY | |
|------|----------------------|------------------------------|-------|----------------|
| N.º | PART Nº | DESCRIPTION | C V | REMARKS |
| | | | | |
| 1 -1 | 71711-56B00-5PK | BUMPER, FRONT (BLACK) | 1 | JX |
| 1 -2 | 71711-56B20-799 | BUMPER, FRONT (PRIMARY COAT) | 1 | JLX,PAINT TO |
| | | | | MATCH |
| 2 | 71720-56B10 | MEMBER, FR BUMPER | 1 | |
| 3 | 71771-56B00 | RETAINER, FR LICENSE PLATE | 2 | |
| 4 | 59972-85C00 | BOLT | 9 - | |
| 5 | 01 <i>55</i> 0-08123 | BOLT | 4 | |
| 6 | 02142-06123 | SCREW | 4 | |
| 7 | 72111-56B10 | GRILLE, FRONT | 1 | PAINT TO MATCH |
| 8 | 72115-56B01 | CLIP, FR GRILLE | 2 | |
| 9 | 72115-60A00 | CLIP, FR GRILLE | 2 | |
| 10 | 72121-56B00 | SEAL, FR GRILLE | 2 | |
| 11 | 59941-85C00 | SCREW | 2 | |
| 12 | 59915-85C00 | NUT | 3 | |
| 13 | 09409-07313 | CLIP | 2 | |
| 14 | 03212-05253 | SCREW | 1 | |

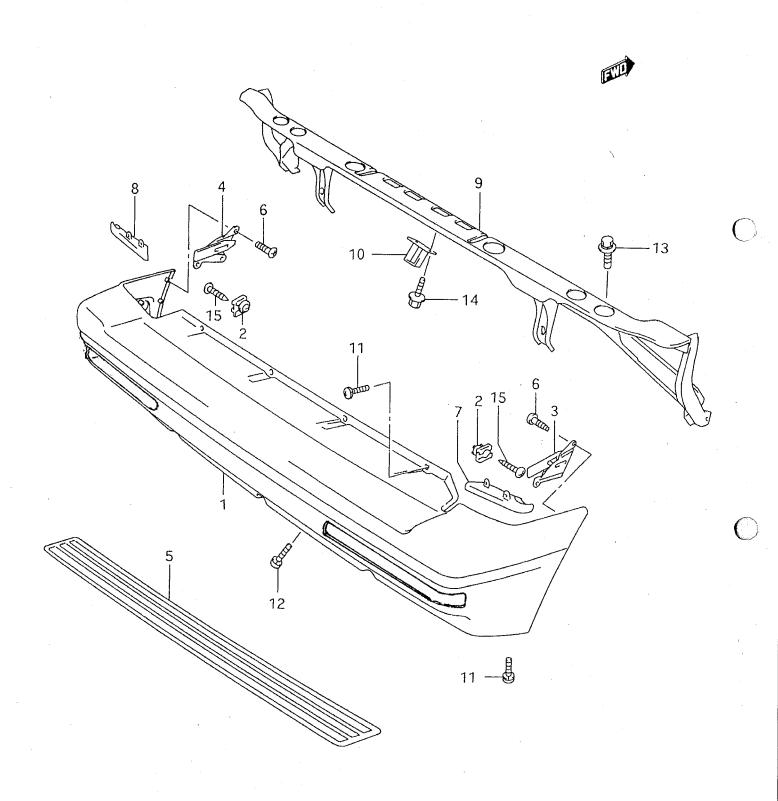


| REF. | | | Q, | TY | |
|------|----------------------|-------------------------------|----|-----|----------------|
| N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS |
| | | | | | |
| 1 | 71811-63A30-799 | BAR, RR BUMPER (PRIMARY COAT) | .1 | 1 | PAINT TO MATCH |
| 2 | 71752-86000 | SUPPORT, BUMPER SIDE | 2 | 2 | |
| 3 | 71751-63A00 | ATTACHMENT, BUMPER SIDE RH | 1 | 1 | |
| 4 | 71752-63A00 | ATTACHMENT, BUMPER SIDE LH | 1 | 1 | |
| 5 | 71817-60A20 | GARNISH, RR BUMPER UPPER | 1 | 1 | JLX |
| 6 | 03241-04123 | SCREW, ATTACHMENT | 6 | 6 | |
| 7 | 71815-60A01 | SPACER, RR BUMPER SIDE RH | 1 | 1 | |
| 8 | 71816-60A01 | SPACER, RR BUMPER SIDE LH | 1 | 1 | |
| 9 | 71820-63A11 | MEMBER, RR BUMPER | 1 | Ì | |
| 10 | 71854-60A00 | STAY, RR BUMPER LOWER CENTER | 1 | 1 | |
| 1.1 | 71869-60A00 | BOLT, RR BUMPER | 2 | 2 | |
| 12 | 09139-06081 | SCREW, RR BUMPER (6X14) | 7 | . 7 | |
| 13 | 01 <i>5</i> 70-08203 | BOLT, RR BUMPER MEMBER | 5 | 5 | |
| 14 | 01 <i>57</i> 0-08203 | BOLT, LOWER CENTER STAY | 2 | 2 | |
| 15 | 03511-05123 | SCREW, BUMPER SUPPORT | 2 | 2 | |

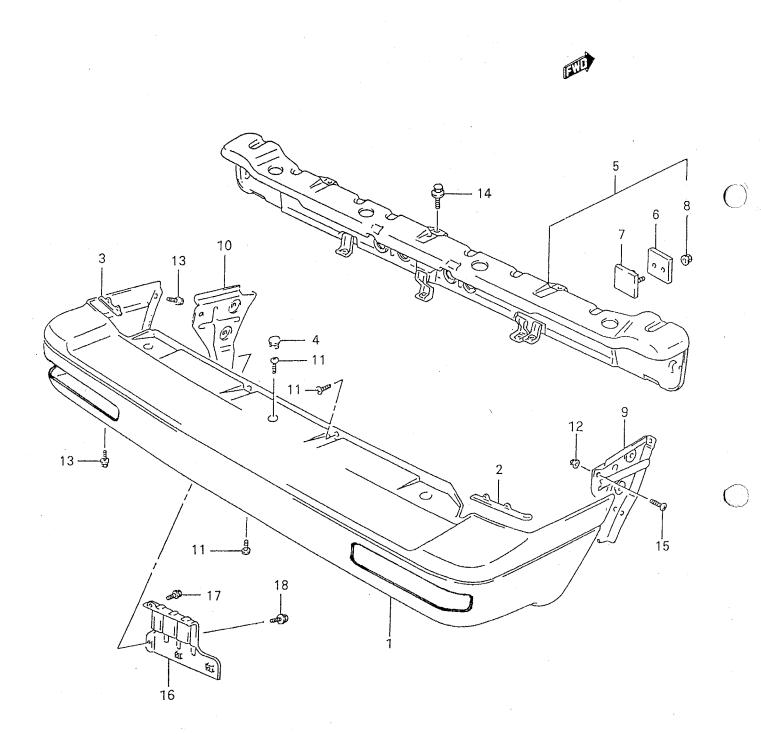

| REF. | PART Nº | | Q, TY | | • |
|------|----------------------|-------------------------------|-------|----|----------------|
| N.º | | DESCRIPTION | С | | REMARKS |
| | | | | | |
| 1 -1 | 71811-56B10-5PK | BUMPER, REAR (BLACK) | | 1 | JX |
| 1-2 | 71811-56B30-799 | BUMPER, REAR (PRIMARY COAT) | | 1 | JLX, |
| | , | | | | PAINT TO MATCH |
| 2 | 71815-60A01 | SPACER, RR BUMPER SIDE RH | | 1 | |
| 3 | 71816-60A01 | SPACER, RR BUMPER SIDE LH | | 1~ | |
| 4 | 71817-56B00-5PK | CAP, REAR BUMPER (BLACK) | | 3 | |
| 5 | 71820-56B20 | MEMBER, RR BUMPER | | 1 | |
| 6 | 71827-56B10 | .WEIGHT, NO.1 | | 2 | |
| 7 | 71828-56B10 | .WEIGHT, NO.2 | | 2 | |
| 8 | 08316-10083 | .NUT, RR BUMPER WEIGHT | | 4 | |
| 9 | 71830-56B00 | BRACKET, RR BUMPER SIDE RH | | 1 | |
| 10 | 71840-56B00 | BRACKET, RR BUMPER SIDE LH | | 1 | |
| 11 | 09139-06081 | SCREW, RR BUMPER (6X14) | | 8 | |
| 12 | 59981-85C00 | NUT, RR BUMPER SIDE BRACKET | | 6 | |
| 13 | 01550-06123 | BOLT, RR BUMPER SIDE | | 4 | |
| 14 | 01 <i>5</i> 70-08203 | BOLT, RR BUMPER MEMBER | | 5 | |
| 15 | 03241-16163 | SCREW, RR BUMPER SIDE BRACKET | | 6 | |
| 16 | 72281-56B00 | STAY, REAR MUD FLAP LH | | 1 | |
| 17 | 09132-06006 | SCREW, MUD FLAP STAY (6X12) | | 2 | |

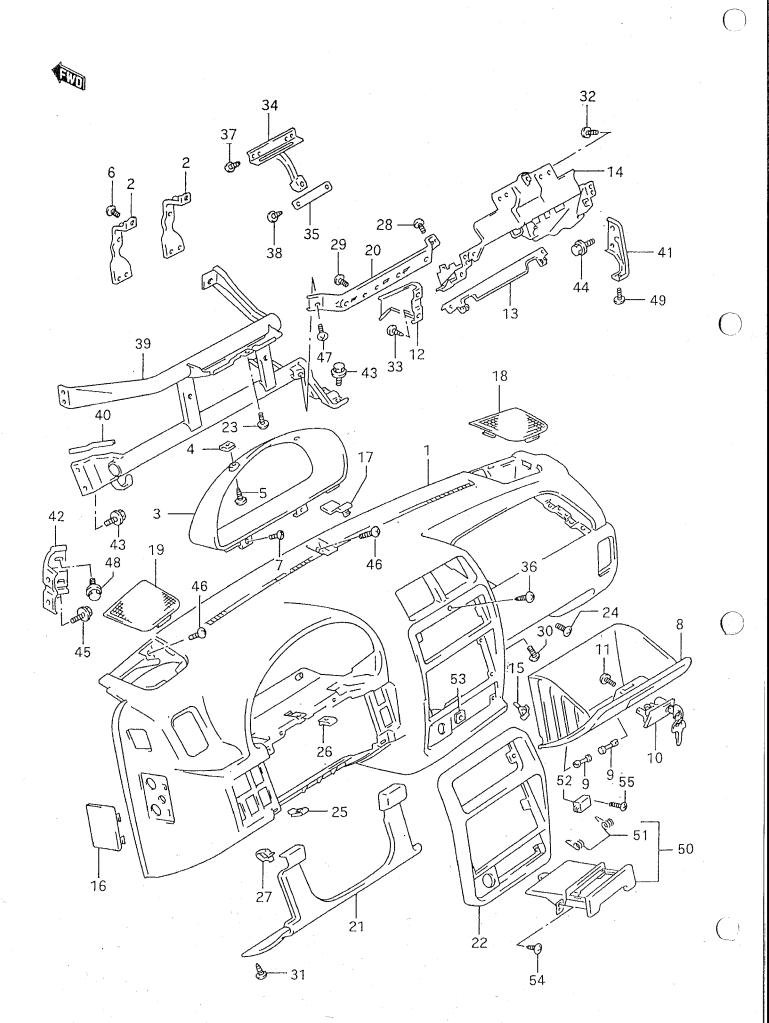


| REF. N.º | PART Nº | DESCRIPTION | Q, TY | | | |
|-------------|-----------------|------------------------------------|-------|--------|---------|--|
| | | | С | V | REMARKS | |
| • | 70111 77510 550 | DANIEL INICEDIALENT IDIA CIV | 1 | 1 | | |
| 1 | 73111-77E10-5ES | PANEL, INSTRUMENT (BLACK) | 1 | 1 | | |
| 2 | 73261-50G00 | STAY, SPEEDOMETER | 2 | 2 | | |
| 3 | 73311-77E00-5PK | GARNISH, METER CLUSTER (BLACK) | 1 | 1 | | |
| 4 | 09148-05038 | NUT, METER GARNISH UPPER | 2 | 2 | | |
| 5 | 03141-05123 | SCREW, METER GARNISH UPPER | 2 | 2 | | |
| 6 | 03541-05163 | SCREW, SPEEDOMETER STAY | 4 | 4 | | |
| 7 | 03541-05163 | SCREW, METER GARNISH LOWER | 2 | . 2 | | |
| 8 | 73410-77E00-5ES | BOX ASSY, GLOVE (BLACK) | 1 | 1 | | |
| 9 | 73423-50G00 | PIN, GLOVE BOX HINGE | 2 | 2 | | |
| 10 | 73430-77810-5ES | LOCK, GLOVE BOX (BLACK) | 1 | 1 | | |
| 11 | 02142-04123 | SCREW, GLOVE BOX LOCK | 2 | 2 | | |
| 12 | 73231-77E00 | BRACKET, RADIO | 1 | 1 | | |
| 13 | 73242-77E00 | HOLDER, ASSISTANT CENTER | 1 | 1 | | |
| 14 | 73250-77E11 | PLATE, KNEE BOLSTER | 1 | 1 | | |
| 15 | 73461-77E00 | CUSHION, GLOVE BOX DOOR SIDE | 2 | 2 | | |
| 16 | 73811-77E00-5ES | CAP, SIDE (BLACK) | 2 | 2 | | |
| 17 | 73813-77E00-5ES | CAP, UPPER CENTER (BLACK) | |] | | |
| 18 | 73821-77E00-5ES | COVER, SPEAKER RH (BLACK) | - | - | | |
| 19 | 73822-77E00-5ES | COVER, SPEAKER LH (BLACK) | 1 | | | |
| 20 | 73861-77E00 | BRACKET, STEERING SUPPORT CTR | 1 | 1 | | |
| 21 | 73871-77E00-5ES | COVER, COLUMN HOLE (BLACK) | 1 | 1 | | |
| 22 | 74461-77E00-5ES | GARNISH, CENTER (BLACK) | 1 | l - | | |
| 23 | 09139-06094 | SCREW, INSTRUMENT CENTER (6X16) | 1 | 1 | | |
| 24 | 09139-06094 | SCREW, ASSISTANT CTR HOLDER (6X16) | 2 | 2 | | |
| 25 | 09148-05038 | NUT, COLUMN HOLE COVER | 4 | 4 | | |
| 26 | 09148-06014 | NUT, INSTRUMENT CENTER | 1 | 1 | | |
| 27 | 09409-08325 | CLIP, COLUMN HOLE COVER | 2 | 2 | | |
| 28 | 02112-35123 | SCREW, KNEE BOLSTER PANEL | 1 | 1 | | |
| 29 | 02112-35123 | SCREW, RADIO BRACKET | 1 | 1 | | |
| 30 | 02142-05123 | SCREW, KNEE BOLSTER PLATE NO.2 | 2 | 2 | | |
| 31 | 03141-05123 | SCREW, COLUMN HOLE COVER | 4 | 4 | | |
| 32 | 03541-05163 | SCREW, KNEE BOLSTER PLATE NO. 1 | 6 | 6 | | |
| 33 | 03541-05163 | SCREW, RADIO BRACKET NO.1 | 2 | 2 | | |
| | | | | | | |

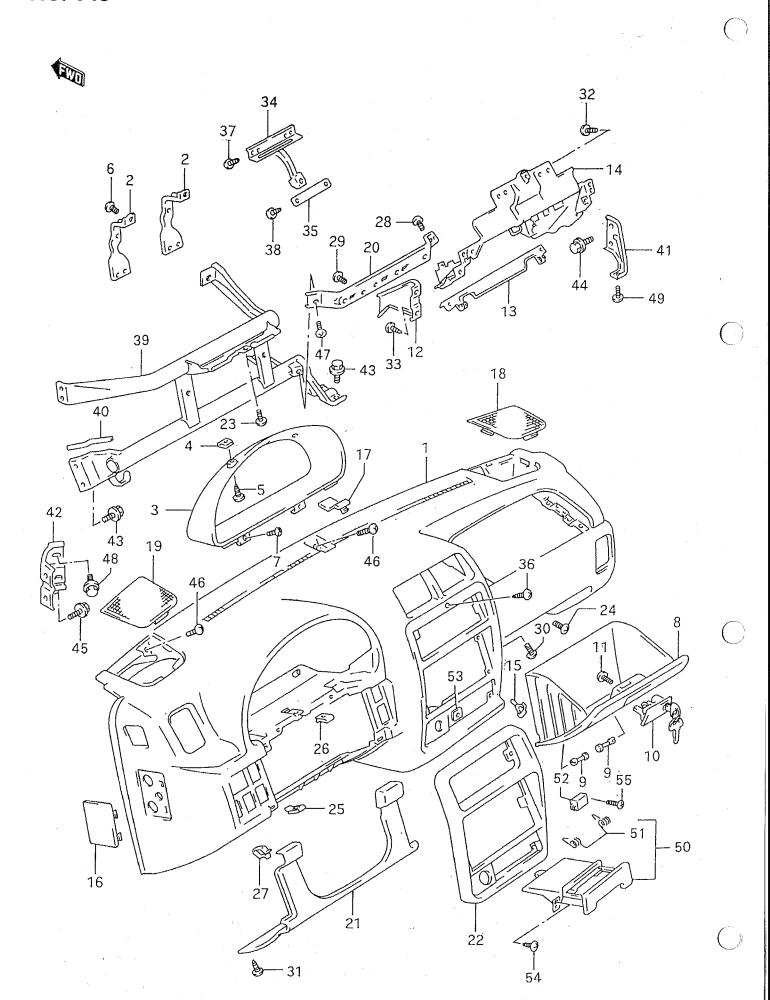


| REF. N.º | RFF | | | | Q, TY | | | |
|-------------|---------|-----------------|-----------------------------|-----|---------|-----------|--|--|
| | PART Nº | DESCRIPTION | C | · V | REMARKS | | | |
| | | | | | | | | |
| | 34 | 73880-77E00 | REINF, INSTRUMENT CTR UPPER | 1 | 1 | | | |
| | 35 | 73892-77E00 | REINF, INSTRUMENT CTR LOWER | . 1 | 1 | | | |
| | 36 | 03141-05123 | SCREW, CTR REINF LOWER | 1 | 1 | | | |
| | 37 | 03541-05163 | SCREW, CTR REINF UPPER | 4 | 4 | | | |
| | 38 | 03541-05163 | SCREW, INSTRUMENT CTR REINF | 2 | 2 | | | |
| | 39 | 75930-77E30 | HOLDER, INSTRUMENT PANEL | 1 | 1 | | | |
| | 40 | 75958-77E00 | PROTECTOR, NO.3 | 1 | 1 | L:200>150 | | |
| | 41 | 76431-77E10 | HOLDER, ASSISTANT OUTER RH | 1 | 1 | | | |
| | 42 | 76451-56B01 | REINF, COWL BOX SIDE | 2 | 2 | | | |
| | 43 | 09100-08294 | BOLT, HOLDER (8X13) | 5 | 5 | | | |
| | 44 | 09100-08294 | BOLT, HOLDER OUTER (8X13) | 2 | 2 | | | |
| | 45 | 09100-08294 | BOLT, REINF SIDE (8X13) | 4 | 4 | | | |
| | 46 | 09139-06094 | SCREW, UPPER (6X16) | 3 | 3 | | | |
| | 47 | 09139-06094 | SCREW, HOLDER LOWER (6X16) | 1 | 1 | | | |
| | 48 | 01550-06163 | SCREW, SIDE REINF | 4 | 4 | | | |
| | 49 | 03141-06123 | SCREW, LOWER | 2 | 2 | | | |
| | 50 | 89810-50G00-5PK | ASHTRAY, FRONT (BLACK) | 1 | 1 | | | |
| | 51 | 89813-60E00 | .SPRING, PROTECTOR | 1 | 1 | | | |
| | 52 | 89819-60E01 | HOLDER, ASHTRAY LAMP | 1 | 1 | | | |
| | 53 | 09148-05038 | NUT, FRONT ASHTRAY | 2 | 2 | | | |
| | 54 | 03141-05123 | SCREW, FRONT ASHTRAY | 2 | 2 | | | |
| | 55 | 03541-04163 | SCREW, LAMP HOLDER | 1 | 1 | | | |
| | | | | | | | | |


FIG. 147

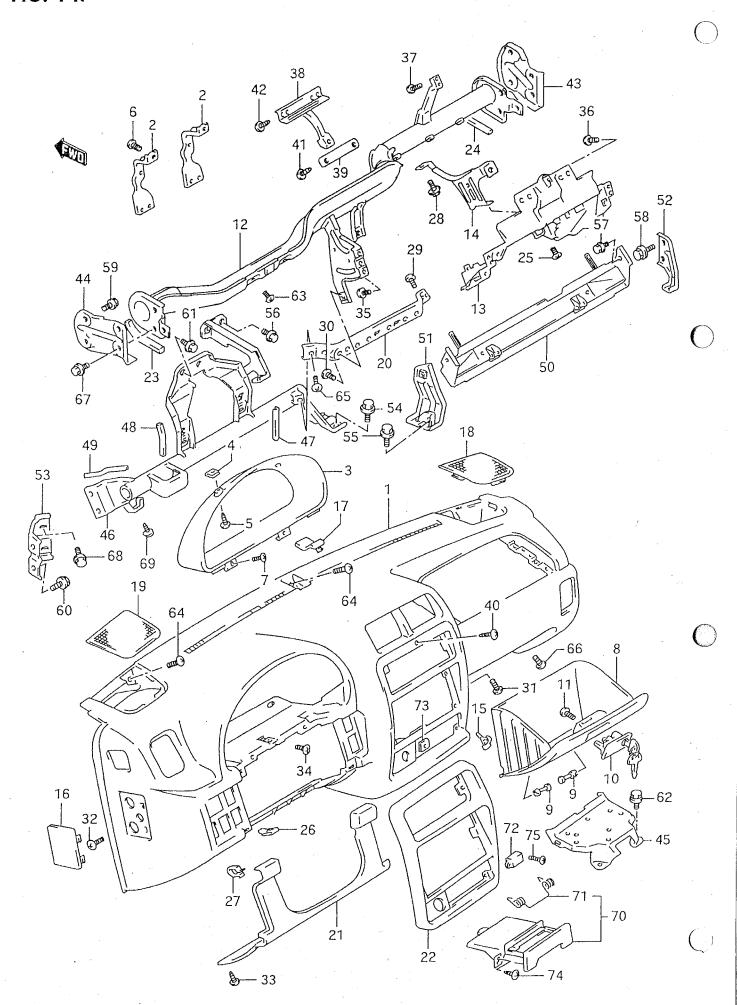


| REF. | PART Nº | DESCRIPTION | Q, | TY | • |
|------|----------------------|--------------------------------|-----|-----|-----------|
| N.º | | | С | ٧ | REMARKS |
| | | | | | |
| 1 | 73111-77E10-5ES | PANEL, INSTRUMENT (BLACK) |]. | . 1 | |
| 2 | 73261-50G00 | STAY, SPEEDOMETER | 2 | 2 | |
| 3 | 73311-77E00-5PK | GARNISH, METER CLUSTER (BLACK) | 1 | _ 1 | |
| 4 | 09148-05038 | NUT, METER GARNISH UPPER | 2 | 2 | |
| 5 | 03141-05123 | SCREW, METER GARNISH UPPER | 2 | 2 | |
| 6 | 03541-05163 | SCREW, SPEEDOMETER STAY | 4 | 4 | |
| 7 | 03541-05163 | SCREW, METER GARNISH LOWER | 2 | 2 | |
| 8 | 73410-77E00-5ES | BOX ASSY, GLOVE (BLACK) | 1 | 1 | |
| 9 | 73423-50G00 | PIN, GLOVE BOX HINGE | 2 | 2 | |
| 10 | 73430-77810-5ES | LOCK, GLOVE BOX (BLACK) | 1 | 1 | |
| 11 | 02142-04123 | SCREW, GLOVE BOX LOCK | 2 | 2 | |
| 12 | 73210-77E10 | MEMBER, STEERING SUPPORT | 1 . | 1 | |
| 13 | 73250-77E11 | PLATE, KNEE BOLSTER | 1 | 1. | |
| 14 | 73271-77E00 | BRACE, PASSENGER KNEE BOLSTER | 1. | 1 | |
| 15 | 73461-77E00 | CUSHION, GLOVE BOX DOOR SIDE | 2 | 2 | |
| 16 | 73811-77E00-5ES | CAP, SIDE (BLACK) | 2 | 2 | |
| 17 | 73813-77E00-5ES | CAP, UPPER CENTER (BLACK) | 1 | 1 | |
| 18 | 73821-77E00-5ES | COVER, SPEAKER RH (BLACK) | 1 | 1 | |
| 19 | 73822-77E00-5ES | COVER, SPEAKER LH (BLACK) | 1 | 1 | |
| 20 | 73861 <i>-77</i> E00 | BRACKET, STEERING SUPPORT CTR | 1 | 1 | |
| 21 | 73871-77E00-5ES | COVER, COLUMN HOLE (BLACK) | 1 | 1 | |
| 22 | 74461-77E00-5ES | GARNISH, CENTER (BLACK) | 1 | 1 | |
| 23 | 75958-77E00 | PROTECTOR, NO.1 | 1 | 1 | L:200>70 |
| 24 | 75958-77E00 | PROTECTOR, NO.2 | 1 | 1 | L:200>110 |

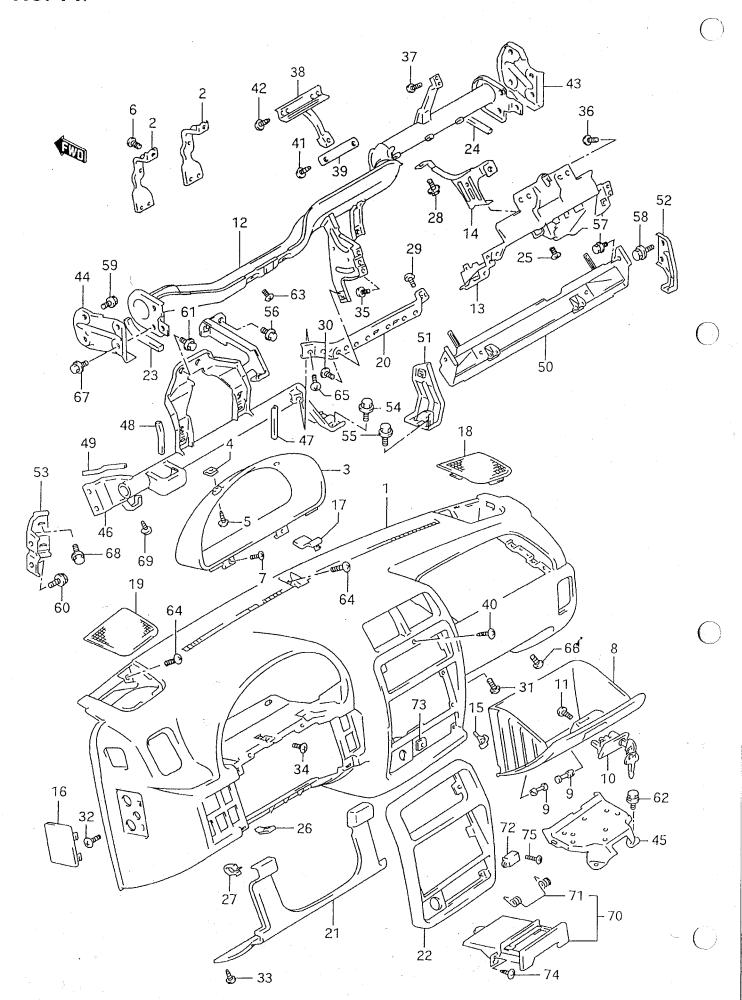


| REF. | P1 P7 110 | | Q, TY | | |
|------|-------------|----------------------------------|-------|-----|-----------|
| N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS |
| | | | | | |
| 25 | 09139-06094 | SCREW, KNEE BOLSTER BRACE (6X16) | 1 | 1 | |
| 26 | 09148-05038 | NUT, COLUMN HOLE COVER | 4 | 4 | |
| 27 | 09409-08325 | CLIP, COLUMN HOLE COVER | 2 | 2 | |
| 28 | 01550-08163 | BOLT, KNEE BOLSTER BRACE | 2 | 2 | |
| 29 | 02112-35123 | SCREW, KNEE BOLSTER PANEL LOWER | 1 | 1 | |
| 30 | 02112-35123 | SCREW, SUPPORT BRACKET LOWER | 1 | 1 | |
| 31 | 02142-05123 | SCREW, KNEE BOLSTER PLATE NO.2 | 2 | 2 | |
| 32 | 02142-05123 | SCREW, INSTRUMENT SIDE | 2 | 2 | |
| 33 | 03141-05123 | SCREW, COLUMN HOLE COVER | 4 | 4 | |
| 34 | 03141-05123 | SCREW, INSTRUMENT CENTER | 1 | 1 | |
| 35 | 03541-05163 | SCREW, SUPPORT MEMBER BLACKET | 2 | 2 | |
| | | LOWER | | | ÷ |
| 36 | 03541-05163 | SCREW, KNEE BOLSTER PLATE | 6 | 6 | |
| 37 | 03541-05163 | SCREW, SUPPORT MEMBER BLACKET | 1 | 1 | |
| | | UPPER | | | - |
| 38 | 73880-77E00 | REINF, INSTRUMENT CTR UPPER | 1 | 1 | |
| 39 | 73892-77E00 | REINF, INSTRUMENT CTR LOWER | 1 | 1 | |
| 40 | 03141-05123 | SCPEW, CTR REINF LOWER | 1 | 1 | |
| 41 | 03541-05163 | SCREW, CTR REINF | 2 | 2 | |
| 42 | 03541-05163 | SCREW, CTR REINF UPPER | 4 | 4 | |
| 43 | 73225-77E00 | BRACKET, STEERING SUPPORT RH | 1 | 1 | |
| 44 | 73235-77E00 | BRACKET, STEERING SUPPORT LH | 1 | 1 | |
| 45 | 73937-77E00 | BRACKET, SDM NO.1 | 1 | 1 | |
| 46 | 75930-77E50 | HOLDER, INSTRUMENT | 1 | . 1 | |
| 47 | 75958-77E00 | PROTECTOR, NO.1 | · · 3 | 3 | L:200>70 |
| 48 | 75958-77E00 | PROTECTOR, NO.2 | 2 | 2 | L:200>110 |
| 49 | 75958-77E00 | PROTECTOR, NO.3 | 3 | 3 | L:200>150 |
| 50 | 75970-77E10 | HOLDER, ASSISTANT | 1 | 1 | |
| 51 | 75980-77E10 | HOLDER, ASSISTANT INNER | 1 | 1 | |
| 52 | 76431-77E30 | HOLDER, ASSISTANT OUTER LH | 1 | . 1 | |
| 53 | 76451-56B01 | REINF, COWL BOX SIDE | 2 | 2 | |
| | | , | | | |

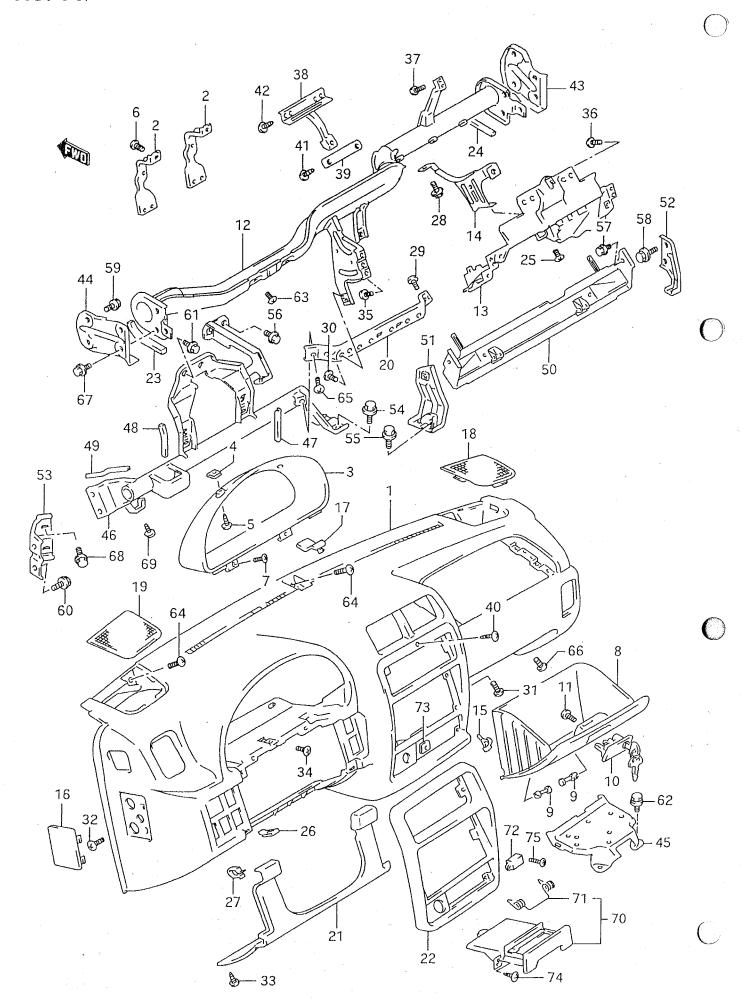


| REF. | PART Nº | DESCRIPTION | Q, TY | | |
|------------|-----------------|---|-------|---|---------|
| N.º | | | С | | REMARKS |
| 54 | 09100-08294 | BOLT, INSTRUMENT HOLDER (8X13) | 4 | 4 | |
| 55 | 09100-08294 | BOLT, SDM BRACKET NO.2 (8X13) | 2 | 2 | |
| 56 | 09100-08294 | BOLT, SUPPORT MEMBER NO.2 (8X13) | 1 | 1 | |
| 57 | 09100-08294 | BOLT, ASSISTANT HOLDER (8X13) | 2 | 2 | |
| 58 | 09100-08294 | BOLT, ASSISTANT HOLDER OUTER (8X13) | 2 | 2 | |
| 59 | 09100-08294 | BOLT, STREERING SUPPORT BRACKET (8X13) | 4 | 4 | |
| 60 | 09100-08294 | BOLT, COWL BOX SIDE REINF (8X13) | 4 | 4 | |
| 61 | 09116-06005 | BOLT, HOLDER NO.2 (6X16) | 2 | 2 | |
| 62 | 09129-06006 | BOLT, SDM BRACKET (6X18) | 4 | 4 | |
| 63 | 09136-06109 | SCREW, SUPPORT MEMBER NO.2 (6X20) | 1 | 1 | |
| 64 | 09139-06094 | SCREW, INSTRUMENT UPPER (6X16) | 3 | 3 | |
| 65 | 09139-06094 | SCREW, HOLDER LOWER (6X16) | 1 | 1 | |
| 66 | 09139-06094 | SCREW, ASSISTANT HOLDER (6X16) | 2 | 2 | |
| 67 | 01550-08163 | BOLT, INSTRUMENT SIDE | 4 | 4 | |
| 68 | 01550-06163 | SCREW, SIDE REINF | 4 | 4 | |
| 69 | 03141-06123 | SCREW, LOWER | 1 | 1 | |
| 70 | 89810-50G00-5PK | ASHTRAY, FRONT (BLACK) | 1 | 1 | |
| <i>7</i> 1 | 89813-60E00 | .SPRING, PROTECTOR | 1 | 1 | |
| 72 | 89819-60E01 | HOLDER, ASHTRAY LAMP | 1 | 1 | |
| 73 | 09148-05038 | NUT, FRONT ASHTRAY | 2 | 2 | |
| 74 | 03141-05123 | SCREW, FRONT ASHTRAY | 2 | 2 | |
| 75 | 03541-04163 | SCREW, LAMP HOLDER | 1 | 1 | |

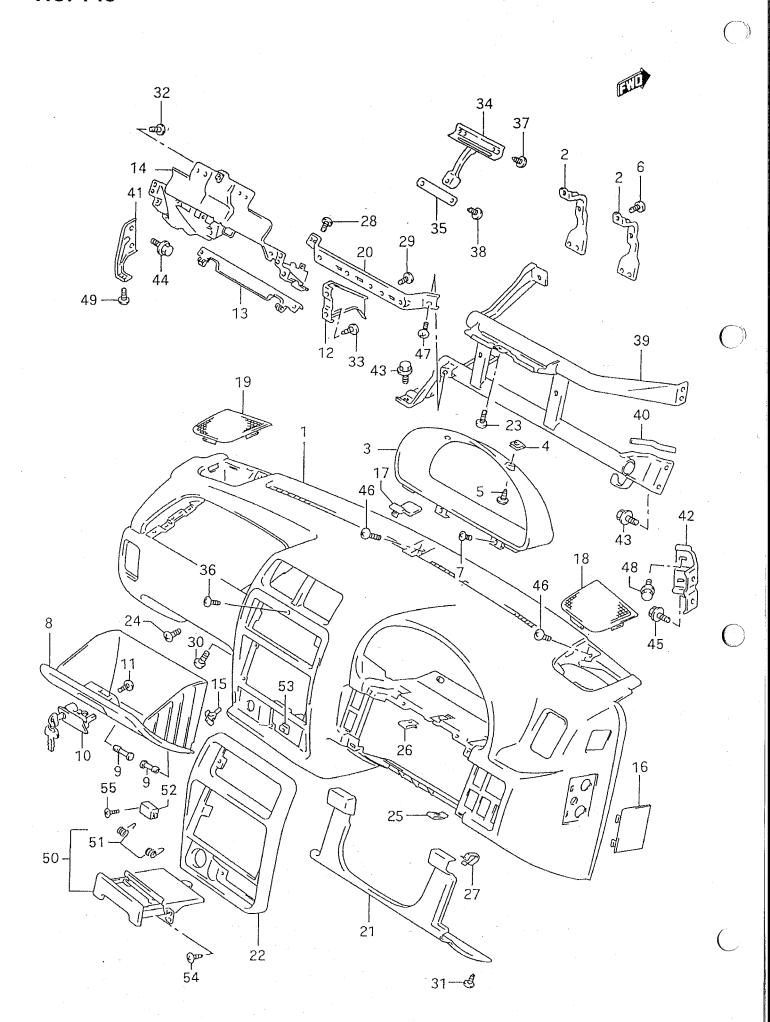

| REF. N.º | PART Nº | DESCRIPTION | Q, TY | | |
|-------------|-----------------------------------|------------------------------------|-------|---|-------------|
| | | | С | ٧ | REMARKS |
| 1 | 73111 <i>-7</i> 7E00-5ES | PANEL, INSTRUMENT (BLACK) | 1 | 1 | |
| 2 | 73261-50G00 | STAY, SPEEDOMETER | 2 | 2 | |
| 3 | 73311-77E00-5PK | GARNISH, METER CLUSTER (BLACK) | 1 | 1 | |
| 4 | 09148-05038 | NUT, METER GARNISH UPPER | 2 | 2 | |
| 5 | 03141-05123 | SCREW, METER GARNISH UPPER | 2 | 2 | |
| 6 | 03541-05163 | SCREW, SPEEDOMETER STAY | 4 | 4 | |
| 7 | 03541-05163 | SCREW, METER GARNISH LOWER | 2 | 2 | |
| 8 | 73410-77E00-5ES | BOX ASSY, GLOVE (BLACK) | 1 | 1 | |
| 9 | 73423-50G00 | PIN, GLOVE BOX HINGE | 2 | 2 | |
| 10 | 73430-77810-5ES | LOCK, GLOVE BOX (BLACK) | 1 | 1 | |
| 11 | 02142-04123 | SCREW, GLOVE BOX LOCK | 2 | 2 | |
| 12 | 73231 <i>-77</i> E00 | BRACKET, RADIO | 1 | 1 | |
| 13 | 73242-77E00 | HOLDER, ASSISTANT CENTER | 1 | 1 | |
| 14 | 73250-77E01 | PLATE, KNEE BOLSTER | 1 | 1 | |
| 15 | 73461-77E00 | CUSHION, GLOVE BOX DOOR SIDE | 2 | 2 | |
| 16 | 73811 <i>-77</i> E00 <i>-5</i> ES | CAP, SIDE (BLACK) | 2 | 2 | |
| 17 | 73813-77E00-5ES | CAP, UPPER CENTER (BLACK) | 1 | 1 | |
| 18 | 73821 <i>-77</i> E00 <i>-5</i> ES | COVER, SPEAKER RH (BLACK) | 1 | 1 | |
| 19 | 73822-77E00-5ES | COVER, SPEAKER LH (BLACK) | 1 | 1 | |
| 20 | 73861 <i>-77</i> E00 | BRACKET, STEERING SUPPORT CTR | 1 | 1 | |
| 21 | 73871 <i>-77</i> E00 <i>-5</i> ES | COVER, COLUMN HOLE (BLACK) | 1 | 1 | |
| 22 | 74461-77E00-5ES | GARNISH, CENTER (BLACK) | 1 | 1 | |
| 23 | 09139-06094 | SCREW, INSTRUMENT CENTER (6X16) | 1 | 1 | |
| 24 | 09139-06094 | SCREW, ASSISTANT CTR HOLDER (6X16) | 2 | 2 | |
| 25 | 09148-05038 | NUT, COLUMN HOLE COVER | 4 | 4 | 4 |
| 26 | 09148-06014 | NUT, INSTRUMENT CENTER | 1 | 1 | |
| 27 | 09409-08325 | CLIP, COLUMN HOLE COVER | 2 | 2 | |
| 28 | 02112-35123 | SCREW, KNEE BOLSTER PANEL | 1. | 1 | |
| 29 | 02112-35123 | SCREW, RADIO BRACKET | 1 | 1 | ware to the |
| 30 | 02142-05123 | SCREW, KNEE BOLSTER PLATE NO.2 | 2 | 2 | |
| 31 | 03141-05123 | SCREW, COLUMN HOLE COVER | 4 | 4 | |
| 32 | 03541-05163 | SCREW, KNEE BOLSTER PLATE NO.1 | 6 | 6 | |
| 33 | 03541-05163 | SCREW, RADIO BRACKET NO.1 | 2 | 2 | |

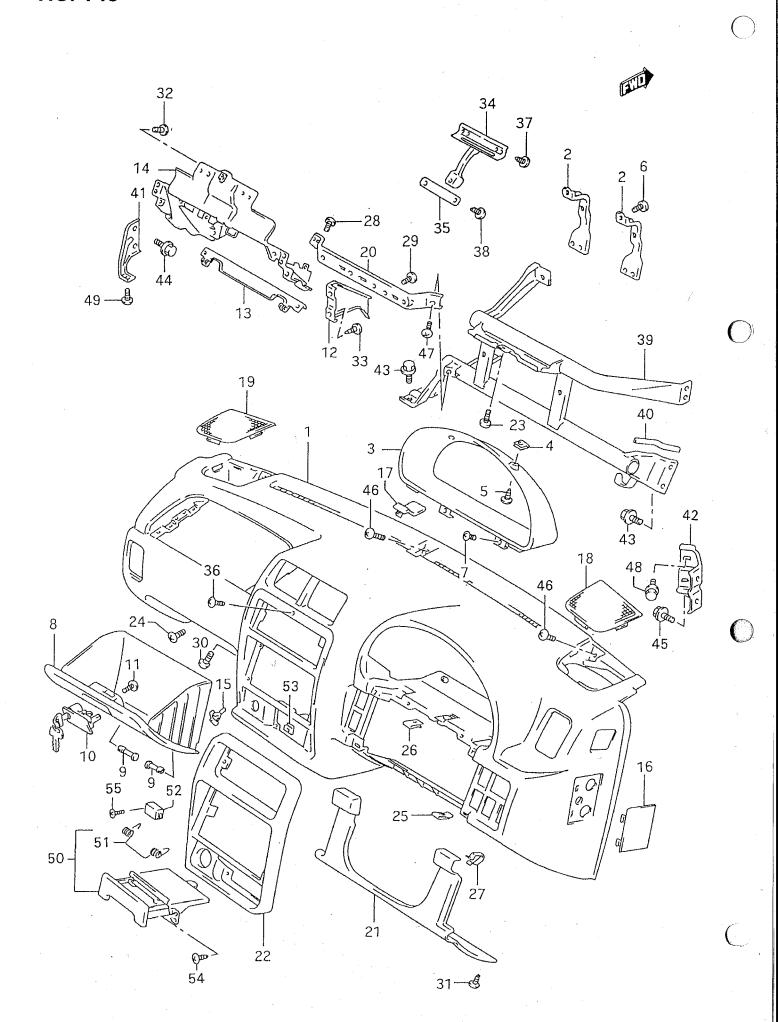


| REF. | | | Q, | TY | | |
|------------|-----------------|-----------------------------|-----|-----|-----------|---|
| N.º | PART Nº | DESCRIPTION | C | ٧ | REMARKS | |
| | | · | | | , | |
| 34 | 73880-77E00 | REINF, INSTRUMENT CTR UPPER | . 1 | 1 | | |
| 35 | 73892-77E00 | REINF, INSTRUMENT CTR LOWER | 1 | 1 | | • |
| 36 | 03141-05123 | SCREW, CTR REINF LOWER | 1 | 1 | | |
| 3 <i>7</i> | 03541-05163 | SCREW, CTR REINF UPPER | 4 | 4 | | |
| 38 | 03541-05163 | SCREW, INSTRUMENT CTR REINF | 2 | 2 | | |
| 39 | 75930-77E20 | HOLDER, INSTRUMENT PANEL | 1 | 1 | | |
| 40 | 75958-77E00 | PROTECTOR, NO.3 | 1 | 1 | L:200>150 | |
| 4 1 | 76431-77E01 | HOLDER, ASSISTANT OUTER RH | 1 | , 1 | | |
| 42 | 76451-56B01 | REINF, COWL BOX SIDE | 2 | 2 | | |
| 43 | 09100-08294 | BOLT, HOLDER (8X13) | 5 | 5 | | |
| 44 | 09100-08294 | BOLT, HOLDER OUTER (8X13) | 2 | 2 | | |
| 45 | 09100-08294 | BOLT, REINF SIDE (8X13) | 4 | 4 | | |
| 46 | 09139-06094 | SCREW, UPPER (6X16) | 3 | 3 | | |
| 47 | 09139-06094 | SCREW, HOLDER LOWER (6X16) | 1 | 1 | | |
| 48 | 01550-06163 | SCREW, SIDE REINF | 4 | 4 | | |
| 49 | 03141-06123 | SCREW, LOWER | 2 | 2 | | |
| 50 | 89810-50G00-5PK | ASHTRAY, FRONT (BLACK) | 1 | 1 | | |
| 51 | 89813-60E00 | .SPRING, PROTECTOR | 1 | 1 | | |
| 52 | 89819-60E01 | HOLDER, ASHTRAY LAMP | 1 | 1 | | |
| 53 | 09148-05038 | NUT, FRONT ASHTRAY | 2 | 2 | | |
| 54 | 03141-05123 | SCREW, FRONT ASHTRAY | 2 | 2 | | |
| 55 | 03541-04163 | SCREW, LAMP HOLDER | 1 | 1 | | |

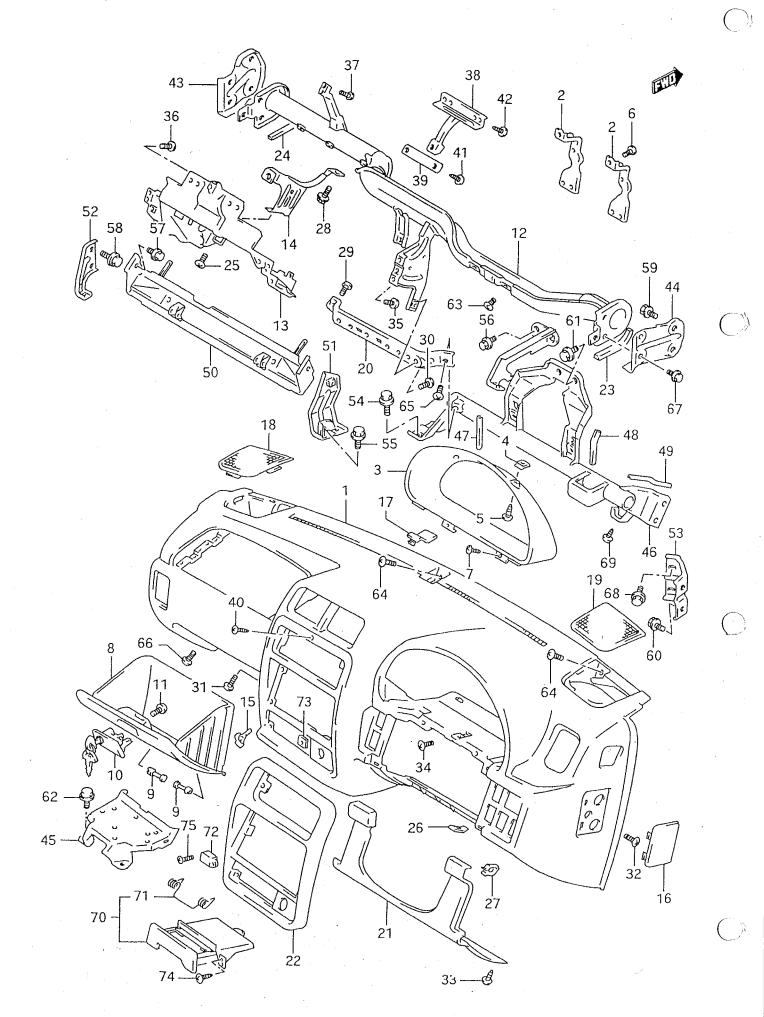

| E | C | 1 | 40 |
|---|-----|---|----|
| Г | IJ. | н | 47 |


| REF | | | Q, TY | | |
|-----|-----------------------------------|--------------------------------|-------|----|-----------|
| N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS |
| 1 | 72111 77500 550 | | 1 | 1 | |
| 1 | 73111-77E00-5ES | PANEL, INSTRUMENT (BLACK) | 1 | 1 | |
| 2 | 73261-50G00 | STAY, SPEEDOMETER | .2 | 2 | |
| 3 | 73311-77E00-5PK | GARNISH, METER CLUSTER (BLACK) | 1 | 1. | e . |
| 4 | 09148-05038 | NUT, METER GARNISH UPPER | 2 | 2 | |
| 5 | 03141-05123 | SCREW, METER GARNISH UPPER | 2 | 2 | |
| 6 | 03541-05163 | SCREW, SPEEDOMETER STAY | 4 | 4 | |
| 7 | 03541-05163 | SCREW, METER GARNISH LOWER | 2 | 2 | |
| 8 | 73410-77E00-5ES | BOX ASSY, GLOVE (BLACK) | 1 | 1 | |
| 9 | 73423-50G00 | PIN, GLOVE BOX HINGE | 2 | 2 | |
| 10 | 73430-77810-5ES | LOCK, GLOVE BOX (BLACK) | 1 | 1. | |
| 11 | 02142-04123 | SCREW, GLOVE BOX LOCK | 2 | 2 | |
| 12 | 73210-77E00 | MEMBER, STEERING SUPPORT | 1 | 1 | |
| 13 | 73250-77E01 | PLATE, KNEE BOLSTER | 1 | 1 | |
| 14 | 73271-77E00 | BRACE, PASSENGER KNEE BOLSTER | 1 | 1 | |
| 15 | 73461-77E00 | CUSHION, GLOVE BOX DOOR SIDE | 2 | 2 | |
| 16 | 73811 <i>-77</i> E00 <i>-5</i> ES | CAP, SIDE (BLACK) | 2 | 2 | |
| 17 | 73813-77E00-5ES | CAP, UPPER CENTER (BLACK) | 1 | 1 | |
| 18 | 73821-77E00-5ES | COVER, SPEAKER RH (BLACK) | 1 | 1 | |
| 19 | 73822-77E00-5ES | COVER, SPEAKER LH (BLACK) | 1 | 1 | |
| 20 | 73861 <i>-77</i> E00 | BRACKET, STEERING SUPPORT CTR | 1 | 1 | |
| 21 | 73871-77E00-5ES | COVER, COLUMN HOLE (BLACK) | 1 | 1 | |
| 22 | 74461-77E00-5ES | GARNISH, CENTER (BLACK) | 1 | 1 | |
| 23 | 75958-77E00 | PROTECTOR, NO.1 | 1 | 1 | L:200>70 |
| 24 | 75958-77E00 | PROTECTOR, NO.2 | 1 | 1 | L:200>110 |

FIG. 149

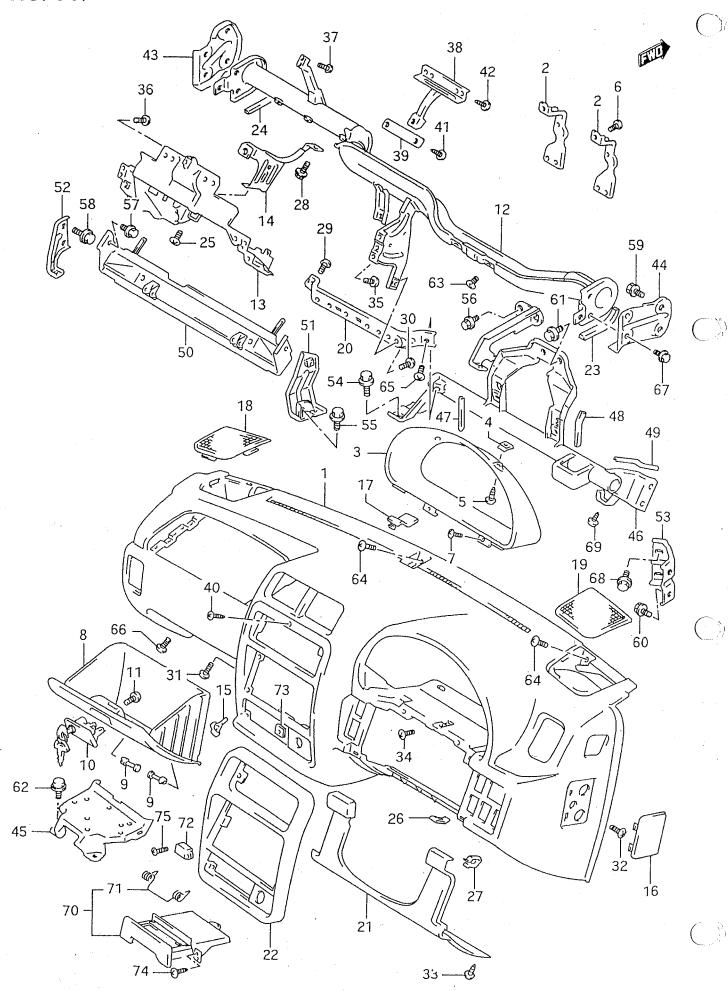


| REF. N.º | | | | Q, | TY | • | |
|-------------|----|-------------|----------------------------------|----------|----|-----------|--|
| | | PART Nº | DESCRIPTION | <u>C</u> | ٧ | REMARKS | |
| | | | | | | | |
| | 25 | 09139-06094 | SCREW, KNEE BOLSTER BRACE (6X16) | 1 | 1 | | |
| | 26 | 09148-05038 | NUT, COLUMN HOLE COVER | 4 | 4 | | |
| | 27 | 09409-08325 | CLIP, COLUMN HOLE COVER | 2 | 2 | | |
| | 28 | 01550-08163 | BOLT, KNEE BOLSTER BRACE | 2 | 2 | | |
| | 29 | 02112-35123 | SCREW, KNEE BOLSTER PANEL LOWER | 1 | 1 | | |
| | 30 | 02112-35123 | SCREW, SUPPORT BRACKET LOWER | 1 | 1 | | |
| | 31 | 02142-05123 | SCREW, KNEE BOLSTER PLATE NO.2 | 2 | 2 | | |
| | 32 | 02142-05123 | SCREW, INSTRUMENT SIDE | 2 | 2 | | |
| | 33 | 03141-05123 | SCREW, COLUMN HOLE COVER | 4 | 4 | | |
| | 34 | 03141-05123 | SCREW, INSTRUMENT CENTER | 1 | 1 | | |
| | 35 | 03541-05163 | SCREW, SUPPORT MEMBER BLACKET | 2 | 1 | | |
| . " | | | LOWER | | | | |
| | 36 | 03541-05163 | SCREW, KNEE BOLSTER PLATE | 6 | 6 | | |
| | 37 | 03541-05163 | SCREW, SUPPORT MEMBER BLACKET | 1 | 1 | | |
| | | | UPPER | | | | |
| | 38 | 77880-77E00 | REINF, INSTRUMENT CTR UPPER | 1 | 1 | | |
| | 39 | 73892-77E00 | REINF, INSTRUMENT CTR LOWER | 1 | 1 | | |
| | 40 | 03141-05123 | SCPEW, CTR REINF LOWER | 1 | 1 | | |
| | 41 | 03541-05163 | SCREW, CTR REINF | 2 | 2 | | |
| | 42 | 03541-05163 | SCREW, CTR REINF UPPER | 4 | 4 | | |
| | 43 | 73225-77E00 | BRACKET, STEERING SUPPORT RH | 1 | 1 | | |
| | 44 | 73235-77E00 | BRACKET, STEERING SUPPORT LH | 1 | 1 | | |
| | 45 | 73937-77E00 | BRACKET, SDM NO.1 | 1 | 1 | | |
| | 46 | 75930-77E50 | HOLDER, INSTRUMENT | 1 | 1 | | |
| | 47 | 75958-77E00 | PROTECTOR, NO.1 | 3 | 3 | L:200>70 | |
| Ĵ | 48 | 75958-77E00 | PROTECTOR, NO.2 | 2 | 2 | L:200>110 | |
| | 49 | 75958-77E00 | PROTECTOR, NO.3 | 3 | 3 | L:200>150 | |
| | 50 | 75970-77E10 | HOLDER, ASSISTANT | 1 | 1 | | |
| | 51 | 75980-77E00 | HOLDER, ASSISTANT INNER | 1 | 1 | | |
| | 52 | 76431-77E21 | HOLDER, ASSISTANT OUTER RH | 1 | 1 | | |
| | 53 | 76451-56B01 | REINF, COWL BOX SIDE | 2 | 2 | | |
| | | | | | | | |

FIG. 149

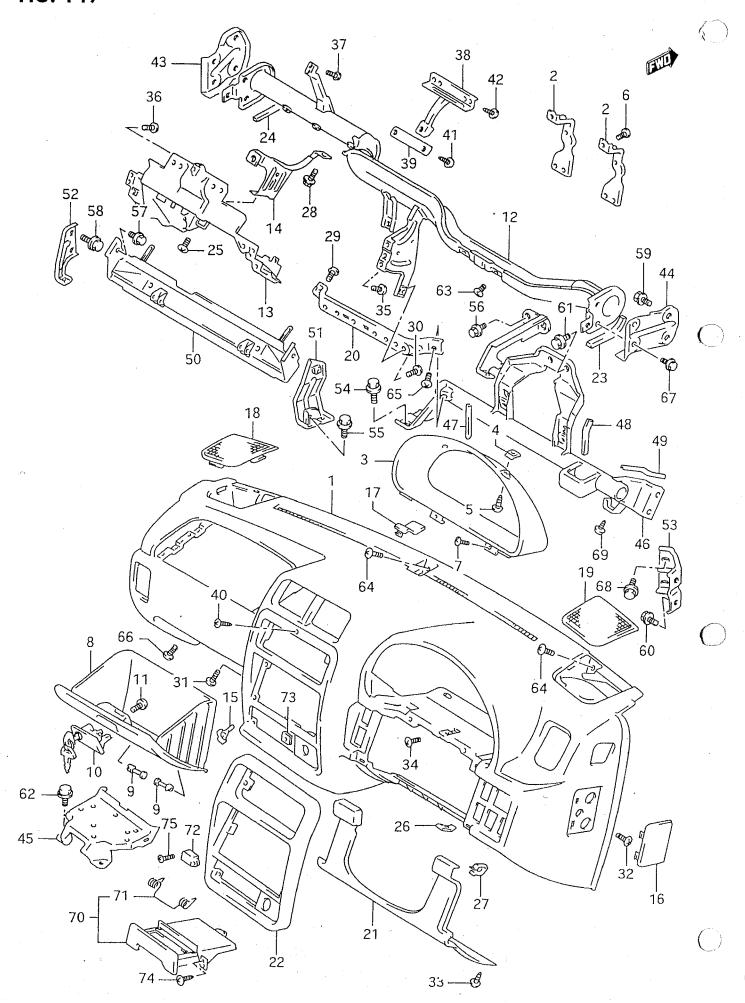


| | | | _ | T. (| |
|-------------|-----------------|----------------------------------|------|---------|---------|
| REF. N.º | PART Nº | DESCRIPTION | — Q, | TY V | REMARKS |
| | · | | | | |
| 54 | 09100-08294 | BOLT, INSTRUMENT HOLDER (8X13) | 4 | 4 | |
| 55 | 09100-08294 | BOLT, SDM BRACKET NO.2 (8X13) | 2 | 2 | |
| 56 | 09100-08294 | BOLT, SUPPORT MEMBER NO.2 (8X13) | 1 | 1 | |
| 57 | 09100-08294 | BOLT, ASSISTANT HOLDER (8X13) | 2 | 2 | |
| 58 | 01550-06163 | BOLT, ASSISTANT HOLDER OUTER | 2 | 2 | |
| | | (8X13) | | | |
| 59 | 09100-08294 | BOLT, STREERING SUPPORT | 4 | 4 | |
| | | BRACKET (8X13) | | | |
| 60 | 09100-08294 | BOLT, COWL BOX SIDE REINF (8X13) | 4 | 4 | |
| 61 | 09116-06005 | BOLT, HOLDER NO.2 (6X16) | 2 | 2 | |
| 62 | 09129-06006 | BOLT, SDM BRACKET (6X18) | 4 | 4 | |
| 63 | 09136-06109 | SCREW, SUPPORT MEMBER NO.2 | 1 | 1 | |
| | | (6X20) | | | |
| 64 | 09139-06094 | SCREW, INSTRUMENT UPPER (6X16) | 3 | 3 | |
| 65 | 09139-06094 | SCREW, HOLDER LOWER (6X16) | 1 | 1 | |
| 66 | 09139-06094 | SCREW, ASSISTANT HOLDER (6X16) | 2 | 2 | |
| 67 | 01550-08163 | BOLT, INSTRUMENT SIDE | 4 | 4 | No. |
| 68 | 02162-06163 | SCREW, SIDE REINF | 4 | 4 | |
| 69 | 03141-06123 | SCREW, LOWER | 1 | 1 | |
| 70 | 89810-50G00-5PK | ASHTRAY, FRONT (BLACK) | 1 | 1 | |
| <i>7</i> 1 | 89813-60E00 | .SPRING, PROTECTOR | 1 | 1 | |
| 72 | 89819-60E01 | HOLDER, ASHTRAY LAMP | . 1 | 1 | |
| 73 | 09148-05038 | NUT, FRONT ASHTRAY | 2 | 2 | |
| 74 | 03141-05123 | SCREW, FRONT ASHTRAY | 2 | 2 | |
| <i>75</i> | 03541-04163 | SCREW, LAMP HOLDER | 1 | 1 | |

FIG. 150

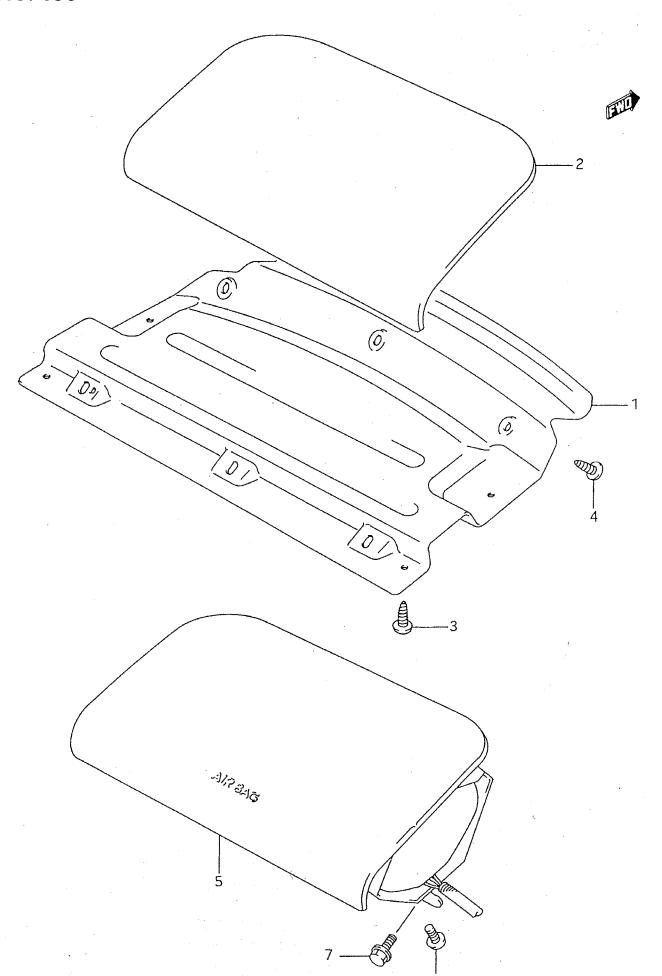


| REF. N.º | PART Nº | DESCRIPTION | Q, | TY ⁻ | REMARKS |
|-------------|----------------------|--|----|-----------------|-----------|
| | | ······································ | | | |
| 1 | 73921 <i>-77</i> E00 | REINF, INSTRUMENT COVER | 1 | 1 | N/AIR BAG |
| 2 | 73922-77E00-5ES | COVER, INSTRUMENT (BLACK) | .1 | 1 | N/AIR BAG |
| 3 | 03141-05123 | SCREW, INSTRUMENT COVER REINF | 4 | 4 | N/AIR BAG |
| 4 | 03541-05163 | SCREW, INSTRUMENT COVER | 6 | 6 | N/AIR BAG |
| 5 | 73910-77E00-5ES | MODULE ASSY, PASSENGER AIR BAG | 1 | 1 | W/AIR BAG |
| | | (BLACK) | | | • |
| 6 | 09139-06094 | SCREW, AIR BAG MODULE (6X16) | 2 | 2 | W/AIR BAG |
| 7 | 01550-08163 | BOLT, AIR BAG MODULE | 2 | 2 | W/AIR BAG |

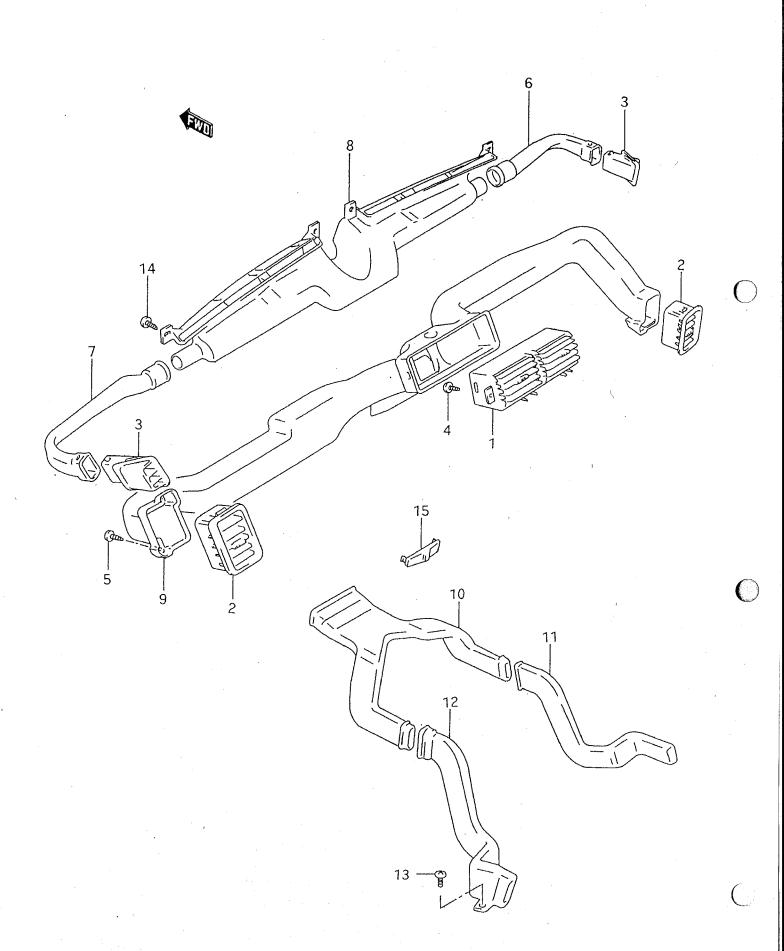


| REF. | | | Q, | TY | |
|------|----------------------|-------------------------------|----|-----|-----------|
| N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS |
| | | · | | | |
| 1 | 73610-77E00-5PK | LOUVER, CTR VENT (BLACK) | 1 | 1 | |
| 2 | 73620-77E00-5PK | LOUVER, SIDE VENT (BLACK) | 2 | 2 | |
| 3 | 73671-83000-5PK | NOZZLE, SIDE DEMISTER (BLACK) | 2 | 2 | |
| 4 | 03541-05163 | SCREW, CTR VENT | 2 | 2 | |
| 5 | 03541-05163 | SCREW, SIDE VENT | 2 | 2 | |
| 6 | 73681-77E00 | DUCT, DEMISTER RH | 1 | 1 | |
| 7 | 73691-77E00 | DUCT, DEMISTER LH | 1 | 1 | |
| 8 | 74615-60A00 | DUCT, DEFROSTER | 1 | 1 | |
| 9-1 | 74621 <i>-77</i> E10 | DUCT, VENTILATOR | 1 | 1 - | LHD |
| 9-2 | 74621 <i>-77</i> E00 | DUCT, VENTILATOR | 1 | 1 | RHD |
| 10 | 74631-60A10 | DUCT, REAR | 1 | 1 | W/RR DUCT |
| 11 | 74632-60A00 | HOSE, REAR RH | 1 | . 1 | W/RR DUCT |
| 12 | 74633-60A00 | HOSE, REAR LH | 1 | 1 | W/RR DUCT |
| 13 | 03141-05123 | SCREW, REAR DUCT | 2 | 2 | W/RR DUCT |
| 14 | 03541-05163 | SCREW, DEFROSTER DUCT | 4 | 4 | |
| 15 | 74911-64A00 | CAP, HEATER | 1 | 1 | N/RR DUCT |

FIG. 152

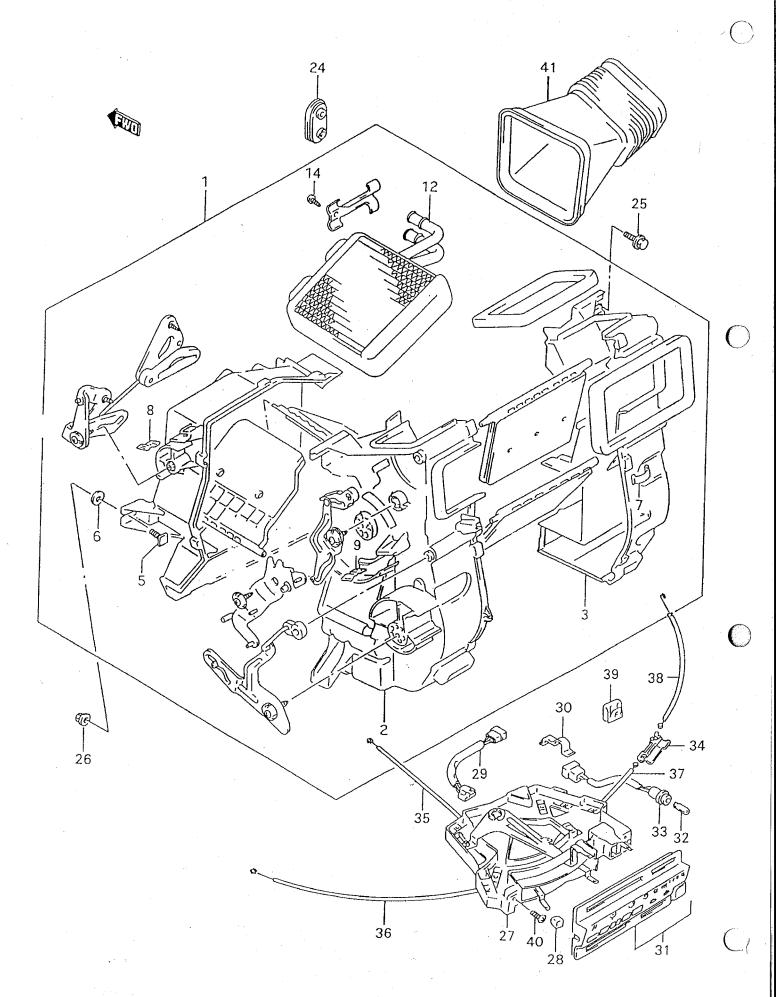


| REF. N.º | PART Nº | DESCRIPTION | Q, TY C V REMARKS |
|-------------|-------------|---------------|-------------------|
| | | | |
| 1 | 74100-85C10 | HEATER ASSY | 1 1 |
| 2 | 74111-85C10 | .CASE, HEATER | 1 1 |
| 3 | 74112-85C10 | .CASE, HEATER | 1 1 |
| 4 | | | |
| 5 | 74115-85C00 | .BOLT | 2 2 |
| 6 | 74116-85C00 | .GASKET | 2 2 |
| 7 | 74133-85C00 | .CLAMP, CASE | 12 12 |
| 8 | 74151-85C00 | .CLAMP, CABLE | 1 · 1 |
| 9 | 74152-85C00 | .CLAMP | 1 1 |
| 10 | | | |
| 11 | | | |
| 12 | 74120-85C10 | .CORE, HEATER | 1 1 |
| 13 | | | |
| 14 | 03111-05123 | .SCREW | 1 - 1 - |
| 15 | | | |
| 16 | | | |
| 1 <i>7</i> | | | |
| 18 | | | |
| 19 | | | |
| 20 | | | |
| 21 | | • | |
| 22 | | | |
| 23 | | | |
| 24 | 74812-82030 | GROMMET, HTR | 1 1 |
| 25 | 01550-06123 | BOLT | 2 2 |
| 26 | 08316-10083 | NUT | 2 2 |
| | | | |

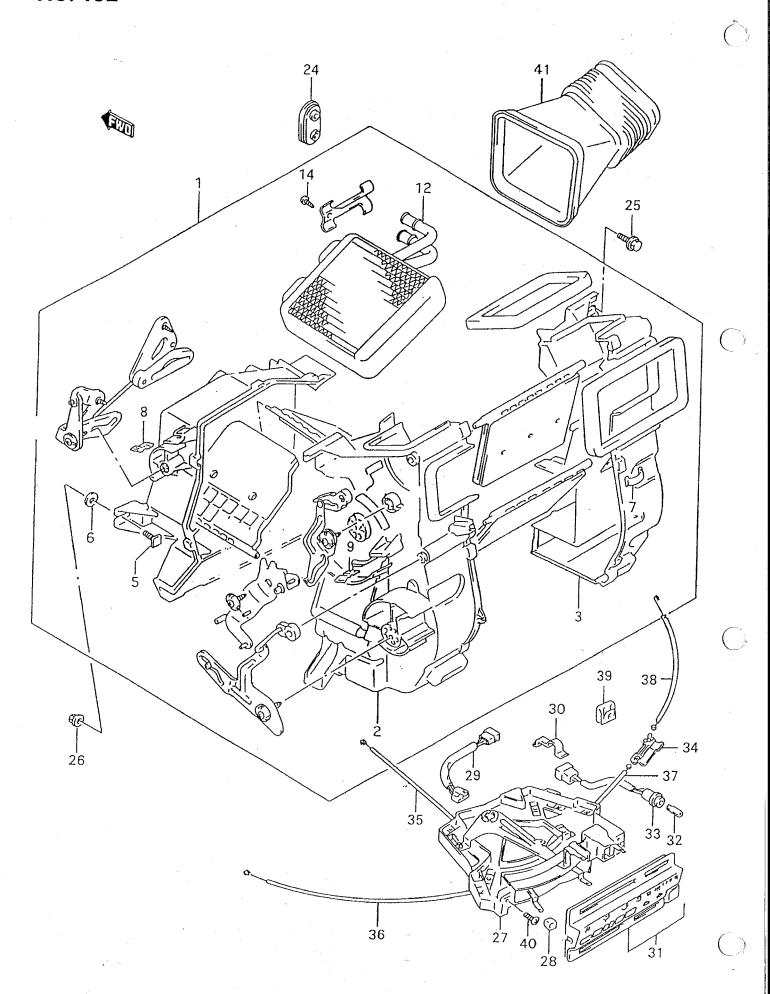


| REF. | DI DT 110 | • | | TY | | |
|------|-----------------|----------------------------------|---|-----|-----------|--|
| N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS | |
| | | | | | | |
| 27 | 74400-85C10 | LEVER ASSY, HTR CONTROL | 1 | 1 | | |
| 28 | 74431-64A00-5PK | KNOB, CONTROL LEVER (BLACK) | 4 | 4 | | |
| 29 | 74436-77E00 | HARNESS, FAN SWITCH | 1 | 1 | | |
| 30-1 | 74441-70B00 | HOLDER, HEATER CABLE | 3 | 3 | W/HEATER | |
| 30-2 | 74441-70B00 | HOLDER, HEATER CABLE | 1 | 1 | N/HEATER | |
| 31 | 74450-64A00-5PK | PANEL, HEATER CONTROL (BLACK) | 1 | 1 | | |
| 32 | 73856-82000 | .BULB, HEATER CONTROL | 1 | 1 | | |
| 33 | 74456-64A00 | .HARNESS, HEATER CONTROL | 1 | 1 | | |
| 34 | 74470-77E00 | JOINT, CABLE | 1 | 1 | | |
| 35 | 74511-77EBO | CABLE, MODE CONTROL (L:360) | 1 | 1 | NATURAL | |
| 36 | 74512-77E10 | CABLE, HOT & COOL (L:480) | 1 | 1 | BLUE | |
| 37 | 74513-77E10 | CABLE, FRESH AIR CONTROL (L:660) | 1 | . 1 | BLACK | |
| 38 | 74514-77E00 | CABLE, JOINT (L:255) | 1 | 1 | NATURAL | |
| 39 | 74541-60E00 | CLIP, CONTROL CABLE | 1 | 1 | | |
| 40 | 03511-05163 | SCREW, LEVER | 2 | 2 | | |
| 41 | 74620-60A10 | DUCT, HEATER | 1 | 1 | N/AIR CON | |

FIG. 153

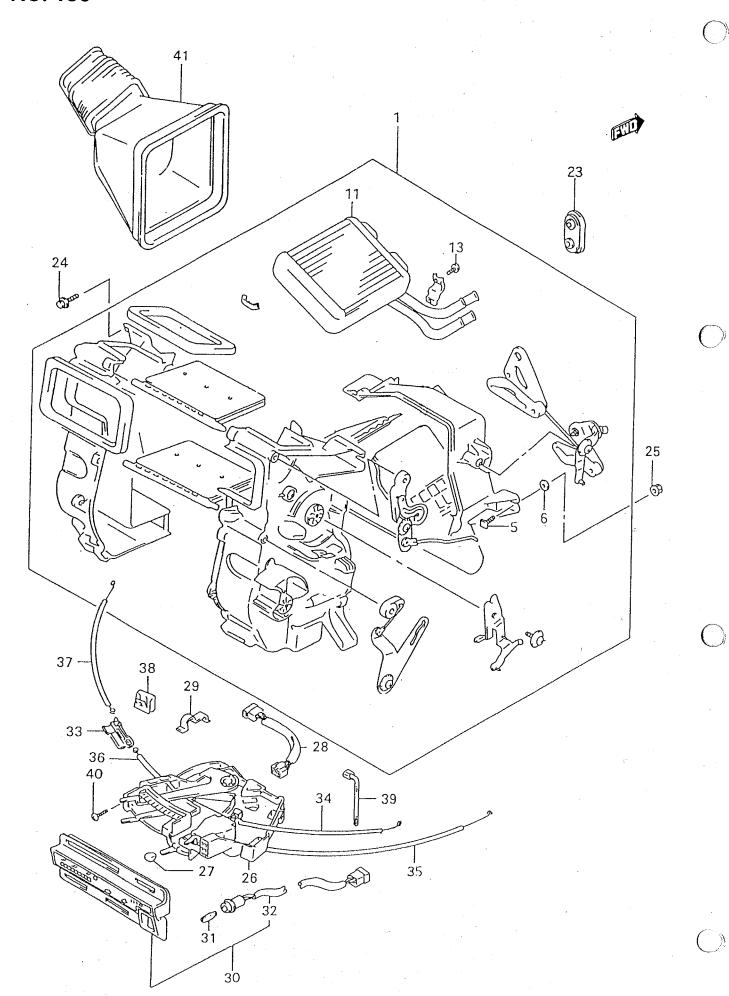


| REF. | | A . | DESCRIPTION | | TY | | |
|-----------------------|-------------------------------------|-----------------|-------------|--------|----|---------|--|
| N.º | PART Nº | DESCRIPTION | | | | REMARKS | |
| 1 2 | 74100-64A20 | HEATER ASSY | | 1 | 1 | | |
| 3 | | | | | | | |
| 5 | 74115-64A00 | .BOLT | | 2 | 2 | | |
| 6 7 8 9 | 74116-60A00 | PACKING | | 2 | 2 | | |
| 10 | | | | | | | |
| 11 12 | 74120-64A00 | .UNIT, RADIATOR | | . 1 | 1 | ÷ | |
| 13 14 15 | 03111-05123 | .SCREW | | 2 | 2 | | |
| 16 | | | | | | | |
| 17 | | | | | | | |
| 18 | | | | | | | |
| 19 | | | | | | | |
| 20 | | | | | | | |
| 21 22 | · | | | | | | |
| 23 | 74812-82030 | GROMMET, HEATER | | 1 | 1 | | |
| 24 ⁻ 25 | 01 <i>55</i> 0-06123 08310-10083 | BOLT NUT | | 2 2 | 2 | | |

FIG. 153

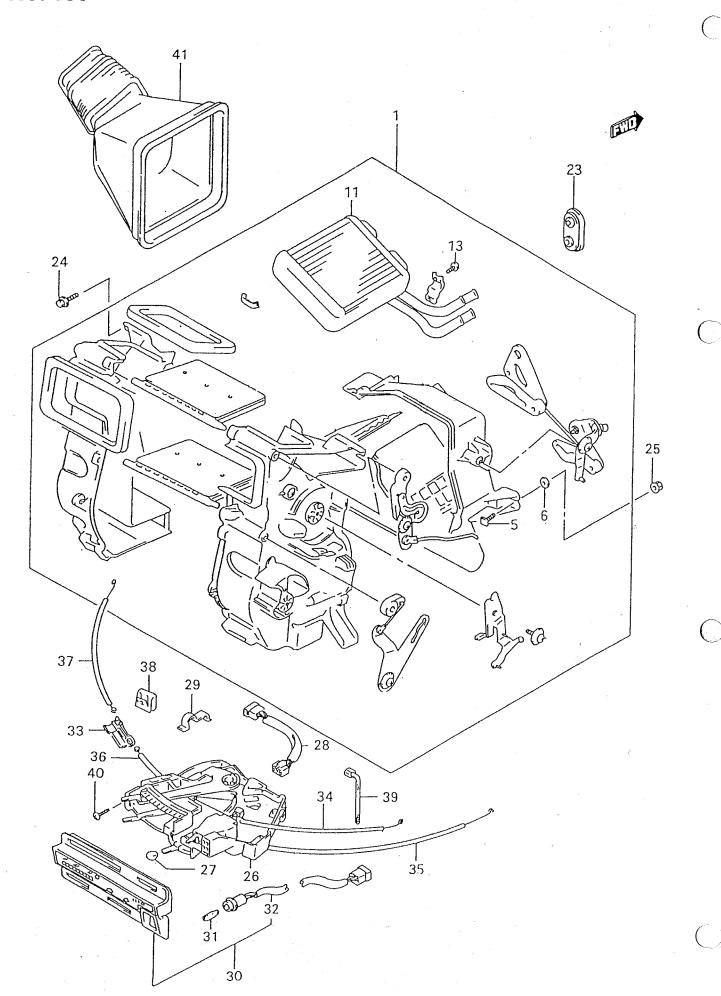


| REF. | -1 1 | | | TY | |
|------|-----------------|----------------------------------|-----|-----|-----------|
| N.º | PART Nº | DESCRIPTION | C - | ٧ | REMARKS |
| | | | | | |
| 26 | 74400-85C10 | LEVER ASSY, HTR CONTROL | 1. | 1 | |
| 27 | 74431-64A00-5PK | KNOB, CONTROL LEVER (BLACK) | 4 | 4 | |
| 28 | 74436-77E00 | HARNESS, FAN SWITCH | 1 | 1 | |
| 29 | 74441-70B00 | HOLDER, HEATER CABLE | 3 | 3 | |
| 30 | 74450-64A00-5PK | PANEL, HEATER CONTROL (BLACK) | 1 | 1 | |
| 31 | 73856-82000 | .BULB, HEATER CONTROL | 1 | 1 | |
| 32 | 74456-64A00 | .HARNESS, HEATER CONTROL | 1 | 1 | |
| 33 | 74470-77E00 | JOINT, CABLE | 1 | 1 | |
| 34 | 74511-77E00 | CABLE, MODE CONTROL (L:370) | 1 | 1 | NATURAL |
| 35 | 74512-77E00 | CABLE, HOT & COOL (L:525) | 1 | 1 . | BLUE |
| 36 | 74513-77E20 | CABLE, FRESH AIR CONTROL (L:725) | 1 | 1 | BLACK |
| 37 | 74514-77E00 | CABLE, JOINT (L:255) | 1 | 1 | NATURAL |
| 38 | 74541-60E00 | CLIP, CONTROL CABLE | 1 | 1 | * |
| 39 | 36990-85C10 | CLAMP, HARNESS | 1 | 1 | |
| 40 | 03511-05163 | SCREW, LEVER | 2 | 2 | |
| 41 | 74620-60A00 | DUCT, HEATER | 1 | 1 | N/AIR CON |
| | | | | | |

FIG. 154

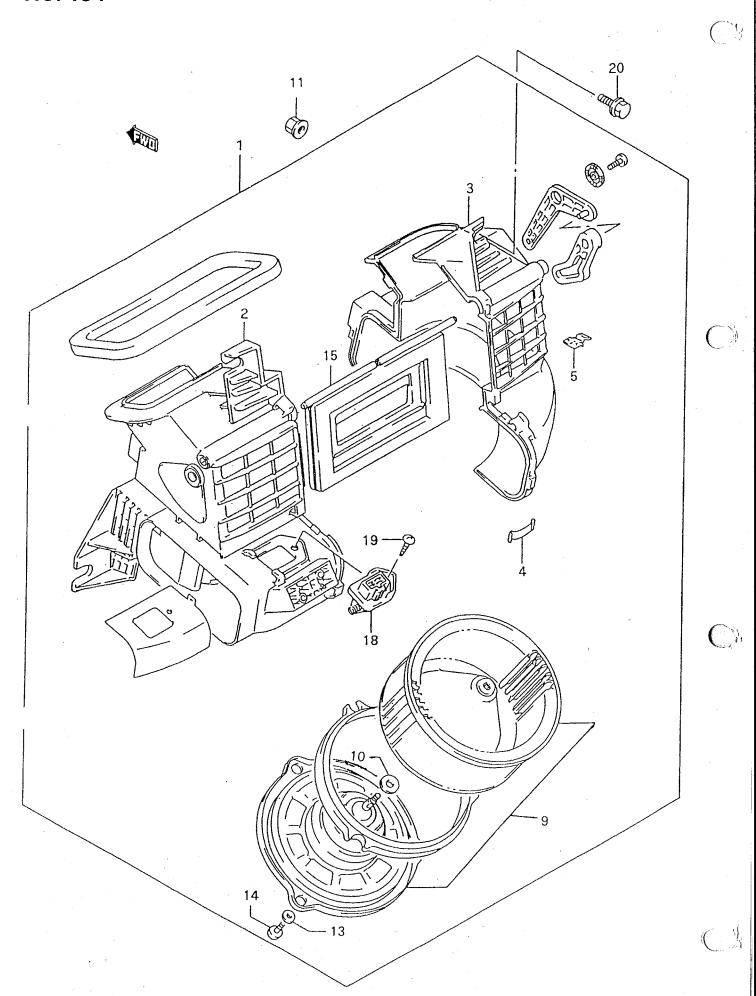


| REF. | | | | Q, | TY | |
|------------|-------------|--------------------|-----|----|-----|---------|
| N.º | PART Nº | DESCRIPTION | | С | ٧ | REMARKS |
| | | | | | | |
| 1 | 74200-85C31 | MOTOR ASSY, BLOWER | | 1 | 1 | |
| 2 | 74211-85C00 | .CASE, BROWER LH | | 1 | 1 | |
| 3 | 74212-85C00 | .CASE, BROWER RH | | 1 | 1 | |
| 4 | 74133-85C00 | .SPRING, HOLDER | | 5 | 5 | |
| 5 | 74151-85C00 | .CLAMP, LOCK | | 1 | 1 | |
| 6 | | | | | • | |
| 7 | | | | | | |
| 8 | | | | - | | |
| 9 | 74231-85C00 | .FAN, BROWER | | 1 | 1 | |
| 10 | 74250-85C00 | .MOTOR ASSY | , | 1 | 1 | |
| 11 | 74261-85C00 | .PACKING | | 1 | 1 . | |
| 12 | | | | | | |
| 13 | 74268-85C00 | .WASHER | | 3 | 3 | |
| 14 | 74269-85C00 | .SCREW | | 3 | 3 | • |
| 15 | 74271-85C00 | .DAMPER | | 1 | 1. | |
| 16 | | | | | | |
| 1 <i>7</i> | | | | | | |
| 18 | 74290-85C00 | .RESISTOR | | 1 | 1 | |
| 19 | 74299-85C00 | .SCREW | | 1 | 1 | |
| 20 | 01550-06123 | BOLT | • • | 2 | 2 | |

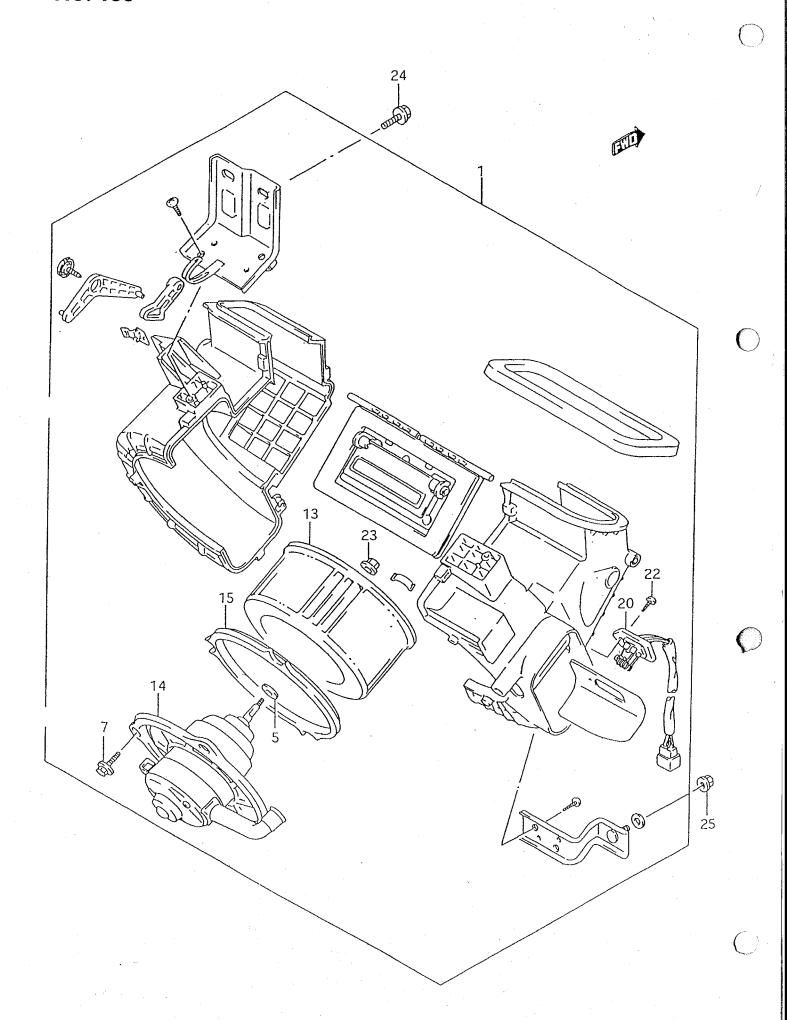


| REF. | • | | | Q, TY | | |
|----------|-------------|--------------------|----------|-------|---|---------|
| N.º | PART Nº | DESCRIPTION | - | С | ٧ | REMARKS |
| 1 | 74200-60A01 | MOTOR ASSY, BLOWER | | 1 | 1 | |
| 2 | | , | | | | |
| 3 | | | | | | |
| 4 | | | | | | |
| 5 | 74131-82000 | .WASHER | | 1 | 1 | |
| 6 | | | | | | • |
| 7 | 74135-82000 | .SCREW | | 3 | 3 | |
| 8 | | | | | | |
| 9 | | | | | | |
| 10 | | | | | | |
| 11 | | | | | | |
| 12 | | | | | | |
| 13 | 74231-60A10 | .FAN, BROWER | | 1 | 1 | |
| 14 | 74250-60A00 | .MOTOR ASSY | | 1 | 1 | |
| 15 | 74261-60A10 | .PACKING | | 1 | 1 | |
| 16 | | | | | | |
| 17 | | | | | | |
| 18 | | | | | | |
| 19 20 | 74290-60A01 | .RESISTOR | • | 1 | 1 | |
| 21 | 74290-00A01 | .RESISTOR | | f | 1 | |
| 22 | 03111-04123 | .SCREW | | 1 | 1 | |
| 23 | 08316-10053 | .NUT | | 1 | 1 | |
| 24 | 01550-06123 | BOLT | | 2 | 2 | |
| 25 | 08310-10083 | NUT | | 1 | 1 | |
| | 130.0.000 | | | • | • | |

FIG. 156

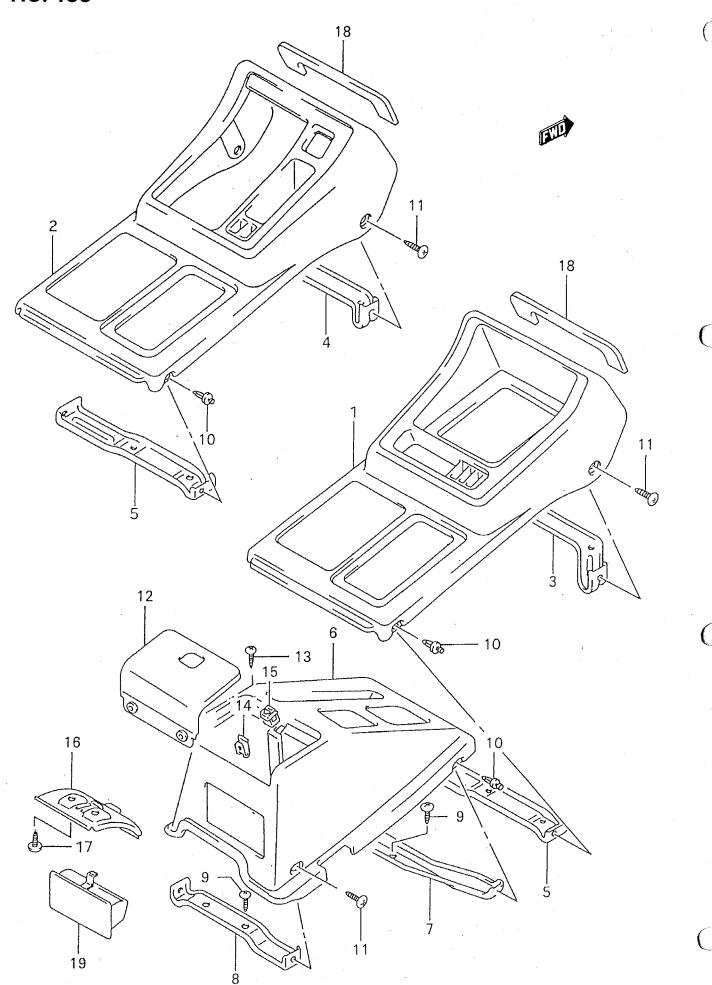


| REF. | | | | Q, TY | | |
|------|-------------|-----------------|-----------------------------|-------|---|-----------|
| | N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS |
| | | | | | | |
| | 1 | 73911-62A20-5ES | BOX, CTR CONSOLÉ FR (BLACK) | 1 | 1 | MT |
| | 2 | 73911-62A30-5ES | BOX, CTR CONSOLE FR (BLACK) | 1 | 1 | AT |
| | 3 | 73931-60A00 | BRACKET, CONSOLE FR NO.1 | 1 | 1 | MT |
| | 4 | 73931-60A10 | BRACKET, CONSOLE FR NO.1 | 1 | 1 | AT |
| | 5 | 73932-60A10 | BRACKET, CONSOLE FR NO.2 | 1 | 1 | |
| | 6-1 | 73921-60A10-5ES | BOX, CTR CONSOLE RR (BLACK) | 1 | 1 | 3DR:JLX |
| | 6-2 | 73921-56B00-5ES | BOX, CTR CONSOLE RR (BLACK) | - | 1 | 5DR |
| | <i>7-</i> 1 | 73933-60A00 | BRACKET, CONSOLE RR NO.1 | 1 | 1 | 3DR:JLX |
| | 7-2 | 73933-56B00 | BRACKET, CONSOLE RR NO.1 | - | 1 | 5DR |
| | 8 | 73934-60A00 | BRACKET, CONSOLE RR NO.2 | 1 | 1 | 3DR:JLX |
| | | | | | | 5DR |
| | 9 | 03241-06123 | SCREW, RR BRACKET | 2 | 2 | 3DR:JLX |
| | | | • | | | 5DR |
| | 10-1 | 09409-06314-5PK | CLIP, CONSOLE (BLACK) | 2 | 2 | 3DR:JA,JX |
| | 10-2 | 09409-06314-5PK | CLIP, CONSOLE (BLACK) | 4 | 4 | 3DR:JLX |
| | | | | | | 5DR |
| | 11-1 | 03241-05123 | SCREW, CONSOLE | 2 | 2 | 3DR:JA,JX |
| | 11-2 | 03241-05123 | SCREW, CONSOLE | 4 | 4 | 3DR:JLX |
| | · · · | | | • | • | |


FIG. 156

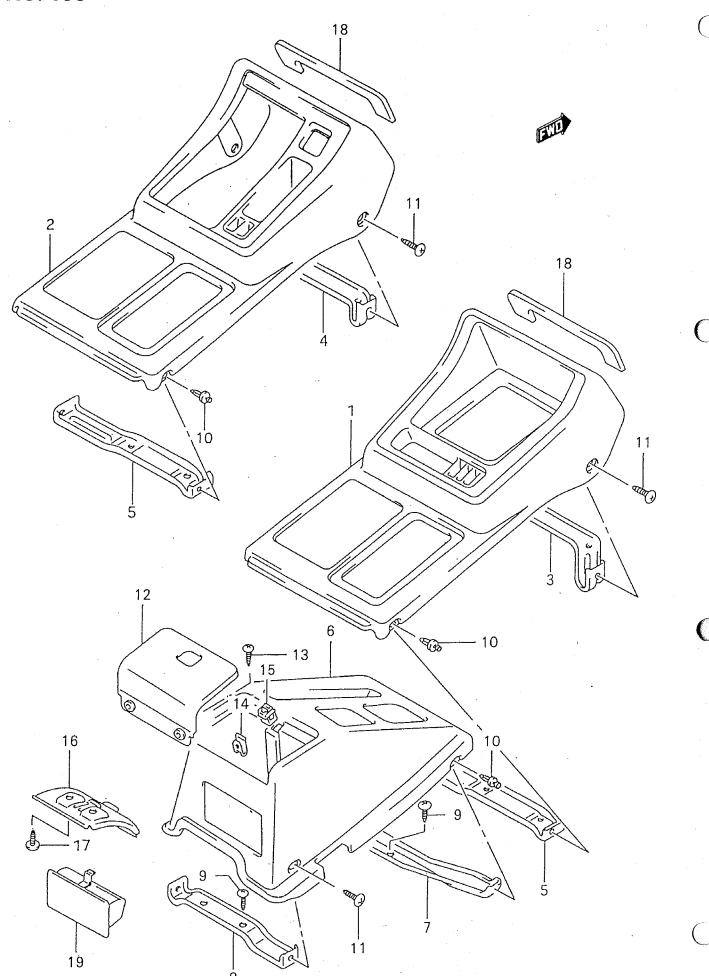

| | | Q, | TY | | |
|-----------------|---|---|---|---|---|
| PART Nº | DESCRIPTION | С | ٧ | REMARKS | |
| · | · | | | | - |
| 73922-60A10-5ES | LID, CTR CONSOLE RR (BLACK) | 1 | 1 | 3DR:JLX | |
| 73922-56B00-5ES | LID, CTR CONSOLE RR (BLACK) | - | 1 | 5DR | |
| 03541-05163 | SCREW, RR LID | 2 | 2 | 3DR:JLX | |
| 09148-05004 | NUT, RR LID | - | 2 | 5DR | |
| 73170-50A00 | LOCK, RR LID | 1 | 1 | 3DR:JLX | |
| 73923-56B00 | GUIDE, ASHTRAY | - | 1 | 5DR | |
| 03541-05163 | SCREW, GUIDE | - | 2 | 5DR | |
| 73915-60A00 | CUSHION, CTR CONSOLE | 1 | 1 | | |
| 89820-56B00-5ES | ASHTRAY, REAR (BLACK) | <u>-</u> | 1 | 5DR | |
| | 73922-56B00-5ES 03541-05163 09148-05004 73170-50A00 73923-56B00 03541-05163 73915-60A00 | 73922-60A10-5ES LID, CTR CONSOLE RR (BLACK) 73922-56B00-5ES LID, CTR CONSOLE RR (BLACK) 03541-05163 SCREW, RR LID 09148-05004 NUT, RR LID 73170-50A00 LOCK, RR LID 73923-56B00 GUIDE, ASHTRAY 03541-05163 SCREW, GUIDE 73915-60A00 CUSHION, CTR CONSOLE | PART N° DESCRIPTION C 73922-60A10-5ES LID, CTR CONSOLE RR (BLACK) 1 73922-56B00-5ES LID, CTR CONSOLE RR (BLACK) - 03541-05163 SCREW, RR LID 2 09148-05004 NUT, RR LID - 73170-50A00 LOCK, RR LID 1 73923-56B00 GUIDE, ASHTRAY - 03541-05163 SCREW, GUIDE - 73915-60A00 CUSHION, CTR CONSOLE 1 | 73922-60A10-5ES LID, CTR CONSOLE RR (BLACK) 1 1 73922-56B00-5ES LID, CTR CONSOLE RR (BLACK) - 1 03541-05163 SCREW, RR LID 2 2 09148-05004 NUT, RR LID - 2 73170-50A00 LOCK, RR LID 1 1 73923-56B00 GUIDE, ASHTRAY - 1 03541-05163 SCREW, GUIDE - 2 73915-60A00 CUSHION, CTR CONSOLE 1 1 | PART N° DESCRIPTION C V REMARKS 73922-60A10-5ES LID, CTR CONSOLE RR (BLACK) 1 1 3DR:JLX 73922-56B00-5ES LID, CTR CONSOLE RR (BLACK) - 1 5DR 03541-05163 SCREW, RR LID 2 2 3DR:JLX 09148-05004 NUT, RR LID - 2 5DR 73170-50A00 LOCK, RR LID 1 1 3DR:JLX 73923-56B00 GUIDE, ASHTRAY - 1 5DR 03541-05163 SCREW, GUIDE - 2 5DR 73915-60A00 CUSHION, CTR CONSOLE 1 1 1 |

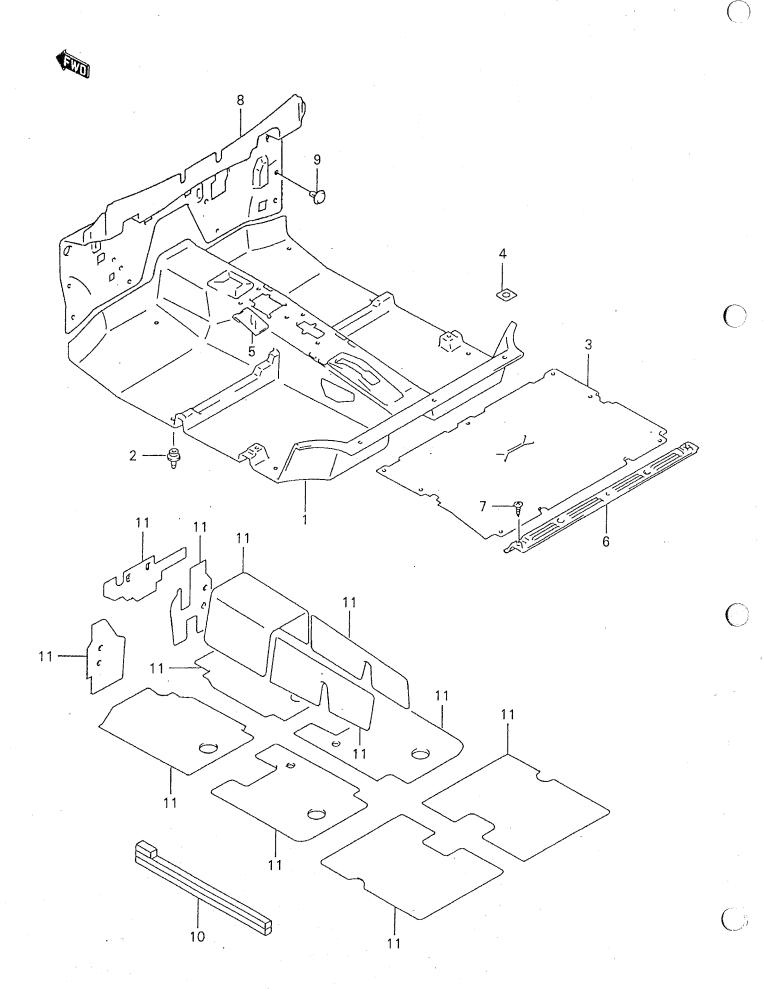


| REF. | • | | Q, | TY | |
|-------------|-----------------|-------------------------------------|-----|-----|------------------|
| N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS |
| | · | F.V. | | | |
| 1 -1 | 75160-64A30-5EZ | CARPET, FR FLOOR (GRAY) | 1 | - | JA : |
| 1-2 | 75160-64A10-5EZ | CARPET, FR FLOOR (GRAY) | 1 | 1 | JX |
| 1-3 | 75160-63A30-5EZ | CARPET, FR FLOOR (GRAY) US E | 1 | 1 | JLX 75160.63450- |
| 2 | 59991-85C00 | MALE, CARPET HOOK | 11 | 11 | -SEK |
| 3-1 | 75180-60A21-6MA | CARPET, RR FLOOR (GRAY) | 1 | 1 | JX |
| 3-2 | 75180-85C20-6MA | CARPET, RR FLOOR (GRAY) | 1 | 1 | JLX |
| 4 | 75170-61A00-5FB | FEMALE, CARPET HOOK (GRAY) | 3 | . = | JA , |
| 5 | 75170-60A00 | POCKET, TRANSFER EMBLEM | 1 | | JA |
| 6 | 75191-56B00 | GARNISH, LUGGAGE MAT END | 1 | 1 | JX,JLX |
| <i>7-</i> 1 | 09132-05041 | SCREW, GARNISH (L:16) | 5 | - ' | JA a a |
| 7-2 | 09132-05041 | SCREW, GARNISH (L:16) | 4 | 4 | JX,JLX |
| 8-1 | 75210-56B11 | SILENCER, DASH PANEL | 7 | 1 | LHD |
| 8-2 | 75210-56B21 | SILENCER, DASH PANEL | 1 | 1 | RHD |
| 8-3 | 75210-86CA0 | SILENCER, DASH PANEL | . 1 | 1 | 1.9 DIESEL |
| 9 | 59933-85C00 | CLIP, DASH SILENCER | 11 | 11 | |
| 10 | 75221-77E00 | SILENCER, FRAME UPPER | 2 | 2 | |
| 11 | 99611-60A00 | SHEET, SILENCER (800X1000X3) | AR | AR | CUT AS REQUIRED |

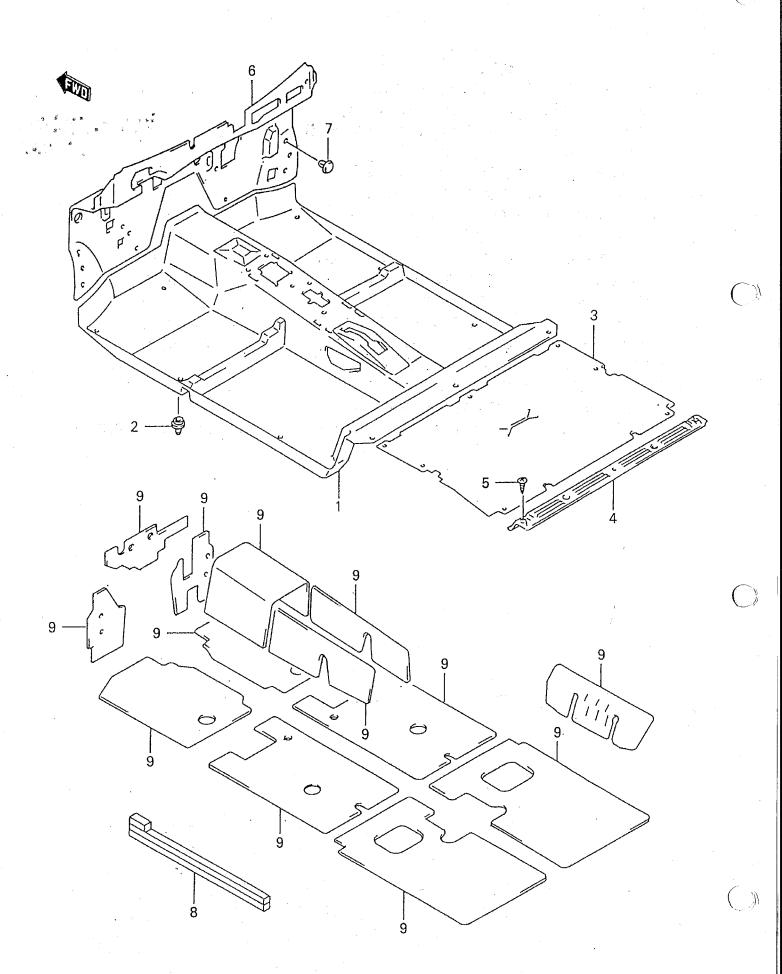


| REF. | | | Q, TY | |
|------|--------------------------|------------------------------|-------|-----------------|
| N.º | PART Nº | DESCRIPTION | CV | REMARKS |
| | | / | | |
| 1-1 | 75160-57B30-5EK ₹ | CARPET, FR FLOOR (CHARCOAL) | . 1 | |
| 2 | 59991-85C00 | MALE, CARPET HOOK | 11 | |
| 3 | 75180-56B00-P47 | CARPET, RR FLOOR (CHARCOAL) | 1 | |
| 4 | 75191-56B00 | GARNISH, LUGGAGE MAT END | 1 | |
| 5 | 09132-05041 | SCREW, GARNISH (L:16) | 4 | • |
| 6-1 | 75210-56B11 | SILENCER, DASH PANEL | 1 | LHD |
| 6-2 | 75210-56B21 | SILENCER, DASH PANEL | 1 | RHD |
| 7 | 59933-85C00 | CLIP, DASH SILENCER | 11 | |
| 8 | 75221-77E00 | SILENCER, FRAME UPPER | 2 | |
| 9 | 99611-60A00 | SHEET, SILENCER (800X1000X3) | AR | CUT AS REQUIRED |
| | | | | |

1-2 75160-

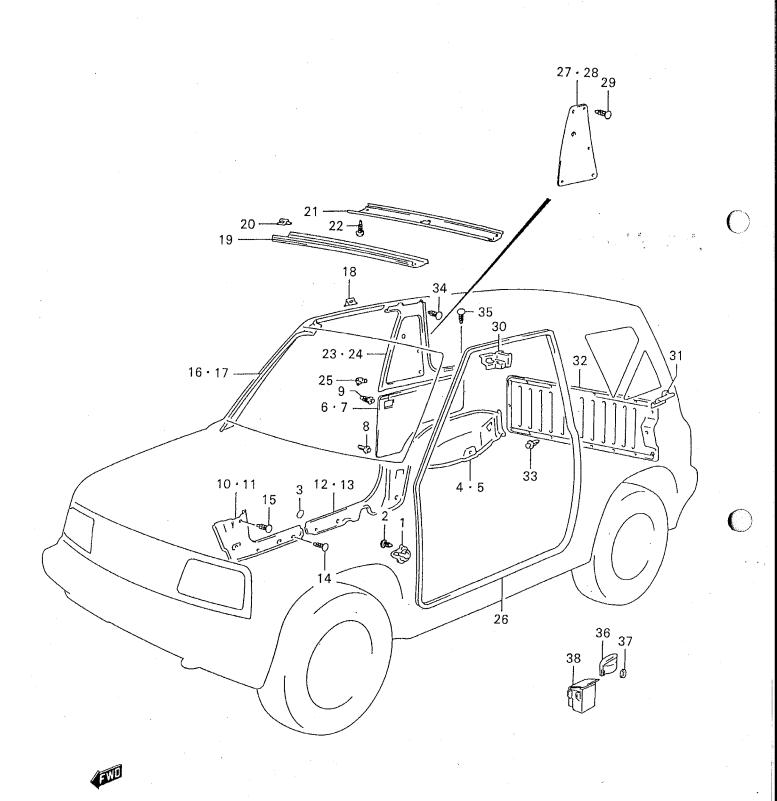


| REF. | | | Q, TY | |
|------------|--------------------------|-----------------------------------|-------|---------|
| N.º | PART Nº | DESCRIPTION | C V | REMARKS |
| | | | | |
| 1 | 36635-60A00-5PK | PROTECTOR, FLOOR HARNESS (BLACK) | .] | JA,JX |
| 2 | 09409-07318-5ES | CLIP, PROTECTOR (BLACK) | 1 | JA,JX |
| 3 | 72115-85C00 | SEAL, TRIM HOLE | 8 | JA,JX |
| 4 | 75140-60A10-5FE | TRIM, RR WHEEL HSG RH (BLACK) | 1 | JX,JLX |
| 5 | 75150-60A10-5FE | TRIM, RR WHEEL HSG LH (BLACK) | 1 | JX,JLX |
| 6-1 | 76110-66A00- <i>5</i> FE | TRIM, RR SIDE INR RH (BLACK) | 1 | JA |
| 6-2 | 76110-67A50-5FE | TRIM, RR SIDE INR RH (BLACK) | 1 | |
| 6-3 | 76110-85C30-5ES | TRIM, RR SIDE INR RH (BLACK) | 1 | JLX |
| 7-1 | 76120-66A00-5FE | TRIM, RR SIDE INR LH (BLACK) | 1 | JA |
| 7-2 | 76120-67A50-5FE | TRIM, RR SIDE INR LH (BLACK) | 1 | JX |
| 7-3 | 76120-85C30-5ES | TRIM, RR SIDE INR LH (BLACK) | 1 | JLX |
| 8-1 | 09409-08320 | CLIP, TRIM | 16 | JA,JX |
| 8-2 | 09409-08310 | CLIP, TRIM | 6 | JLX |
| 9 | 09409-08322 | CLIP, TRIM | 8 | JLX |
| 10 | 76131-60A30-5ES | TRIM, SILL SIDE INR FR RH (BLACK) | 1 | JLX |
| 11 | 76141-60A30-5ES | TRIM, SILL SIDE INR FR LH (BLACK) | 1 | JLX |
| 12 | 76151-60A30-5ES | TRIM, SILL SIDE INR RR RH (BLACK) | 1 | JLX |
| 13 | 76161-60A30-5ES | TRIM, SILL SIDE INR RR LH (BLACK) | 1 | JLX |
| 14 | 59934-85C00-5ES | CLIP, TRIM (BLACK) | 10 | JLX |
| 15 | 09409-07318-5ES | CLIP, TRIM UPPER (BLACK) | 2 | JLX |
| 16 | 76171-60A31-5ES | TRIM, FR PILLAR INR RH (BLACK) | 1 | JLX |
| 1 <i>7</i> | 76181-60A32-5ES | TRIM, FR PILLAR INR LH (BLACK) | 1 | JLX |
| 18 | 76281-60A30 | CLIP, TRIM | 6 | JLX |
| 19 | 76191-85C30-5ES | TRIM, ROOF FR INNER (BLACK) | 1 | JLX |
| 20 | 76281-60A30 | CLIP, TRIM | 4 | JLX |
| 21 | 76211-85C30-5ES | TRIM, CTR PILLAR JOINT (BLACK) | 1 | JLX |
| 22 | 76283-60A30-5ES | CLIP, TRIM (BLACK) | 4 | JLX |
| 23 | 76221-60A40-5ES | TRIM, RR SIDE INR RH (BLACK) | 1 | JLX |
| 24 | 76231-60A40-5ES | TRIM, RR SIDE INR LH (BLACK) | . 1 | JLX . |
| 25 | 76282-60A30 | CLIP, LOWER | 2 | JLX |

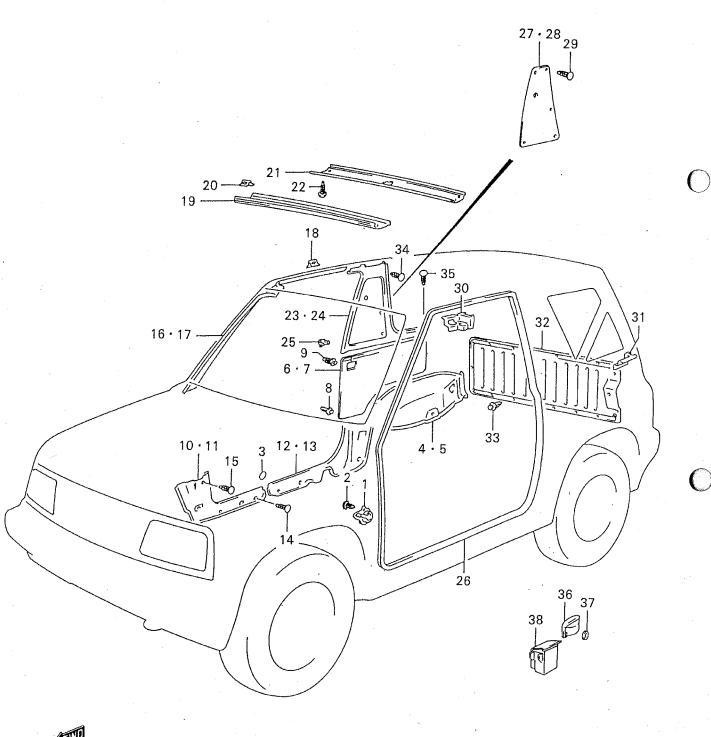


FWD

| REF. | | | Q, TY | |
|------------|-----------------|-------------------------------|-------|------------|
| N.º | PART Nº | DESCRIPTION | C V | REMARKS |
| | | | · | |
| 26 | 76240-85C10-5ES | TRIM, FR DOOR OPENING (BLACK) | 2 | |
| 27 | 76311-62A20-5ES | TRIM, CTR PILLAR RH (BLACK) | 1 | JA,JX |
| 28 | 76321-62A20-5ES | TRIM, CTR PILLAR LH (BLACK) | 1 | JA,JX |
| 29 | 09409-10303-5ES | CLIP, TRIM (BLACK) | 6 | JA,JX |
| 30 | 76331-60A00 | GARNISH, RR QTR INNER RH | 1 | |
| 31 | 76341-60A00 | GARNISH, RR QTR INNER LH | 1 | |
| 32 | 76271-60A10-5ES | TRIM, RR GATE (BLACK) | 1 | |
| 33 | 09409-08308-5PK | CLIP, RR GATE (BLACK) | 14 | |
| 34-1 | 76283-60A30-5ES | CLIP, ASSISTANT GRIP (BLACK) | 6 | $JA_{r}JX$ |
| 34-2 | 76283-60A30-5ES | CLIP, ASSISTANT GRIP (BLACK) | 2 | JLX |
| 35 | 59934-85C00-5ES | CLIP, UPPER (BLACK) | 2 | |
| 36 | 86370-78000-281 | ASHTRAY, REAR (BLACK) | 1 | JX |
| 3 <i>7</i> | 09148-05006 | NUT, ASHTRAY | 2 | JX |
| 38 | 89820-60A00-5ES | ASHTRAY, REAR (BLACK) | 2 | JLX |

FIG. 160

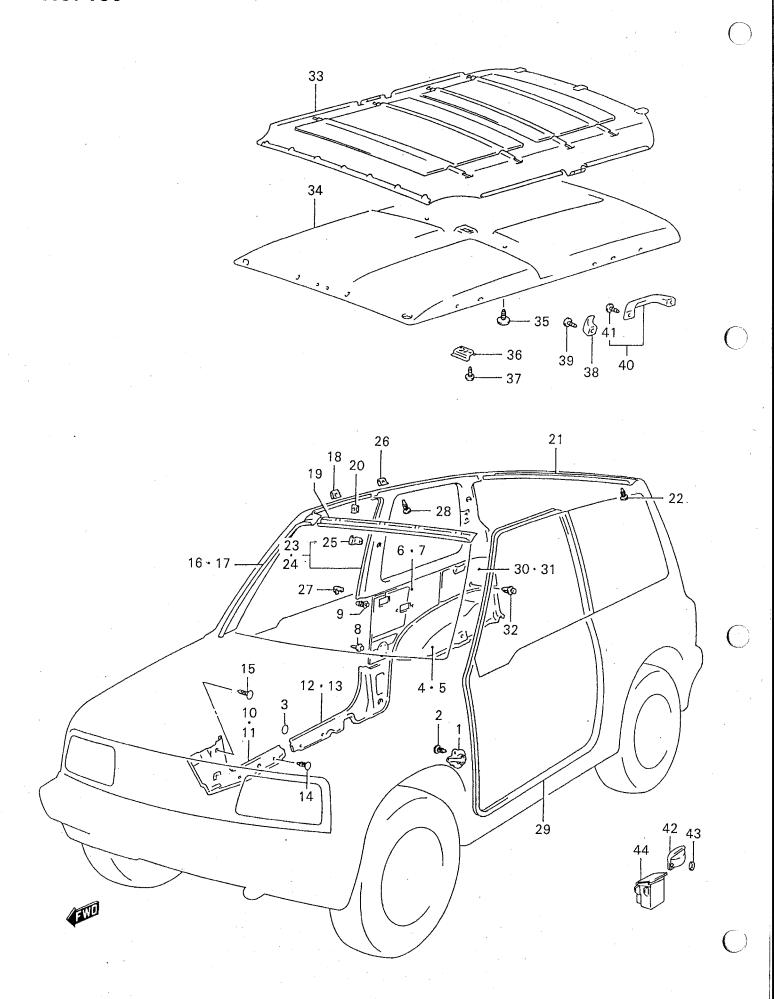


| REF. | | | Q, TY | | . ' | |
|-------------|-----------------|------------------------------------|-------|----|---------|--|
| N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS | |
| | | | | | | |
| 1 | 36635-60A00-5PK | PROTECTOR, FLOOR HARNESS (BLACK) | | 1 | JX | |
| 2 | 09409-07318-5ES | CLIP, PROTECTOR (BLACK) | | 1 | JX | |
| . 3 | 72115-85C00 | SEAL, TRIM HOLE | | 8 | JX | |
| 4 | 75140-60A00-5FE | TRIM, RR WHEEL HSG RH (BLACK) | | 1 | | |
| 5 | 75150-60A00-5FE | TRIM, RR WHEEL HSG LH (BLACK) | | 1 | | |
| 6-1 | 76110-67A10-5FE | TRIM, RR SIDE INR RH (BLACK) | | 1 | JX | |
| 6-2 | 76110-85C30-5ES | TRIM, RR SIDE INR RH (BLACK) | | 1 | JLX | |
| <i>7</i> -1 | 76120-67A10-5FE | TRIM, RR SIDE INR LH (BLACK) | | 1 | JX | |
| 7-2 | 76120-85C30-5ES | TRIM, RR SIDE INR LH (BLACK) | | 1 | JLX | |
| 8-1 | 09409-08320 | CLIP, TRIM | | 20 | JX | |
| 8-2 | 09409-08310 | CLIP, TRIM | | 6 | JLX | |
| 9 | 09409-08322 | CLIP, TRIM | | 8 | JLX | |
| 10 | 76131-60A30-5ES | TRIM, SILL SIDE INR FR RH (BLACK) | | 1 | JLX | |
| 11 | 76141-60A30-5ES | TRIM, SILL SIDE INR FR LH (BLACK) | | 1 | JLX | |
| 12 | 76151-60A30-5ES | TRIM, SILL SIDE INR RR RH (BLACK) | | 1 | JLX | |
| 13 | 76161-60A30-5ES | TRIM, SILL SIDE INR RR LH (BLACK) | | 1 | JLX | |
| 14 | 59934-85C00-5ES | CLIP, TRIM (BLACK) | | 10 | JLX | |
| 15 | 09409-07318-5ES | CLIP, TRIM UPPER (BLACK) | | 2 | JLX | |
| 16 | 76171-61A31-5ES | TRIM, FR PILLAR INR RH (BLACK) | | 1 | JLX | |
| 1 <i>7</i> | 76181-61A31-5ES | TRIM, FR PILLAR INR LH (BLACK) | | 1 | JLX | |
| 18 | 76281-60A30 | CLIP, TRIM | | 14 | JLX | |
| 19 | 76191-85C80-5ES | TRIM, ROOF FR INNER (BLACK) | | 1 | JLX | |
| 20 | 76281-60A30 | CLIP, TRIM | | 5 | JLX | |
| 21 | 76211-85C80-5ES | TRIM, ROOF RR JOINT (BLACK) | | 1 | JLX | |
| 22 | 09409-10304-5ES | CLIP, TRIM (BLACK) | | 5 | JLX | |
| 23 | 76221-61A30-5ES | TRIM, RR SIDE INR UPPER RH (BLACK) | | 1 | JLX · | |
| 24 | 76231-61A30-5ES | TRIM, RR SIDE INR UPPER LH (BLACK) | | 1 | JLX | |
| 25 | 76283-61A30 | .PLATE, TRIM RR SIDE INR UPPER | | 28 | JLX | |
| 26 | 76281-60A30 | CLIP, TRIM UPPER | | 2 | JLX | |
| 27 | 76282-60A30 | CLIP, TRIM LOWER | | 2 | JLX | |
| 28 | 59934-85C00-5ES | CLIP, TRIM (BLACK) | | 12 | JLX | |

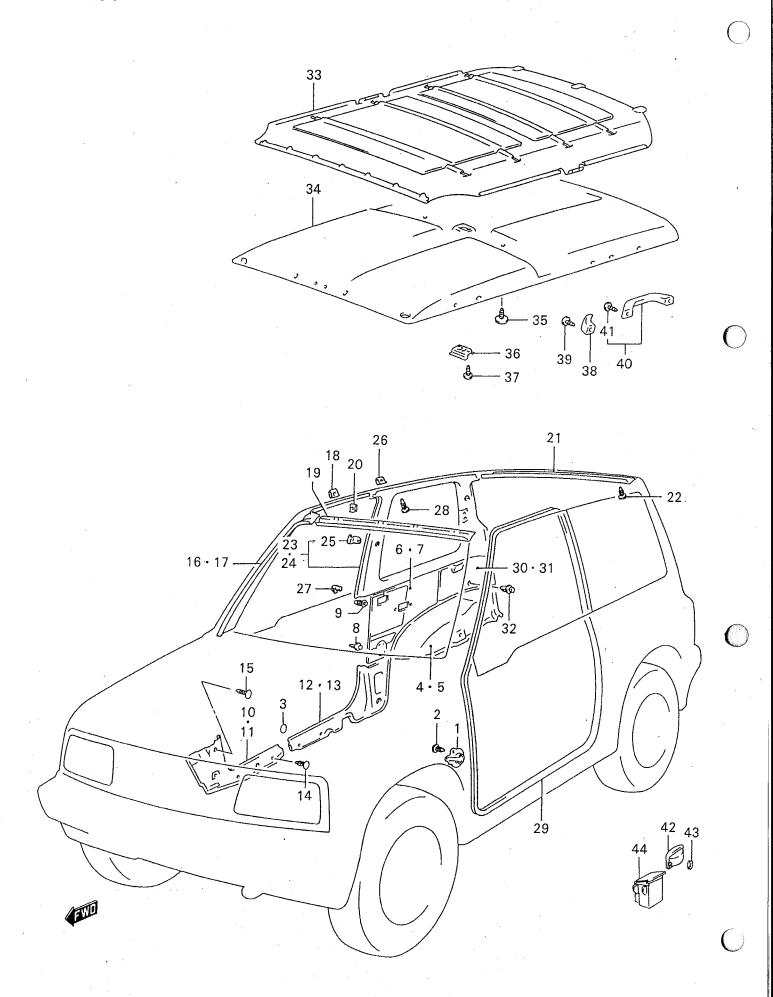


| REF. | | | | Q, TY | | | |
|------|--------|-----------------|-------------------------------|-------|-----|---------|--|
| | N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS | |
| | | | · | | | | |
| | 29 | 76240-85C10-5ES | TRIM, FR DOOR OPENING (BLACK) | | 2 | | |
| | 30 | 76251-85C80-5ES | TRIM, RR SIDE INR RH (BLACK) | | 1 | JLX | |
| | 31 | 76261-85C80-5ES | TRIM, RR SIDE INR LH (BLACK) | | 1 | JLX | |
| | 32 | 09409-08308-5PK | CLIP, TRIM (BLACK) | | 4 | JLX | |
| | 33 | 78110-61A00-5EF | HEADLINING ASSY, ROOF (GRAY) | | 1. | JX | |
| | 34 | 78110-85C30-5E | GHEADLINING ASSY, ROOF (GRAY) | | 1 | JLX | |
| | 35 | 59811-85C00-5EH | CLIP, HEADLINING (GRAY) | | 7 | JLX | |
| | 36 | 78121-61A00 | SPACER, ROOM LAMP | | . 1 | JLX | |
| | 37 | 03241-05123 | SCREW, SPACER | | 1 | JLX | |
| | 38 | 84491-61A10-5ES | HOOK, COAT HANGER (BLACK) | | 1 | | |
| | 39 | 03111-06253 | SCREW, HOOK | | 1 | | |
| | 40 | 76400-61831-5ES | GRIP SET, ASSISTANT (BLACK) | | 3 | | |
| | 41 - 1 | 09125-06084 | .SCREW, GRIP (6X17) | | 6 | JX | |
| | 41 -2 | 09125-06041 | .SCREW, GRIP (6X20) | | 6 | JLX | |
| | 42 | 86370-78000-281 | ASHTRAY, REAR (BLACK) | | 1 | JX | |
| | 43 | 09148-05006 | NUT, ASHTRAY | | 2 | JX | |
| | 44 | 89820-60A00-5ES | ASHTRAY, REAR (BLACK) | | 2 | JLX | |
| | | | | | | | |

FIG. 161

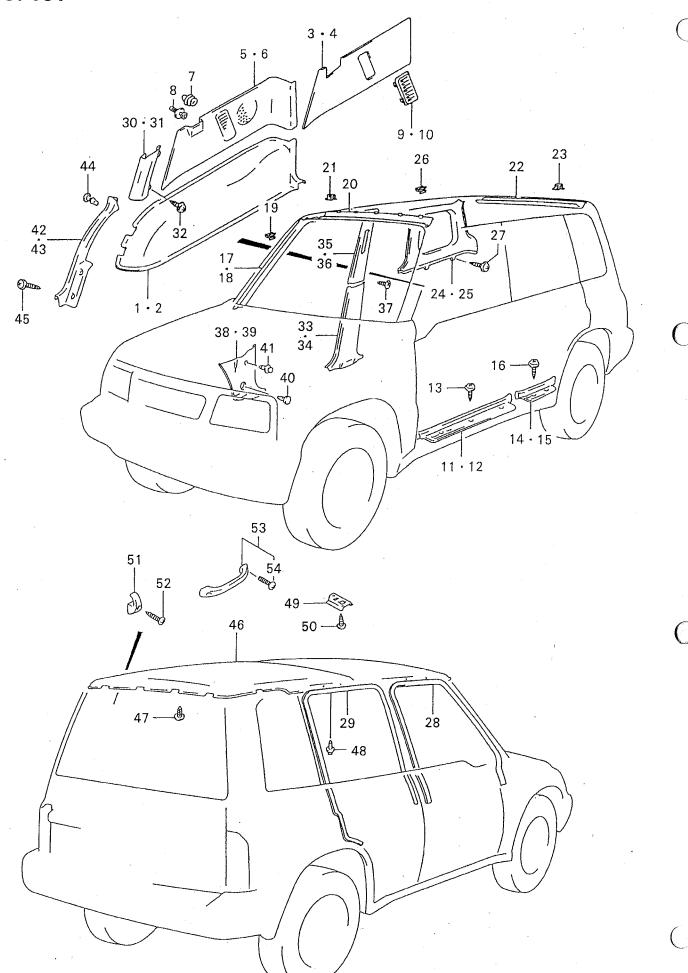


| REF. DADT NO | | | Q, | TY | |
|--------------|-----------------|-----------------------------------|----|----|-------------|
| N.º | PART Nº | DESCRIPTION | С | ٧. | REMARKS |
| | | | | | |
| 1 | 75140-56B00-5FE | TRIM, RR WHEEL HSG RH (BLACK) | | 1 | |
| 2 | 75150-56B00-5FE | TRIM, RR WHEEL HSG LH (BLACK) | | 1 | |
| 3 | 76110-56B10-5FE | TRIM, RR QTR LOWER RH (BLACK) | | 1 | JX |
| 4 | 76120-56B10-5FE | TRIM, RR QTR LOWER LH (BLACK) | | 1 | JX |
| 5 | 76111-56B00-5ES | TRIM, RR QTR LOWER RH (BLACK) | | 1 | JLX |
| 6 | 76121-56B00-5ES | TRIM, RR QTR LOWER LH (BLACK) | | 1 | JLX |
| 7-1 | 09409-08320 | CLIP, TRIM | | 12 | JX |
| 7-2 | 09409-08310 | CLIP, TRIM | | 8 | JLX |
| 8 | 09409-08322 | CLIP, TRIM FR | | 4 | JLX |
| 9 | 76292-56B00-5ES | COVER, AIR OUTLET HOLE RH (BLACK) | | 1 | JX |
| 10 | 76293-56B00-5ES | COVER, AIR OUTLET HOLE LH (BLACK) | | 1 | JX |
| 11 | 76131-56B00-5ES | CUFF, SIDE SILL FR RH (BLACK) | | 1 | |
| 12 | 76141-56B00-5ES | CUFF, SIDE SILL FR LH (BLACK) | | 1 | |
| 13 | 73429-50G00 | SCREW, SCUFF | | 6 | |
| 14 | 76152-56B00-5ES | CUFF, SIDE SILL RR RH (BLACK) | | 1 | |
| 15 | 76153-56B00-5ES | CUFF, SIDE SILL RR LH (BLACK) | | 1 | |
| 16 | 73429-50G00 | SCREW, SCUFF | | 4 | |
| 1 <i>7</i> | 76171-56B01-5ES | TRIM, FR PILLAR UP RH (BLACK) | | 1 | JLX |
| 18 | 76181-56B01-5ES | TRIM, FR PILLAR UP LH (BLACK) | | 1 | JLX |
| 19 | 76281-60A30 | CLIP, TRIM | | 6 | JLX |
| 20 | 76191-56B00-5ES | TRIM, ROOF FR JOINT (BLACK) | | 1 | JLX |
| 21 | 76281-60A30 | CLIP, TRIM | | 5 | JLX |
| 22 | 76211-56B00-5ES | TRIM, ROOF BACK JOINT (BLACK) | | 1 | JLX |
| 23 | 76281-60A30 | CLIP, TRIM | | 4 | JLX |
| 24 | 76221-56B00-5ES | TRIM, RR QTR UPPER RH (BLACK) | | 1 | JLX |
| 25 | 76231-56B00-5ES | TRIM, RR QTR UPPER LH (BLACK) | | 1 | JLX · |
| 26 | 76281-60A30 | CLIP, TRIM | | 10 | JLX |
| 27 | 03141-05123 | SCREW, TRIM | | 4 | JLX |
| 28 | 76240-60A10-5ES | TRIM, FR DOOR OPENING (BLACK) | | 2 | L:3877>2362 |
| 29 | 76240-60A10-5ES | TRIM, RR DOOR OPENING (BLACK) | | 2 | L:3877>1719 |
| 30 | 76251-56B00-5ES | TRIM, RR QTR LWR FR RH (BLACK) | | 1 | |
| 31 | 76261-56B00-5ES | TRIM, RR QTR LWR FR LH (BLACK) | | 1 | |
| 32 | 03141-05123 | SCREW, TRIM | | 4 | |


FIG. 161

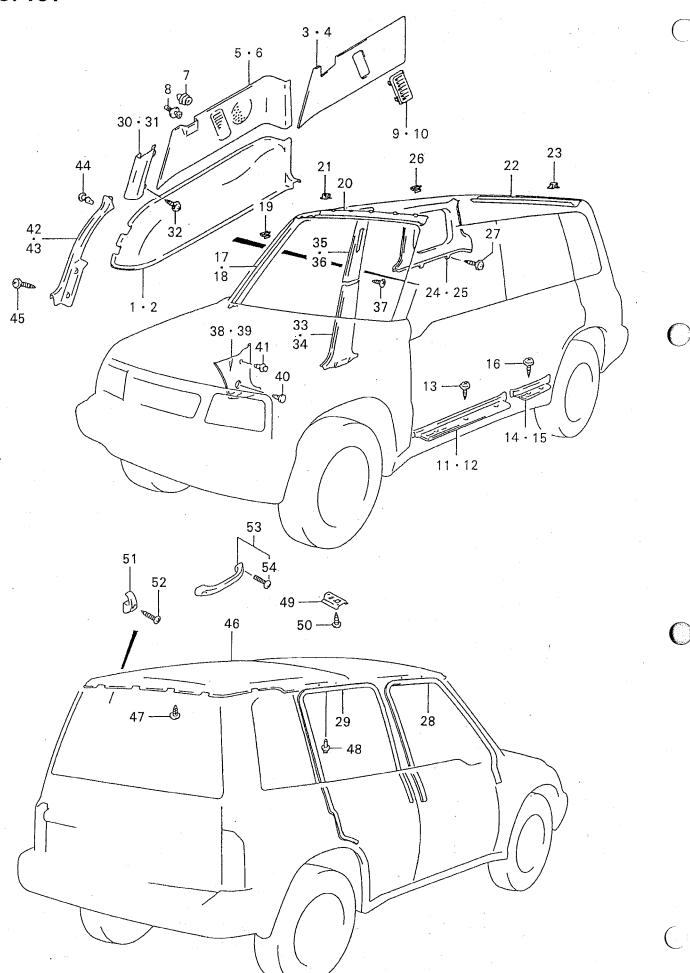

| REF. | PART Nº | | Q, TY | | | |
|------|-----------------|-----------------------------------|-------|-----|----------------|--|
| N.º | | DESCRIPTION | | ٧ | REMARKS | |
| | | | | | | |
| 33 | 76311-56B00-5ES | TRIM, CTR PILLAR LWR RH (BLACK) | | 1 | | |
| 34 | 76321-56B00-5ES | TRIM, CTR PILLAR LWR LH (BLACK) | | 1 | | |
| 35 | 76331-56B10-5ES | TRIM, CTR PILLAR UP RH (BLACK) | | 1 | | |
| 36 | 76341-56B10-5ES | TRIM, CTR PILLAR UP LH (BLACK) | | 1 | | |
| 37 | 03141-05123 | SCREW, TRIM | | 2 | | |
| 38 | 76351-56B00-5ES | TRIM, FR PILLAR LWR RH (BLACK) | | 1 | | |
| 39 | 76361-56B00-5ES | TRIM, FR PILLAR LWR LH (BLACK) | | 1 | | |
| 40 | 59934-85C00-5ES | CLIP, TRIM LOWER (BLACK) | | 2 | | |
| 41 | 09409-07318-5ES | CLIP, TRIM UPPER (BLACK) | | 2 | | |
| 42 | 76371-56B00-5ES | SCUFF, RR WHEEL HSG FR RH | | . 1 | | |
| | | (BLACK) | | | | |
| 43 | 76381-56B00-5ES | SCUFF, RR WHEEL HSG FR LH (BLACK) | | 1 | | |
| 44 | 09409-10304-5ES | CLIP, SCUFF (BLACK) | | 2 | | |
| 45 | 03141-05303 | SCREW, SCUFF | | 4 | | |
| 46-1 | 78110-56B10-6N | GHEADLINING ASSY, ROOF (GRAY) | | . 1 | JX | |
| 46-2 | 78110-56B00-6N | GHEADLINING ASSY, ROOF (GRAY) | | 1 | JLX | |
| 46-3 | 78110-56B30-6N | GHEADLINING ASSY, ROOF (GRAY) | | 1. | JLX:W/SUN ROOF | |
| 47-1 | 59811-85C00-5EH | CLIP, HEADLINING (GRAY) | | 8 | JX | |
| 47-2 | 59811-85C00-5EH | CLIP, HEADLINING (GRAY) | | 4 | JLX | |
| 47-3 | 59811-85C00-5EH | CLIP, HEADLINING (GRAY) | | 3 | JLX:W/SUN ROOF | |
| 48 | 09409-06313 | CLIP, HEADLINING CTR | | 1 | JLX:W/SUN ROOF | |
| 49 | 78121-61A00 | SPACER, ROOM LAMP | | 1 | | |
| 50 | 03241-05123 | SCREW, SPACER | | 1 | | |
| 51 | 84491-61A10-5ES | HOOK, COAT HANGER (BLACK) | | 1 | | |
| 52 | 03111-06253 | SCREW, HOOK | | 1 | | |
| 53 | 76400-61831-5ES | GRIP SET, ASSISTANT (BLACK) | | 3 | | |
| 54 | 09125-06041 | .SCREW, GRIP (6X20) | | 6 | | |

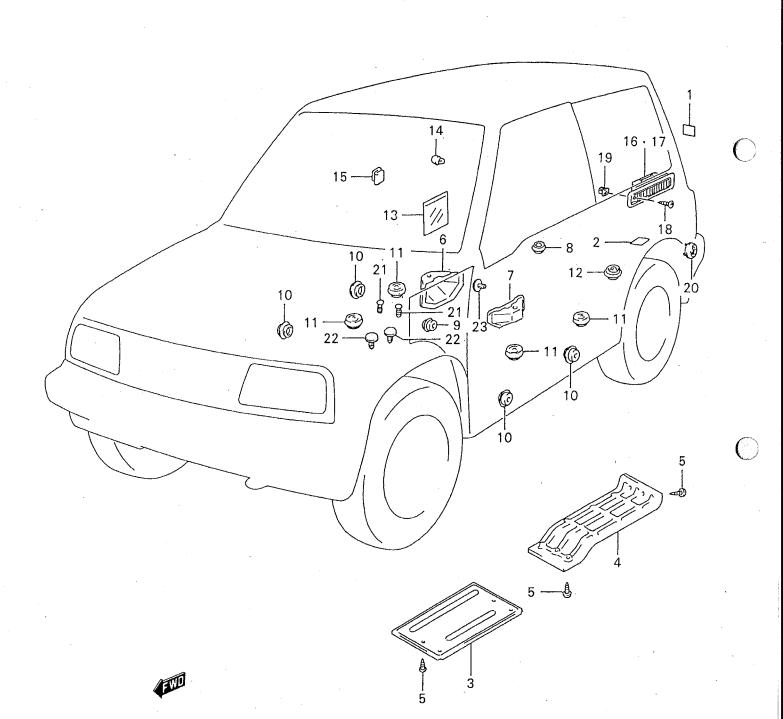


| REF. | | | Q, | TY | | | |
|------|-----|---------------------|------------------------------|----|----|-----------|--|
| | N.º | PART N° DESCRIPTION | DESCRIPTION | C | ٧ | REMARKS | |
| | | | | | | | |
| | 1 . | 72115-85C00 | SEAL, HOLE | 2 | 2 | | |
| | 2 | 72115-85C00 | SEAL, RR COIL SPRING BRACKET | 2 | 2 | | |
| | 3 | <i>75</i> 511-61A00 | PANEL, HEAT PROTECTOR CTR | 1 | 1 | | |
| | 4 | 75512-60A10 | PANEL, HEAT PROTECTOR RR | 1 | 1 | | |
| | 5 | 03141-06163 | SCREW, PROTECTOR | 8 | 8 | | |
| | 6 | 75611-60A01 | COVER, SEAT BRACKET RH | 1 | 1 | | |
| | 7 | 75711-60A01 | COVER, SEAT BRACKET LH | 1 | 1 | | |
| | 8 | 59961-85C00 | CAP, RR FLOOR DRAIN | 1 | 1 | | |
| | 9 | 09250-20002 | CAP, HOOD LOCK CABLE | 1 | 1 | | |
| | 10 | 09250-25007 | CAP, SILL SIDE INNER | 4 | 4 | | |
| ì | 11 | 09250-30010 | CAP, FLOOR | 4 | 4 | | |
| | 12 | 76411-60A00 | CAP, CTR PILLAR | 2 | - | JA,JX | |
| | 13 | 76481-61A00 | FILM, RR QTR WATER PROOF | - | 2 | | |
| | 14 | <i>77</i> 131-60A10 | CUSHION, FUEL LID | 2 | 2 | | |
| | 15 | 77132-60A00 | STOPPER, FUEL LID | 1 | 1 | | |
| | 16 | 77110-61A10 | AIR OUTLET ASSY, SIDE RH | - | 1 | | |
| | 17 | 77120-61A10 | AIR OUTLET ASSY, SIDE LH | - | 1. | | |
| | 18 | 03122-04163 | SCREW, OUTLET | - | 2 | | |
| | 19 | 09148-04021 | NUT, OUTLET | - | 2 | | |
| | 20 | 09250-16013 | CAP, SIDE BODY RR | 2 | 2 | | |
| | 21 | 09250-05011 | PLUG, FLOOR NO.1 | 2 | 2 | N/AIR BAG | |
| | 22 | 09250-08005 | PLUG, FLOOR NO.2 | 2 | 2 | N/AIR BAG | |
| | 23 | 09250-08005 | PLUG, PILLAR INNER | 3 | 3 | N/AIR BAG | |
| | | | | | | | |

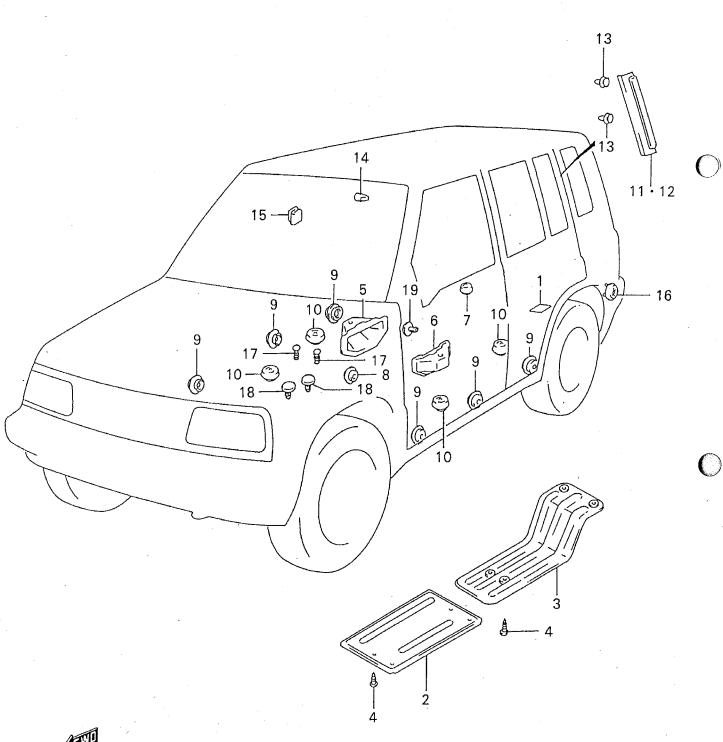

4300

| REF. | • | | Q, TY | | |
|------|-----------------|--------------------------------|-------|---|-----------|
| N.º | PART Nº | DESCRIPTION | C | ٧ | REMARKS |
| | | | | | |
| 1 | 72115-85C00 | SEAL, RR COIL SPRING BRACKET | | 2 | |
| 2 | 75511-61A00 | PANEL, HEAT PROTECTOR CTR | | 1 | |
| 3 | 75512-56B00 | PANEL, HEAT PROTECTOR RR | | 1 | |
| 4 | 03141-06163 | SCREW, PROTECTOR | | 8 | |
| 5 | 75611-60A01 | COVER, SEAT BRACKET RH | | 1 | |
| 6 | 75711-60A01 | COVER, SEAT BRACKET LH | | 1 | |
| 7 | 59961-85C00 | CAP, CTR FLOOR FR DRAIN | | 2 | |
| 8 | 09250-20002 | CAP, HOOD LOCK CABLE | | 1 | |
| 9 | 09250-25007 | CAP, SILL SIDE INNER | | 6 | |
| 10 | 09250-30010 | CAP, FLOOR | | 4 | |
| 11 | 77111-56B00-0CE | GARNISH, AIR OUTLET RH (BLACK) | | 1 | |
| 12 | 77121-56B00-0CE | GARNISH, AIR OUTLET LH (BLACK) | | 1 | |
| 13 | 09409-11304 | CLIP, GARNISH | | 4 | · |
| 14 | 77131-60A10 | CUSHION, FUEL LID | | 2 | |
| 15 | 77132-60A00 | STOPPER, FUEL LID | | 1 | |
| 16 | 09250-16013 | CAP, SIDE BODY RR | | 2 | |
| 17 | 09250-05011 | PLUG, FLOOR NO.1 | | 2 | N/AIR BAG |
| 18. | 09250-08005 | PLUG, FLOOR NO.2 | | 2 | N/AIR BAG |
| 19 | 09250-08005 | PLUG, PILLAR INNER | | 3 | N/AIR BAG |

FIG. 164

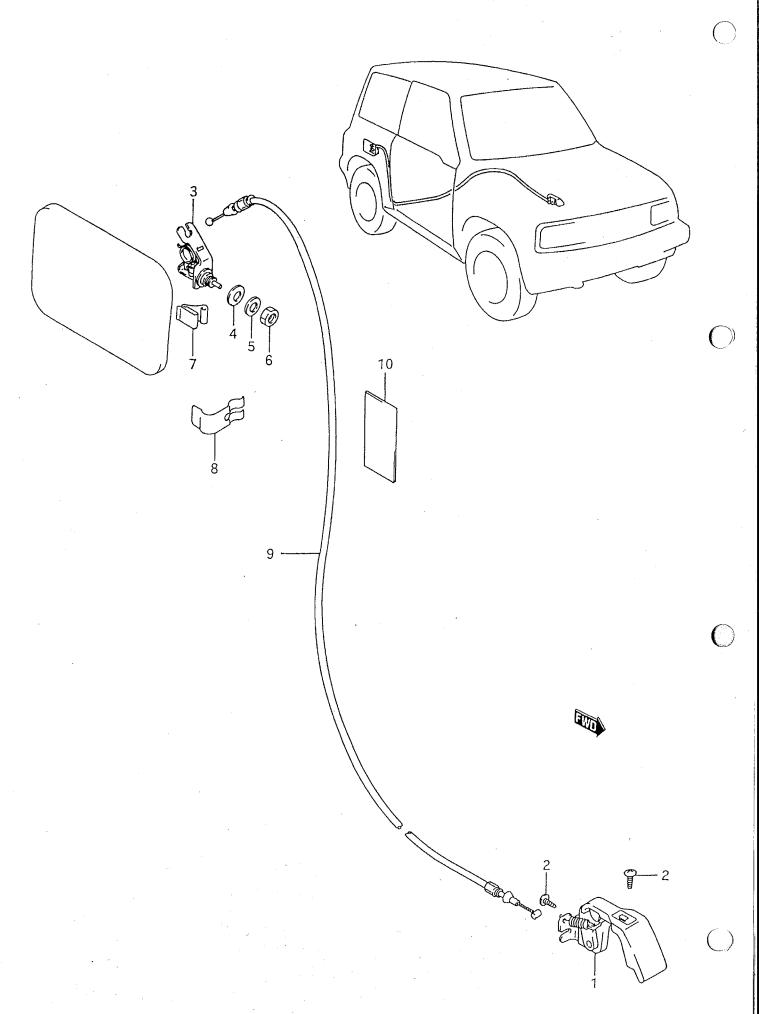

| REF. | PART Nº | | Q, TY | | |
|------|-------------|--------------------------|-------|---------|--|
| N.º | | DESCRIPTION | CV | REMARKS | |
| | | | | · | |
| 1 | 76510-60A00 | HANDLE ASSY, FUEL OPENER | 1 | | |
| 2 | 03241-06123 | SCREW, HANDLE | 2 | | |
| 3 | 76520-60A00 | OPENER ASSY, FUEL LID | 1 - | | |
| 4 | 09160-13011 | WASHER, OPENER | 1 | | |
| 5 | 08322-01103 | WASHER, OPENER | . 1 | | |
| 6 | 08310-00103 | NUT, OPENER | . 1 | | |
| 7 | 76531-60A20 | SPRING, FUEL LID | 1 | 3DR | |
| 8 | 77118-60B02 | SPRING, FUEL LID | 1 | 5DR | |
| 9-1 | 76550-85C60 | CABLE ASSY, FUEL OPENER | 1 | LHD | |
| 9-2 | 76550-60A00 | CABLE ASSY, FUEL OPENER | 1 | 3DR:RHD | |
| 9-3 | 76550-56B00 | CABLE ASSY, FUEL OPENER | 1 | 5DR:RHD | |
| 10-1 | 76561-60A00 | TAPE, CABLE | 6 | 3DR:LHD | |
| 10-2 | 76561-60A00 | TAPE, CABLE | · 1 | 3DR:RHD | |
| 10-3 | 76561-60A00 | TAPE, CABLE | 7 | 5DR:LHD | |
| 104 | 76561-60A00 | TAPE, CABLE | 2 | 5DR:RHD | |



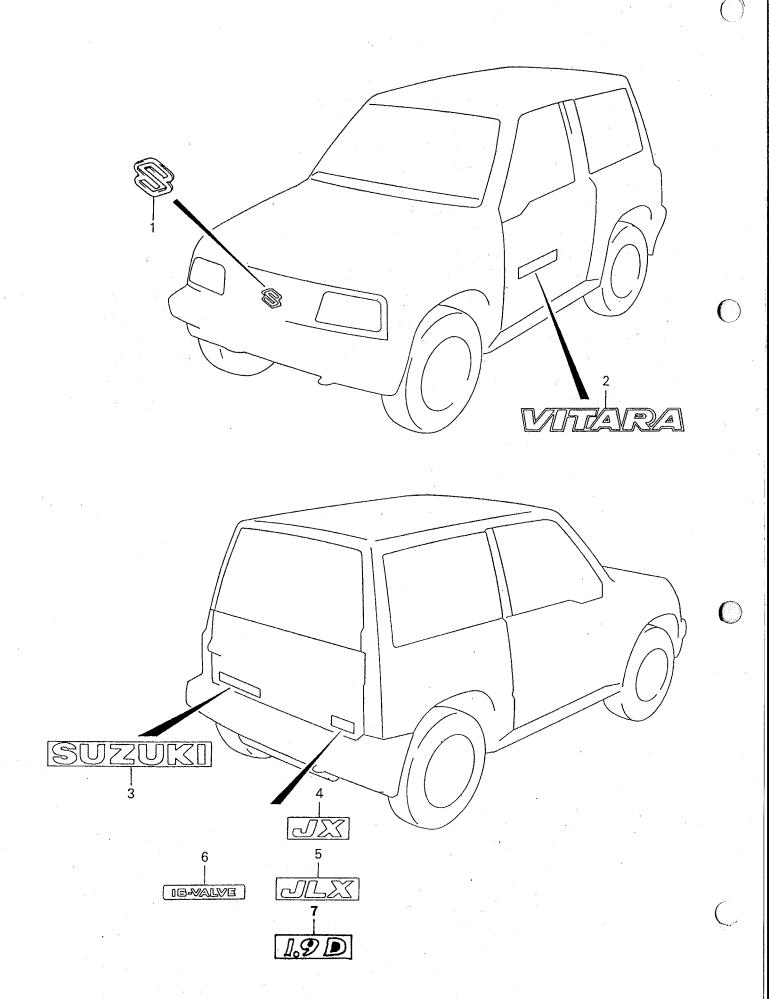


FIG. 165 (2-G-05) EMBLEM


| REF. | DADT NIO | | Q, TY | | |
|------|--------------------------|--------------------------------|-------|----|------------|
| N.º | PART Nº | DESCRIPTION | C | ٧ | REMARKS |
| | | | | | |
| 1 | 77811-60A00-0PG | EMBLEM, S MARK (CHROME) | 1 | 1 | |
| 2 | 77823-60A00-G78 | EMBLEM, FR DOOR VITARA | 2 | 2 | |
| | | (SILVER) | | | |
| 3 | 77831-85C00-31R | EMBLEM, RR GATE LOWER (SILVER) | 1 | - | |
| 4 | 77712-60A00-31R | EMBLEM, JX (SILVER) | 1 | -] | JX |
| 5 | 77713-85C00-31R | EMBLEM, JLX (SILVER) | 1 | 1 | JLX |
| 6 | 77861-60A00-G /79 | EMBLEM, 16-VALVE (SILVER) | 1 | 1 | 4 VALVE |
| 7 | 77831-86CA1 | EMBLEM, 1.9D | 1 | 1 | 1.9 DIESEL |

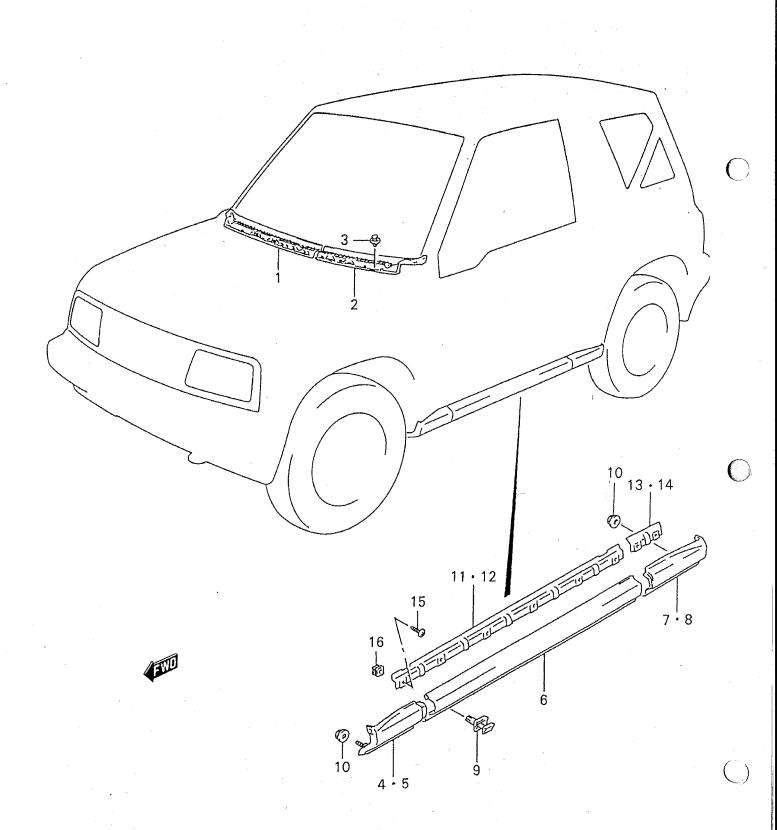


| REF. | | | Q, TY | | | |
|------|-----------------|------------------------------------|-------|---|---------|--|
| N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS | |
| | | | | | | |
| 7 | 77311-60A00-5PK | GARNISH, COWL CTR RH (BLACK) | 1 | | | |
| 2 | 77312-60A00-5PK | GARNISH, COWL CTR LH (BLACK) | 1 | | | |
| 3 | 09409-07308-5PK | CLIP, GARNISH (BLACK) | 9 | | | |
| 4 | 77531-60A10-5PK | PROTECTOR, SILL SIDE FR RH (BLACK) | 1 | | | |
| 5 | 77541-60A10-5PK | PROTECTOR, SILL SIDE FR LH (BLACK) | 1 | | | |
| 6 | 77536-60A10-5PK | PROTECTOR, SILL SIDE CTR (BLACK) | 2 | | | |
| 7 | 77532-60A10-5PK | PROTECTOR, SILL SIDE RR RH (BLACK) | 1 | | | |
| 8 | 77542-60A10-5PK | PROTECTOR, SILL SIDE RR LH (BLACK) | 1 | | | |
| 9 | 77537-60A10-5PK | CLIP, PROTECTOR (BLACK) | 8 | | | |
| 10 | 08316-10063 | NUT, PROTECTOR | 4 | | | |
| 11 | 77534-60A10 | HOLDER, PROTECTOR CTR RH | 1 | | | |
| 12 | 77544-60A10 | HOLDER, PROTECTOR CTR LH | 1 | | | |
| 13 | 77535-60A10 | HOLDER, PROTECTOR RR RH | 1 | | | |
| 14 | 77545-60A10 | HOLDER, PROTECTOR RR LH | 1 | | | |
| 15 | 03141-05123 | SCREW, HOLDER | .16 | | | |
| 16 | 59918-85C00 | NUT, HOLDER | 16 | | | |

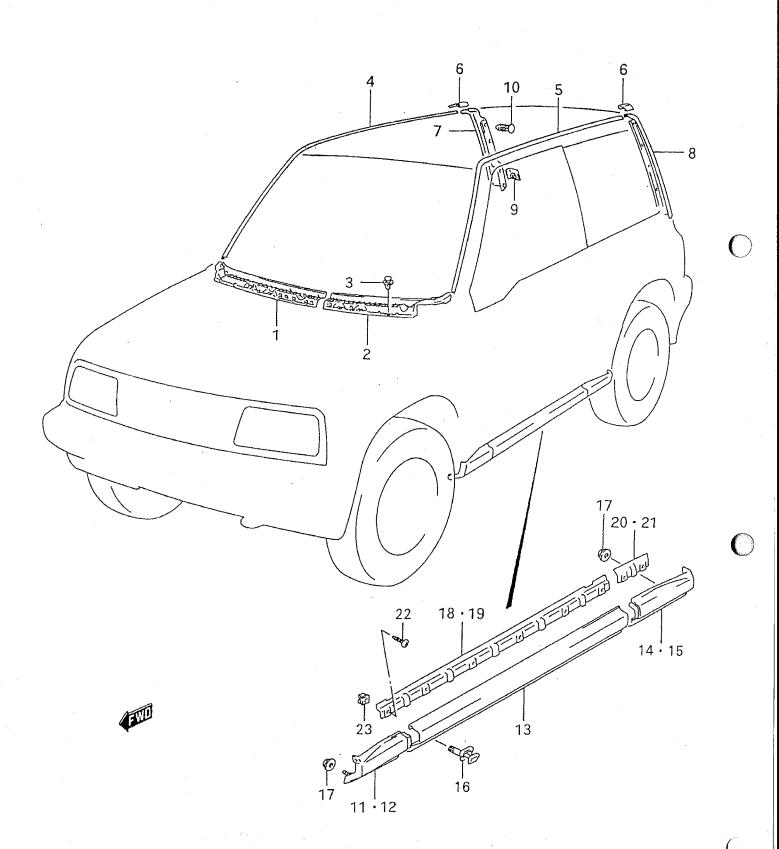


| REF. | PART Nº | | | TY . | |
|------|----------------------------------|------------------------------------|---|------|-----------------|
| N.º | | DESCRIPTION | С | ٧ | REMARKS |
| | · | | | | · |
| 1 | <i>77</i> 311-60A00-5PK | GARNISH, COWL CTR RH (BLACK) | | 1 | |
| 2 | 77312-60A00-5PK | GARNISH, COWL CTR LH (BLACK) | | 1 | |
| 3 | 09409-07308-5PK | CLIP, GARNISH (BLACK) | | 9 | |
| 4 | <i>775</i> 71-56B00-5PK | MOLDING, ROOF DRIP SIDE RH (BLACK) | | 1 | CUT AS REQUIRED |
| 5 | 77575-56B00-5PK | MOLDING, ROOF DRIP SIDE LH (BLACK) | | 1 | CUT AS REQUIRED |
| 6 | 77515-61A10-5PK | JOINT, MOLDING (BLACK) | | 2 | |
| 7 | 77512-61A01-5PK | GARNISH, RR PILLAR RH (BLACK) | | 1 | |
| 8 | <i>775</i> 22-61A01- <i>5</i> PK | GARNISH, RR PILLAR LH (BLACK) | | 1 | |
| 9 | 77517-61A00 | HOOK, GARNISH | | 8 | |
| 10 | 09409-10304-5ES | CLIP, GARNISH (BLACK) | | 6 | |
| 11 | 77531-60A10-5PK | PROTECTOR, SILL SIDE FR RH (BLACK) | | 1 | |
| 12 | 77541-60A10-5PK | PROTECTOR, SILL SIDE FR LH (BLACK) | | 1 | |
| 13 | 77536-60A10-5PK | PROTECTOR, SILL SIDE CTR (BLACK) | - | 2 | |
| 14 | 77532-60A10-5PK | PROTECTOR, SILL SIDE RR RH (BLACK) | | 1 | |
| 15 | 77542-60A10-5PK | PROTECTOR, SILL SIDE RR LH (BLACK) | | 1 | |
| 16 | 77537-60A10-5PK | CLIP, PROTECTOR (BLACK) | | 8 | |
| 17 | 08316-10063 | NUT, PROTECTOR | | 4 | |
| 18 | 77534-60A10 | HOLDER, PROTECTOR CTR RH | | 1 | |
| 19 | 77544-60A10 | HOLDER, PROTECTOR CTR LH | | 1 | |
| 20 | 77535-60A10 | HOLDER, PROTECTOR RR RH | | 1 | |
| 21 | 77545-60A10 | HOLDER, PROTECTOR RR LH | | 1 | |
| 22 | 03141-05123 | SCREW, HOLDER | | 16 | |
| 23 | 59918-85C00 | NUT, HOLDER | | 16 | |

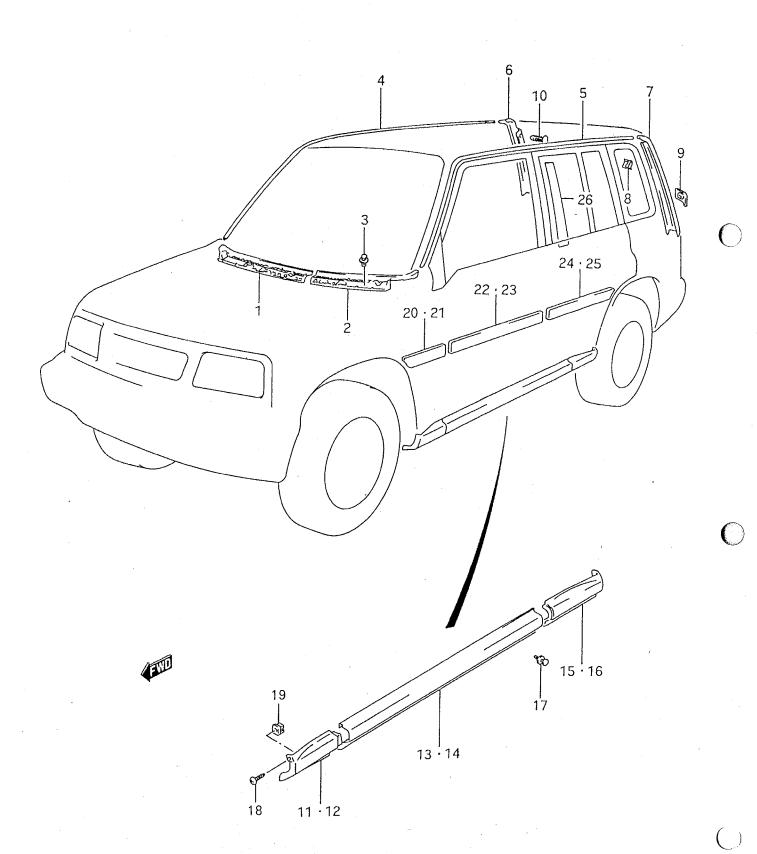

| REF. | PART Nº | | Q, TY | | |
|------------|---|-------------------------------------|-------|-----|---------|
| N.º | | DESCRIPTION | | ٧ | REMARKS |
| | | | | | |
| 1 | 77311-60A00-5PK | GARNISH, COWL CTR RH (BLACK) | | 1 | |
| 2 | 77312-60A00-5PK | GARNISH, COWL CTR LH (BLACK) | | 1 | |
| 3 | 09409-07308-5PK | CLIP, GARNISH (BLACK) | | 9 | |
| 4 | 77571-56B00-5PK | MOLDING, ROOF DRIP SIDE RH (BLACK) | | 1 | |
| . 5 | 77575-56B00-5PK | MOLDING, ROOF DRIP SIDE LH (BLACK) | | 1 | |
| 6 | <i>775</i> 1 _. 2- <i>56</i> B01 <i>-5</i> PK | GARNISH, BACK PILLAR UP RH (BLACK) | | 1 | |
| 7 | 77522-56B01-5PK | GARNISH, BACK PILLAR UP LH (BLACK) | | 1 | |
| 8 | 77513-56B00 | CLIP, GARNISH | | 2 | |
| 9 | 77517-61A00 | HOOK, GARNISH | | 8 | |
| 10 | 09409-10304-5ES | CLIP, GARNISH (BLACK) | | 6 | |
| 11 | 77531-56B00-5PK | PROTECTOR, SIDE SILL FR RH (BLACK) | | 1 | |
| 12 | 77541-56B00-5PK | PROTECTOR, SIDE SILL FR LH (BLACK) | | 1 | |
| 13 | 77536-56B00-5PK | PROTECTOR, SIDE SILL CTR RH (BLACK) | | 1 | |
| 14 | 77546-56B00-5PK | PROTECTOR, SIDE SILL CTR LH (BLACK) | | 1 | |
| 15 | 77532-56B01-5PK | PROTECTOR, SIDE SILL RR RH (BLACK) | | 1 | |
| 16 | 77542-56B01-5PK | PROTECTOR, SIDE SILL RR LH (BLACK) | | 1 | |
| 1 <i>7</i> | 09409-06319 | CLIP, PROTECTOR | | 12 | |
| 18 | 03141-05163 | SCREW, PROTECTOR | | 2 | |
| 19 | 09148-05018 | NUT, PROTECTOR | | 2 | |
| 20 | 77551-56B11-5PK | MOLDING, SIDE FR RH (BLACK) | | 1 | JLX |
| 21 | 77561-56B11-5PK | MOLDING, SIDE FR LH (BLACK) | | 1 | JLX |
| 22 | 77552-56B11-5PK | MOLDING, SIDE CTR RH (BLACK) | | 1 | JLX |
| 23 | 77562-56B11-5PK | MOLDING, SIDE CTR LH (BLACK) | | 1 | JLX |
| 24 | 77553-56B11-5PK | MOLDING, SIDE RR RH (BLACK) | | 1 | JLX |
| 25 | 77563-56B11-5PK | MOLDING, SIDE RR LH (BLACK) | | 1 - | JLX |
| 26 | 77173-56B00-0CE | TAPE, CTR PILLAR UPPER (BLACK) | | 2 | JLX |

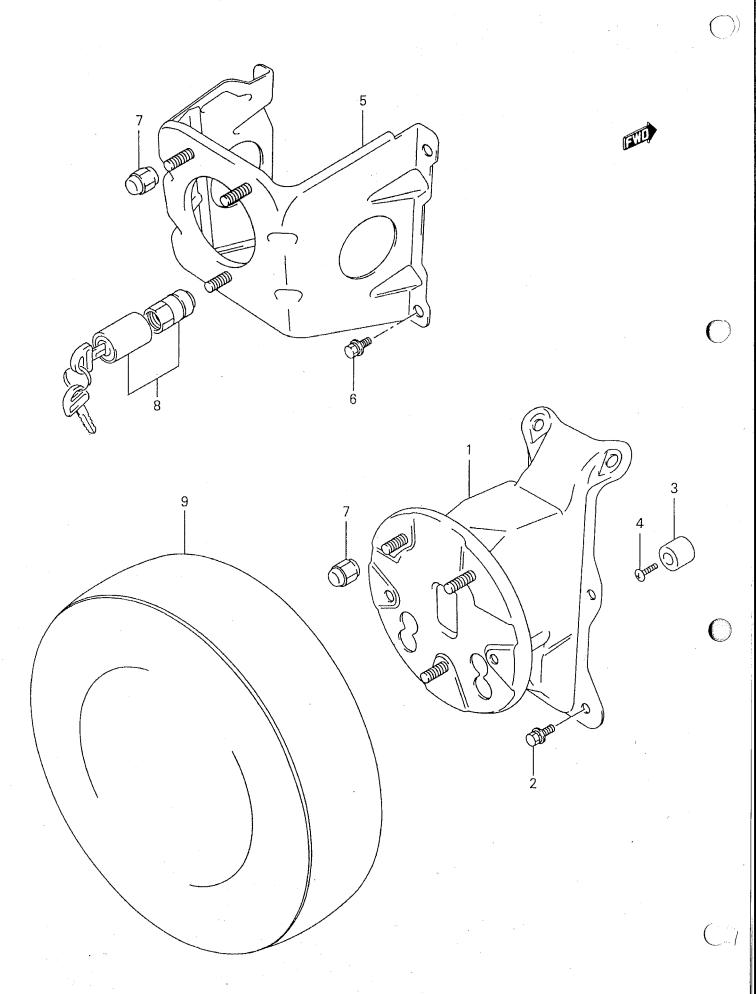


| REF. | PART Nº | Nº DESCRIPTION | Q, TY | |
|------|-----------------|--------------------------|-------|---------|
| N.º | | | CV | REMARKS |
| | | | | · |
| 1 | 72810-85C00 | CARRIER, SPARE TIRE | 1 - | |
| 2 | 01580-08203 | BOLT, CARRIER | 6 - | |
| 3 | 59951-85C00 | CUSHION, SPARE TIRE | 2 - | |
| 4 | 02112-06163 | SCREW, CUSHION | 2 - | |
| 5 | 83960-85C00 | CARRIER, SPARE TIRE | - 1 | |
| 6 | 01580-10253 | BOLT, CARRIER | - 4 | |
| 7 | 09159-12024 | NUT, SPARE TIRE | 2 2 | |
| 8 | 83900-60820 | KEY, SPARE TIRE NUT LOCK | . 1 1 | |
| 9 | 72820-85C00-2UN | COVER, SPARE TIRE | 1 1 | |

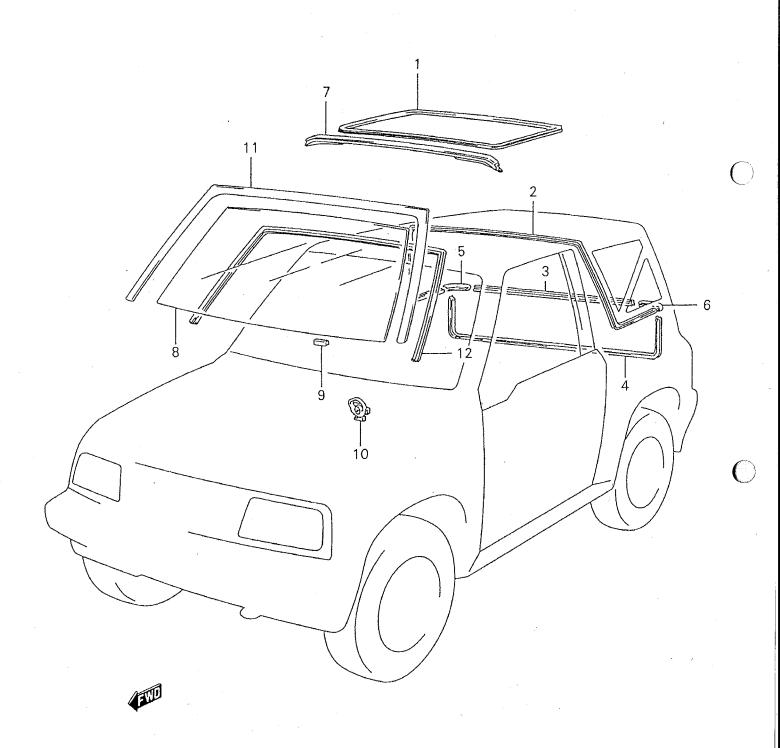


| REF. N.º | PART Nº | DESCRIPTION | Q, TY C V | REMARKS |
|-------------|------------------------------|-----------------------------|-----------|---------|
| | | | | |
| 1 | <i>7</i> 71 <i>5</i> 1-64A00 | WEATHERSTRIP, FR ROOF | 1 | |
| 2 | 77161-60A00 | WEATHERSTRIP, SIDE BODY | 1 | |
| 3 | 77162-60A00 | WEATHERSTRIP, RR GATE UPPER | 1 | |
| 4 | 77165-60A11 | WEATHERSTRIP, RR GATE | 1 | |
| 5 | 77166-60A01 | WEATHERSTRIP, RR GATE RH | 1 | |
| 6 | 77167-60A01 | WEATHERSTRIP, RR GATE LH | 1 | |
| 7 | 77170-60A00 | SEAL, FR ROOF | 1 | |
| 8 | 84515-85C00 | GLASS, WINDSHIELD (GREEN) | 1 | |
| 9 | 84617-61A10 | SPACER, WINDSHIELD GLASS | 1 | |
| 10 | 84618-85C00 | STOPPER, WINDSHIELD GLASS | 2 | |
| 11 | 84611-56B00-5PK | MOLDING, WINDSHIELD (BLACK) | 1 | |
| 12 | 84616-61A00-5PK | TRIM, WINDSHIELD (BLACK) | 1 | |


FIG. 171

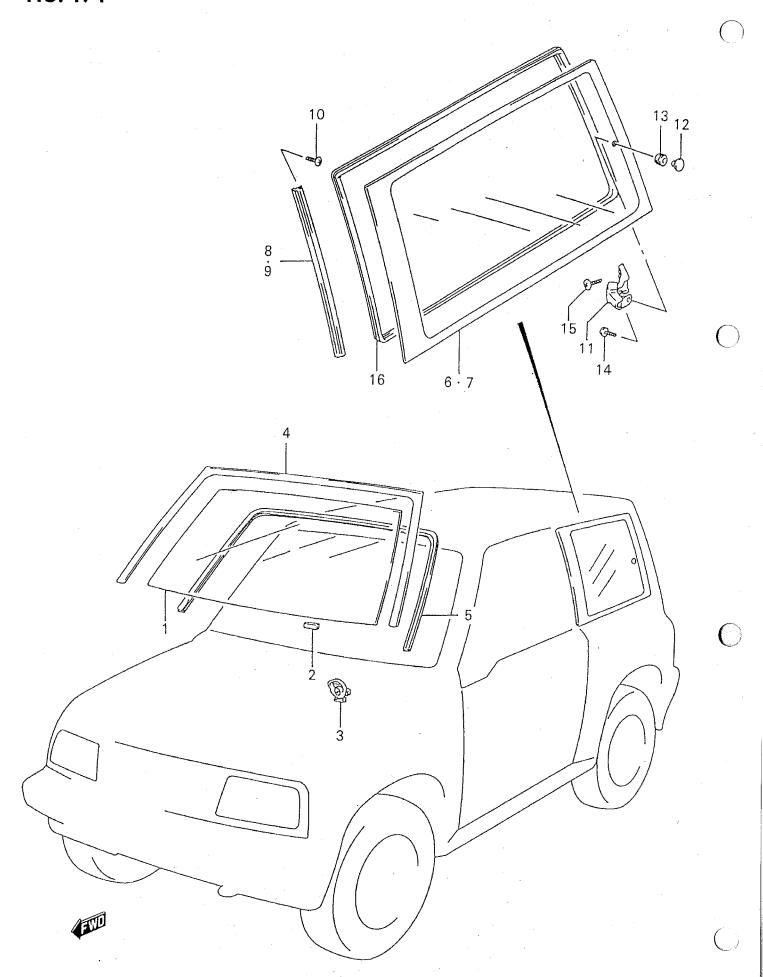

| REF. N.º | RFE | PART Nº | DESCRIPTION | Q, TY | | | |
|-------------|------|-----------------|----------------------------------|-------|---|---------|--|
| | | | | С | ٧ | REMARKS | |
| | | | | | | | |
| | 1 | 84515-85C00 | GLASS, WINDSHIELD (GREEN) | | 1 | | |
| | 2 | 84617-61A10 | SPACER, WINDSHIELD GLASS | | 1 | | |
| | 3 | 84618-85C00 | STOPPER, WINDSHIELD GLASS | | 2 | | |
| | 4 | 84611-56B00-5PK | MOLDING, WINDSHIELD (BLACK) | | 1 | | |
| | 5 | 84616-61A00-5PK | TRIM, WINDSHIELD (BLACK) | | 1 | | |
| | 6 | 84561-85C10 | GLASS, QTR WINDOW RH (GREEN) | | 1 | | |
| | 7 | 84566-85C10 | GLASS, QTR WINDOW LH (GREEN) | | 1 | | |
| | 8 | 81411-62A00 | PROTECTOR, QTR WDO HINGE RH | | 1 | | |
| | 9 | 81416-62A00 | PROTECTOR, QTR WDO HINGE LH | | 1 | | |
| | 10 | 02112-36123 | SCREW, HINGE BODY | | 4 | | |
| Y | 11 | 81430-61A00 | LOCK, QTR WINDOW GLASS | | 2 | | |
| | 12 | 81451-80102 | COVER, QTR WINDOW GLASS OUTER | | 2 | | |
| | 13 | 69275-78200 | PAD, COVER | | 2 | | |
| | 14 | 02142-05103 | SCREW, LOCK COVER | | 2 | | |
| | 15 | 09139-06094 | SCREW, LOCK BODY (6X16) | | 4 | | |
| | 16-1 | 84671-61A00-5PK | WEATHERSTRIP, QTR WINDOW (BLACK) | | 2 | JX | |
| | 16-2 | 84671-62A00-5PK | WEATHERSTRIP, QTR WINDOW (BLACK) | | 2 | JLX | |
| | | | | | | | |

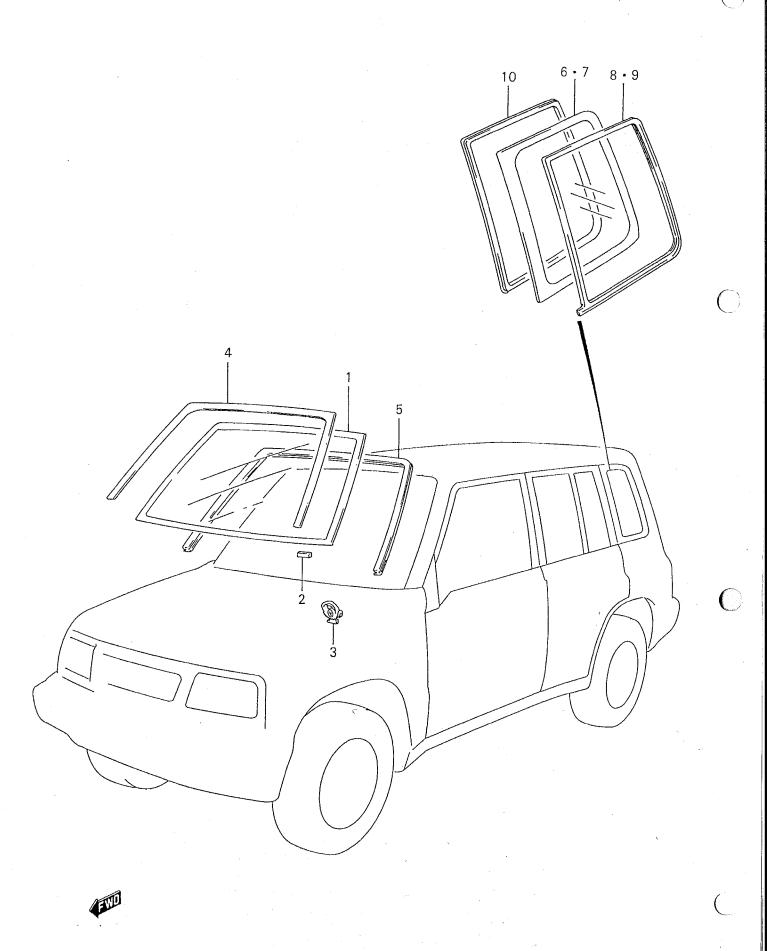


| REF. N.º | PART Nº | DESCRIPTION | Q, TY C V | REMARKS | |
|-------------|-----------------|--------------------------------|--------------|---------|--|
| 1 | 0.4515.05000 | OLACC MANDOLHELD (OPERA) | 1 | | |
| I | 84515-85C00 | GLASS, WINDSHIELD (GREEN) | . 1 | | |
| 2 | 84617-61A10 | SPACER, WINDSHIELD GLASS | 1 | | |
| 3 | 84618-85C00 | STOPPER, WINDSHIELD GLASS | 2 | | |
| 4 | 84611-56B00-5PK | MOLDING, WINDSHIELD (BLACK) | 1 | | |
| 5 | 84616-61A00-5PK | TRIM, WINDSHIELD (BLACK) | 1 | | |
| 6 | 84561-86C00 | GLASS, QTR WINDOW RH (GREEN) | 1 | | |
| 7 | 84566-86C00 | GLASS, QTR WINDOW LH (GREEN) | 1 | | |
| 8 | 84691-56B00-5PK | MOLDING, QTR WINDOW RH (BLACK) | 1 | | |
| 9 | 84692-56B00-5PK | MOLDING, QTR WINDOW LH (BLACK) | 1 | | |
| 10 | 84695-56B00-5PK | TRIM, QTR WINDOW OPENING | 2 | JX | |
| | | (BLACK) | | | |

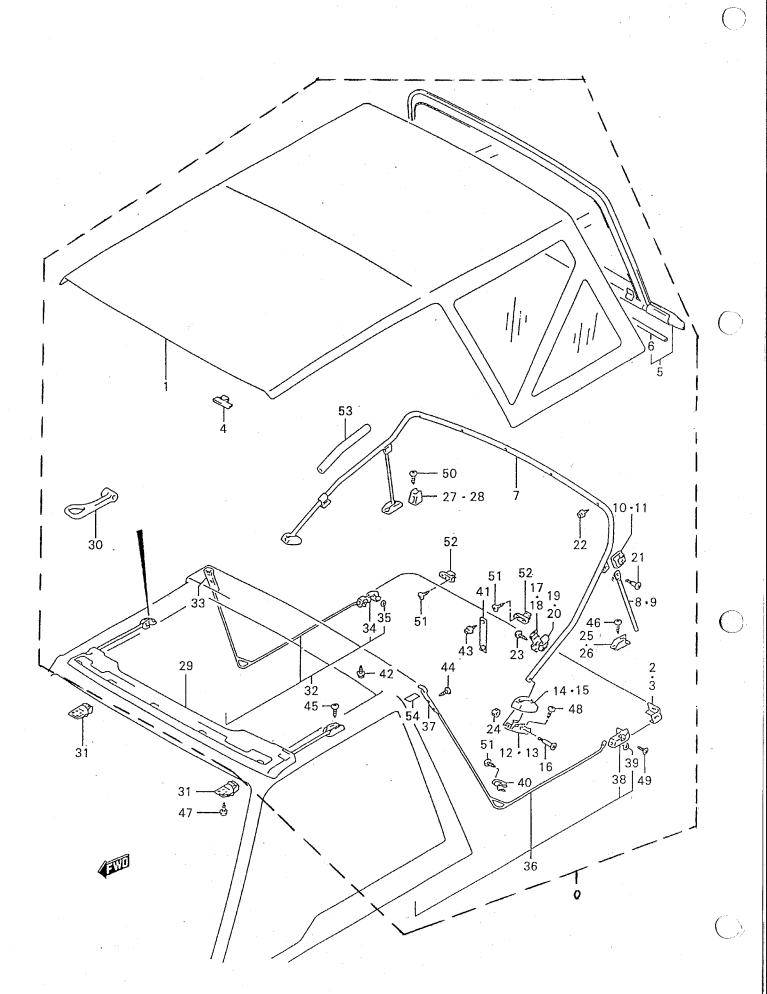


| REF. | PART Nº | DESCRIPTION | Q, TY | | |
|-------|-----------------|-----------------------------|-------|---------|--|
| N.º | | | C V | REMARKS | |
| 0 | 00000A01215 | WHITE CANV. ROOF KIT | .1 | WHITE | |
| 0 | 00000A01216 | BLACK CANV. ROOF KIT | 1 | BLACK | |
| 1 - 1 | 78310-60A52-PRB | TOP ASSY, DECK (BLACK) | . 1 | | |
| 1-2 | 78310-60A52-PRW | OP ASSY, DECK (WHITE) | 1 | | |
| 2 | 78381-60A00 | .HOOK, CORNER RH | 1 | | |
| 3 | 78382-60A00 | .HOOK, CORNER LH | 1 | | |
| 4 | 78389-60A00 | .HOOK, FRONT | 5 | | |
| 5-1 | 78320-60A52-PRB | WINDOW, CANVAS RR (BLACK) | 1 | | |
| 5-2 | 78320-60A52-PRW | WINDOW, CANVAS RR (WHITE) | 1 | | |
| 6 | 78399-60A00 | .PIPE, RR WINDOW | 1 | | |
| 7 | 78410-60A11 | FRAME, TOPBOW | 1 | | |
| 8 | 78421-60A02 | STAY, TOPBOW RH | 1 | | |
| 9 | 78422-60A02 | STAY, TOPBOW LH | 1 | | |
| 10 | 78441-60A00 | COVER, TOPBOW STAY RH | 1 | | |
| 11 | 78451-60A00 | COVER, TOPBOW STAY LH | 1 | | |
| 12 | 78442-60A02 | BRACKET, TOPBOW RH | 1 | | |
| 13 | 78452-60A02 | BRACKET, TOPBOW LH | 1 | | |
| 14 | 78443-60A01 | COVER, TOPBOW BRACKET RH | 1 | | |
| 15 | 78453-60A01 | COVER, TOPBOW BRACKET LH | 1 | , | |
| 16 | 78444-60A01 | SCREW, TOPBOW | 2 | | |
| 17 | 78446-60A00 | HOLDER, TOPBOW STAY NO.1 RH | 1. | | |
| 18 | 78456-60A00 | HOLDER, TOPBOW STAY NO.1 LH | 1 . | | |
| 19 | 78447-60A00 | HOLDER, TOPBOW STAY NO.2 RH | , 1 | | |
| 20 | 78457-60A00 | HOLDER, TOPBOW STAY NO.2 LH | 1 | | |
| 21 | 09139-05037 | SCREW, TOPBOW STAY | 2 | | |
| 22 | 09410-00074 | MALE, TOPBOW | 5 | | |
| 23 | 03511-05123 | SCREW, STAY HOLDER | 2 | | |
| 24 | 08310-00063 | NUT, TOPBOW | 2 | | |
| 25 | 78461-60A00 | STOPPER, TOPBOW STAY RH | 1 | | |
| 26 | 78462-60A00 | STOPPER, TOPBOW STAY LH | 1 | | |
| 27 | 78471-60A00 | STOPPER, TOPBOW RH | 1 | • | |
| 28 | 78472-60A00 | STOPPER, TOPBOW LH | 1 | | |
| | | - | | | |

FIG. 173

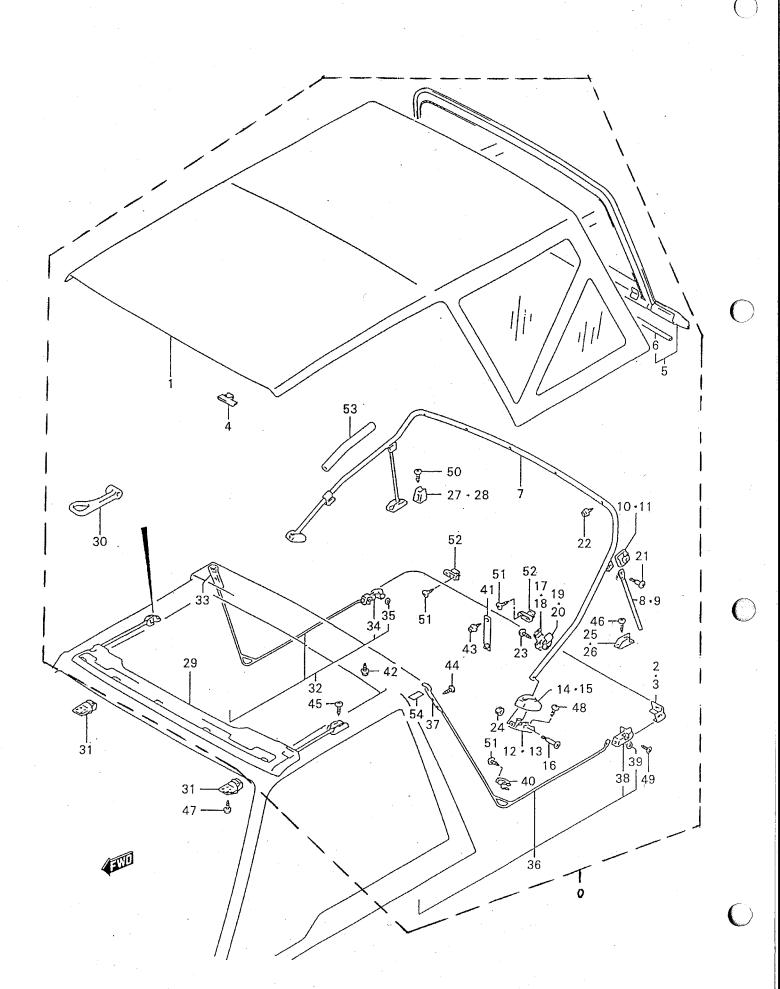


| REF. N.º | PART N° | DESCRIPTION | Q, TY C V | REMARKS |
|-------------|-------------|---------------------------------|--------------|-----------------|
| 29 | 78510-60A02 | FRAME, TOPBOW FR | 1 | |
| 30 | 78518-60A01 | .ROD, TENSION | 2 | |
| 31 | 78520-60A00 | LOCK, FRONT FRAME | 2 | |
| 32 | 78530-60A00 | FRAME, TOPBOW SIDE RH | 1 | |
| 33 | 78532-60A00 | .BRKT, FRAME UPPER RH | 1 | |
| 34 | 78533-60A00 | .BRKT, REAR RH | 1 | |
| 35 | 78534-60A00 | .NUT, SIDE FRAME | 2 | |
| 36 | 78540-60A00 | FRAME, TOPBOW SIDE LH | 1 | |
| 3 <i>7</i> | 78542-60A00 | .BRKT, FRAME UPPER LH | 1. | |
| 38 | 78543-60A00 | .BRKT, REAR LH | 1 | |
| 39 | 78534-60A00 | .NUT, SIDE FRAME | 2 | |
| 40 | 78554-60A00 | HOLDER, CANVAS | 2 | |
| 41 | 78553A60A00 | BAND, TOPBOW | 1 | |
| 42 | 09410-00074 | MALE, CANVAS | 2 | |
| 43 | 09410-00075 | MALE, REAR GATE | 1 | |
| 44 | 02112-06123 | SCREW, TOPBOW SIDE UPPER | 4 | |
| 45 | 02112-06163 | SCREW, TOPBOW FR FRAME | 4 | |
| 46 | 02112-06203 | SCREW, STOPPER | 4 | |
| 47 | 02142-06163 | SCREW, LOCK | 4 | × |
| 48 | 09139-06094 | SCREW, BRACKET (6X16) | 4 | |
| 49 | 09139-06094 | SCREW, TOPBOW SIDE LOWER | 2 | |
| | | (6X16) | | |
| 50 | 03141-05203 | SCREW, TOPBOW STOPPER | 4 | |
| 51 | 03541-05123 | SCREW, HOLDER | 10 | |
| 52 | 78555-60A00 | HOLDER, REAR WINDOW CTR | 3 | ~ |
| 53 | 78432-60A00 | PROTECTOR, TOP BOW SIDE | 2 | ř |
| 54 | 84761-50X50 | PROTECTOR, CTR PILLAR (140X190) | 2 | CUT AS REQUIRED |

FIG. 174

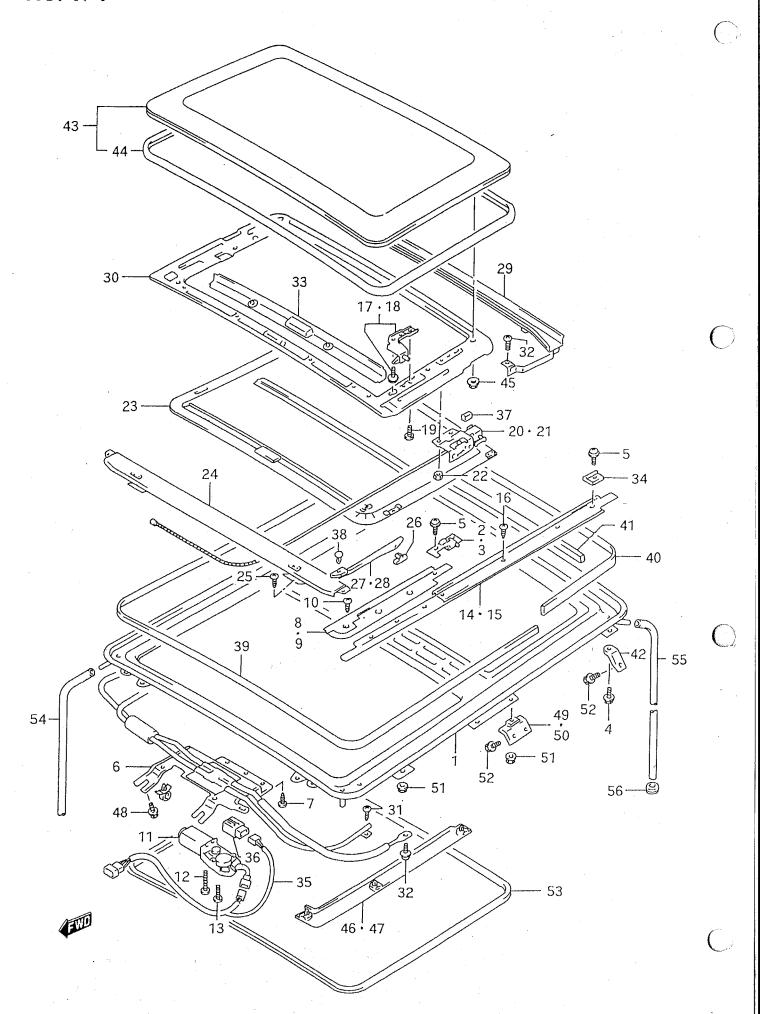


| j | REF. | | | Q, | TY | |
|------|------|----------------|-----------------------------|-------|-----|---------|
| | N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS |
| | 1 | 78711-56B00 | FRAME, SLIDING ROOF | | 1 | |
| | 2 | 78712-56B00 | PLATE, SET RH | | 1 | |
| | 3 | 78762-56B00 | PLATE, SET LH | | 1 | |
| | 4 | 01550-06123 | SCREW | | 2 | |
| | 5 | 03212-04123 | SCREW | | 6 | |
| | 6 | 78713-56B00 | BRACKET, MOTOR | | 1 | |
| | 7 | 03112-04083 | SCREW | | 3 | |
| | 8 | 78714-56B00 | COVER, GUIDE RAIL RH | | 1 | |
| | 9 | 78764-56B00 | COVER, GUIDE RAIL LH | | 1 | |
| | 10 | 03222-04083 | SCREW | | 6 | |
| | 11 | 78718-56B00 | MOTOR, SLIDING ROOF | | 1 | |
| e* (| 12 | 02112-05453 | SCREW | | 1 | |
| | 13 | 02112-05203 | SCREW | | 2 | |
| | 14 | 78715-56B00 | RAIL, SLIDING GUIDE RH | | 1 | |
| | 15 | 78765-56B00 | RAIL, SLIDING GUIDE LH | | . 1 | |
| | 16 | 03112-04083 | SCREW | | 4 | |
| | 17 | 78716-56B00 | GUIDE, FRONT RH | | 1 | |
| | 18 | 78766-56B00 | GUIDE, FRONT LH | | 1 | |
| | 19 | 02112-05123 | SCREW | | 4 | |
| | 20 | 78717-56B00 | GUIDE, REAR RH | | 1 | |
| | 21 | 78767-56B00 | GUIDE, REAR LH | | 1 | |
| | 22 | 08316-10063 | NUT | | 4 | |
| | 23 | 78719-56B00-6N | GSHADE, SLIDING ROOF (GRAY) | | 1 | |
| | 24 | 78721-56B00 | DEFLECTOR, SLIDING ROOF | | 1 | |
| | 25 | 03242-04083 | SCREW | | 4 | |
| | 26 | 78722-56B00 | CONNECTOR, LINK | | 2 | |
| | 27 | 78723-56B00 | LINK, DEFLECTOR RH | | 1 | |
| | 28 | 78773-56B00 | LINK, DEFLECTOR LH | | 1 | |
| | 29 | 78725-56B00 | RAIL, DRIP | | 1 | |
| | 30 | 78726-56B00 | PANEL, FRONT LOWER | | 1 | |
| | 31 | 03141-04083 | SCREW | | 2 | |
| | 32 | 03211-04083 | SCREW | | 4 | |

FIG. 174

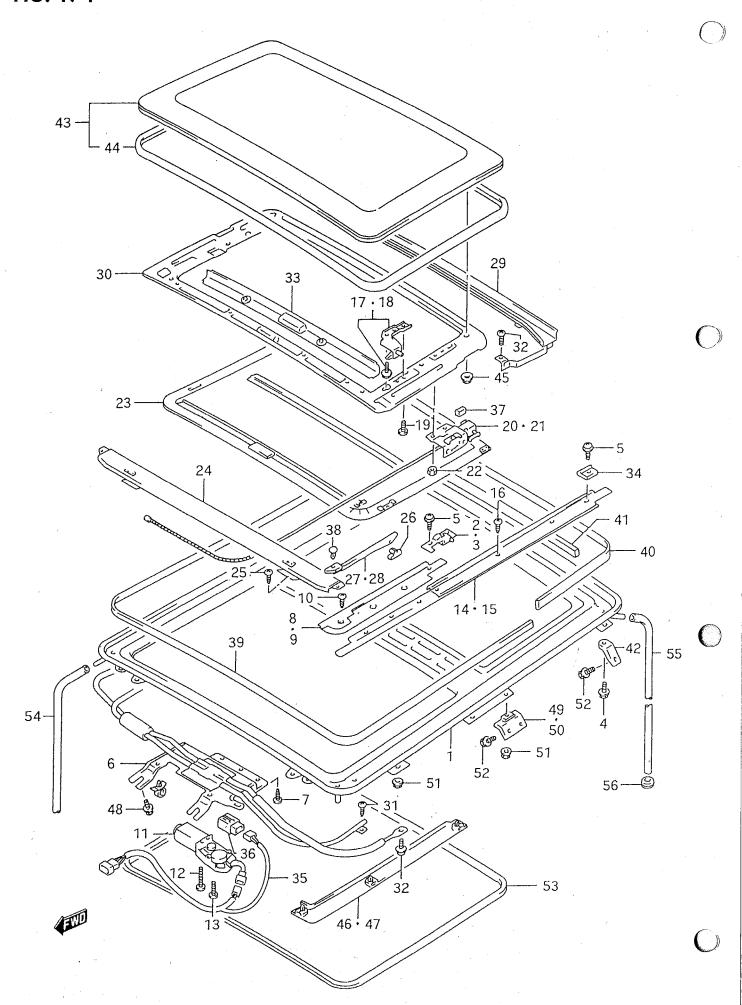

| | REF. | | | Q, | TY | |
|---|-----------|----------------|-----------------------------------|----|----|--------------|
| | N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS |
| | | | | | | |
| | 33 | 78727-56B00 | COVER, FRONT LOWER PANEL | | 1 | |
| | 34 | 78728-56B00 | STOPPER, GLASS SLIDING | | 2 | |
| | 35 | 78729-56B00 | HARNESS, SLIDING ROOF | | 1 | |
| | 36 | 78731-56B00 | RELAY, SLIDING ROOF | | 1, | |
| | 37 | 78732-56B00 | STOPPER, SUNSHADE | | 2 | |
| | 38 | 78733-56B00 | BUSH, GUIDE | | 2 | |
| | 39 | 78734-56B00 | SEAL, FRONT NO.1 | | 1 | |
| | 40 | 78736-56B00 | SEAL, REAR NO.2 | | 1 | |
| | 41 | 78736-56B00 | SEAL, REAR NO.1 | | 1 | |
| | 42 | 78738-56B00 | BRACKET, SLIDING ROOF MOUNTING | | 2 | |
|) | 43 | 78740-56B00 | GLASS, SLIDING ROOF | | 1 | |
| _ | 44 | 78742-56B00 | .WEATHERSTRIP, SLIDING ROOF | | 1 | |
| | 45 | 78743-56B00 | NUT, GLASS | | 6 | |
| | 46 | 78791-56B00 | COVER, DECORATION RH | | 1 | |
| | 47 | 78792-56B00 | COVER, DECORATION LH | | 1 | |
| | 48 | 09115-06001 | BOLT | | 2 | |
| | 49 | 78811-56B00 | BRACKET, SLIDING ROOF MOUNTING RH | | 1 | |
| | 50 | 78861-56B00 | BRACKET, SLIDING ROOF MOUNTING | | 1 | |
| | 51 | 09159-06076 | LH NUT | | 4 | |
| | 51 52 | 01550-06103 | | | 4 | |
| | | | BOLT | | 6 | |
| | 53 5.4 | 78820-56B00-6N | GTRIM, SLIDING ROOF OPEN (GRAY) | | 1 | 1 1000 1 405 |
| | 54 | 78832-56B00 | HOSE, FRONT DRAIN | | 2 | L:1800>1425 |
| | 55 57 | 78832-56B00 | HOSE, REAR DRAIN | | 2 | |
| | 56 | 09308-13001 | GROMMET | | 2 | |

FIG. 175

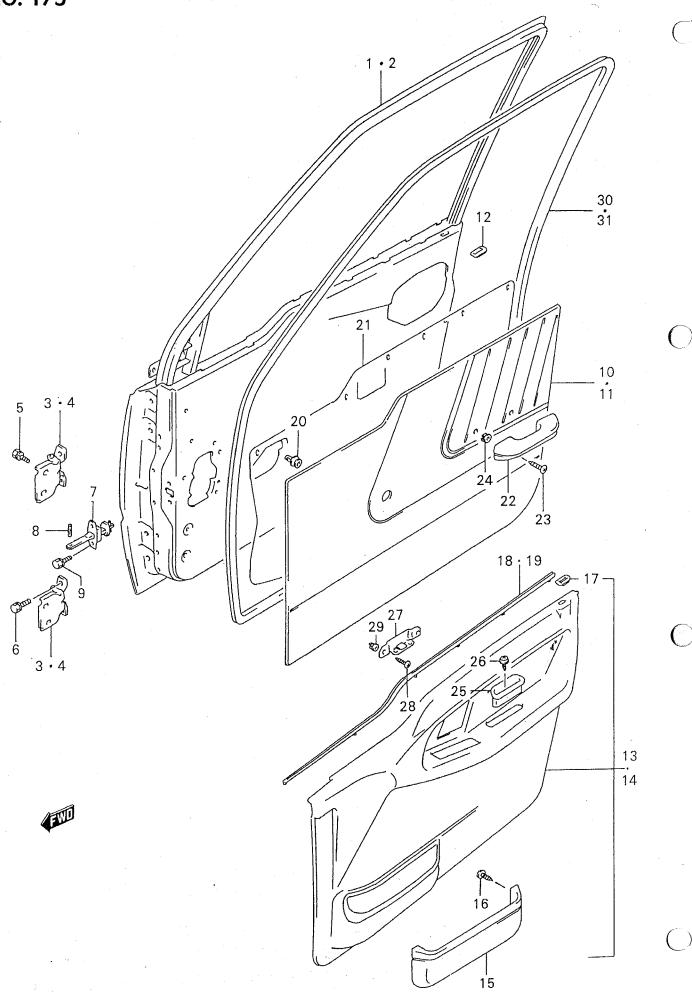

| | REF. | DA DT. N.O. | | Q, | TY | |
|---|------------|--------------------------|--------------------------------|----|----|-----------------------|
| | N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS |
| | 1 | 68001-66A10 | PANEL ASSY, FRONT DOOR RH | 1 | 1 | |
| | 2 | 68002-66A10 | PANEL ASSY, FRONT DOOR LH | 1 | 1 | |
| | 3 | 69310-85C00 | HINGE, DOOR NO.1 | 2 | 2 | UPPER RH,LOWER |
| | . U | 07010 00000 | TIII VOL, DOOK IVO. I | | 2 | LH |
| | 4 | 69340-85C00 | HINGE, DOOR NO.2 | 2 | 2 | UPPER LH,LOWER RH |
| | 5 | 09118-08156 | BOLT, PILLAR (8X25) | 8 | 8 | |
| | 6 | 01 <i>5</i> 70-08203 | BOLT, DOOR | 8 | 8 | |
| | 7 | 81810-56B00 | STOP, DOOR OPEN | 2 | 2 | |
| | 8 | 81831-70B00 | PIN, STOP BODY | 2 | 2 | |
| 1 | 9 | 01580-06163 | BOLT, STOP | 4 | 4 | |
| | 10 | 83710-60A10-5FE | TRIM, DOOR RH (BLACK) | 1 | 1 | JX, JA |
| | 11 | 83730-60A10-5FE | TRIM, DOOR LH (BLACK) | 1 | 1 | JX, JA |
| | 12 | 83795-60A00-5ES | CAP, LOCK KNOB (BLACK) | 2 | 2 | JA, JX |
| | 13-1 | 83701-85C20 | TRIM, DOOR RH (BLACK) | 1 | 1 | JLX:N/POWER |
| | | | | | | WINDOW |
| | 13-2 | 83701-68A10-5FE | TRIM, DOOR RH (BLACK) | 1 | 1 | JLX:W/POWER WINDOW |
| | 14-1 | 83702-85C20 | TRIM, DOOR LH (BLACK) | 1 | 1 | JLX:N/POWER WINDOW |
| | 14-2 | 83702-68A10-5FE | TRIM, DOOR LH (BLACK) | 1 | 1 | JLX:W/POWER WINDOW |
| | 15 | 83722-61A00-5ES | .POCKET, TRIM (BLACK) | 2 | 2 | JLX:N/POWER WINDOW |
| , | 16 | 03141-04123 | .SCREW, POCKET | 10 | 10 | JLX:N/POWER WINDOW |
| | 1 <i>7</i> | 83723-61A00-5ES | .CAP, LOCK KNOB (BLACK) | 2 | 2 | JLX |
| | 18 | 83721-61A00 | .WEATHERSTRIP, INNER RH | 1 | 1 | JLX |
| | 19 | 83741-61A00 | .WEATHERSTRIP, INNER LH | 1 | 1 | JLX |
| | 20-1 | 09409-08320 | CLIP, TRIM | 30 | 30 | JA, JX |
| | 20-2 | 09409-08320 | CLIP, TRIM | 18 | 18 | JLX |
| | 21 | 83911-60X50 | COVER, DOOR SEALING (600X1200) | 2 | 2 | CUT AS REQUIRED |
| | 22-1 | 86311-58300- <i>5</i> ES | ARMREST, DOOR (BLACK) | 2 | - | JA |
| | 22-2 | 84450-82000-5ES | ARMREST, DOOR (BLACK) | 2 | 2 | JX |
| | 23 | 03241-06253 | SCREW, ARMREST | 4 | 4 | JA, JX |
| | 24 | 09148-06007 | NUT, ARMREST | 4 | 4 | JA, JX |
| | | | | | | |


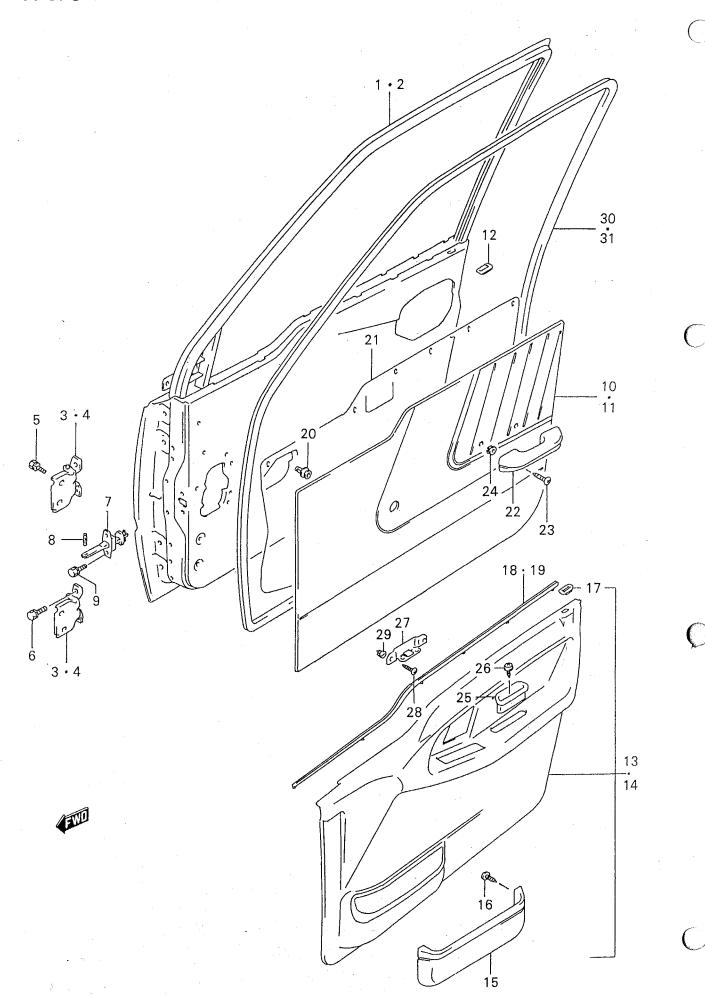



FIG. 175 (2-H-05) 3DR FR DR PANEL

| REF. | | | Q, TY | | |
|------|-----------------|-----------------------------|-------|---|---------|
| N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS |
| | | | | | |
| 25 | 84481-68A00-5ES | CASE, PULL HANDLE (BLACK) | 2 | 2 | JLX |
| 26 | 03141-04123 | SCREW, CASE | 2 | 2 | JLX |
| 27 | 84482-68A00 | BRACKET, PULL HANDLE | 2 | 2 | JLX |
| 28 | 03241-06163 | SCREW, BRACKET | 4 | 4 | JLX |
| 29 | 09148-06007 | NUT, BRACKET | 4 | 4 | JLX |
| 30 | 84641-65A01 | WEATHERSTRIP, DR OPENING RH | 1 | 1 | |
| 31 | 84651-65A01 | WEATHERSTRIP, DR OPENING LH | 1 | 1 | |
| | | | | | |

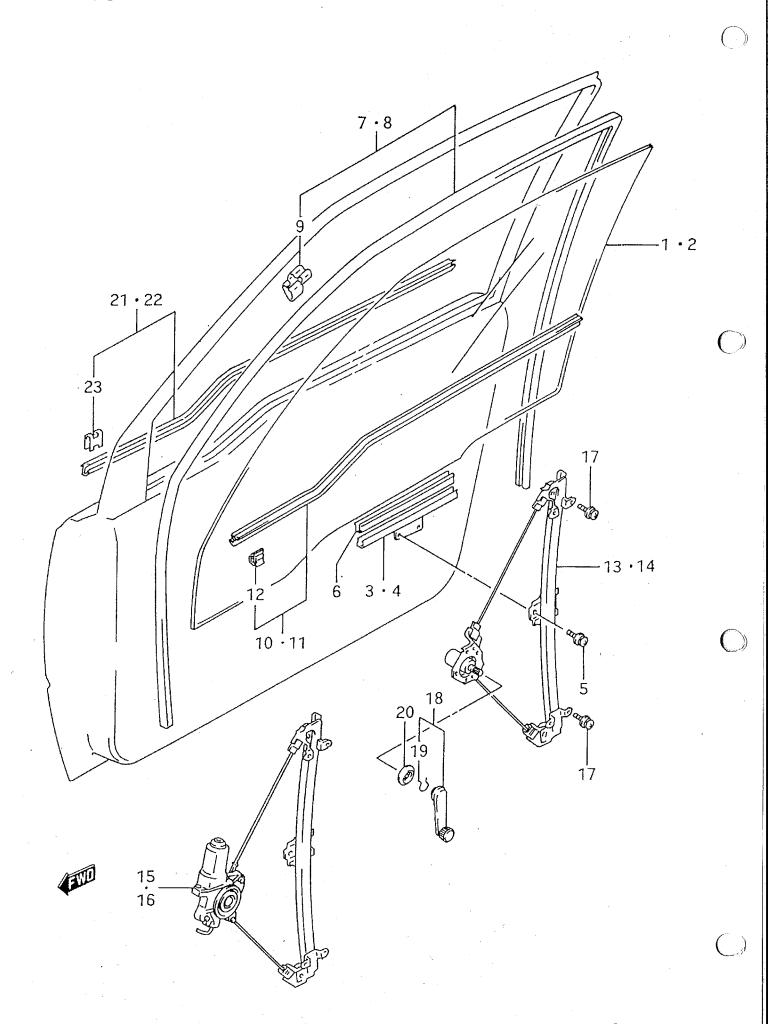


| 4 | REF. | | | Q, | TY | |
|-------|------|--------------------------|----------------------------|-----|-----|---------------|
| | N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS |
| | 1 | 84531-85C00 | GLASS, WINDOW RH (GREEN) | 1 | 1 | |
| | 2 | 84536-85C00 | GLASS, WINDOW LH (GREEN) | 1 | 1 | |
| | 3 | 83610-85C00 | CHANNEL, GLASS BOTTOM RH | 1 | 1 | |
| | 4 | 83620-85C00 | CHANNEL, GLASS BOTTOM LH | 1 | . 1 | |
| | 5 | 02112-76123 | SCREW, BOTTOM | 4 | 4 | |
| | 6 | 83691-60A00 | RUBBER, BOTTOM CHANNEL | 2 | 2 | |
| | 7 | 83660-60A00 | RUN, DOOR GLASS RH | 1 | 1 | |
| | 8 | 83680-60A00 | RUN, DOOR GLASS LH | . 1 | 1 | |
| | 9 | 83662-60A00 | .GUIDE, GLASS | 2 | 2 | |
| | 10 | 83850-60A00 | WEATHERSTRIP, INNER RH | 1 | 1 | JA, JX |
| | 11 | 83860-60A00 | WEATHERSTRIP, INNER LH | 1 | 1 | JA, JX |
| | 12 | 83852-60A00 | .CLIP, WEATHERSTRIP | 14 | 14 | JA, JX |
| | 13 | 83410-60A00 | REGULATOR ASSY, RH | 1 | 1 | JA, JX |
| | | | | | | JLX: N/POWER |
| | | | | | | WINDOW |
| | 14 | 83440-60A00 | REGULATOR ASSY, LH | 1 | 1 | JA, JX |
| | | | | | | JLX: N/POWER |
| | | | | | | WINDOW |
| | 15 | 83401-62A00 | REGULATOR ASSY, RH | 1 | 1 | JLX: W/POWER |
| | | | | | | WINDOW |
| | 16 | 83402-62A00 | REGULATOR ASSY, LH | 1 | 1 | J LX: W/POWER |
| | | • | | | | WINDOW |
| | 17 | 02112-76123 | SCREW, REGULATOR | 14 | 14 | |
| | 18 | 82960-82001 <i>-5</i> ES | HANDLE, REGULATOR (BLACK) | 2 | 2 | JA, JX |
| | | | | | | JLX: N/POWER |
| } | | | | | | WINDOW |
| | 19 | 78463-78000 | .SNAP, HANDLE | 2 | 2 | JA, JX |
| | | | | | | JLX:N/POWER |
| | | | | | | WINDOW |
| | 20 | 82972-82101 <i>-5</i> ES | ESCUTCHEON, HANDLE (BLACK) | 2 | 2 | JA, JX |
| | | | | | | JLX: N/POWER |
| | | | | | | WINDOW |
| | 21 | 83810-65A00 | WEATHERSTRIP, OUT RH | 1 | 1 | |
| | 22 | 83820-65A00 | WEATHERSTRIP, OUT LH | 1 | 1 | |
| | 23 | 83812-60A00 | .CLIP, WEATHERSTRIP | 14 | 14 | |
| | | | • | | | |

FIG. 177

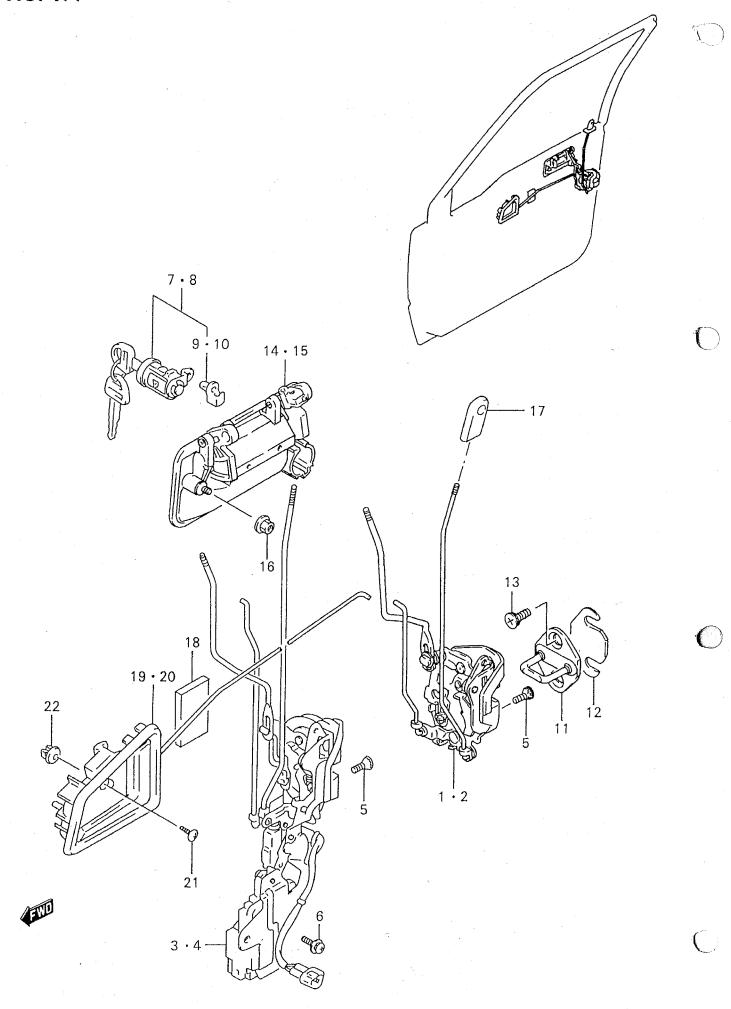


| REF. | | | Q, | TY | |
|------|-----------------|------------------------|----|----|--------------------|
| N.º | PART Nº | DESCRIPTION | | ٧ | REMARKS |
| | | | | | |
| 18 | 2201-65A00 | LATCH ASSY, DOOR RH | .1 | 1 | JA, JX |
| | | | | | JLX: N/POWER |
| | | | | | DOOR LOCK |
| 2 | 82202-65A00 | LATCH ASSY, DOOR LH | 1 | 1 | JA, JX |
| | | | | | JLX: N/POWER |
| _ | | | _ | _ | DOOR LOCK |
| . 3 | 82201-66A00 | LATCH ASSY, DOOR RH | 1 | 1. | JLX: W/POWER |
| 4 | 00000 //400 | LATCH ACCV DOOD III | , | , | DOOR LOCK |
| 4 | 82202-66A00 | LATCH ASSY, DOOR LH | I | 1 | JLX: W/POWER |
| _ | 00100 5/1/0 | CCDEVA/ LATCH | , | , | DOOR LOCK |
| 5 | 02122-56163 | SCREW, LATCH | 6 | 6 | 11.1/ 1.1/ DOLLIED |
| 6 | 09138-06026 | SCREW, LATCH (6X16) | 2 | 2 | JLX: W/POWER |
| 7 | 00000 (0001 | CVIINIDED CET DOOD DII | 7 | 1 | DOOR LOCK |
| 7 | 82200-60831 | CYLINDER SET, DOOR RH | 1 | 1 | |
| 8 | 82200-60841 | CYLINDER SET, DOOR LH | 1 |] | |
| 9 | 82277-60A00 | .HOLDER, RH | 1 | 1 | |
| 10 | 82287-60A00 | .HOLDER, LH | | 1. | |
| 11 | 82610-60A01 | STRIKER, DOOR LATCH | 2 | 2 | |
| 12 | 78199-78000 | SPACER, STRIKER | AR | | |
| 13 | 09137-08006 | SCREW, STRIKER (8X18) | 4 | 4 | |
| 14 | 82810-85C00-799 | HANDLE, DOOR OUT RH | 1 | 1 | JA, JX, JLX |
| 15 | 82820-85C00-799 | HANDLE, DOOR OUT LH | 1 | 1 | JA, JX, JLX |
| 16 | 08316-20063 | NUT, HANDLE | 4 | 4 | |

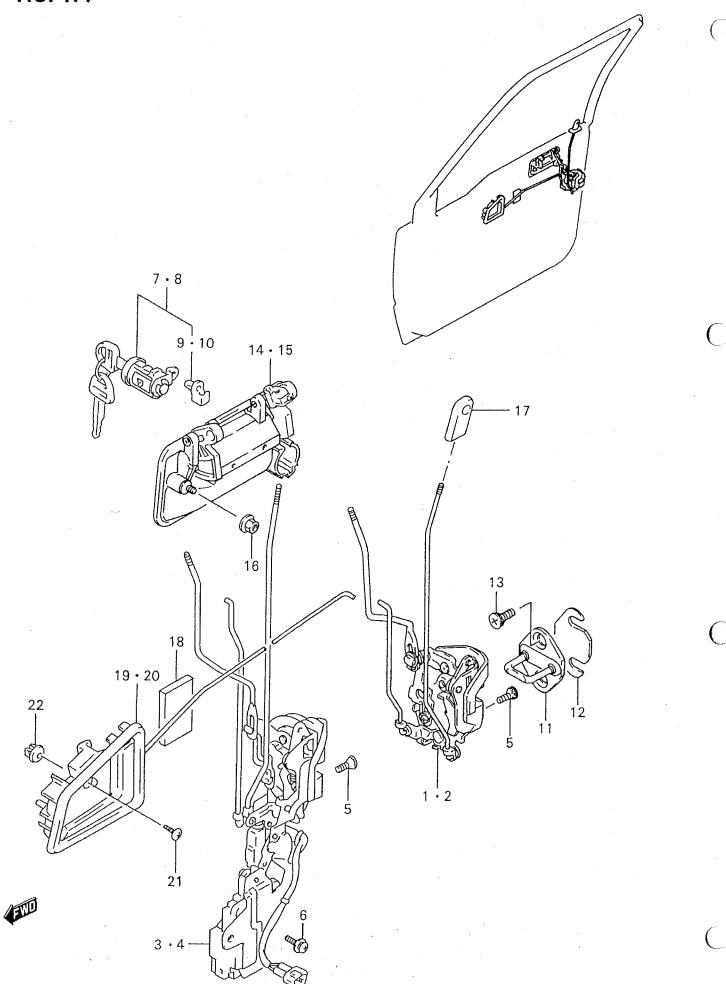


| REF. | REE | PART Nº | DESCRIPTION | Q, TY | | | |
|------|------------|-----------------|--------------------------------|-------|---|---------|--|
| | N.º | | | С | ٧ | REMARKS | |
| | | | | | | | |
| | 1 <i>7</i> | 82973-60A01-5PK | KNOB, INSIDE LOCK (BLACK) | 2 | 2 | | |
| | 18 | 77591-75000 | PAD, INSIDE HANDLE | 4 | 4 | | |
| | 19 | 83110-85C00-5ES | HANDLE, DOOR INSIDE RH (BLACK) | 1 | 1 | | |
| | 20 | 83130-85C00-5ES | HANDLE, DOOR INSIDE LH (BLACK) | 1 | 1 | | |
| | 21 | 03121-05163 | SCREW, HANDLE | 2 | 2 | | |
| | 22 | 09148-06007 | NUT, HANDLE | 2 | 2 | | |
| | | | | | | | |

FIG. 178

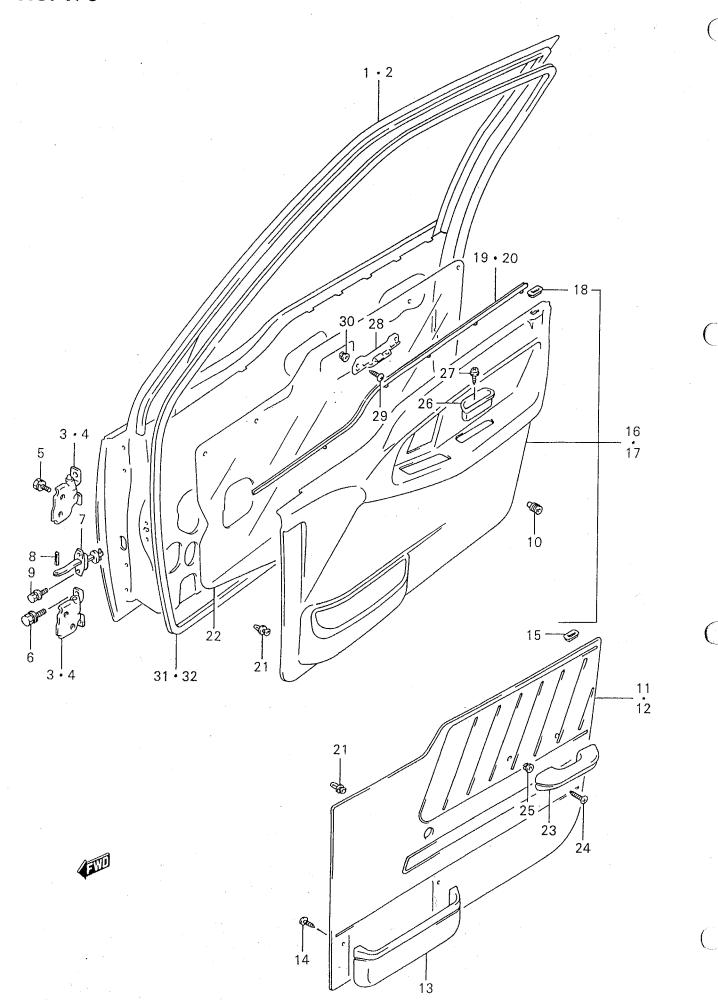


| REF. | | | Q, | TY | |
|------------|-----------------|--------------------------------|----|----|-----------------|
| N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS |
| | | | | | |
| 1 | 68001-57B10 | PANEL ASSY, FRONT DOOR RH | | 1 | |
| 2 | 68002-57B10 | PANEL ASSY, FRONT DOOR LH | | 1 | |
| 3 | 69310-85C00 | HINGE, DOOR NO.1 | | 2 | UPPER RH AND |
| | | | | | LOWER LH |
| 4 | 69340-85C00 | HINGE, DOOR NO.2 | | 2 | UPPER LH AND |
| | | | | | LOWER RH |
| 5 | 09118-08156 | BOLT, PILLAR (8X25) | | 8 | |
| 6 | 01570-08203 | BOLT, DOOR | | 8 | |
| 7 | 81810-56B00 | STOP, DOOR OPEN | | 2 | |
| 8 | 81831-70B00 | PIN, STOP BODY | | 2 | |
| 9 | 01580-06163 | BOLT, STOP | | 4 | |
| 10 | 82711-56B00 | STOPPER, DOOR | | 2 | |
| 11 | 83701-56B10-5FE | TRIM, DOOR RH (BLACK) | | 1 | JX |
| 12 | 83702-56B10-5FE | TRIM, DOOR LH (BLACK) | | 1 | JX |
| 13 | 83722-61A00-5ES | .POCKET, TRIM (BLACK) | | 2 | JX |
| 14 | 03141-04123 | .SCREW, POCKET | | 10 | JX |
| 15 | 83795-60A00-5ES | CAP, LOCK KNOB (BLACK) | | 2 | JX |
| 16 | 83701-77E10-5FE | TRIM, DOOR RH (BLACK) | | 1 | JLX |
| 1 <i>7</i> | 83702-77E10-5FE | TRIM, DOOR LH (BLACK) | | 1 | JLX |
| 18 | 83723-61A00-5ES | .CAP, LOCK KNOB (BLACK) | | 2 | JLX |
| 19 | 83719-57B00 | .WEATHERSTRIP, INNER RH | | 1 | JLX |
| 20 | 83739-57B00 | .WEATHERSTRIP, INNER LH | | 1 | JLX |
| 21 -1 | 09409-08320 | CLIP, TRIM | | 26 | JX |
| 21 -2 | 09409-08320 | CLIP, TRIM | | 16 | JLX |
| 22 | 83911-60X50 | COVER, DOOR SEALING (600X1200) | | 2 | CUT AS REQUIRED |
| 23 | 84450-82000-5ES | ARMREST, DOOR (BLACK) | | 2 | JX , |
| 24 | 03241-06253 | SCREW, ARMREST | | 4 | JX * |
| 25 | 09148-06007 | NUT, ARMREST | | 4 | JX |
| 26 | 84481-68A00-5ES | CASE, PULL HANDLE (BLACK) | | 2 | JLX |
| 27 | 03141-04123 | SCREW, CASE | | 2 | JLX |
| 28 | 84482-77E00 | BRACKET, HANDLE | | 2 | JLX |
| 29 | 03241-06163 | SCREW, BRACKET | | 4 | JLX |
| 30 | 09148-06007 | NUT, BRACKET | | 4 | JLX |
| 31 | 84641-56B00 | WEATHERSTRIP, DR OPENING RH | | 1 | |
| 32 | 84651-56B00 | WEATHERSTRIP, DR OPENING LH | | 1 | |

FIG. 179

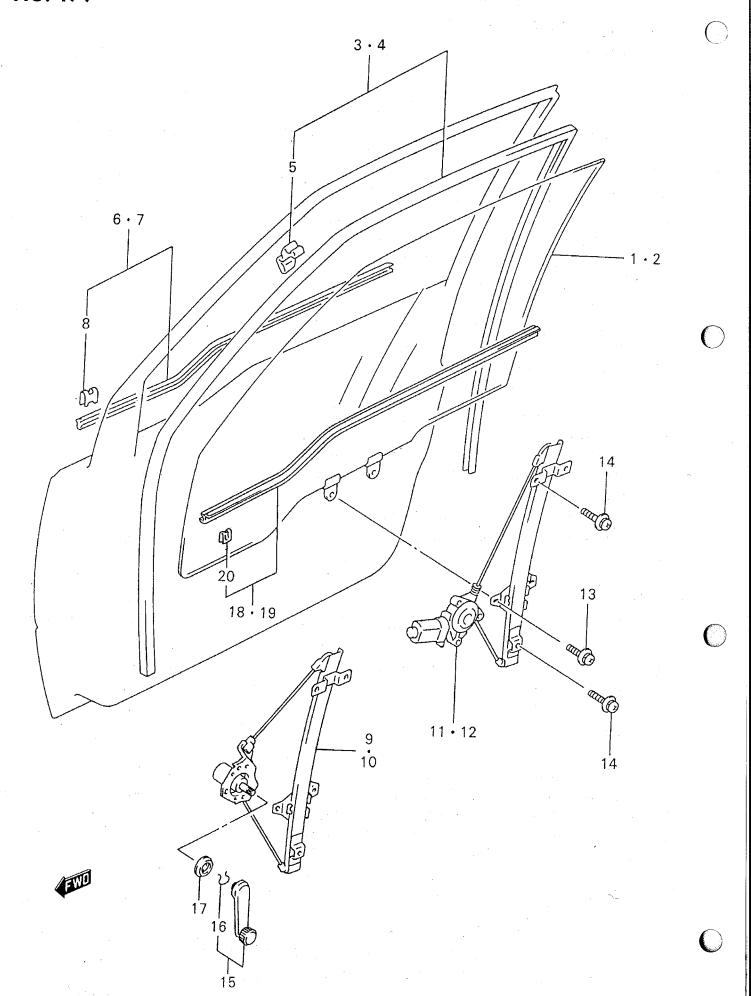


| | REF. | | | G | ì, TY ¹ | | |
|----|------------|-----------------|----------------------------|---|--------------------|---------|--|
| | N.º | PART Nº | DESCRIPTION | C | ٧ | REMARKS | |
| | 1 | 84531-86C00 | GLASS, WINDOW RH (GREEN) | | 1 | | |
| | 2 | 84536-86C00 | GLASS, WINDOW LH (GREEN) | | 1 | | |
| | 3 | 83660-56B00 | RUN, DOOR GLASS RH | | 1 | | |
| | 4 | 83680-56B00 | RUN, DOOR GLASS LH | | 1 | | |
| | 5 | 83662-60A00 | .GUIDE, GLASS | | 2 | | |
| | 6 | 83810-56B00 | WEATHERSTRIP, OUTER RH | | ·] | | |
| | 7 | 83820-56B00 | WEATHERSTRIP, OUTER LH | | 1 | | |
| | 8 | 83812-60A00 | .CLIP, WEATHERSTRIP | | 14 | | |
| | 9 | 83410-56B00 | REGULATOR ASSY, RH | | 1 | JX | |
| | 10 | 83440-56B00 | REGULATOR ASSY, LH | | 1 | JX | |
| ٠, | 11 | 83401-57B00 | REGULATOR ASSY, RH | | 1 | JLX | |
| | 12 | 83402-57B00 | REGULATOR ASSY, LH | | 1 | JLX | |
| | 13 | 02112-76123 | SCREW, GLASS BOTTOM | | 4 | | |
| | 14 | 02112-76123 | SCREW, REGULATOR | | 14 | | |
| | 15 | 82960-82001-5ES | HANDLE, REGULATOR (BLACK) | | 2 | JX | |
| | 16 | 78463-78000 | .SNAP, HANDLE | | 2 | JX | |
| | 1 <i>7</i> | 82972-82101-5ES | ESCUTCHEON, HANDLE (BLACK) | | 2 | JX | |
| | 18 | 83850-56B00 | WEATHERSTRIP, INNER RH | | 1 | JX | |
| | 19 | 83860-56B00 | WEATHERSTRIP, INNER LH | | 1 | JX | |
| | 20 | 83812-60A00 | .CLIP, WEATHERSTRIP | , | 14 | JX | |
| | | | | | | | |

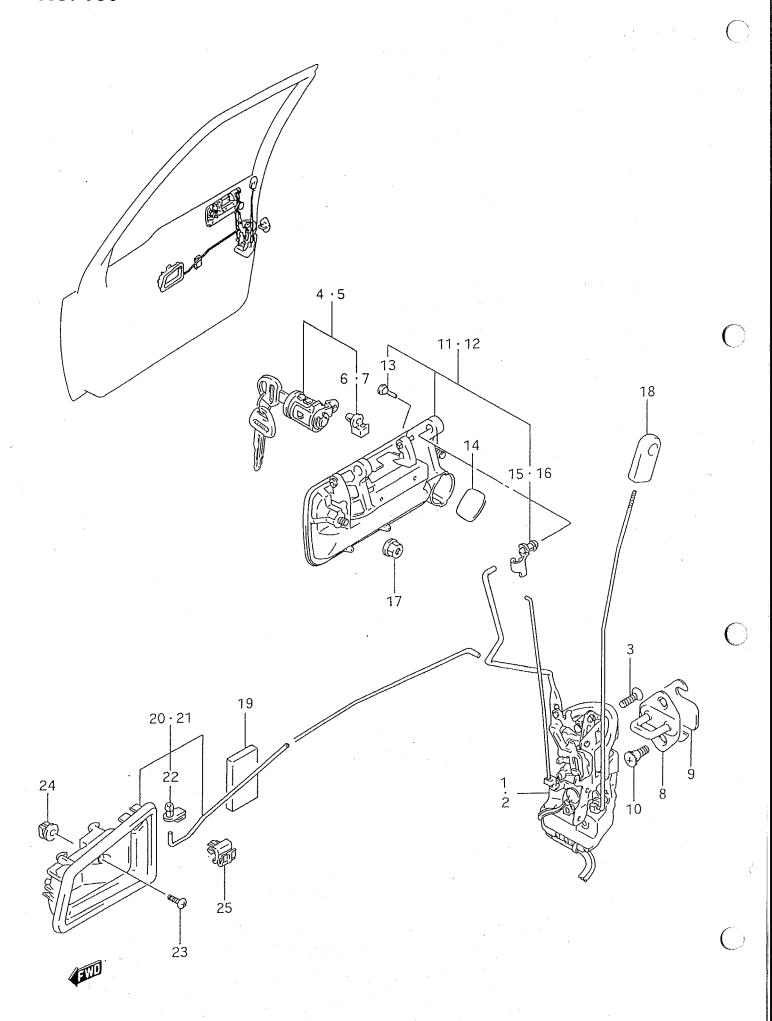


| REF. | | Q, TY | | | |
|------------|------------------------------|--------------------------------|---|-----|---------|
| N.º | PART Nº DESCRIPTION | DESCRIPTION | С | ٧ | REMARKS |
| 1 -1 | 82201-56B00 | LATCH ASSY, DOOR RH | | 1 | JX |
| 1-2 | 82201-58B00 | LATCH ASSY, DOOR RH | | 1. | JLX |
| 2-1 | 82202-56B00 | LATCH ASSY, DOOR LH | | 1 | JX |
| 2-2 | 82202-58B00 | LATCH ASSY, DOOR LH | | 1 | JLX |
| 3 | 02122-56163 | SCREW, LATCH | | 6 | |
| 4 | 82200-60831 | CYLINDER SET, DOOR RH | | 1 | |
| 5 | 82200-60841 | CYLINDER SET, DOOR LH | | 1 | |
| 6 | 82277-60A00 | .HOLDER, RH | | 1 | |
| 7 | 82287-60A00 | .HOLDER, LH | | 1 | |
| 8 | 82610-60A01 | STRIKER, DOOR LATCH | | 2 | |
| 9 | 78199-78000 | SPACER, STRIKER | | 0-2 | |
| 10 | 09137-08011 | SCREW, STRIKER (8X18) | | 4 | |
| 11-1 | 82810-56B00-5PK | HANDLE, DOOR OUT RH (BLACK) | | 1 | JX |
| 11-2 | 82810-56B00-Y27 | HANDLE, DOOR OUT RH (GRAY) | | 1 | JLX |
| 11-3 | 82810-56B00-Y33 | HANDLE, DOOR OUT RH (GREEN) | | 1 | JLX |
| 11-4 | 82810-56B00-0FT | HANDLE, DOOR OUT RH (RED) | | 1 | JLX |
| 11-5 | 82810-56B00-26U | HANDLE, DOOR OUT RH (WHITE) | | 1 | JLX |
| 12-1 | 82820-56B00-5PK | HANDLE, DOOR OUT LH (BLACK) | | 1 | JX |
| 12-2 | 82820-56B00-Y27 | HANDLE, DOOR OUT LH (GRAY) | | 1 | JLX |
| 12-3 | 82820-56B00-Y33 | HANDLE, DOOR OUT LH (GREEN) | | 1 | JLX |
| 12-4 | 82820-56B00-0FT | HANDLE, DOOR OUT LH (RED) | | 1, | JLX |
| 12-5 | 82820-56B00-26U | HANDLE, DOOR OUT LH (WHITE) | | 1 | JLX |
| 13 | 82816-60A00 | .RUBBER, STOP | | 4 | |
| 14 | 82817-60A00 | .RING, SNAP | | 2 | |
| 15 | 09209-05017 | .HOLDER, ROD RH | | 1 | |
| 16 | 82828-56B00 | .HOLDER, ROD LH | | 1 | |
| 1 <i>7</i> | 08316-20063 | NUT, HANDLE | | 4 | |
| 18 | 82973-60A01-5PK | KNOB, INSIDE LOCK (BLACK) | | 2 | • |
| 19 | <i>775</i> 91 <i>-75</i> 000 | PAD, INSIDE HANDLE | | 2 | |
| 20 | 83110-56B01-5ES | HANDLE, DOOR INSIDE RH (BLACK) | | 1 | |
| 21 | 83130-56B01-5ES | HANDLE, DOOR INSIDE LH (BLACK) | | 1 | |
| 22 | 83119-60F00 | .SNAP, HANDLE | | 2 | |
| 23 | 03121-05163 | SCREW, HANDLE | | 2 | |
| 24 | 09148-06007 | NUT, HANDLE | | 2 | |
| 25 | 83271-63D10 | CLIP, ROD | | 2 | |

FIG. 181

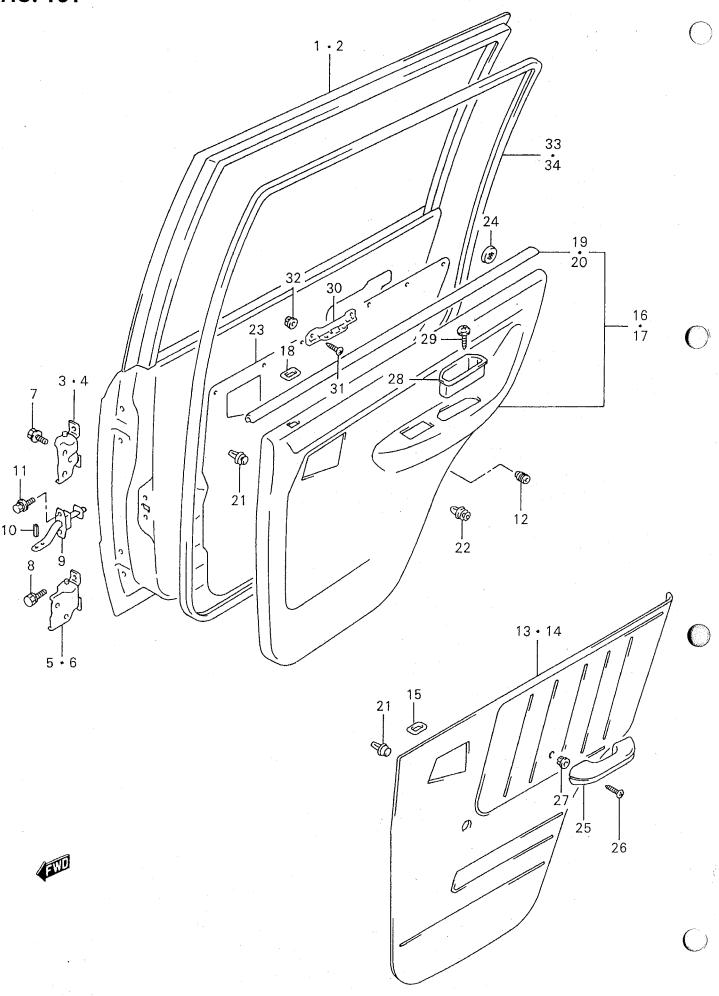


| REF. | | | Q, | TY | | |
|-------|-----------------|--------------------------------|----|----------|-----------------|--|
| N.º | PART N.º | DESCRIPTION | С | ٧ | REMARKS | |
| | 40000 F7D11 | DANIEL ACCOV DE AD DOOD DIL | | . | | |
| 1 | 68003-57B11 | PANEL ASSY, REAR DOOR RH | | 1 | | |
| 2 | 68004-57B11 | PANEL ASSY, REAR DOOR LH | | 1 | | |
| 3 | 69410-56B10 | HINGE, UPPER RH | | 1 | | |
| 4 | 69430-56B10 | HINGE, UPPER LH | | 1 | | |
| 5 | 69440-56B10 | HINGE, LOWER RH | | 1 | | |
| 6 | 69460-56B10 | HINGE, LOWER LH | | 1 | | |
| 7 | 09118-08156 | BOLT, PILLAR (8X25) | | 8 | | |
| 8 | 01570-08203 | BOLT, DOOR | | 8 | | |
| 9 | 81830-56B00 | STOP, DOOR OPEN | | 2 | | |
| 10 | 81831-70B00 | PIN, STOP BODY | | 2 | • | |
| 11 | 01580-06163 | BOLT, STOP | | 4 | | |
| 12 | 82711-56B00 | STOPPER, DOOR | | 2 | DV. | |
| 13 | 83740-56B10-5FE | TRIM, DOOR RH (BLACK) | | 1 | JX | |
| 14 | 83760-56B10-5FE | TRIM, DOOR LH (BLACK) | | 1 | JX | |
| 15 | 83795-60A00-5ES | CAP, LOCK KNOB (BLACK) | | 2 | JX | |
| 16 | 83703-77E10-5FE | TRIM, DOOR RH (BLACK) | | 1 | JLX | |
| 17 | 83704-77E10-5FE | TRIM, DOOR LH (BLACK) | | 1. | JLX | |
| 18 | 83723-61A00-5ES | .CAP, LÒCK KNOB (BLACK) | | 2 | JLX | |
| 19 | 83749-57B00 | .WEATHERSTRIP, INNER RH | | 1 | JLX | |
| 20 | 83769-57B00 | .WEATHERSTRIP, INNER LH | | 1 | JLX | |
| 21 -1 | 09409-08320 | CLIP, TRIM | | 20 | JX | |
| 21 -2 | 09409-08320 | CLIP, TRIM | | 8 | JLX | |
| 22 | 83729-50E00 | CLIP, TRIM | | 2 | JLX | |
| 23 | 83911-60X50 | COVER, DOOR SEALING (600X1200) | | 2 | CUT AS REQUIRED | |
| 24 | 09250-20015 | CAP, HANDLE HOLE | | 2 | | |
| 25 | 84450-82000-5ES | ARMREST, DOOR (BLACK) | | 2 | JX , | |
| 26 | 03241-06253 | SCREW, ARMREST | | 4 | JX | |
| 27 | 09148-06007 | NUT, ARMREST | | 4 | JX | |
| 28 | 84481-68A00-5ES | CASE, PULL HANDLE (BLACK) | | 2 | JLX | |
| 29 | 03141-04123 | SCREW, CASE | | 2 | JLX | |
| 30 | 84482-77E00 | BRACKET, HANDLE | | 2 | JLX | |
| 31 | 03241-06163 | SCREW, BRACKET | | 4 | JLX | |
| 32 | 09148-06007 | NUT, BRACKET | | 4 | JLX | |
| 33 | 84661-56B01 | WEATHERSTRIP, DR OPENING RH | | 1 | • | |
| 34 | 84671-56B01 | WEATHERSTRIP, DR OPENING LH | | 1 | | |

FIG. 182

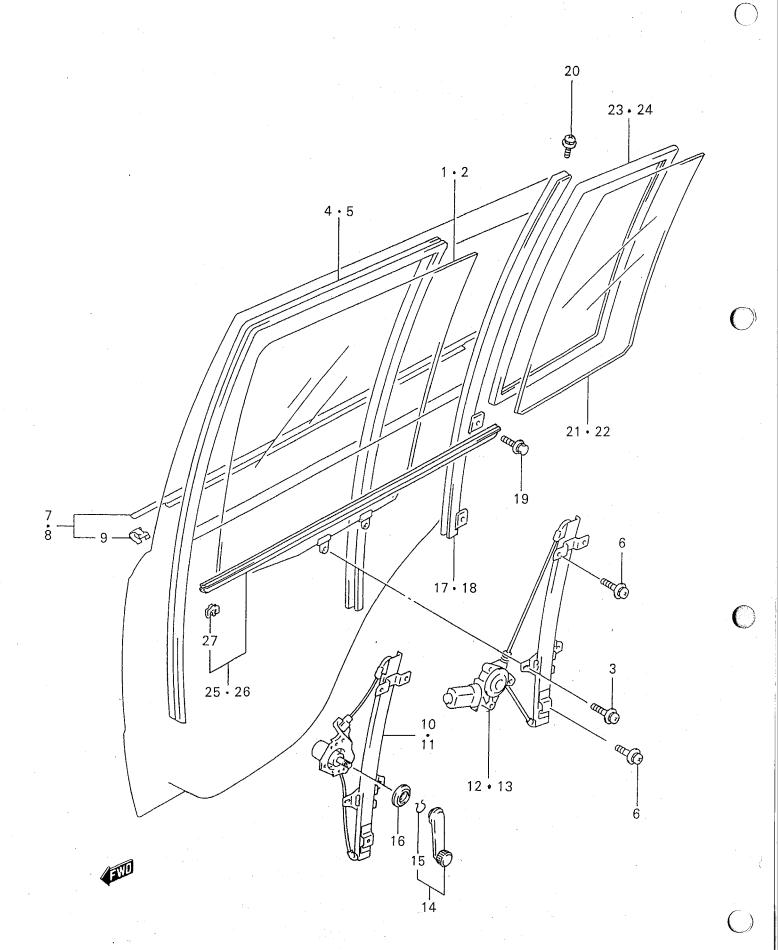

| REF. | PART Nº | | Q, TY | |
|------|-----------------|--------------------------------|-------|------------------|
| N.º | | DESCRIPTION | C V | REMARKS |
| 1 | 84541-86C00 | GLASS, WINDOW RH (GREEN) | 1 | |
| 2 | 84546-86C00 | GLASS, WINDOW LH (GREEN) | 1 | |
| 3 | 02112-76123 | SCREW, GLASS BOTTOM | 4 | |
| 4 | 83671-56B00 | RUN, DOOR GLASS RH | 1 | |
| 5 | 83672-56B00 | RUN, DOOR GLASS LH | 1 | |
| 6 | 02112-76123 | SCREW, REGULATOR | 14 | |
| 7 | 83830-56B02 | WEATHERSTRIP, OUTER RH | 1 | |
| 8 | 83840-56B02 | WEATHERSTRIP, OUTER LH | . 1 | |
| 9 | 83812-60A00 | .CLIP, WEATHERSTRIP | 14 | |
| 10 | 83510-56B00 | REGULATOR ASSY, RH | 1 | JX |
| 11 | 83540-56B00 | REGULATOR ASSY, LH | 1 | JX |
| 12 | 83501-57B00 | REGULATOR ASSY, RH | 1 | JLX |
| 13 | 83502-57B00 | REGULATOR ASSY, LH | 1 | JLX |
| 14 | 82960-82001-5RT | HANDLE, REGULATOR (BLACK) | 2 | JX |
| 15 | 78463-78000 | .SNAP, HANDLE | 2 | JX |
| 16 | 82972-82101-5ES | ESCUTCHEON, HANDLE (BLACK) | 2 | JX |
| 17 | 81770-56B01-0CE | SASH, REAR DOOR CTR RH (BLACK) | 1 | |
| 18 | 81780-56B01-0CE | SASH, REAR DOOR CTR LH (BLACK) | 1 | |
| 19 | 01580-06163 | BOLT, LOWER | 4 | |
| 20 | 02122-04103 | SCREW, UPPER | 2 | |
| 21 | 84551-86C00 | GLASS, PARTITION RH (GREEN) | 1 | |
| 22 | 84556-86C00 | GLASS, PARTITION LH (GREEN) | 1 | |
| 23 | 84665-56B00 | WEATHERSTRIP, PARTITION RH | 1 | |
| 24 | 84675-56B00 | WEATHERSTRIP, PARTITION LH | .] | |
| 25 | 83870-56B00 | WEATHERSTRIP, INNER RH | 1 | JX |
| 26 | 83880-56B00 | WEATHERSTRIP, INNER LH | 1 | JX |
| 27 | 83812-60A00 | .CLIP, WEATHERSTRIP | 14 | JX ^{*/} |

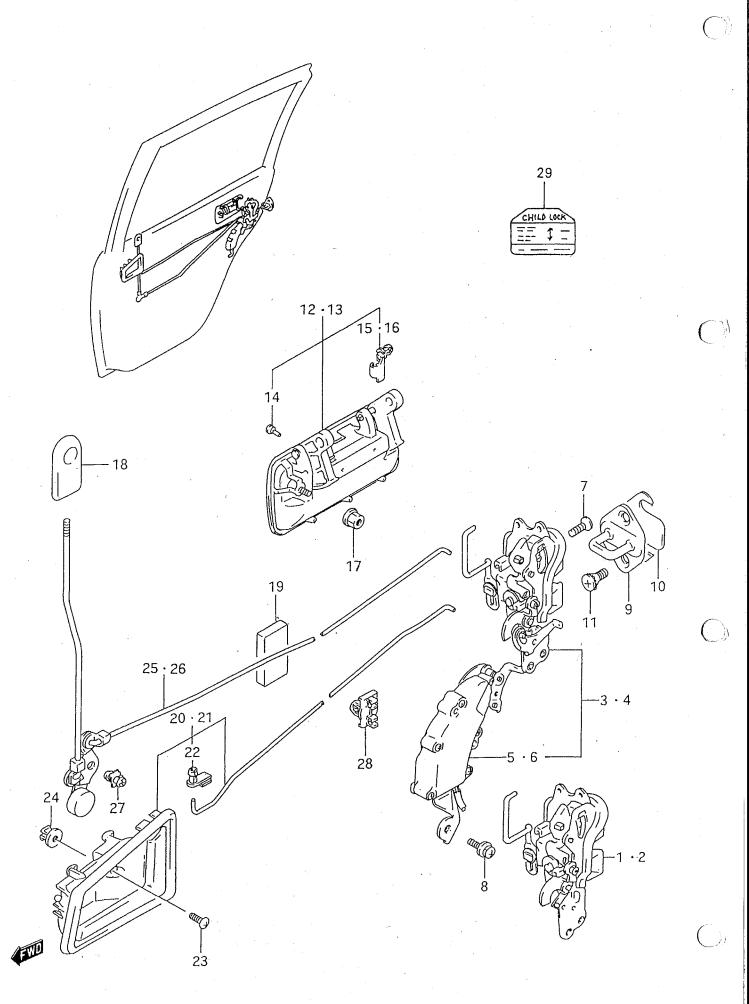

| | REF. | | | Q, | Q, TY | |
|---|------------|------------------------------|-----------------------------|----|-------|---------|
| | N.º | | DESCRIPTION | С | V | REMARKS |
| | | | · | | | |
| | 1 | 82301-56B00 | LATCH ASSY, DOOR RH | | 1 | JX |
| | 2 | 82302-56B00 | LATCH ASSY, DOOR LH | | 1 | JX |
| | 3 | 82301-58B00 | LATCH ASSY, DOOR RH | | 1 | JLX |
| | 4 | 82302-58B00 | LATCH ASSY, DOOR LH | | 1 | JLX |
| | 5 | 82370-58B00 | .ACTUATOR, LATCH RH | | 1 | |
| | 6 | 82380-58B00 | .ACTUATOR, LATCH LH | * | 1 | JLX |
| | 7 | 02122-56163 | SCREW, LATCH | | 6 | |
| | 8 | 09138-06026 | SCREW, LATCH (6X16) | | 2 | JLX |
| | 9 | 82610-60A01 | STRIKER, DOOR LATCH | | 2 | |
| | 10 | 78199-78000 | SPACER, STRIKER | | 0-2 | |
| | 11 | 09137-08011 | SCREW, STRIKER (8X18) | | 4 | |
| | 12-1 | 82830-56B00-5PK | HANDLE, DOOR OUT RH (BLACK) | | 1 | JX |
| | 12-2 | 82830-56B00-Y27 | HANDLE, DOOR OUT RH (GRAY) | | 1 | JLX |
| | 12-3 | 82830-56B00-Y33 | HANDLE, DOOR OUT RH (GREEN) | | 1 | JLX |
| | 12-4 | 82830-56B00-0FT | HANDLE, DOOR OUT RH (RED) | | 1 | JLX |
| | 12-5 | 82830-56B00-26U | HANDLE, DOOR OUT RH (WHITE) | | 1 | JLX |
| | 13-1 | 82840-56B00-5PK | HANDLE, DOOR OUT LH (BLACK) | | 1 | J X |
| | 13-2 | 82840-56B00-Y27 | HANDLE, DOOR OUT LH (GRAY) | | 1 | JLX |
| | 13-3 | 82840-56B00-Y33 | HANDLE, DOOR OUT LH (GREEN) | | 1 | JLX |
| | 13-4 | 82840-56B00-0FT | HANDLE, DOOR OUT LH (RED) | | 1 | JLX |
| | 13-5 | 82840-56B00-26U | HANDLE, DOOR OUT LH (WHITE) | | 1 | JLX |
| | 14 | 82816-60A00 | .RUBBER, STOP | | 2 | |
| | 15 | 09209-05017 | .HOLDER, ROD RH | | 1 | |
| | 16 | 82828-56B00 | .HOLDER, ROD LH | | 1 | |
|) | 1 <i>7</i> | 08316-20063 | NUT, HANDLE | | 4 | |
| | 18 | 82973-60A01-5PK | KNOB, INSIDE HANDLE (BLACK) | | 2 | |
| | 19 | <i>775</i> 91 <i>-75</i> 000 | PAD, INSIDE HANDLE | | 2 | |



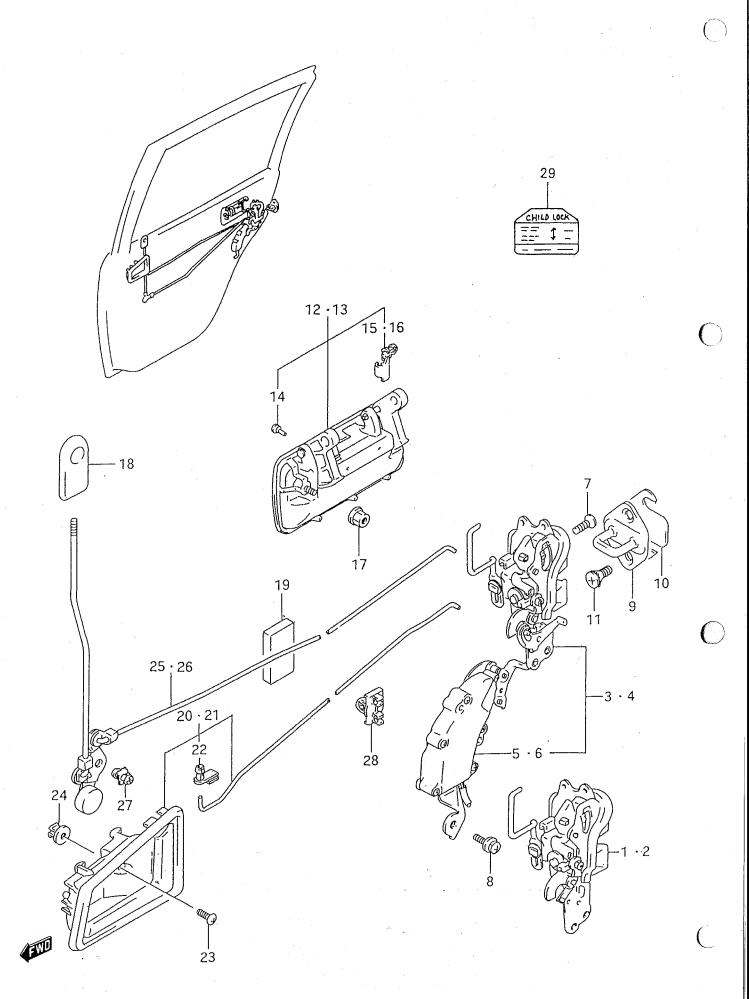


FIG. 183 (2-H-15) 5DR RR DR LOCK

| REF. | mi mm i i o | DESCRIPTION | Q, TY | |
|------|-----------------|--------------------------------|-------|---------|
| N.º | PART Nº | | C V | REMARKS |
| | | | | |
| 20 | 83140-56B01-5ES | HANDLE, DOOR INSIDE RH (BLACK) | 1 | |
| 21 | 83160-56B01-5ES | HANDLE, DOOR INSIDE LH (BLACK) | 1 | |
| 22 | 83119-60F00 | .SNAP, HANDLE | 2 | |
| 23 | 03121-05163 | SCREW, HANDLE | 2 | |
| 24 | 09148-06007 | NUT, HANDLE | 2 | |
| 25 | 83240-56B01 | ROD, INSIDE LOCK RH | 1 | • |
| 26 | 83250-56B01 | ROD, INSIDE LOCK LH | 1 | |
| 27 | 83261-56B00 | PIN, LINK | 2 | |
| 28 | 83271-50E00 | CLIP, ROD | 2 | |
| 29 | 82491-56B00 | CAUTION PLATE, CHILD LOCK | 2 | |

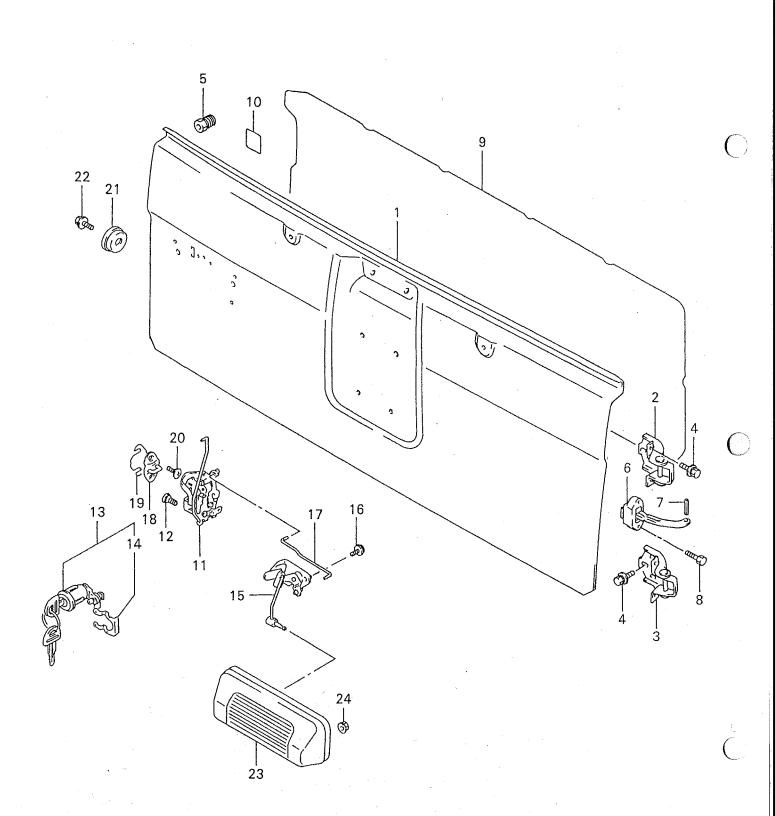


| REF. | | | Q, TY | |
|------------|-----------------|--------------------------------|-------|-----------------|
| N.º | PART Nº | DESCRIPTION | CV | REMARKS |
| | | | | |
| 1 | 67700-63A20 | PANEL ASSY, RR GATE | 1 | |
| 2 | 67730-85C00 | HINGE, RR GATE UPPER | 1 | |
| 3 | 69520-85C00 | HINGE, RR GATE LOWER | 1 | |
| 4 | 09118-08156 | BOLT, HINGE (8X25) | 12 | |
| 5 | 72372-85C00 | CUSHION, RR GATE | 1 | |
| 6 | 72850-60A11 | STOP, RR GATE | 1 | |
| 7 | 81831-70B00 | PIN, STOP BODY | 1 | |
| 8 | 01580-06203 | BOLT, STOP | 2 | |
| 9 | 83911-60X50 | COVER, DOOR SEALING (600X1200) | 1 | CUT AS REQUIRED |
| 10 | 72893-60A10 | SEAL, RR GATE | 1 | |
| 11 | 82530-60A10 | LATCH ASSY, RR GATE | 1 | |
| 12 | 09137-06022 | SCREW, LATCH (6X18) | 3 | |
| 13 | 82500-60821 | CYLINDER SET, RR GATE | 1 | |
| 14 | 82577-61A00 | .RETAINER, CYLINDER | 1 | |
| 15 | 83190-60A10 | LINK, RR GATE INSIDE | 1 | |
| 16 | 02112-76123 | SCREW, LINK | 2 | |
| 1 <i>7</i> | 83195-85C00 | ROD, RR GATE LATCH | 1 | |
| 18 | 82660-61A01 | STRIKER, DOOR LATCH | 1 · · | |
| 19 | 78199-78000 | SPACER, STRIKER | 0-1 | |
| 20 | 09137-08011 | SCREW, STRIKER (8X18) | 2 | |
| 21 | 82761-85C00 | MALE, STOP DOOR | 1 | |
| 22 | 09118-08128 | BOLT, STOP DOOR (8X16) | 1 | |
| 23-1 | 82850-85C00-5PK | HANDLE, DOOR OUT (BLACK) | . 1 | JA,JX |
| 23-2 | 82850-85C00-799 | HANDLE, DOOR OUT | 1 | JLX |
| 24 | 08316-20063 | NUT, HANDLE | 3 | |
| | | | | |

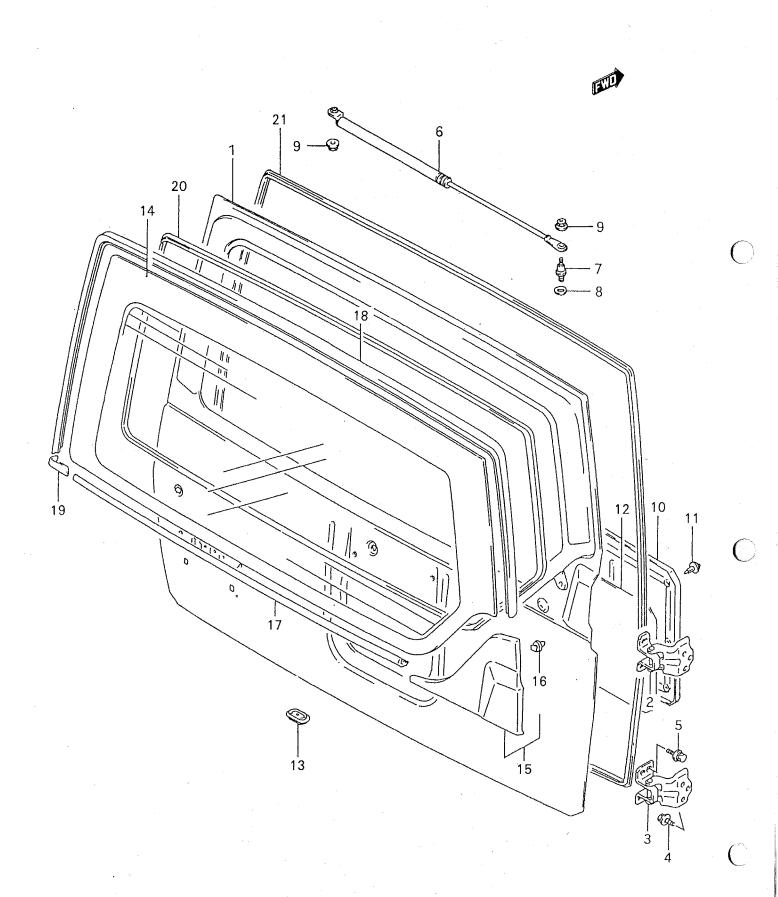


| FIG. 185 | (2-I-03) | BACK DR PANEL (V) |
|----------|----------|-------------------|
| | | |

| | 11 | G. 165 (2-1-05) BACK DK FAINE | .L (V) | |
|------------|-----------------|--------------------------------|----------|-----------------|
| REF. | * | | Q, TY | |
| N.º | PART Nº | DESCRIPTION | CV | REMARKS |
| | | | | |
| 1 | 69100-61A50 | PANEL ASSY, BACK DOOR | 1 | |
| 2 | 69510-85C00 | HINGE, BACK DOOR UPPER | 1 | |
| 3 | 69520-85C00 | HINGE, BACK DOOR LOWER | 1 | |
| 4 | 09118-08156 | BOLT, PILLAR (8X25) | 6 | |
| 5 | 09118-08156 | BOLT, DOOR (8X25) | 6 | |
| 6 | 81851-85C00 | UNIT, BACK DOOR BALANCER | 1 | |
| 7 | 81852-61A00 | SHAFT, BALANCER DOOR | 1 | |
| 8 | 08322-01083 | WASHER, BACK DOOR BALANCER | 1 | |
| 9 | 09159-06076 | NUT, BACK DOOR BALANCER | 2 | |
| 10 | 83770-62A00-5FE | TRIM, BACK DOOR (BLACK) | 1 | |
| 11 | 09409-08320 | CLIP, TRIM | 15 | |
| 12 | 83911-60X50 | COVER, DOOR SEALING (600X1200) | 1 | CUT AS REQUIRED |
| 13 | 83914-85C00 | COVER, SERVICE HOLE | 1 | |
| 14 | 84575-85C00 | GLASS, WINDOW (GREEN,W/DF) | 1 | |
| 15 | 83940-61A00-5PK | GARNISH, OUT RH (BLACK) | 1 | |
| 16 | 83942-85C00 | .CLIP, GARNISH | 2 | |
| 1 <i>7</i> | 84621-61A00-5PK | MOLDING, WINDOW NO.1 (BLACK) | 1. | |
| 18 | 84622-56B00-5PK | MOLDING, WINDOW NO.2 (BLACK) | 1 | |
| 19 | 84626-61A00-5PK | JOINT, MOLDING LOWER (BLACK) | 1 | |
| 20 | 84627-61A00-5PK | TRIM, WINDOW OPENING (BLACK) | . 1 | |
| 21 | 84681-61A01-5PK | WEATHERSTRIP, OPENING (BLACK) | 1 | ū. |


 \bigcirc

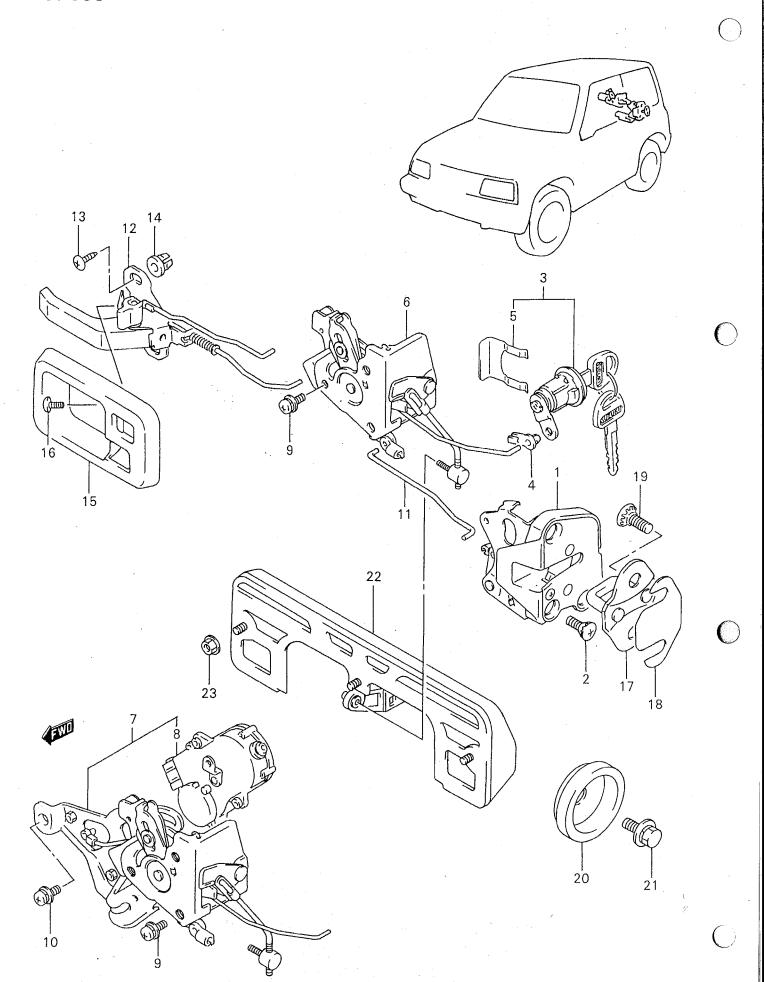


| | REF. N.º | PART Nº | DESCRIPTION | Q, TY C V | REMARKS |
|-------|-------------|--------------------------------|---------------------------------|--------------|------------------------------|
| | 1 | 82530-61A00 | LATCH ASSY, BACK DOOR | . 1 | |
| | 2 | 09137-06022 | SCREW, LATCH (6X18) | 3 | |
| | 3 | 82500-60831 | CYLINDER SET, LATCH LOCK | 1 | |
| | 4 | 82287-60A00 | .HOLDER | 1 | |
| | 5 | 82577-61A00 | RETAINER | 1 | |
| | 6 | 83170-62A00 | LINK, BACK DOOR LATCH | 1 | JX JLX: N/POWER DOOR LOCK |
| | 7 | 83170-58B00 | LINK, BACK DOOR LATCH | 1 | JLX: W/POWER DOOR LOCK |
| j | 8 | 82550-57B00 | .ACTUATOR, LATCH | Ţ | JLX: W/POWER DOOR LOCK |
| | 9 | 02112-76123 | SCREW, LINK | 3 | |
| | 10 | 02112-76123 | SCREW, ACTUATOR | 1 | JLX: W/POWER DOOR LOCK |
| | 11 | 83175-85C00 | ROD, BACK DOOR LATCH | 1 | |
| | 12 | 83190-62A00-5ES | HANDLE, INSIDE (BLACK) | 1 | |
| | 13 | 03241-06123 | SCREW, HANDLE | 2 | |
| | 14 | 09148-06007 | NUT, HANDLE | 2 | |
| | 15 | 82981-82000-5PK | BEZEL, INSIDE HANDLE (BLACK) | 1 | |
| | 16 | 03141-04083 | SCREW, BEZEL | 1 | |
| | 1 <i>7</i> | 82660-61A01 | STRIKER, DOOR LATCH . | 1 1 | |
| | 18 | 78199-78000 | SPACER, STRIKER | 0-1 | |
| | 19 | 09137-08011 | SCREW, STRIKER (8X18) | 2 | |
| | 20 | 82761-85C00 | MAIL, STOP DOOR | · 1 | |
| | 21 | 09118-08128 | BOLT, STOP DOOR (8X16) | 1 | |
| | 22 23 | 82850-85C00-799 08316-20063 | HANDLE, DOOR OUT NUT, HANDLE | 1 | JX, JLX |

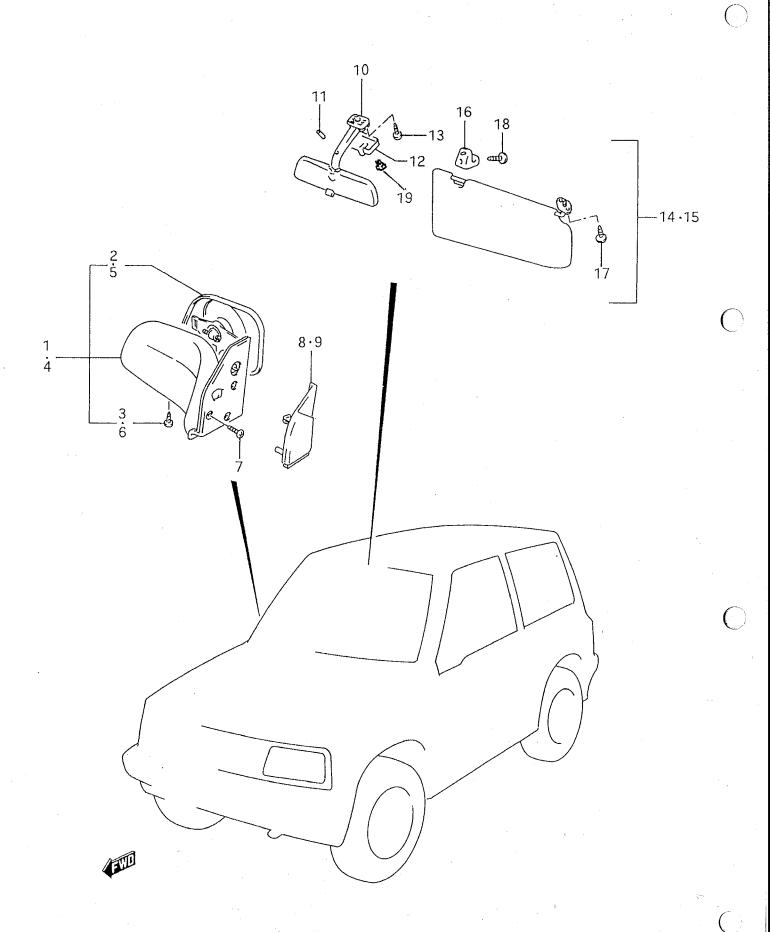


| REF. | | | Q, | TY | |
|-------------|-----------------|--------------------------------|----|----|-----------------|
| N.º | PART Nº | DESCRIPTION | С | V | REMARKS |
| | | | | | |
| 1 - 1 | 84701-62A20-5PK | MIRROR, OUT RR VIEW RH (BLACK) | 1 | 1 | LHD (MANUAL) |
| 1 -2 | 84701-85C10-799 | MIRROR, OUT RR VIEW RH | 1 | 1 | LHD (REMOCON) |
| 1-3 | 84701-61A20-5PK | MIRROR, OUT RR VIEW RH (BLACK) | 1 | 1 | RHD JX (MANUAL) |
| 1 -4 | 84701-61A30-Y27 | MIRROR, OUT RR VIEW RH (GRAY) | -1 | 1 | RHD (REMOCON) |
| 1-5 | 84701-61A30-Y28 | MIRROR, OUT RR VIEW RH (RED) | 1 | 1 | RHD (REMOCON) |
| 1-6 | 84701-61A30-Y29 | MIRROR, OUT RR VIEW RH (BLUE) | 1 | 1 | RHD (REMOCON) |
| 1 <i>-7</i> | 84701-61A30-Z01 | MIRROR, OUT RR VIEW RH (GREEN) | 1 | 1 | RHD (REMOCON) |
| 1 -8 | 84701-61A30-0DG | MIRROR, OUT RR VIEW RH (BLACK) | 1 | 1 | RHD (REMOCON) |

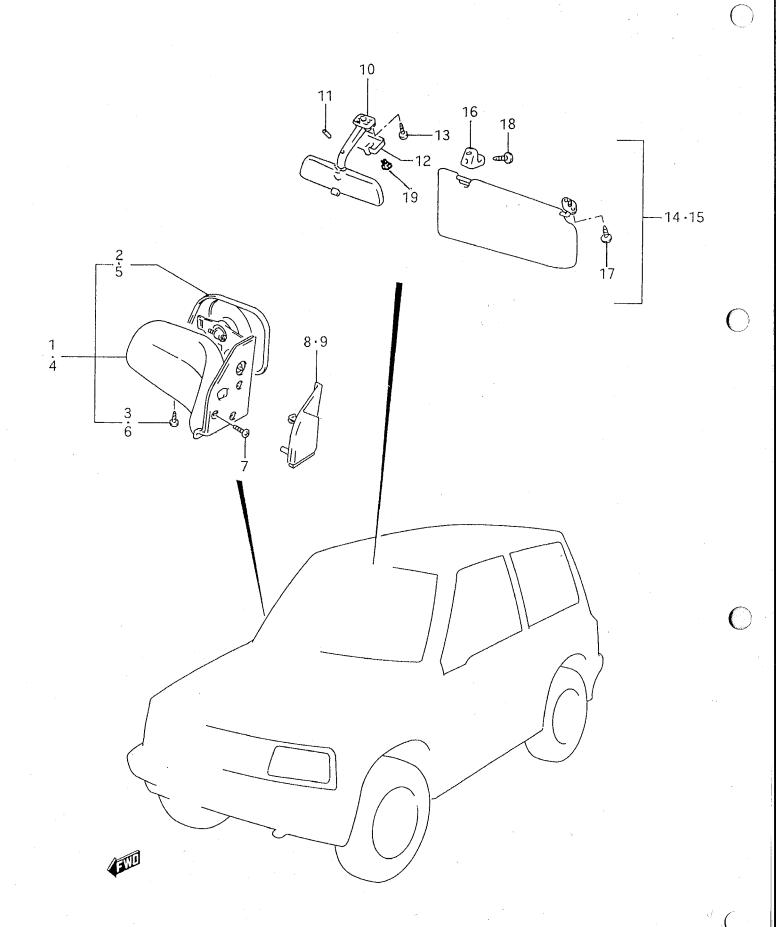


| REF. | | | Q, | TY | , ' J. |
|------|-----------------|--------------------------------|----|----|-----------------|
| N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS |
| | | | | | |
| 1-9 | 84701-61A30-0FT | MIRROR, OUT RR VIEW RH (RED) | 1 | 1 | RHD (REMOCON) |
| 1-10 | 84701-61A30-26U | MIRROR, OUT RR VIEW RH (WHITE) | 1 | 1 | RHD (REMOCON) |
| 2-1 | 84720-61A00 | .MIRROR, SUB ASSY RH | 1 | 1 | MANUAL |
| 2-2 | 84720-61A10 | .MIRROR, SUB ASSY RH | 1 | 1 | LHD (REMOCON) |
| 2-3 | 84720-61A10 | .MIRROR, SUB ASSY RH | 1 | 1 | RHD (REMOCON) |
| 3 | 03511-04103 | SCREW | 1 | 1 | |
| 4-1 | 84702-62A20-5PK | MIRROR, OUT RR VIEW LH (BLACK) | 1 | 1 | LHD (MANUAL) |
| 4-2 | 84702-85C10-799 | MIRROR, OUT RR VIEW LH | 1 | 1 | LHD (REMOCON) |
| 4-3 | 84702-61A20-5PK | MIRROR, OUT RR VIEW LH (BLACK) | 1 | 1 | RHD JX (MANUAL) |

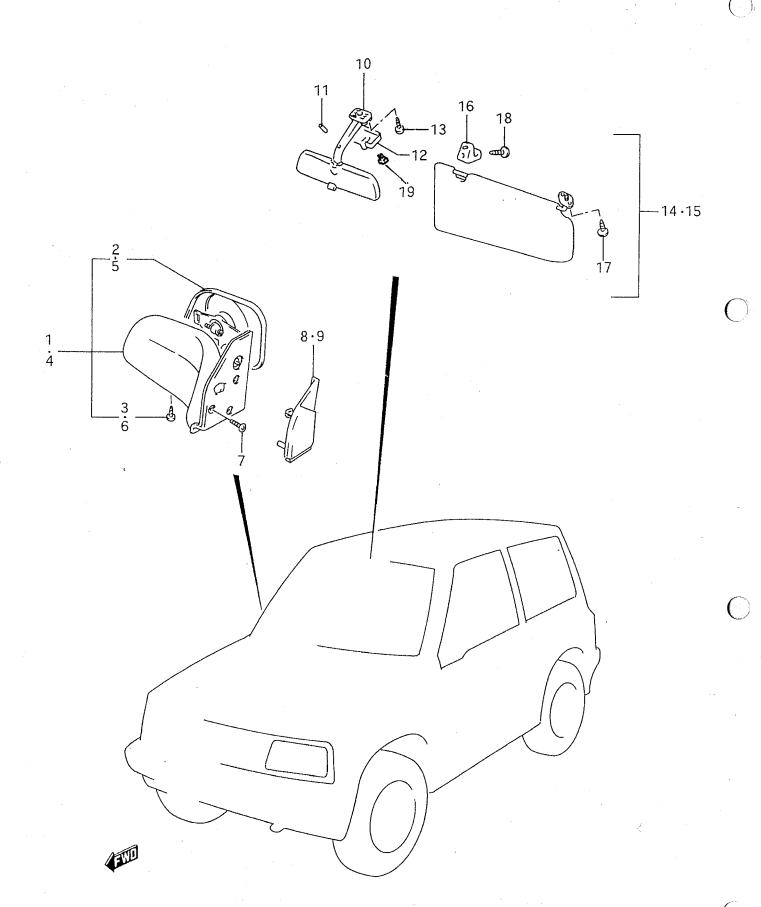


| REF. | | , | Q, | TY | |
|------|------------------|--------------------------------|-----|----|----------------|
| N.º | PART Nº | DESCRIPTION | C | ٧ | REMARKS |
| | | | | | |
| 4-4 | 84702-61A30-Y27 | MIRROR, OUT RR VIEW LH (GRAY) | 1 | 1 | RHD (REMOCON) |
| 4-5 | 784702-61A30-Y28 | MIRROR, OUT RR VIEW LH (RED) | 1 | 1 | RHD (REMOCON) |
| 4-6 | 784702-61A30-Y29 | MIRROR, OUT RR VIEW LH (BLUE) | 1 | 1 | RHD (REMOCON) |
| 4-7 | 84702-61A30-Z01 | MIRROR, OUT RR VIEW LH (GREEN) | 1 | 1 | RHD (REMOCON) |
| 4-8 | 84702-61A30-0DG | MIRROR, OUT RR VIEW LH (BLACK) | 1 | 1 | RHD (REMOCON) |
| 4-9 | 84702-61A30-0FT | MIRROR, OUT RR VIEW LH (RED) | 1 | 1 | RHD (REMOCON) |
| 4-10 | 84702-61A30-26U | MIRROR, OUT RR VIEW LH (WHITE) | 1 | 1 | RHD (REMOCON) |
| 5-1 | 84760-61A00 | .MIRROR, SUB ASSY LH | 1 | 1 | MANUAL |
| 5-2 | 84760-61A10 | .MIRROR, SUB ASSY LH | 1 | 1 | REMOCON |
| 6 | 03511-04103 | .SCREW | 1 | 1 | |
| 7 | 02142-06123 | SCREW | 6 | 6 | |
| 8 | 84750-85C00-5PK | GARNISH, SASH BRKT INR RH | 1 | 1 | |
| 9 | 84790-85C00-5PK | GARNISH, SASH BRKT INR LH | 1 | 1 | |
| 10 | 84703-85C10-5PK | MIRROR, INSIDE RR VIEW (BLACK) | 1 : | 1 | JX, JLX, JA |
| 11 | 84782-85C00 | RUBBER | 1 | 1 | • |
| 12 | 84781-85C00 | COVER, MIRROR STAY (BLACK) | 1 | 1 | JA, JX |
| 13 | 02142-05123 | SCREW | 2 | 2. | |
| 14-1 | 84800-60811-2WE | SUNVISOR SET, RH (GRAY) | 1 | | JA, JX |
| 14-2 | 84800-60851-5UN | SUNVISOR SET, RH (GRAY) | 1 | 1 | LHD: JLX |
| 14-3 | 84800-60811-5UN | SUNVISOR SET, RH (GRAY) | 1 | 1 | RHD: JLX |
| 14-4 | 84800-69810-5UN | SUNVISOR SET, RH (GRAY) | -1 | 1 | RHD: W/AIR BAG |

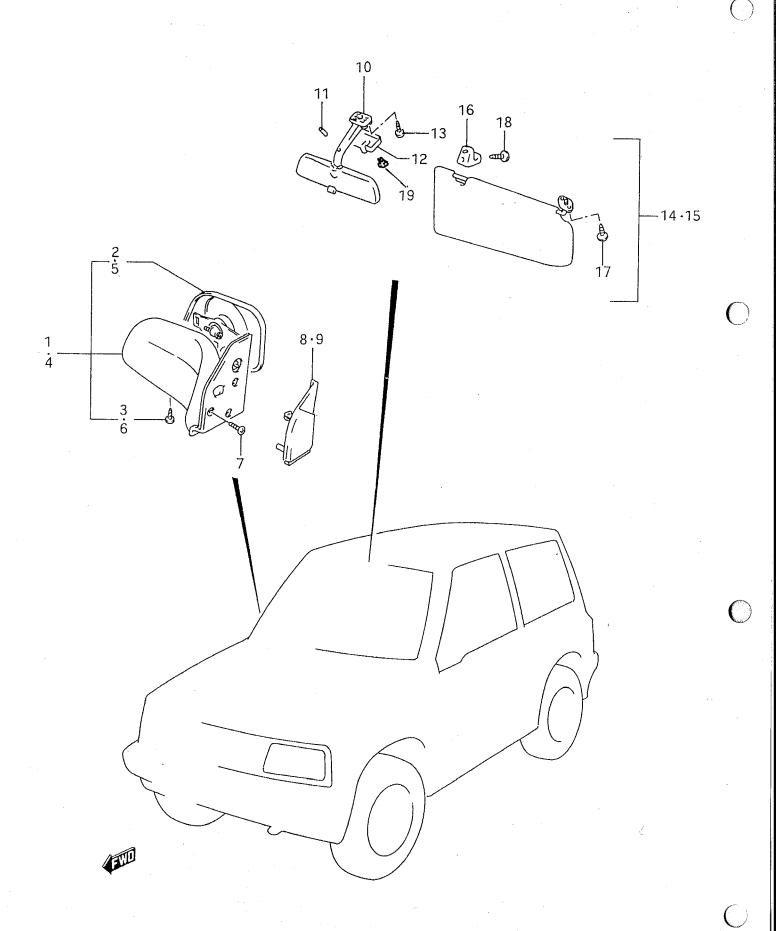


| REF. | | | , ¹ Q, | TY | |
|------------|--------------------------|---------------------------|-------------------|----|----------------|
| N.º | PART Nº | DESCRIPTION | С | V | REMARKS |
| | | | | | |
| 15-1 | 84800-60821-2WE | SUNVISOR SET, LH (GRAY) | 1. | 1 | JA, JX |
| 15-2 | 84800-60821-5UN | SUNVISOR SET, LH (GRAY) | 1 | 1 | LHD: JLX |
| 15-3 | 84800-69820-5UN | SUNVISOR SET, LH (GRAY) | 1 | 1 | LHD: W/AIR BAG |
| 15-4 | 84800-60841 <i>-5</i> UN | SUNVISOR SET, LH (GRAY) | 1 | 1 | RHD: JLX |
| 16 | 84851-60B00-5ES | .HOLDER, SUNVISOR (BLACK) | 2 | 2 | |
| 1 <i>7</i> | 09127-05016 | .SCREW, SUNVISOR | 4 | 4 | |
| 18 | 03211-05163 | .SCREW, HOLDER | 2 | 2 | |
| 19 | 86124A63010 | BUSH | 2 | 2 | |

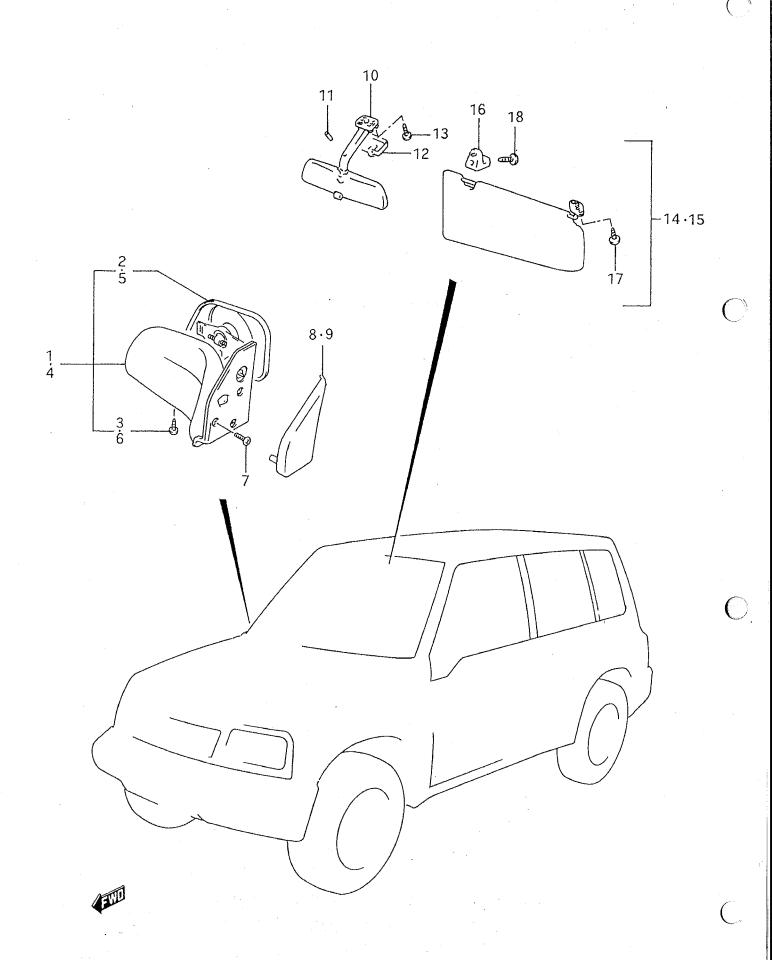

| REF. | | | Q, TY | | , : | |
|-------------|--------------------------|--------------------------------|-------|----|---------------|--|
| N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS | |
| | | | | | | |
| 1 - 1 | 84701-57B20-5PK | MIRROR, OUT RR VIEW RH (BLACK) | | 1 | LHD (MANUAL) | |
| 1 -2 | 84701-57B30-Y27 | MIRROR, OUT RR VIEW RH (GRAY) | | 1 | LHD (REMOCON) | |
| 1 -3 | 84701 <i>-57</i> B30-Y29 | MIRROR, OUT RR VIEW RH (BLUE) | | 1 | LHD (REMOCON) | |
| 1 -4 | 84701-57B30-Y33 | MIRROR, OUT RR VIEW RH (GREEN) | | 1 | LHD (REMOCON) | |
| 1 -5 | 84701-57B30-Z01 | MIRROR, OUT RR VIEW RH (GREEN) | | 1 | LHD (REMOCON) | |
| 1-6 | 84701- <i>57</i> B30-0FT | MIRROR, OUT RR VIEW RH (RED) | | 1 | LHD (REMOCON) | |
| 1 <i>-7</i> | 84701-57B30-26U | MIRROR, OUT RR VIEW RH (WHITE) | | 1 | LHD (REMOCON) | |
| 1 -8 | 84701-56B20-5PK | MIRROR, OUT RR VIEW RH (BLACK) | | 1 | RHD (MANUAL) | |
| 1-9 | 84701-56B30-Y27 | MIRROR, OUT RR VIEW RH (GRAY) | | 1 | RHD (REMOCON) | |
| 1-10 | 84701-56B30-Y29 | MIRROR, OUT RR VIEW RH (BLUE) | | 1 | RHD (REMOCON) | |
| 1-11 | 84701-56B30-Y33 | MIRROR, OUT RR VIEW RH (GREEN) | | 1 | RHD (REMOCON) | |
| 1-12 | 84701-56B30-Z01 | MIRROR, OUT RR VIEW RH (GREEN) | | 1. | RHD (REMOCON) | |
| 1-13 | 84701-56B30-0FT | MIRROR, OUT RR VIEW RH (RED) | | 1 | RHD(REMOCON) | |
| 1-14 | 84701-56B30-26U | MIRROR, OUT RR VIEW RH (WHITE) | | 1 | RHD(REMOCON | |
| 2-1 | 84720-61A00 | .MIRROR, SUB ASSY RH | | 1 | MANUAL | |
| 2-2 | 84720-61A10 | .MIRROR, SUB ASSY RH | | 1 | REMOCON | |
| -3 | 03511-04103 | .SCREW | | 1 | | |

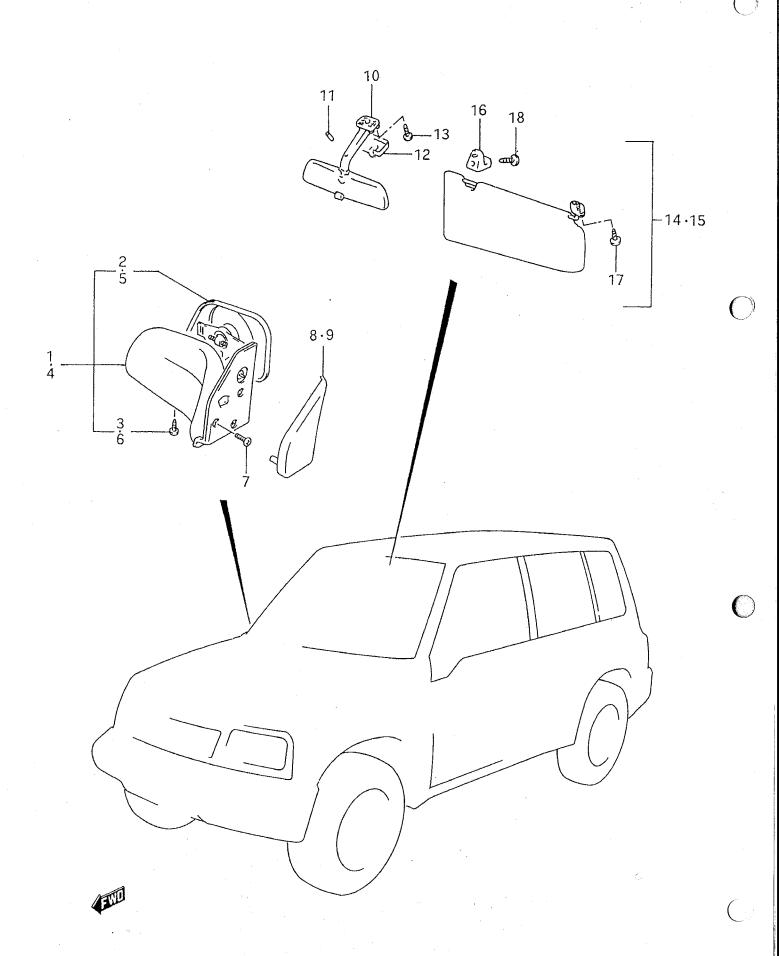


| REF. | DA DT A LO | | _ Q, | TY | , · | |
|------|-----------------|--------------------------------|------|----|---------------|--|
| N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS | |
| | | · | | | | |
| 4-1 | 84702-57B20-5PK | MIRROR, OUT RR VIEW LH (BLACK) | | 1 | LHD (MANUAL) | |
| 4-2 | 84702-57B30-Y27 | MIRROR, OUT RR VIEW LH (GRAY) | | 1 | LHD (REMOCON) | |
| 4-3 | 84702-57B30-Y29 | MIRROR, OUT RR VIEW LH (BLUE) | | 1 | LHD (REMOCON) | |
| 4-4 | 84702-57B30-Y33 | MIRROR, OUT RR VIEW LH (GREEN) | | 1 | LHD (REMOCON) | |
| 4-5 | 84702-57B30-Z01 | MIRROR, OUT RR VIEW LH (GREEN) | | 1 | LHD (REMOCON) | |
| 4-6 | 84702-57B30-0FT | MIRROR, OUT RR VIEW LH (RED) | | 1 | LHD (REMOCON) | |
| 4-7 | 84702-57B30-26U | MIRROR, OUT RR VIEW LH (WHITE) | | 1 | LHD (REMOCON) | |
| 4-8 | 84702-56B20-5PK | MIRROR, OUT RR VIEW LH (BLACK) | | 1 | RHD (MANUAL) | |
| 4-9 | 84702-56B30-Y27 | MIRROR, OUT RR VIEW LH (GRAY) | | 1 | RHD (REMOCON) | |
| 4-10 | 84702-56B30-Y29 | MIRROR, OUT RR VIEW LH (BLUE) | | 1 | RHD (REMOCON) | |
| 4-11 | 84702-56B30-Y33 | MIRROR, OUT RR VIEW LH (GREEN) | | 1 | RHD (REMOCON) | |
| 4-12 | 84702-56B30-Z01 | MIRROR, OUT RR VIEW LH (GREEN) | | 1 | RHD (REMOCON) | |
| 4-13 | 84702-56B30-0FT | MIRROR, OUT RR VIEW LH (RED) | | 1 | RHD (REMOCON) | |
| 4-14 | 84702-56B30-26U | MIRROR, OUT RR VIEW LH (WHITE) | | 1 | RHD (REMOCON) | |
| 5-1 | 84760-61A00 | .MIRROR, SUB ASSY LH | | 1 | MANUAL | |
| 5-2 | 84760-61A10 | .MIRROR, SUB ASSY LH | | 1 | REMOCON | |
| 6 | 03511-04103 | .SCREW | | 1 | | |
| 7 | 02142-06123 | SCREW | | 6 | | |

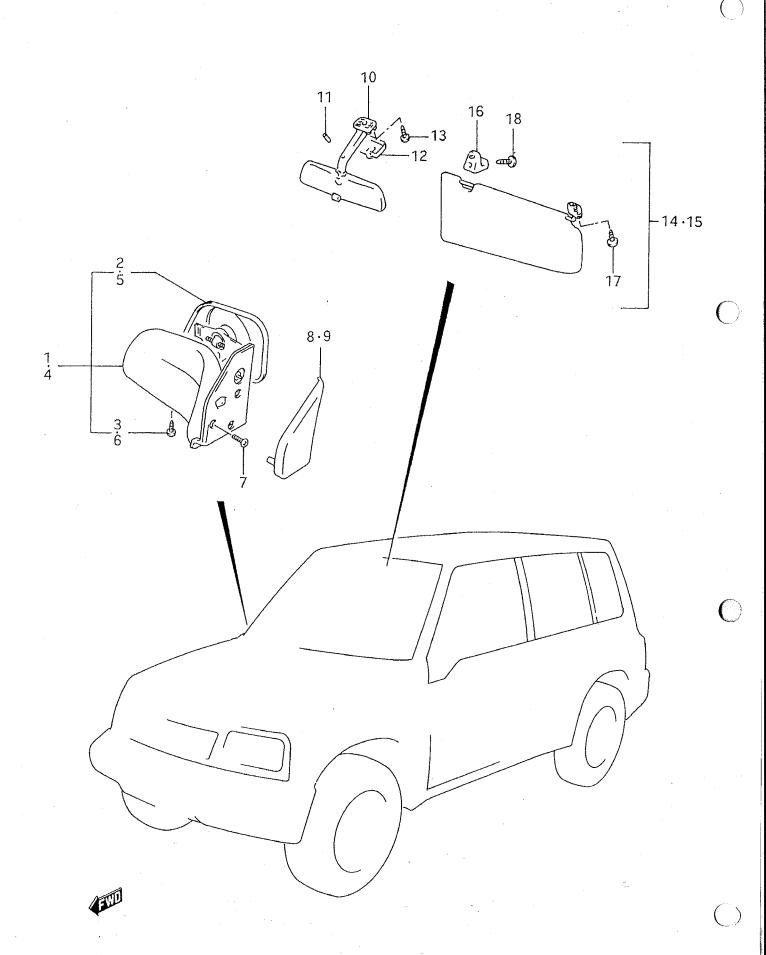

| REF. | | | | Q, TY | | | |
|------|------|-----------------|--------------------------------|-------|---|----------------|--|
| | N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS | |
| | | | | | | | |
| | 8 | 84750-57B00-5PK | GARNISH, SASH BRKT INR RH | | 1 | | |
| | 9 | 84790-57B00-5PK | GARNISH, SASH BRKT INR LH | | 1 | | |
| | 10-1 | 84703-85C10-5PK | MIRROR, INSIDE RR VIEW (BLACK) | | 1 | LHD | |
| | 10-2 | 84703-62A01-5PK | MIRROR, INSIDE RR VIEW (BLACK) | | 1 | RHD | |
| | 11-1 | 84782-85C00 | RUBBER | | 1 | LHD | |
| | 11-2 | 84782-60A00 | RUBBER | | 1 | RHD | |
| | 12 | 84781-60A00-5PK | COVER, MIRROR STAY (BLACK) | | 1 | JX, JLX: | |
| | | | | | | W/AIR BAG,ABS | |
| | | | | | | SUN ROOF | |
| | 13 | 02142-05163 | SCREW | | 2 | | |
| 1 | 14-1 | 84800-60811-2WE | SUNVISOR SET, RH (GRAY) | | 1 | JX | |
| | 14-2 | 84800-60851-5UN | SUNVISOR SET, RH (GRAY) | | 1 | LHD: JLX | |
| | 14-3 | 84800-60811-5UN | SUNVISOR SET, RH (GRAY) | | 1 | RHD: JLX | |
| | 14-4 | 84800-69810-5UN | SUNVISOR SET, RH (GRAY) | | 1 | RHD: W/AIR BAG | |
| | 15-1 | 84800-60821-2WE | SUNVISOR SET, LH (GRAY) | | 1 | JX | |
| | 15-2 | 84800-60821-5UN | SUNVISOR SET, LH (GRAY) | | 1 | LHD: JLX | |
| | 15-3 | 84800-69820-5UN | SUNVISOR SET, LH (GRAY) | | 1 | LHD:W/AIR BAG | |
| | 15-4 | 84800-60841-5UN | SUNVISOR SET, LH (GRAY) | | 1 | RHD:JLX | |
| | 16 | 84851-60B00-5ES | .HOLDER, SUNVISOR (BLACK) | | 2 | | |
| | 17 | 03211-05163 | .SCREW, HOLDER | | 2 | | |
| | 18 | 09127-05016 | .SCREW, SUNVISOR | | 4 | | |
| | | | | | | | |


| REF. | | DESCRIPTION | Q, | TY | • | |
|------|----------------|--------------------|-----|----|-----------|--|
| N.º | PART Nº | | C | ٧ | REMARKS | |
| | · | | | | | |
| 1 | 89968-85C00 | JACK ASSY | 1 | 1 | | |
| 2 | 89931-85C00 | HANDLE, JACK | 1 | 1 | | |
| 3 | 09403-08323 | CLAMP, JACK HANDLE | 3 | 3 | | |
| 4 | 89960-85C10 | TOOL | 1 | 1 | | |
| 5 | 00000A01069 | MANUAL, OWNER'S | 1 | 1 | (SPANISH) | |
| 5-1 | 00000A01069 IN | MANUAL, OWNER'S | . 1 | 1 | (ENGLISH) | |
| 5-2 | 00000A01069 IT | MANUAL, OWNER'S | 1 | 1 | (ITALIAN) | |
| 5-3 | 00000A01069 F | MANUAL, OWNER'S | 1 | 1 | (FRENCH) | |
| 5-4 | 00000A01069 D | MANUAL, OWNER'S | 1 | 1 | (DUTCH) | |
| 5-5 | 00000A01069 G | MANUAL, OWNER'S | 1 | 1 | (GERMAN) | |

FIG. 190

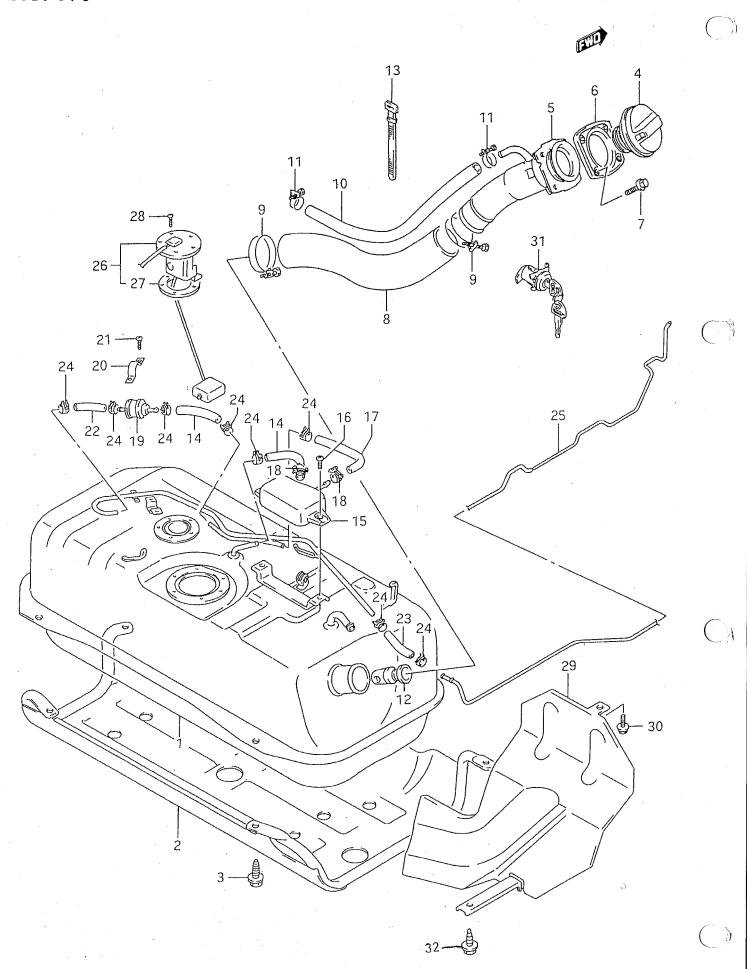


| REF. | | | Q, TY | | | |
|------------|-----------------|-----------------------------|-------|-----|------------|--|
| N.º | PART Nº | DESCRIPTION | C | ٧ | REMARKS | |
| 20 | | | | | | |
| 1 - 1 | 89101-85C00 | TANK ASSY, FUEL | 1 | 1. | | |
| 1-2 | 89101-86CA2 | TANK ASSY, FUEL | 1 | 1 | 1.9 DIESEL | |
| 2 | 89320-85C00 | PROTECTOR, FUEL TANK | 1 | . 1 | | |
| 3 | 09118-10068 | BOLT (10X30) | 4 | 4 | | |
| 4 | 89260-65AB0 | CAP ASSY, FUEL FILLER | 1 | 1 | | |
| 5 | 89201-85C00 | NECK, FUEL FILLER | 1 | 1 | | |
| 6 | 89285-82000 | PACKING, FUEL FILLER NECK | 1 | 1 | | |
| 7 | 09116-05014 | BOLT | 4 | 4 | | |
| 8 | 89241-85C00 | HOSE, FUEL TANK FILLER | 1 | 1 | | |
| 9 | 89372-85C00 | CLAMP | 2 | 2 | | |
| 10 | 09354-13203-600 | HOSE, TANK BREATHER | 1 | 1 | L:600>520 | |
| 11 | 89371-85C00 | CLAMP | 2 | 2 | | |
| 12 | 89280-60A00 | VLAVE, FUEL TANK INLET | 1 | 1 | | |
| 13 | 89285-85C00 | CLAMP | 1 | 1 | | |
| 14 | 09354-54115-600 | HOSE | 2 | 2 | L:600>140 | |
| 15 | 89411-60A01 | SEPARATOR, FUEL AND VAPOR | 1 | 1 | | |
| 16 | 02142-05083 | SCREW | 2 | 2 | • • | |
| 1 <i>7</i> | 09354-54115-600 | HOSE | 1 | 1 | L:600>125 | |
| 18 | 89495-85C00 | CLIP | 2 | 2 | • | |
| 19 | 85451-75100 | VLAVE, 2 WAY CHECK | . 1 | 1 | | |
| 20 | 89485-60A00 | CLAMP, CHECK VALVE | 1 | 1 | | |
| 21 | 02112-05083 | SCREW | 2 | 2 | | |
| 22 | 09354-54115-600 | HOSE | 1 | 1 7 | L:600>100 | |
| 23 | 09354-54115-600 | HOSE | 1 | 1 | L:600>140 | |
| 24 | 89496-85C00 | CLIP " | 8 | 8 | f | |
| 25 | 89430-61A10 | PIPE, EVAPORATION MAIN | 1 | 1 | | |
| 26 | 34810-85C00 | GAUGE ASSY, FUEL LEVEL | 1 | 1 | | |
| 27 | 34815-85C00 | .GASKET | 1 | 1 | | |
| 28 | 15329-85C00 | SCREW | 5 | 5 | | |
| 29 | 89311-66A10 | PROTECTOR, FUEL FILLER HOSE | 1 | 1 | | |
| 30 | 89316-85C00 | SCREW | 3 | . 3 | | |
| 31 | 89300-60802 | CYLINDER SET, FUEL LID LOCK | 1 | 1 | | |
| 32 | 09132-06008 | SCREW | 1 | 1 | | |


FIG. 191

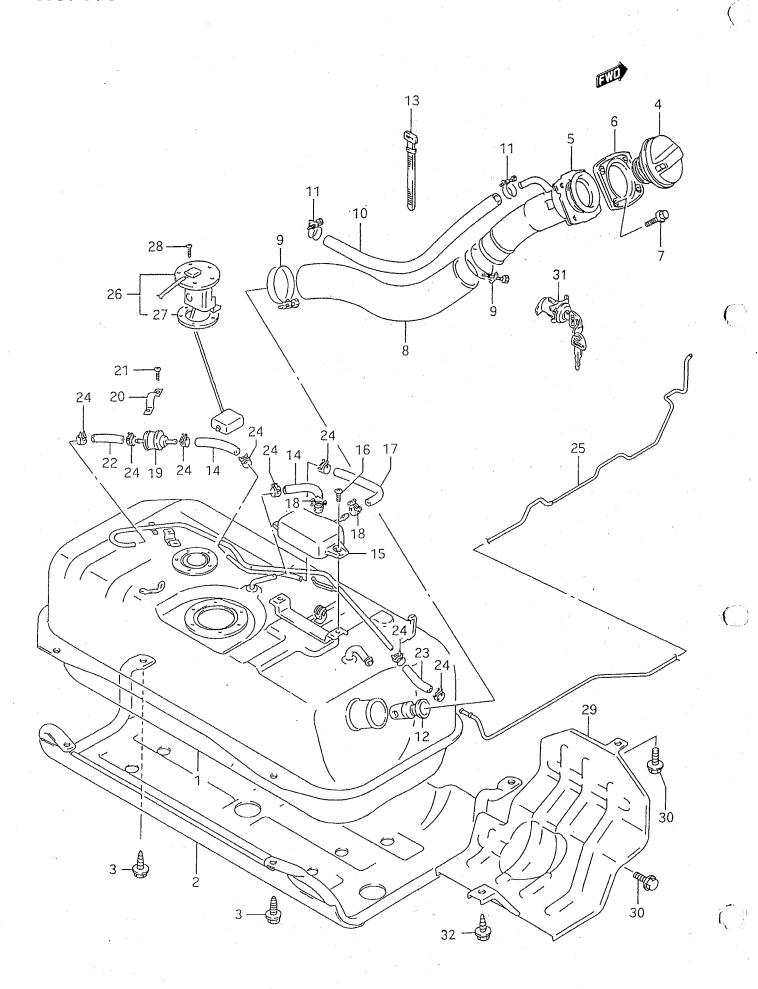

| REF. | | | Q, TY | | |
|------------|----------------------|-----------------------------|----------------|-----------|--|
| N.º | PART Nº | DESCRIPTION | CV | REMARKS | |
| | | | | | |
| 1 | 89101 <i>-57</i> B00 | TANK ASSY, FUEL | 1 | | |
| 2 | 89320-56B00 | PROTECTOR, FUEL TANK | 1 | | |
| 3 | 09118-10068 | BOLT (10X30) | 4 | | |
| 4 | 89260-65AB0 | CAP ASSY, FUEL FILLER | 1 | | |
| 5 | 89201-85C00 | NECK, FUEL FILLER | 1 | | |
| 6 | 89285-82000 | PACKING, FUEL FILLER NECK | 1 | | |
| 7 | 09116-05014 | BOLT | 4 | | |
| 8 | 89241-56B00 | HOSE, FUEL TANK FILLER | 1 | | |
| 9 | 89372-85C00 | CLAMP | 2 | | |
| 10 | 89291-56B00 | HOSE, TANK BREATHER | 1 | | |
| 11 | 89371-85C00 | CLAMP | 2 | | |
| 12 | 89280-60A00 | VLAVE, FUEL TANK INLET | 1 | | |
| 13 | 89285-85C00 | CLAMP | 1 | | |
| 14 | 09354-54115-600 | HOSE | 2 | L:600>140 | |
| 15 | 89411-60A01 | SEPARATOR, FUEL AND VAPOR | 1 | | |
| 16 | 02142-05083 | SCREW | 2 | | |
| 1 <i>7</i> | 09354-54115-600 | HOSE | 1 | L:600>125 | |
| 18 | 89495-85C00 | CLIP | ₀ 2 | | |
| 19 | 85451-75100 | VLAVE, 2 WAY CHECK | ` 1 | | |
| 20 | 89485-60A00 | CLAMP, CHECK VALVE | . 1 | | |
| 21 | 02112-05083 | SCREW | 2 | | |
| 22 | 09354-54115-600 | HOSE | 1 | L:600>100 | |
| 23 | 09354-54115-600 | HOSE | 1 | L:600>140 | |
| 24 | 89496-85C00 | CLIP | 8 | 3 | |
| 25 | 89430-56B00 | PIPE, EVAPORATION MAIN | 1 | | |
| 26 | 34810-85C00 | GAUGE ASSY, FUEL LEVEL | 1 | 1 | |
| 27 | 34815-85C00 | .GASKET | 1 | | |
| 28 | 15329-85C00 | SCREW | 5 | | |
| 29 | 89310-56B10 | PROTECTOR, FUEL FILLER HOSE | 1 | | |
| 30 | 01550-06103 | BOLT | 2 | | |
| 31 | 89300-60802 | CYLINDER SET, FUEL LID LOCK | 1 | | |
| 32 | 09132-06008 | SCREW | 1 | | |
| | | | | | |

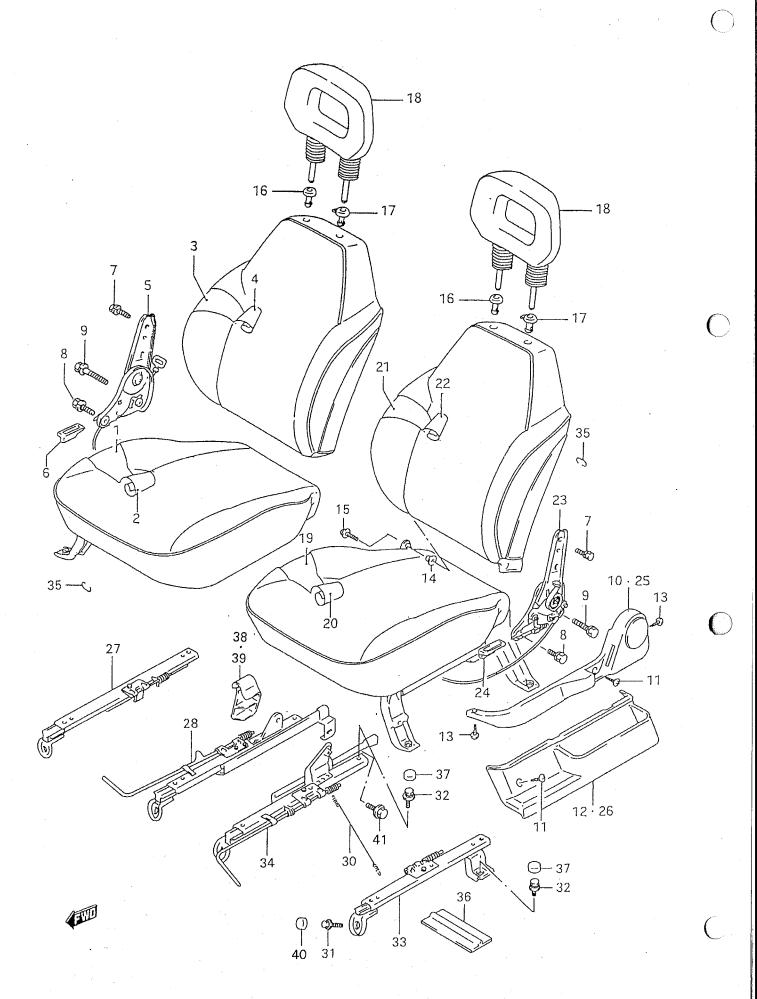


REF. PART Nº **DESCRIPTION REMARKS** N.º 85105-85C00 CUSHION SUB ASSY, RH 1 1 1 JA, JX 2-1 COVER, CUSHION RH 1 85180-85C00-TX2 JLX 2-2 85180-85C00-TX1 COVER, CUSHION RH 1 ĩ JX 2-3 85180-85C00-TX2 COVER, CUSHION RH 1 JLX 2-4 COVER, CUSHION RH 85180-85C00-TX1 3 85305-85C00 BACK SUB ASSY, RH 1 1 4-1 85380-85C00-TX2 COVER, BACK RH 1 JA, JX COVER, BACK RH JLX 4-2 85380-85C00-TX1 4-3 85380-85C00-TX2 COVER, BACK RH 1 JX 1 JLX 4-4 85380-85C00-TX1 COVER, BACK RH 5-1 85210-61A10 RECLINING ASSY, RH 1 1 LHD 5-2 RECLINING ASSY, RH 1 1 **RHD** 85210-60A50 1 KNOB, RECLINING RH (BLACK) 6 85211-60A10-5ES 1 4 7 4 01570-08163 **BOLT** 2 2 8 01570-10163 BOLT 9 2 2 01570-10403 BOLT 1 1 10 85221-60A10-5ES COVER, RECLINING RH (BLACK) 6 11 03241-05163 **SCREW** 12 85222-60A10-5ES COVER, SEAT SIDE RH (BLACK) 1 1 4 4 13 03241-05163 **SCREW** 2 2 14 85291-80290 BUSH, SEAT BACK FIXING 2 15 **SCREW** 2 09136-06004 2 85391-60A10-5PK GUIDE, HEADRESTRAINT RH 2 16 2 17 85890-60A10-5PK GUIDE, HEADRESTRAINT LH 2 2 2 HEADRESTRAINT ASSY (DARK GRAY) 18 86401-60A10-5GF 1 19 85106-85C00 CUSHION SUB ASSY, LH 1 COVER, CUSHION LH 1 JA, JX 20-1 85680-85C00-TX2 JLX 1 20-2 85680-85C00-TX1 COVER, CUSHION LH COVER, CUSHION LH 1 JX 20-3 85680-85C00-TX2 1 JLX 20-4 85680-85C00-TX1 COVER, CUSHION LH 21 85306-85C00 BACK SUB ASSY, LH 1 1 1 JA, JX 22-1 85380-85C00-TX2 COVER, BACK LH JLX COVER, BACK LH 22-2 85380-85C00-TX1 1 JX 22-3 85380-85C00-TX2 COVER, BACK LH 22-4 85380-85C00-TX1 COVER, BACK LH 1 JLX

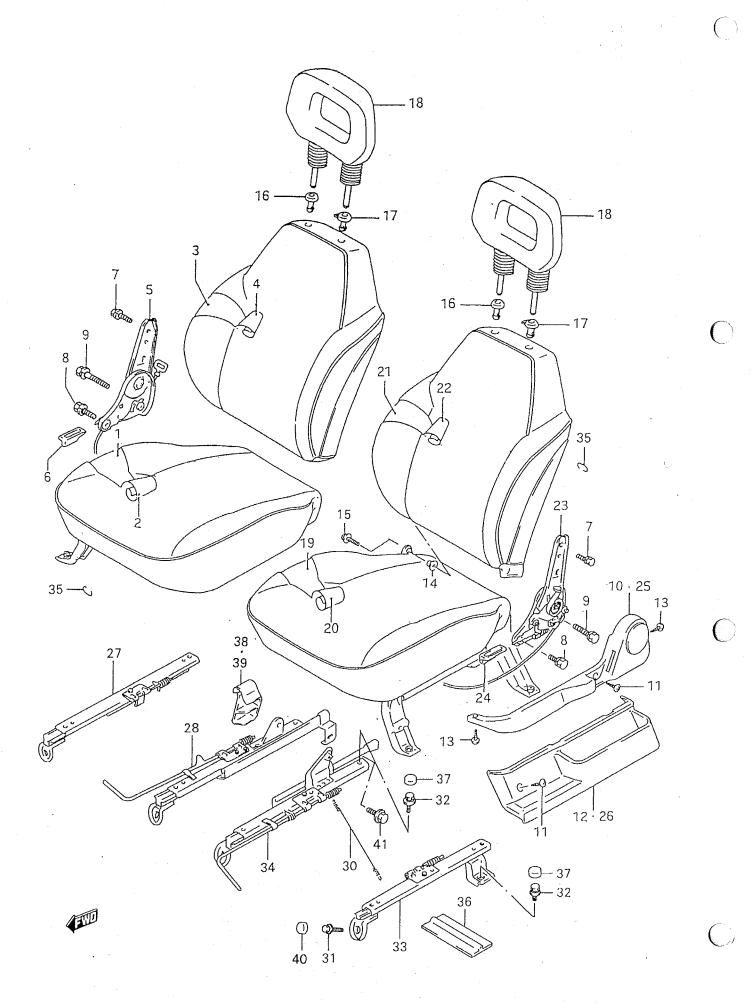


| REF. PART ALO | | | | TY | | |
|---------------|----------------------|-----------------------------|----|----|---------|--|
| N.º | PART Nº | DESCRIPTION | C | V | REMARKS | |
| | · | | | | | |
| 23-1 | 85710-60A50 | RECLINING ASSY, LH | 1 | 1 | LHD | |
| 23-2 | 8 <i>5</i> 710-61A10 | RECLINING ASSY, LH | 1 | 1 | RHD | |
| 24 | 85711-60A10-5ES | KNOB, RECLINING LH (BLACK) | 1 | 1 | | |
| 25 | 85721-60A10-5ES | COVER, RECLINING LH (BLACK) | 1 | 1 | | |
| 26 | 85722-60A10-5ES | COVER, SEAT SIDE LH (BLACK) | 1 | 1 | | |
| 27 | 86830-56B10 | ADJUSTER, RH SEAT OUTSIDE | 1 | 1. | | |
| 28-1 | 86610-70E00 | ADJUSTER, RH SEAT INSIDE | 1 | 1 | RHD | |
| 28-2 | 86610-70E10 | ADJUSTER, RH SEAT INSIDE | 1 | 1 | LHD | |
| 29 | 86724-60A00 | BOLT | 8 | 8 | | |
| 30 | 86731-60A00 | WIRE, ADJUSTER | 2 | 2 | | |
| 31 | 09118-08084 | BOLT (8X20) | 4 | 4 | | |
| 32 | 86726-85C00 | BOLT | 4 | 4 | | |
| 33 | 86630-56B10 | ADJUSTER, LH SEAT OUTSIDE | 1. | 1 | | |
| 34-1 | 86810-70E10 | ADJUSTER, LH SEAT INSIDE | 1 | 1 | RHD | |
| 34-2 | 86810-70E00 | ADJUSTER, LH SEAT INSIDE | 1 | 1 | LHD | |
| 35 | 09387-19001 | RING | AR | AR | | |
| 36 | 85198-70E00 | CLAMP, WALK IN CABLE | 1 | 1 | | |
| 37 | 86615-85C00 | CAP, SLIDE ADJUSTER | 4 | 4 | | |
| 38 | 86735-70E00 | COVER, ADJUSTER ANCHOR RH | 1 | 1 | • | |
| 39 | 86736-70E00 | COVER, ADJUSTER ANCHOR LH | 1 | 1 | | |
| 40 | 38315-60B10 | CAP, SLIDE ADJUSTER FRONT | 4 | 4 | | |
| 41 | 09103-10280 | BOLT | 2 | 2 | | |

FIG. 193

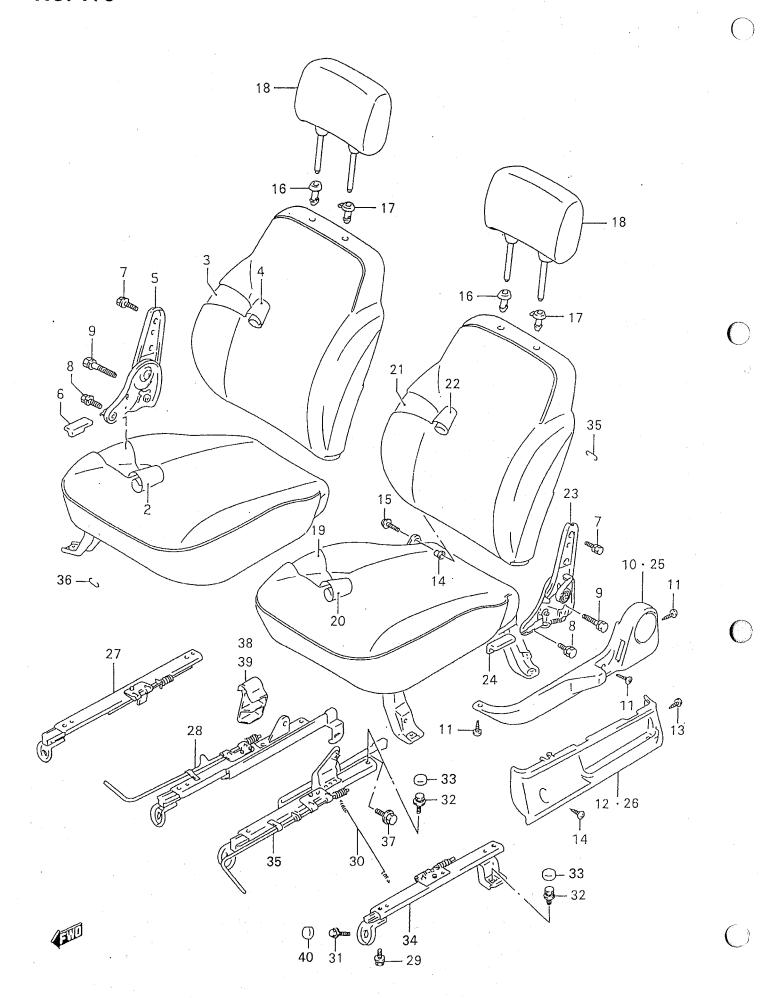


| REF. | | | (| Q, TY | |
|------------|--------------------------|-----------------------------|---|-------|---------|
| N.º | PART Nº | DESCRIPTION | | . V | REMARKS |
| | | | | | |
| 1 | 85105-86C00 | CUSHION SUB ASSY, RH | | 1 | |
| 2-1 | 85180-86C00-TX4 | COVER, CUSHION RH | | 1 | JX |
| 2-2 | 85180-86C00-TX4 | COVER, CUSHION RH | | 1 | JLX |
| 3 | 85305-86C00 | BACK SUB ASSY, RH | | 1 | |
| 4-1 | 85380-86C00-TX4 | COVER, BACK RH | | 1 | JX |
| 4-2 | 85380-86C00-TX4 | COVER, BACK RH | | 1 | JLX |
| 5 | 85210-60A50 | RECLINING ASSY, RH | • | 1 | |
| 6 | 85211-60A10- <i>5</i> ES | KNOB, RECLINING RH (BLACK) | | 1 | |
| 7 | 01 <i>57</i> 0-08163 | BOLT | | 4 | |
| 8 | 01 <i>57</i> 0-10163 | BOLT | | 2 | |
| 9 | 01 <i>57</i> 0-10403 | BOLT | | 2 | |
| 10 | 85221-60A10-5ES | COVER, RECLINING RH (BLACK) | | 1 | |
| 11 | 03241-05163 | SCREW | | 6 | |
| 12 | 85222-56B10-5ES | COVER, SEAT SIDE RH | | 1 | |
| 13 | 03241-05163 | SCREW | | 4 | |
| 14 | 85291-80290 | BUSH, SEAT BACK FIXING | | 2 | |
| 15 | 09136-06004 | SCREW (6X12) | | 2 | |
| 16 | 85341-72C10-5PK | GUIDE, HEADRESTRAINT RH | | 2 | |
| 1 <i>7</i> | 85840-72C10-5PK | GUIDE, HEADRESTRAINT LH | | 2 | |
| 18-1 | 86401-86C00-T95 | HEADRESTRAINT ASSY | | 2 | JX |
| 18-2 | 86401-86C00-T95 | HEADRESTRAINT ASSY | | 2 | JLX |
| 19 | 85106-86C00 | CUSHION SUB ASSY, LH | | 1 | |
| 20-1 | 85680-86C00-TX4 | COVER, CUSHION LH | | 1 | JX |
| 20-2 | 85680-86C00-TX4 | COVER, CUSHION LH | | 1 | JLX |
| 21 | 85306-86C00 | BACK SUB ASSY, LH | | 1 | |
| 22-1 | 85380-86C00-TX4 | COVER, BACK LH | | 1 | JX |
| 22-2 | 85380-86C00-TX4 | COVER, BACK LH | | 1 | JLX |

FIG. 193

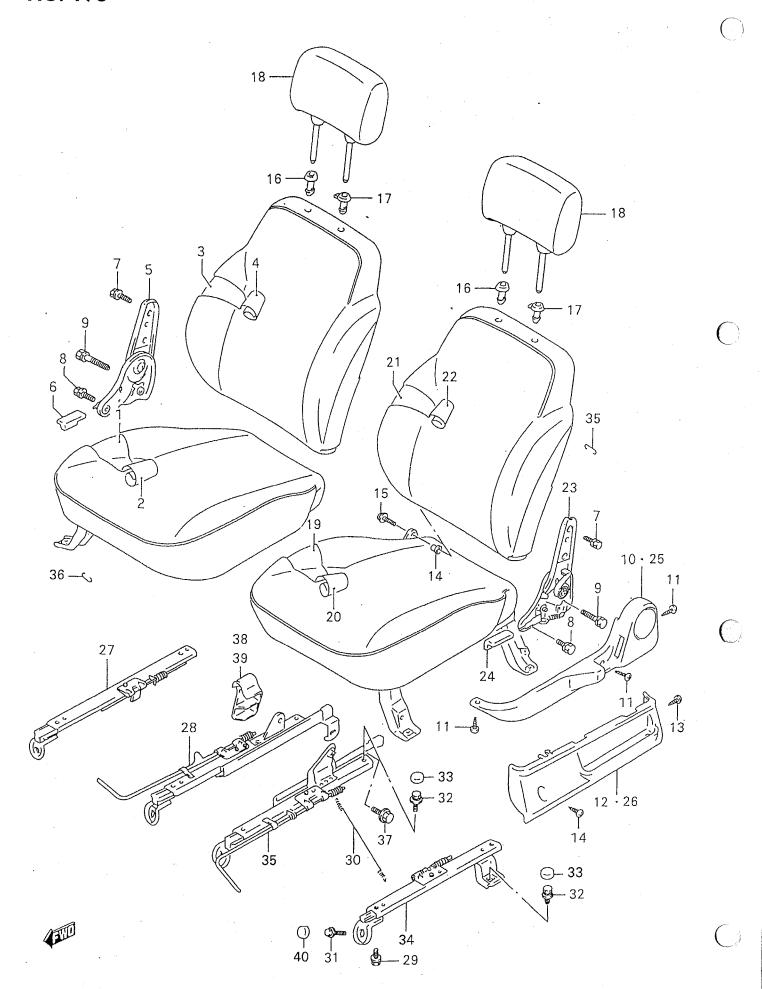


| | REF. | PART Nº | DECCRIPTION I | Q, TY | PELL (PLC) |
|---|------|----------------------|-----------------------------|-------|-------------|
| | N.º | PARI IN- | DESCRIPTION | C V | REMARKS |
| | | · . | | | · |
| | 23' | 85710-60A50 | RECLINING ASSY, LH | . 1 | |
| | 24 | 85711-60A10-5ES | KNOB, RECLINING LH (BLACK) | . 1 | |
| | 25 | 85721-60A10-5ES | COVER, RECLINING LH (BLACK) | 1 | |
| | 26 | 85722-56B10-5ES | COVER, SEAT SIDE LH (BLACK) | 1 | |
| | 27 | 86610-56B10 | ADJUSTER, RH SEAT OUTSIDE | 1 | |
| | 28 | 86610-70E00 | ADJUSTER, RH SEAT INSIDE | 1 | |
| | 29 | 86724-60A00 | BOLT | 8 | |
| | 30 | 86731-56B00 | WIRE, ADJUSTER | 2 | |
| | 31 | 09118-08084 | BOLT (8X20) | 4 | |
| | 32 | 86726-85C00 | BOLT | 4 | |
| 1 | 33 | 8661 <i>5-55</i> C00 | CAP | 2 | |
| | 34 | 86810-56B50 | ADJUSTER, LH SEAT OUTSIDE | 1 | |
| | 35 | 86810-70E00 | ADJUSTER, LH SEAT INSIDE | 1 | |
| | 36 | 09387-19001 | RING | AR | |
| | 37 | 09103-10280 | BOLT | 2 | |
| | 38 | 86735-70E00 | COVER, ADJUSTER ANCHOR RH | 1 | |
| | 39 | 86736-70E00 | COVER, ADJUSTER ANCHOR LH | 1 | |
| | 40 | 3831 <i>5</i> -60B10 | CAP, SLIDE ADJUSTER FRONT | 4 | |
| | | • | | | |

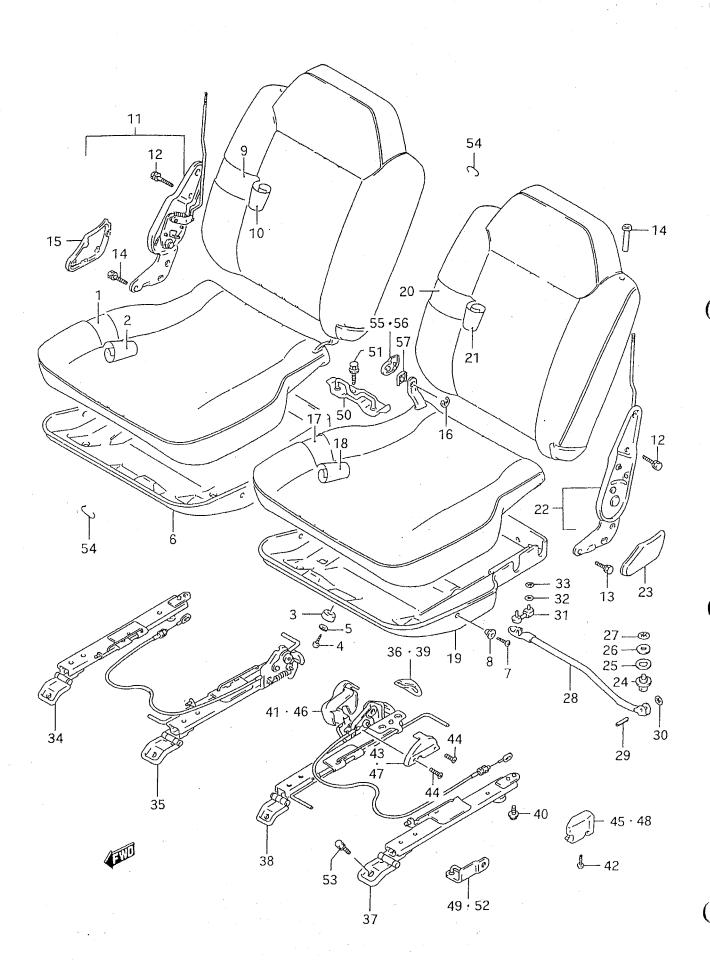

| REF. | | DESCRIPTION | | TY | . ' | |
|------|----------------------|-----------------------------------|---|-----|---------|--|
| N.º | PART Nº | | | ٧ | REMARKS | |
| | | | | | | |
| 1 | 87105-85C00 | CUSHION SUB ASSY, RH | 1 | 1 | | |
| 2-1 | 87180-85C00-TX3 | COVER, CUSHION RH | 1 | - | JA, JX | |
| 2-2 | 87180-85C00-TX1 | COVER, CUSHION RH | 1 | - | JLX | |
| 2-3 | 87180-85C00-TX3 | COVER, CUSHION RH | - | 1 | JX | |
| 2-4 | 87180-85C00-TX1 | COVER, CUSHION RH | - | 1 | JLX | |
| 3 | 87291-60A10 | CUSHION | 2 | 2 | | |
| 4 | 03241-05163 | SCREW | 2 | 2 | | |
| 5 | 08322-01053 | WASHER | 2 | 2 | | |
| 6 | 87191-60A51-5PK | BOARD, CUSHION UNDER RH (BLACK) | 1 | 1 | | |
| 7 | 02142-05163 | SCREW | 8 | 8 | | |
| 8 | 09169-06034 | WASHER | 8 | 8 | | |
| 9 | 87305-85C00 | BACK SUB ASSY, RH | 1 | 1 | | |
| 10-1 | 87380-85C00-TX3 | COVER, BACK RH | 1 | | JA, JX | |
| 10-2 | 87380-85C00-TX1 | COVER, BACK RH | 1 | - | JLX | |
| 10-3 | 87380-85C00-TX3 | COVER, BACK RH | - | 1 | JX | |
| 10-4 | 87380-85C00-TX1 | COVER, BACK RH | - | 1 | JLX | |
| 11 | 87210-60A12-5PK | RECLINING ASSY, RH | 1 | 1 . | | |
| 12 | 01 <i>57</i> 0-08163 | BOLT | 4 | 4 | | |
| 13 | 01 <i>5</i> 70-08163 | BOLT | 4 | 4 | | |
| 14 | 87211-60A10-5PK | KNOB, SEAT BACK (BLACK) | 2 | 2 | | |
| 15 | 87221-60A10-5PK | COVER, RECLINING LOWER RH (BLACK) | 1 | 1 | | |
| 16 | 08332-11086 | E RING | 2 | 2 | . • | |

FIG. 194

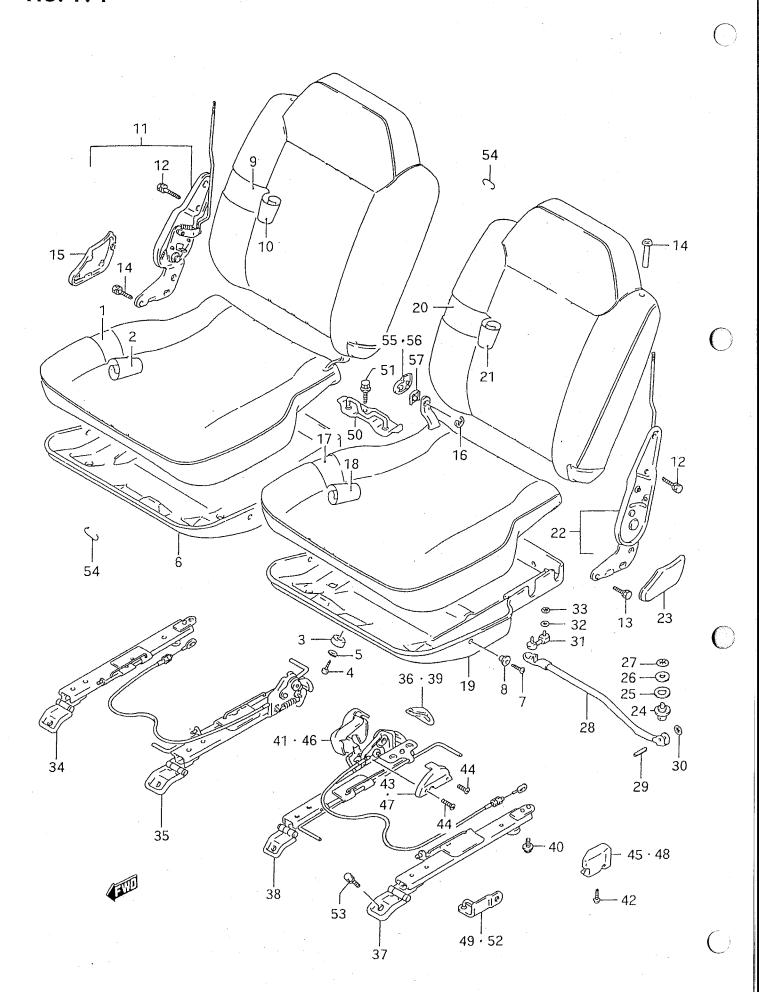

| REF. N.º | PART Nº | DESCRIPTION | Q, TY | | | |
|-------------|-----------------|-----------------------------------|-------|-----|---------|--|
| | | | С | ٧ | REMARKS | |
| 1.7 | 07107.05000 | CHICHION LOUIS ACOV, 111 | | - | | |
| 17 | 87106-85C00 | CUSHION SUB ASSY, LH | 1 | 1 | | |
| 18-1 | 87580-85C00-TX3 | COVER, CUSHION LH | 1 | - | JA, JX | |
| 18-2 | 87580-85C00-TX1 | COVER, CUSHION LH | 1 | - | JLX | |
| 18-3 | 87580-85C00-TX3 | COVER, CUSHION LH | - | 1 | JX | |
| 18-4 | 87580-85C00-TX1 | COVER, CUSHION LH | - | 1 | JLX | |
| 19 | 87591-60A51-5PK | BOARD, CUSHION UNDER LH (BLACK) | 1 | 1 | | |
| 20 | 87306-85C00 | BACK SUB ASSY, LH | 1 | 1 | | |
| 21 - 1 | 87780-85C00-TX3 | COVER, BACK LH | 1 | - | JA,JX | |
| 21 -2 | 87780-85C00-TX1 | COVER, BACK LH | 1 | - | JLX | |
| 21-3 | 87780-85C00-TX3 | COVER, BACK LH | - | 1 | JX | |
| 21 -4 | 87780-85C00-TX1 | COVER, BACK LH | _ | 1 | JLX | |
| 22 | 87610-60A12-5PK | RECLINING ASSY, LH | 1 | 1 | | |
| 23 | 87621-60A10-5PK | COVER, RECLINING LOWER LH (BLACK) | 1 | 1 | | |
| 24 | 87144-60A10 | PIN, STOPPER ROD | 2 | 2 | | |
| 25 | 87277-60A10 | WASHER | 2 | 2 | | |
| 26 | 08322-01083 | WASHER | 2 | 2 | | |
| 27 | 09148-08002 | NUT | 2 | . 2 | | |
| 28 | 87270-60A52 | ROD, SEAT STOPPER | 2 | 2 | | |
| 29 | 87278-60A11 | PIN | 2 | 2 | | |
| 30 | 09148-03004 | NUT | 2 | 2 | | |
| 31 | 87279-60A11 | HOLDER, STOPPER ROD | 2 | 2 | | |
| 32 | 08322-01063 | WASHER | 4 | 4 | | |
| 33 | 09148-06005 | NUT | 4 | 4 | | |


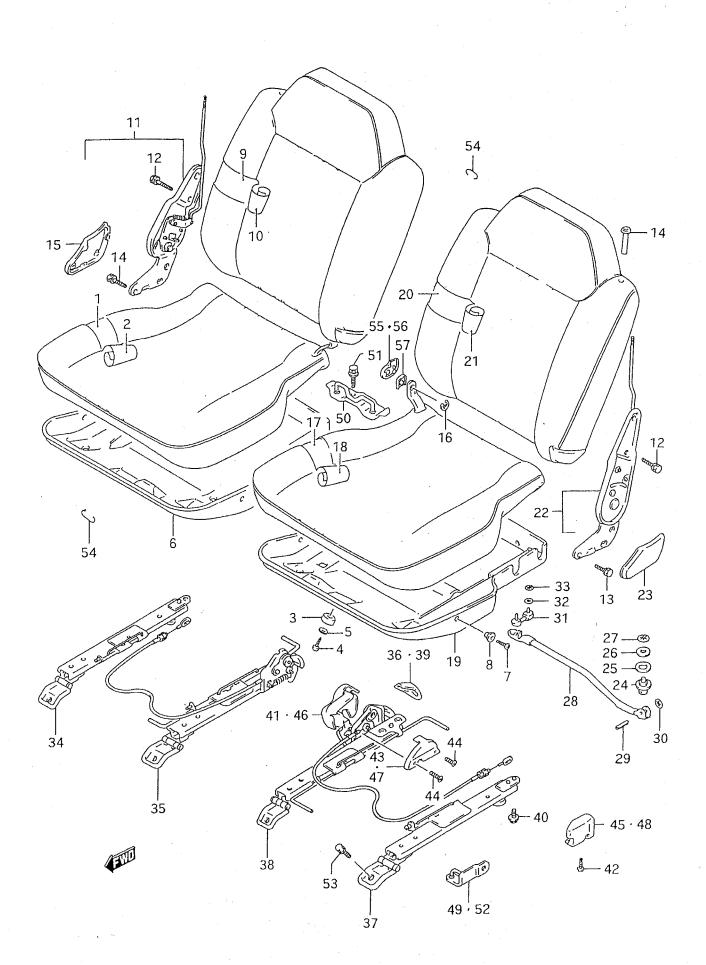


FIG. 194 (2-J-08) REAR SEAT (3DR)

| REF. N.º | PART Nº | DESCRIPTION | Q, TY | | • |
|-------------|----------------------|-----------------------------------|-------|----|---------|
| | | | С | ٧ | REMARKS |
| | | | | | |
| 34 | 87810-60A52 | ADJUSTER, RH SEAT OUTSIDE | 1 | 1 | |
| 35 | 87820-60A53 | ADJUSTER, RH SEAT INSIDE | 1 | 1 | |
| 36 | 87836-60A00-5PK | .KNOB, SEAT LOCK LEVER (BLACK) | 1 | 1 | |
| 37 | 87910-60A52 | ADJUSTER, LH SEAT OUTSIDE | 1 | 1 | |
| 38 | 87920-60A53 | ADJUSTER, LH SEAT INSIDE | 1 | 1 | |
| 39 | 87936-60A00-5PK | .KNOB, SEAT LOCK LEVER (BLACK) | 1 | 1 | |
| 40 | 01 <i>5</i> 70-08253 | BOLT | 8 | 8 | |
| 41 | 87831-60A10-5PK | COVER, SEAT LOCK OUTER RH (BLACK) | 1 | 1 | |
| 42 | 03211-05103 | SCREW | 2 | 2 | |
| 43 | 87834-60A10-5PK | COVER, SEAT LOCK INNER RH (BLACK) | 1 | 1 | |
| 44 | 03241-04123 | SCREW | 4 | 4 | |
| 45 | 87835-60A10-5PK | COVER, SEAT OUTER LOCK RH (BLACK) | 1 | 1 | |
| 46 | 87931-60A10-5PK | COVER, SEAT LOCK OUTER LH (BLACK) | 1 | 1 | |
| 47 | 87934-60A10-5PK | COVER, SEAT LOCK INNER LH (BLACK) | 1 | 1 | |
| 48 | 87935-60A10-5PK | COVER, SEAT OUTER LOCK LH (BLACK) | 1 | 1 | |
| 49 | 87840-60A10 | STRIKER, LOCK OUTER RH | 1 | 1 | |
| 50 | 87890-60A11 | STRIKER, LOCK | 1 | 1 | |
| 51 | 01550-10203 | BOLT | 2 | 2 | |
| 52 | 87940-85C00 | STRIKER, LOCK OUTER LH | 1 | 1 | |
| 53 | 01550-08163 | BOLT | 8 | 8 | |
| 54 | 09387-19001 | RING | AR | AR | |
| 55 | 87399-60A10 | PROTECTOR, BACK HINGE RH | 1 | 1 | |
| 56 | 87799-60A10 | PROTECTOR, BACK HINGE LH | 7 | 1 | |
| 57 | 87299-60A10 | PROTECTOR, CUSHION HINGE | 2 | 2 | |

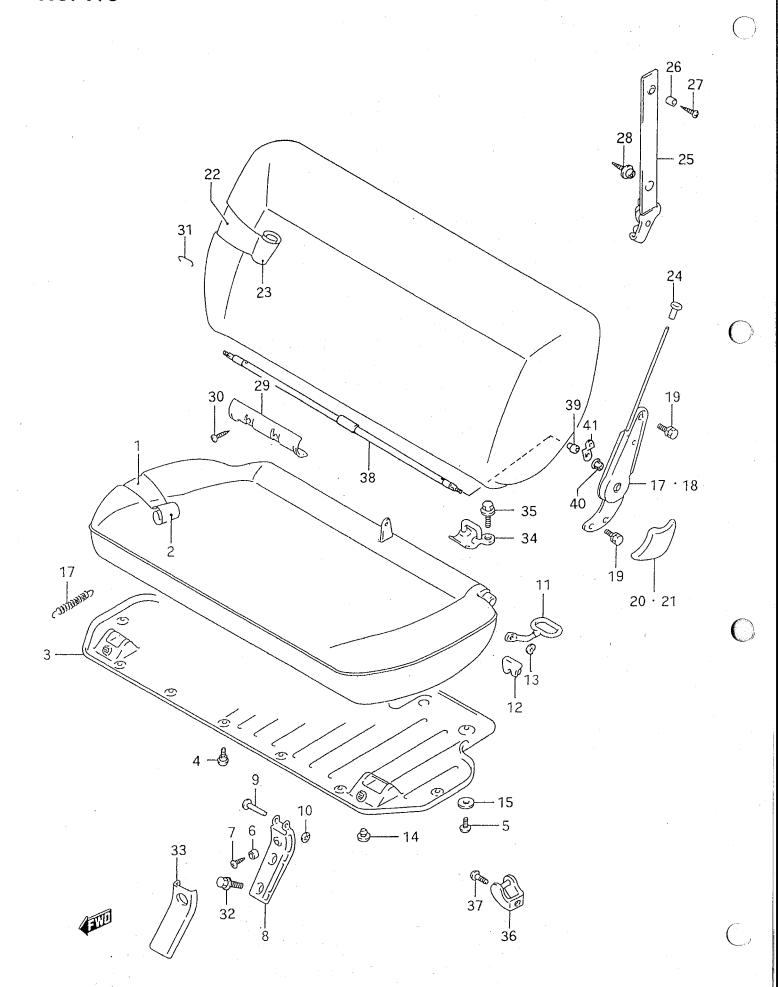

| REF. | PART Nº | DESCRIPTION | Q, TY | • |
|-----------------|-----------------|---|-------|---------|
| N' ₅ | | | CV | REMARKS |
| | | | | |
| 1 | 87105-56BA1 | CUSHION SUB ASSY, SEAT | .] | |
| 2 | 87180-86C00-TX5 | COVER, CUSHION | 1 | |
| 3 | 87191-56B11-5PK | BOARD, CUSHION UNDER (BLACK) | 1 | |
| 4 | 87198-56B10 | SCREW, CUSHION BOARD | 9 | |
| 5 | 02142-06163 | SCREW | 2 | |
| 6 | 87196-83000 | CUSHION | 2 | |
| 7 | 03241-05103 | SCREW | 2 | |
| . 8 | 87250-56B10 | MALE, REAR SEAT HINGE | 2 | , |
| 9 | 87259-56B10 | PIN | 2 | |
| 10 | 09148-06005 | NUT | 2 | |
| 11 | 87281-56B10 | HANDLE, SEAT LOCK | 1 | |
| 12 | 87199-56B10 | PROTECTOR, SEAT LOCK HANDLE | 1 | |
| 13 | 09148-06005 | NUT | 1 | |
| 14 | 87292-65C10 | CUSHION, SEAT LOCK | 2 | |
| 15 | 87292-60A30 | CUSHION, SEAT STOPPER | 2 | |
| 16 | 09443-14015 | SPRING | 1 | |
| 1 <i>7</i> | 87210-56B50 | HINGE, SEAT BACK RH | 1 | |
| 18 | 87610-56B50 | HINGE, SEAT BACK LH | 1 | |
| 19 | 01570-08163 | BOLT | 8 | |
| 20 | 87221-56B10-5PK | COVER, SEAT RECLINING LOWER RH (BLACK) | 1 | |
| 21 | 87621-56B10-5PK | COVER, SEAT RECLINING LOWER LH (BLACK) | . 1 | |
| 22 | 87305-56B51 | BACK SUB ASSY, SEAT | 1 | |
| 23 | 87380-86C00-TX5 | COVER, BACK | 1 | |
| 24 | 87211-60A10-5PK | KNOB, SEAT RECLINING (BLACK) | 2 | 1 |
| 25 | 87270-56B10 | BAND, SEAT STOPPER | 1 | |
| 26 | 87327-83000 | COLLAR, STOPPER BAND | 1 | |
| 27 | 03241-05163 | SCREW | 1 | |
| 28 | 09410-00073 | CLIP | . 1 | |


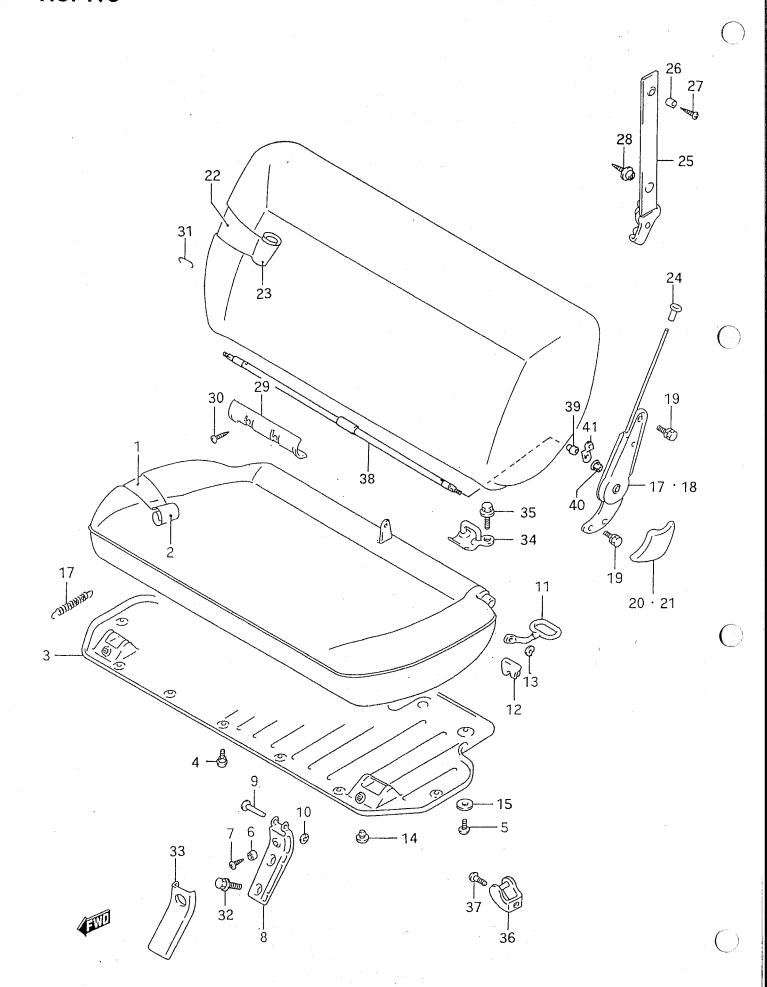


FIG. 195 (2-J-10) REAR SEAT (5DR:BENCH SEAT)

| PART Nº | DESCRIPTION | Q, TY | |
|-----------------|--|--|-------------------------------|
| | | C V | REMARKS |
| | | | |
| 87495-56B10-5PK | BOX, SEAT BELT KEEP (BLACK) | . 1 | |
| 59941-85C00 | SCREW | 2 | |
| 09387-19001 | RING | AR | |
| 01550-08163 | BOLT | 4 | |
| 87264-56B10-5PK | COVER, SEAT HINGE MALE (BLACK) | 2 | |
| 87890-56B10 | STRIKER, SEAT LOCK | 2 | |
| 01550-10203 | BOLT | 4 | |
| 87831-56B10 | HANGER, SEAT STOPPER BAND | 1 | |
| 02122-06203 | SCREW | 1 . | |
| 87230-56B50 | ROD, SEAT HINGE LINK | 1 | |
| 87233-85720 | BUSH | 2 | |
| 08319-31063 | NUT | 2 | |
| 87236-85720 | PLATE | 2 | |
| | 87495-56B10-5PK 59941-85C00 09387-19001 01550-08163 87264-56B10-5PK 87890-56B10 01550-10203 87831-56B10 02122-06203 87230-56B50 87233-85720 08319-31063 | 87495-56B10-5PK BOX, SEAT BELT KEEP (BLACK) 59941-85C00 SCREW 09387-19001 RING 01550-08163 BOLT 87264-56B10-5PK COVER, SEAT HINGE MALE (BLACK) 87890-56B10 STRIKER, SEAT LOCK 01550-10203 BOLT 87831-56B10 HANGER, SEAT STOPPER BAND 02122-06203 SCREW 87230-56B50 ROD, SEAT HINGE LINK 87233-85720 BUSH 08319-31063 NUT | ## PART N° DESCRIPTION C V |

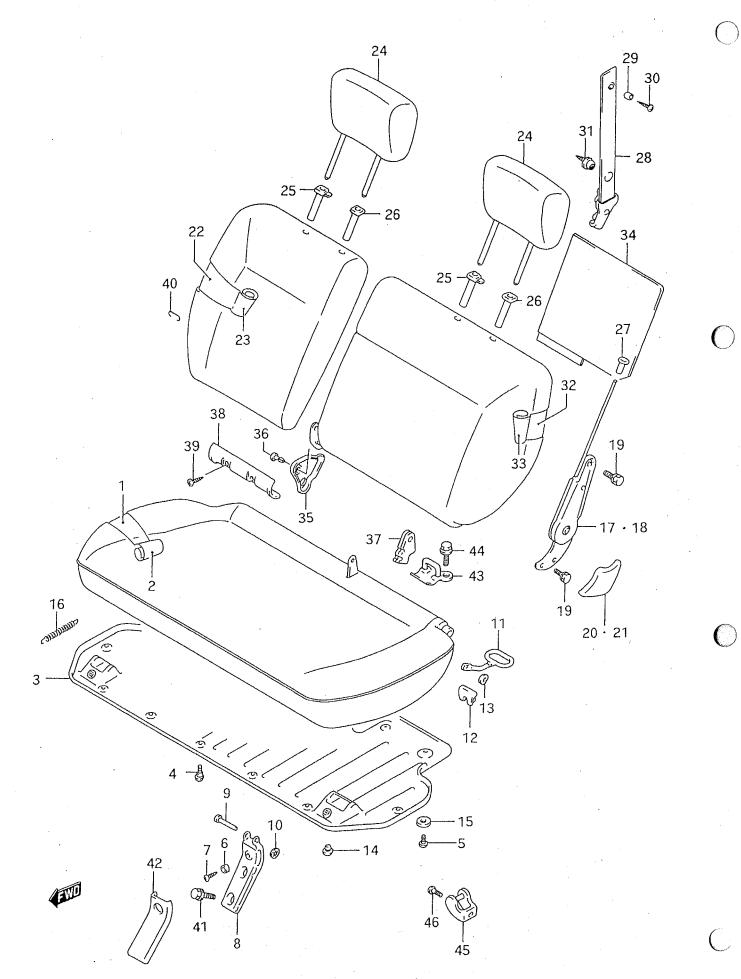

| REF. | PART Nº | DESCRIPTION | Q, | TY | | DELLA DICC |
|------------|----------------------|-------------------------------------|----|----|-----|------------|
| N.º | | DESCRIPTION | С | ٧ | | REMARKS |
| | | | | | | |
| 1 | 87105-56BB1 | CUSHION SUB ASSY, SEAT | | 1 | | |
| 2 | 87180-86C00-TX4 | COVER, CUSHION | | 1. | JLX | |
| 3 | 87191-56B11-5PK | BOARD, SEAT CUSHION UNDER (BLACK) | | 1 | | |
| 4 | 87198-56B10 | SCREW, CUSHION BOARD | | 9 | | |
| 5 | 02142-06163 | SCREW | | 2 | | |
| 6 | 87196-83000 | CUSHION | | 2 | | |
| 7 | 03241-05103 | SCREW | | 2 | | |
| 8 | 87250-56B10 | MALE, REAR SEAT HINGE | | 2 | | |
| 9 | 87259-56B10 | PIN, REAR SEAT HINGE | | 2 | | |
| 10 | 09148-06005 | NUT | | 2 | | |
| 11 | 87281-56B10 | HANDLE, SEAT LOCK | | 1 | | |
| 12 | 87199-56B10 | PROTECTOR, SEAT LOCK HANDLE | | 1 | | |
| 13 | 09148-06005 | NUT | | 1 | | |
| 14 | 87292-65C10 | CUSHION, SEAT LOCK | | 2 | | |
| 15 | 87292-60A30 | CUSHION, SEAT STOPPER | | 2 | | |
| 16 | 09443-14015 | SPRING | | 1 | | |
| 1 <i>7</i> | 87210-56B10 | HINGE, SEAT BACK RH | | 1. | | |
| 18 | 87610-56B10 | HINGE, SEAT BACK LH | | 1 | | |
| 19 | 01 <i>57</i> 0-08163 | BOLT | | 8 | | |
| 20 | 87221-56B10-5PK | COVER, SEAT RECLINING LOWER (BLACK) | | 1 | | |
| 21 | 87621-56B10-5PK | COVER, SEAT RECLINING LOWER (BLACK) | | 1 | | |
| 22 | 87305-56B11 | BACK SUB ASSY, RH | | 1 | | |
| 23 | 87380-86C00-TX4 | COVER, BACK RH | | 1 | JLX | |
| 24 | 86401-86C20-T95 | KNOB, SEAT RECLINING (BLACK) | | 2 | JLX | |
| 25 | 85341-72C10-5PK | GUIDE, HEADRESTRAINT RH (BLACK) | | 2 | JL | |
| 26 | 85840-72C10-5PK | GUIDE, HEADRESTRAINT LH (BLACK) | | 1 | | |
| 27 | 87211-60A10-5PK | KNOB, REAR SEAT RECLINING (BLACK) | | 2 | | |
| 28 | 87270-56B10 | BAND, REAR SEAT STOPPER | | 1 | | |
| 29 | 87327-83000 | COLLAR, SEAT STOPPER BAND | | 1 | | |
| 30 | 59941-85C00 | SCREW | | 1 | | |
| 31 | 09410-00073 | CLIP | | 1 | | |

FIG. 196


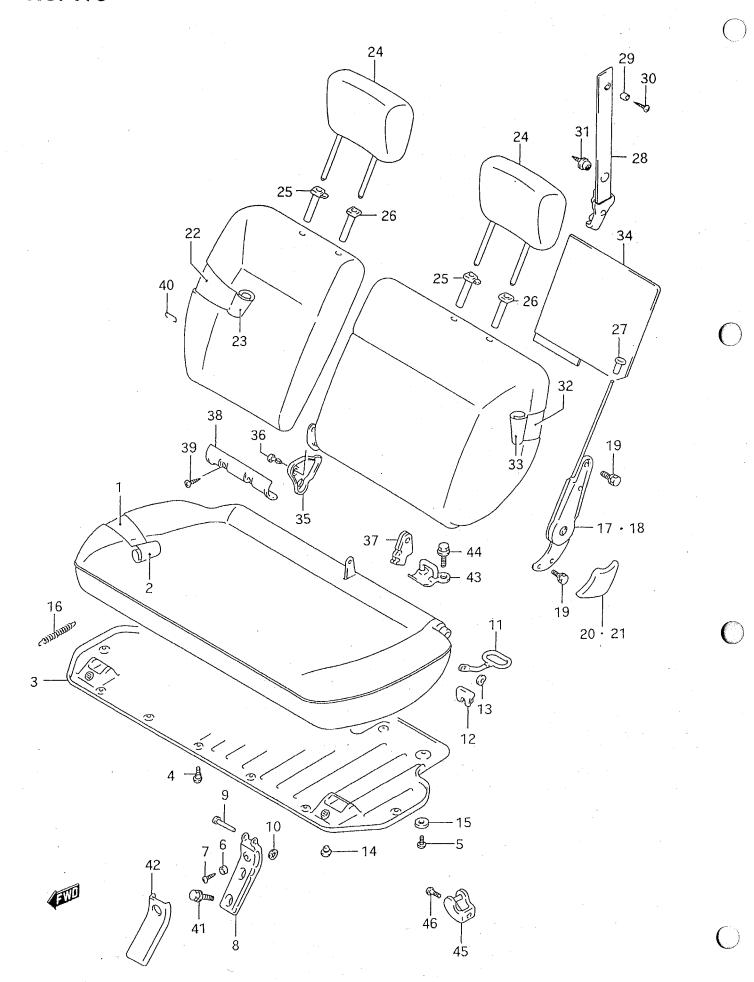


FIG. 196 (2-J-12) (5DR: SEPARATE SEAT) JLX


| REF. | DADT NIO | | Q, | TY | |
|------|-----------------|----------------------------------|----|----|---------|
| N.º | PART Nº | DESCRIPTION | С | V | REMARKS |
| | | · | | | |
| 32 | 87306-56B10 | BACK SUB ASSY, LH | | 1 | |
| 33 | 87780-86C00-TX4 | COVER, BACK LH | | 1 | JLX |
| 34 | 87789-56B11 | BOARD, SEAT BACK UNDER | | 1 | |
| 35 | 87399-56B10-5PK | COVER, REAR SEAT INNER HINGE | | 1 | |
| | | (BLACK) | | | |
| 36 | 87799-56B10 | BUSH, REAR SEAT INNER HINGE | | 1 | |
| 37 | 87299-56B10-5PK | PROTECTOR, INNER HINGE (BLACK) | | 1 | |
| 38 | 87495-56B10-5PK | BOX, REAR SEAT BELT KEEP (BLACK) | | 1 | |
| 39 | 59941-85C00 | SCREW | | 2 | |
| 40 | 09387-19001 | RING | | AR | |
| 41 | 01550-08163 | BOLT | - | 4 | |
| 42 | 87264-56B10-5PK | COVER, REAR SEAT HINGE MALE | | 2 | |
| | | (BLACK) | | | |
| 43 | 87890-56B10 | STRIKER, REAR SEAT LOCK | | 2 | |
| 44 | 01550-10203 | BOLT | | 4 | |
| 45 | 87831-56B10 | HANGER, REAR SEAT STOPPER BAND | | 1 | |
| 46 | 02122-06203 | SCREW | | 1 | |

FIG. 197

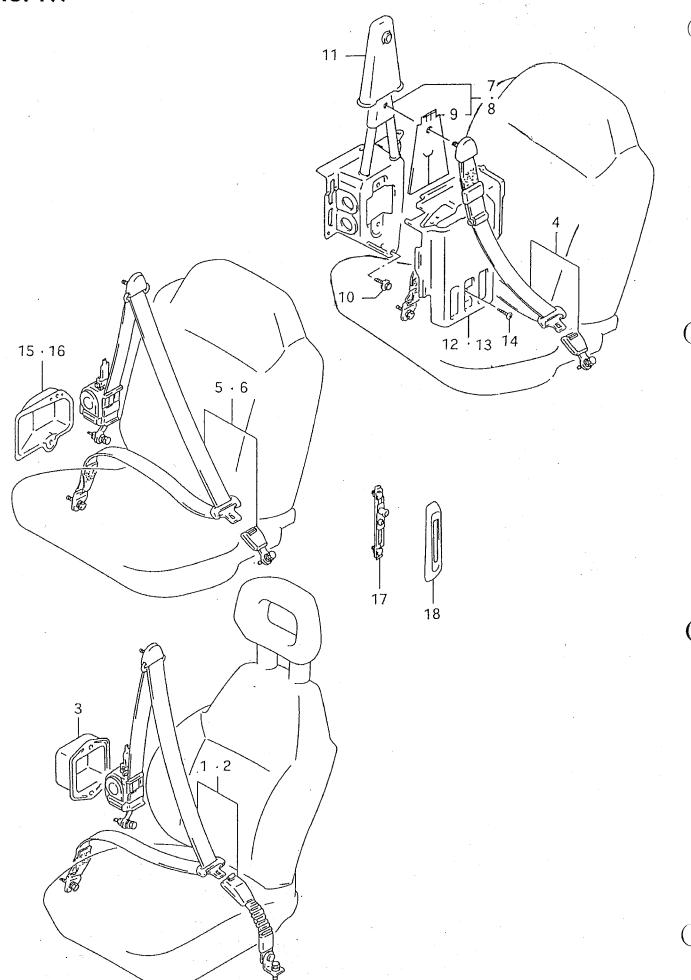


| REF. | | | Q, | TY | | |
|------|------|-----------------|----------------------------------|----|-----|----------------------------|
| | N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS |
| | | 0.4007.05500 | PELT AGOV ED ONE DIA (DI A CIA) | | | |
| |]-] | 84901-85C30 | BELT ASSY, FRONT RH (BLACK) | 1. | 1 | JA, JX |
| | 1 -2 | 84901-85C20 | BELT ASSY, FRONT RH (BLACK) | 1 | 1 | JLX |
| | 2-1 | 84902-85C30 | BELT ASSY, FRONT LH (BLACK) | 1 | 1 | JA, JX |
| | 2-2 | 84902-85C20 | BELT ASSY, FRONT LH (BLACK) | | . 1 | JLX |
| | 3 | 84924-63A10 | COVER, ELR DUST | 2 | 2 | |
| | 4 | 84904-85C00 | BELT ASSY, REAR (BLACK) | 2 | - | |
| | 5-1 | 84904-85C10 | BELT ASSY, REAR RH (BLACK) | - | 1 | JX |
| | 5-2 | 84904-85C30 | BELT ASSY, REAR RH (BLACK) | - | 1 | JLX |
| | 6-1 | 84905-85C10 | BELT ASSY, REAR LH (BLACK) | - | 1 | JX |
| | 6-2 | 84905-85C30 | BELT ASSY, REAR LH (BLACK) | - | 1 | JLX |
| | 7 | 87850-60A50 | STAY, REAR SHOULDER ANCHOR RH | 1 | | |
| | 8 | 87860-60A50 | STAY, REAR SHOULDER ANCHOR LH | 1 | - | |
| | 9 | 84958-60A10 | .PAD, REAR SHOULDER ANCHOR | 2 | - | |
| | 10 | 01550-08163 | BOLT | 8 | - | $\epsilon_{ij} = \epsilon$ |
| | 11 | 84955-85C10-5ES | COVER, SHOULDER ANC (BLACK) | 2 | - | |
| | 12 | 84956-85C10-5ES | TRIM, SHOULDER ANC RH (BLACK) | 1 | - | |
| | 13 | 84966-85C10-5ES | TRIM, SHOULDER ANC LH (BLACK) | 1 | - | |
| | 14 | 03241-16163 | SCREW | 2 | - | |
| | 15 | 84925-61A10 | COVER, REAR BELT ELR DUST RH | _ | 1 | |
| | 16 | 84926-61A10 | COVER, REAR BELT ELR DUST LH | - | 1 | |
| | 17 | 84991-70E00-5ES | ADJUSTER, FRONT SHOULDER (BLACK) | 2 | 2 | |
| | 18 | 84992-50E00-5ES | COVER, ADJUSTER (BLACK) | 2 | 2 | |
| | • • | | = = | _ | _ | |


FIG. 198

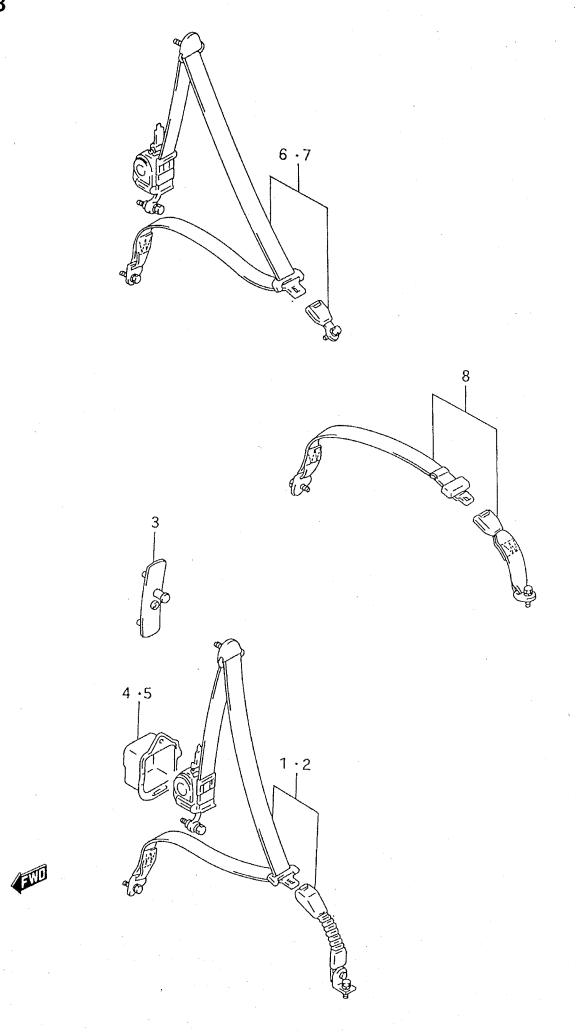


| REF. | m. m | | Q, TY | |
|------|--------------------------|---------------------------------|-------|-----------|
| N.º | PART Nº | DESCRIPTION | C V | REMARKS |
| | | · | | |
| , 1 | 84901- <i>57</i> B70-5FJ | BELT ASSY, FRONT RH (BLACK) | . 1 | |
| 2 | 84902-57B70-5FJ | BELT ASSY, FRONT LH (BLACK) | 1 | |
| 3 | 84990-60B00-5ES | ADJUSTER, BELT SHOULDER (BLACK) | 2 | |
| 4 | 84924-56B10 | COVER, ELR DUST RH | 1 | |
| 5 | 84925-56B10 | COVER, ELR DUST LH | 7 | |
| 6-1 | 84904-57B70-5FJ | BELT ASSY, REAR RH (BLACK) | 1 | JX |
| 6-2 | 84904-57B60-5FJ | BELT ASSY, REAR RH (BLACK) | 1 | JLX |
| 7-1 | 84905-57B70-5FJ | BELT ASSY, REAR LH (BLACK) | 1 | JX |
| 7-2 | 84905-57B60-5FJ | BELT ASSY, REAR LH (BLACK) | 1 | JLX |
| 8 | 84906-56B41-5FJ | BELT ASSY, REAR CENTER (BLACK) | 1 | » · · · · |

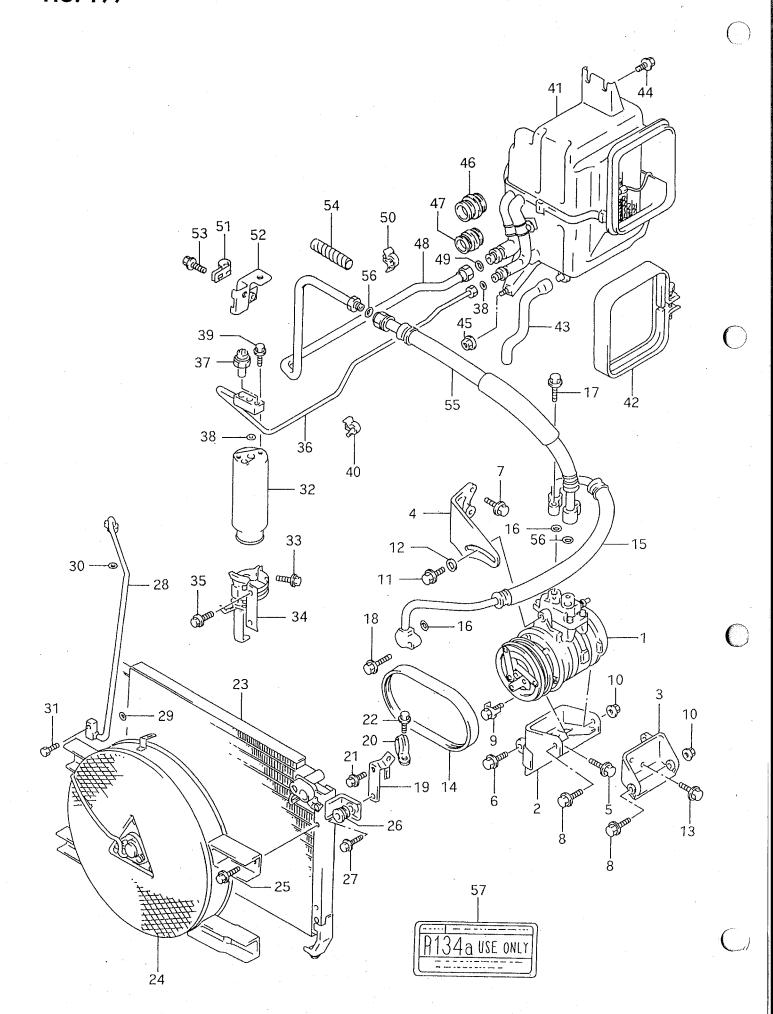

| REF. | | | Q, TY | | | |
|-------------|-------------------------------|----------------------------|------------|-----|------------------------|--|
| N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS | |
| 00000 | 25000 (7400 | | | | | |
| 00000 | 95000-67A2 0 | AIR CONDITIONER SET | | | 3DR:2 VALVE | |
| | | | | | M/POWER | |
| 00000 | 95000-67A3 4 | AIR CONDITIONER SET | | | STEERING | |
| 00000 | 73000-07 A3 4 | AIR CONDITIONER SET | | | 3DR:2 VALVE W/POWER | |
| | | | | | STEERING | |
| 00000 | 95000-68AM0 | AIR CONDITIONER SET | | | 3DR:4 VALVE | |
| 00000 | 95000-59BB0 | AIR CONDITIONER SET | | | 5DR | |
| 1-1 | 95200-67A50 | COMPRESSOR & MAGNET CLUTCH | 1 | 1 | 3DR | |
| 1-2 | 95200-67A60 | COMPRESSOR & MAGNET CLUTCH | - | 1 | 5DR | |
| 2 | 95110-56B51 | BRACKET, COMPRESSOR | 1 | 1 | N/POWER | |
| | | , | | • | STEERING | |
| 3 | 95130-57B50 | BRACKET, COMPRESSOR | 1 | 1 | W/POWER | |
| | | | | | STEERING | |
| 4-1 | 95120-56B50 | STAY, COMPRESSOR | 1 | 1 | 2 VALVE | |
| 4-2 | 95120- <i>57</i> B50 | STAY, COMPRESSOR | 1 | 1 | 4 VALVE | |
| 5 | 09103-10209 | BOLT, BRACKET (10X23) | 2 | 2 | | |
| 6 | 01550-08203 | BOLT | 1 | 1 | | |
| <i>7-</i> 1 | 01550-08203 | BOLT | 2 | 2 | 2 VALVE | |
| 7-2 | 01 <i>55</i> 0-08303 | BOLT | · <u>-</u> | 2 | 4 VALVE | |
| 8 | 01 <i>55</i> 0-08253 | BOLT | 1 | 1 | | |
| 9 | 95911-82000 | BOLT, COMPRESSOR | 1 | 1 | | |
| 10 | 08316-10083 | NUT | 1 | 1 | | |
| 11-1 | 09103-08247 | BOLT (8X23) | 1 | 7 | 2 VALVE | |
| 11-2 | 01550-08253 | BOLT | 1 | 1 | 4 VALVE | |
| 12 | 09160-08093 | WASHER | 1 | 1 | | |
| 13 | 01 <i>55</i> 0-082 <i>5</i> 3 | BOLT | - | 3 | W/POWER | |
| _ , _ | | | | | STEERING | |
| 14-1 | 95141-57B50 | V BELT (4PK820) | 1 | 1 | N/POWER | |
| 7 / 0 | 0=1/10=0/10 | | _ | _ | STEERING | |
| 14-2 | 95141-85C60 | V BELT (4PK935) | 1 | 1 . | 3DR,W/POWER | |
| 1.4.0 | 051 /1 575 /0 |) / PELT / (PKO00) | | 4 | STEERING | |
| 14-3 | 95141-57B60 | V BELT (4PK930) | - | 1 | 5DR | |

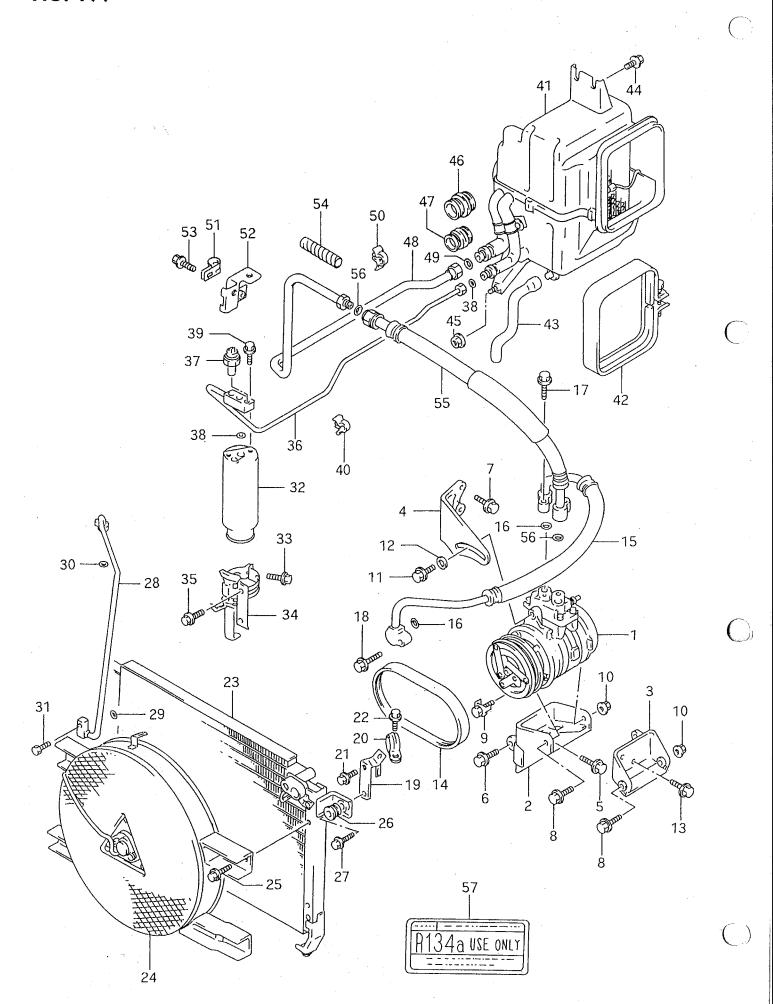


| REF. BART NO | | | Q, | TY | |
|--------------|----------------------|------------------------------------|----|----|---------------------------------------|
| N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS |
| 15-1 | 95720-67A50 | HOSE COMPRESSOR DISCHARGE | 1 | 1 | O \ / \ I \ / E |
| 15-2 | 95720-68A50 | HOSE, COMPRESSOR DISCHARGE | 1 | 1 | 2 VALVE |
| 16 | 95895-50G00 | HOSE, COMPRESSOR DISCHARGE .O RING | 1 | 1 | 4 VALVE |
| 1 <i>7</i> | 01550-06253 | BOLT | 2 | 2 | |
| 18 | 01550-06403 | BOLT | 2 | 2 | |
| 18 19-1 | 95772-60A50 | | 1 | 1 | · · · · · · · · · · · · · · · · · · · |
| 19-2 | 95772-57B50 | STAY, HOSE CLAMP | 1 | 1 | 2 VALVE |
| 20 | 95772-82010 | STAY, HOSE CLAMP |] |] | 4 VALVE |
| 21 | 01550-06123 | CLAMP, DISCHARGE HOSE | 1 | 1 | |
| 22 | 01550-06163 | BOLT | 1 | 1 | |
| 23-1 | 95310-67A50 | BOLT | 1 | 1 | 000 |
| 23-1 | | CONDENSER | ı | 1 | 3DR |
| 23-2 24-1 | 95310-58B50 | CONDENSER | - | 1 | 5DR |
| | 95320-67A41 | FAN ASSY | 1 | 1 | 2 VALVE |
| 24-2 | 95320-57B51 | FAN ASSY | 1 | 1 | 4 VALVE |
| 25 | 01570-06123 | BOLT | 4 | 4 | |
| 26 | 95920-86400 | BUSH | - | 2 | 5DR |
| 27-1 | 01550-06123 | BOLT | 4 | 4 | 3DR |
| 27-2 | 01550-06303 | BOLT | - | 2 | 5DR |
| 28 | 95733-67A50 | PIPE, RECEIVER DRYER INLET | 1 | 1 | |
| 29 | 95895-50G00 | .O RING | 1 | 1 | |
| 30 | 95891-50G00 | O RING | 1 | 1 | |
| 31 | 01 <i>55</i> 0-06403 | BOLT | 1 | 1 | |
| 32 | 95330-71B20 | RECEIVER DRYER | 1 | 1 | |
| 33 . | 01550-06203 | BOLT | 1 | 1 | |
| 34 | 95930-60A50 | BRACKET, RECEIVER DRYER | 1 | 1 | |
| 35 | 01550-06123 | BOLT | 1 | 1 | <i>t</i> |

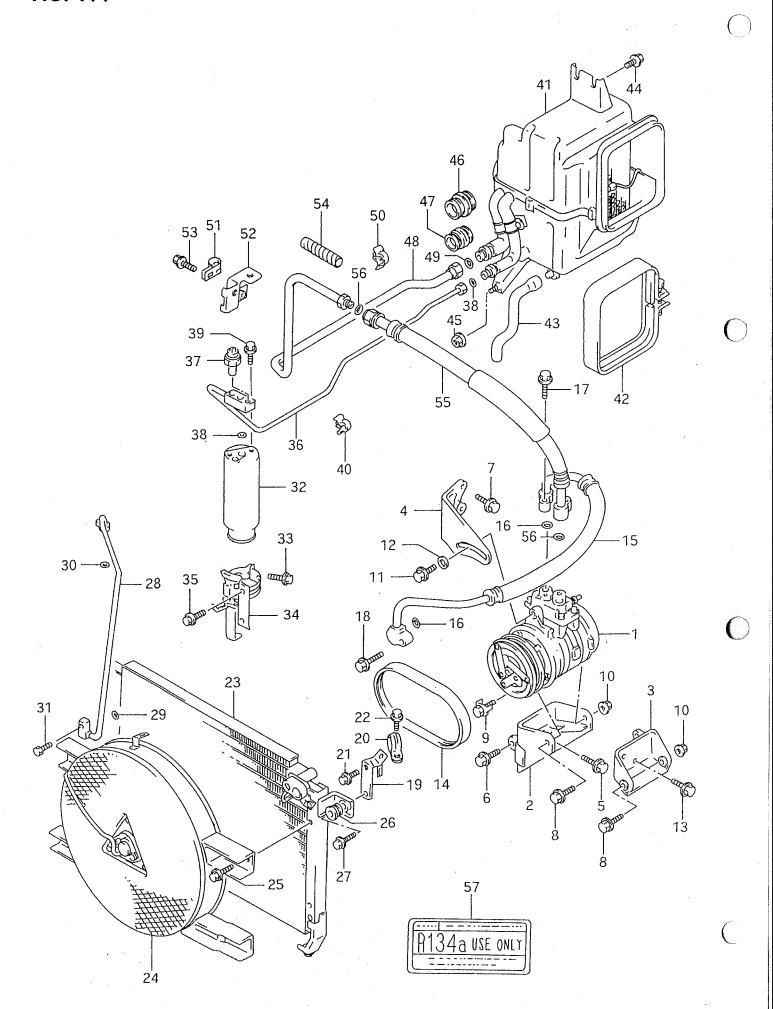


| REF. | | | | Q, | TY | |
|------|-------------|--------------------------|---|-----|----|---------|
| N.º | PART Nº | DESCRIPTION | | С | ٧ | REMARKS |
| | | | | | | |
| 36 | 95732-67A50 | PIPE, LIQUID | | 1. | 1 | |
| 37 | 95526-50G10 | .SWITCH, DUAL PRESSURE | • | 1 | 1 | |
| 38 | 95891-50G00 | .O RING | | 2 | 2 | |
| 39 | 01580-06253 | BOLT | | 2 | 2 | |
| 40 | 09403-08406 | CLAMP | | 1 | 1 | |
| 41 | 95400-67A50 | UNIT, EVAPORATOR | | 1 | 1 | |
| 42 | 95779-60A50 | CLAMP, EVAPORATOR | | 1 | 1 | |
| 43 | 95491-60A50 | HOSE, DRAIN | | 1 | 1 | |
| 44 | 01550-06123 | BOLT | | 2 | 2 | |
| 45 | 08316-10083 | NUT | | 1 | 1 | |
| 46 | 74813-82000 | GROMMET, SUCTION PIPE | | 1 | 1 | |
| 47 | 74814-82000 | GROMMET, LIQUID & DRAIN | | 2 | 2 | |
| 48 | 95731-67A50 | PIPE, SUCTION | | 1 | 1 | |
| 49 | 95896-50G00 | .O RING | | . 1 | 1 | |
| 50 | 09403-16410 | CLAMP | | 1 | 1 | |
| 51 | 95777-60A50 | CLAMP, SUCTION PIPE | | 2 | 2 | |
| 52 | 95773-57B50 | STAY, SUCTION PIPE CLAMP | | 1 | 1 | |
| 53 | 01550-06123 | BOLT | | 2 | 2 | |
| 54 | 95765-83000 | INSULATOR, RADIATOR | | 1 | 1 | |
| 55 | 95710-67A50 | HOSE, SUCTION | | 1 | 1 | |
| 56 | 95896-50G00 | .O RING | | 2 | 2 | |
| 57 | 95955-72B00 | LABEL, REFRIGERANT | | 1 | 1 | |

FIG. 200

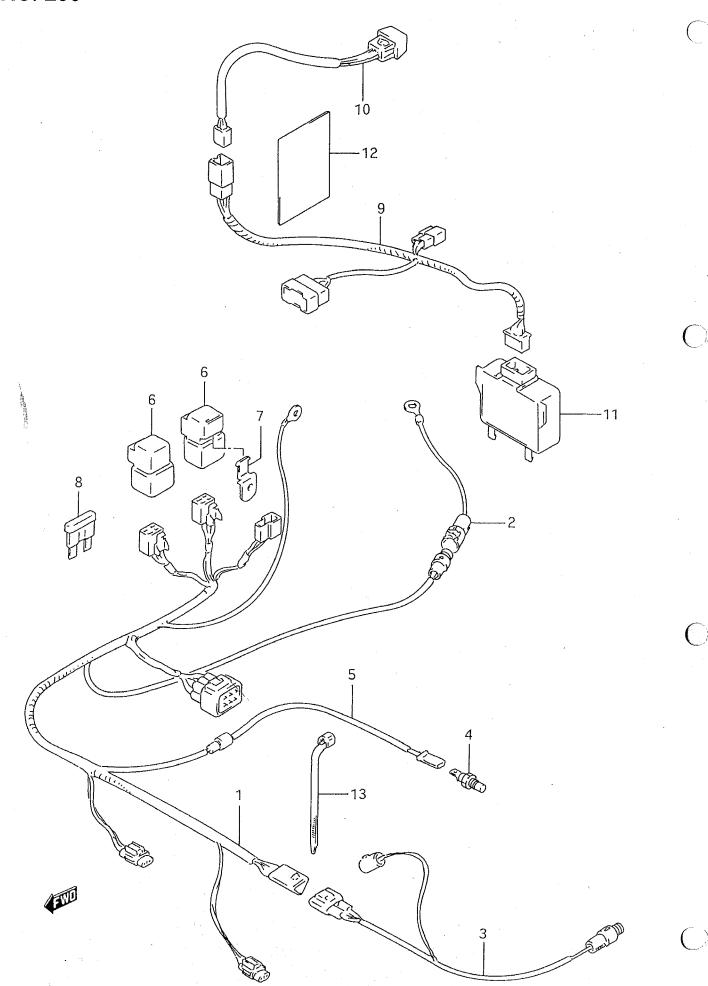

| REF. | | | Q, TY | | s | |
|-------|---------------------|---------------------------|-------|---------|---------|--|
| N.º | PART Nº DESCRIPTION | С | V | REMARKS | | |
| | | | | | | |
| 1 - 1 | 95584-67A50 | HARNESS, ENGINE ROOM | 1 | 1 | 2 VALVE | |
| 1-2 | 95531-59B51 | HARNESS, ENGINE ROOM | 1 | 1 | 4 VALVE | |
| 2 | 95585-60A50 | LINK, FUSIBLE | 1 | 1 | 2 VALVE | |
| 3 | 95583-67A50 | HARNESS, AIR CON JOINT | 1 | 1 | 4 VALVE | |
| 4 | 95573-60A50 | SWITCH, WATER TEMPERATURE | 1 | 1 | | |
| 5 | 95534-77E00 | HARNESS, WATER TEMP JOINT | 1 | 1 | 4 VALVE | |
| 6-1 | 95576-73A00 | RELAY | 2 | 2 | 2 VALVE | |
| 6-2 | 38860-72G00 | RELAY | 2 | 2 | 4 VALVE | |
| 7 | 95981-60A50 | BRACKET, FUSE | 1 | 1 | 2 VALVE | |
| 8 | 09481-25103 | FUSE | 1 | 1 | 4 VALVE | |
| 9 | 95581-60A51 | HARNESS, INNER | 1 | 1 | | |
| 10 | 95571-60A50 | SWITCH, AIR CON | 1 | 1 | | |
| 11 | 95575-60A50 | CONTROLLER ASSY | 1 | 1 | | |
| 12 | 36930-82000 | COVER, HARNESS | 1 | 1 | | |
| 13-1 | 09407-14403 | CLAMP, COMPRESSOR HARNESS | 1 | 1 | 2 VALVE | |
| 13-2 | 09407-14403 | CLAMP, COMPRESSOR HARNESS | 3 | 3 | 4 VALVE | |

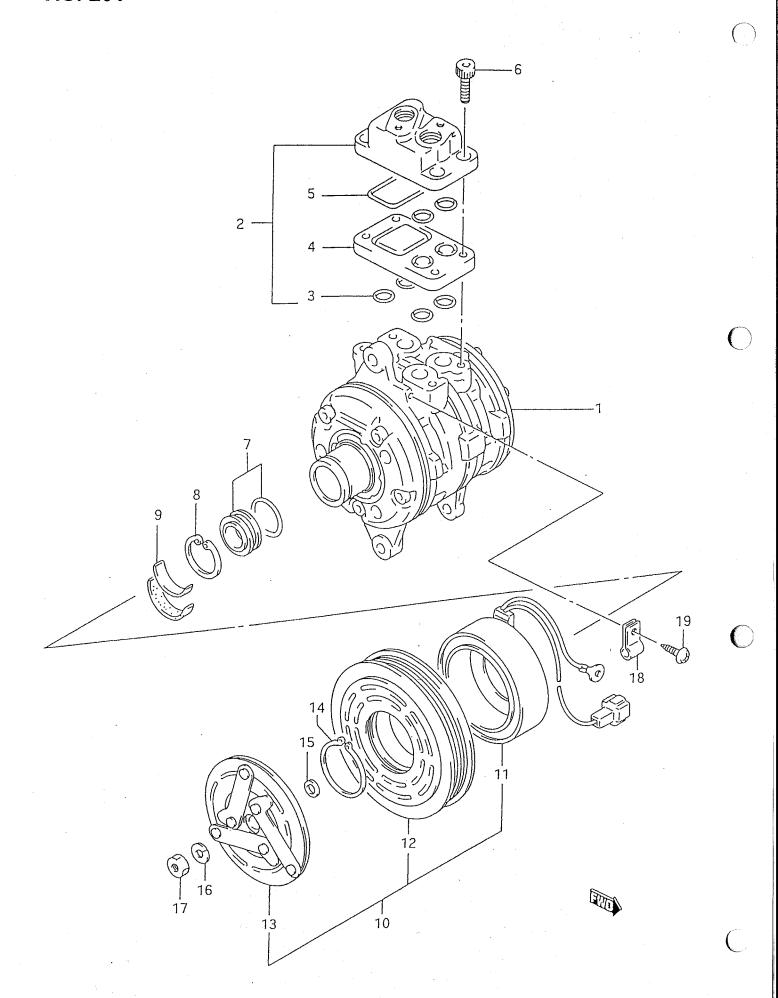

| REF. | | | Q, | TY | |
|-------|-------------|--------------------------------|----|----|-----------------|
| N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS |
| 00000 | 95200-67A50 | COMPRESSOR & MAGNET CLUTCH | | | 3DR |
| 00000 | 95200-67A60 | COMPRESSOR & MAGNET CLUTCH | ٠. | | 5DR |
| 1 | 95230-82117 | .COMPRESSOR | 1 | 1 | JDK |
| 2 | 95251-82116 | CONNECTOR, JOINT SERVICE | 1 | 1 | |
| 3 | 95254-82000 | SEAL | 6 | 6 | |
| 4 | 95258-82010 | DIFFUSER | 1 | 1 | |
| 5 | 95259-82001 | SEAL, DIFFUSER | 1 | 1 | |
| 6 | 07130-08253 | BOLT | 4 | 4 | |
| 7 | 95260-82002 | SEAL ASSY, LIP | 1 | 1 | |
| 8 | 08331-41303 | CIRCLIP, MECHANICAL SEAL | 1 | 1 | |
| 9 | 95271-82000 | FELT, OIL | 1 | 1 | |
| 10-1 | 95210-64A51 | .CLUTCH ASSY, MAGNET | 1 | 1 | 3DR |
| 10-2 | 95210-60A51 | .CLUTCH ASSY, MAGNET | - | 1 | 5DR |
| 11 | 95213-60A51 | COIL, MAGNET CLUTCH | 1 | 1 | |
| 12-1 | 95212-64A51 | CLUTCH, COMPRESSOR DRIVE | 1 | 1 | 3DR |
| 12-2 | 95212-60A51 | CLUTCH, COMPRESSOR DRIVE | - | 1 | 5DR |
| 13 | 95211-82000 | PLATE, COMPRESSOR DRIVE CLUTCH | 1 | 1 | |
| 14 | 08331-31383 | .CIRCLIP, BEARING | 1 | 1 | |
| 15 | 95216-82000 | .WASHER, PLATE | AR | AR | |
| 16 | 08321-01083 | .LOCK WASHER | 1 | 1 | |
| 17 | 08310-00083 | .NUT, CLUTCH | 1 | 1 | |
| 18 | 95215-82000 | .CLAMP, HARNESS | 1 | 1 | |
| 19 | 03141-05083 | .SCREW, CLAMP | 1 | 1 | |
| 20 | 95299-82006 | Gasket ket, overhaul | 1 | 1 | NOT ILLUSTRATED |

FIG. 202



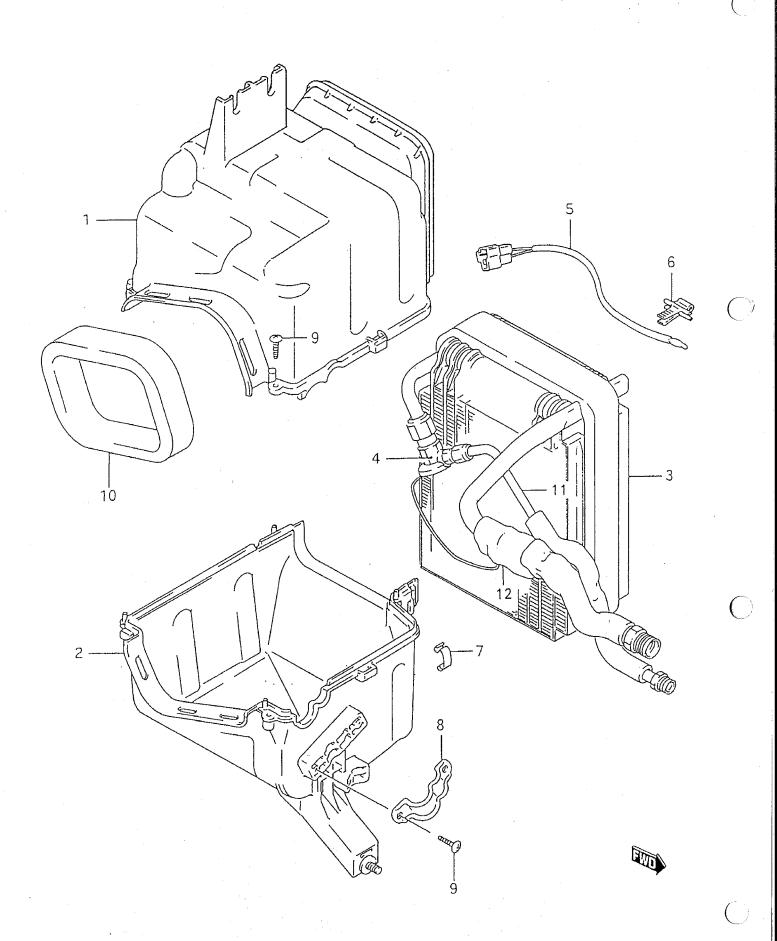


FIG. 202 (2-K-07) EVAPORATOR UNIT (LHD)


| REF. | PART Nº | 「N° DESCRIPTION | Q, | TY | DELLA DICO |
|------|-------------|-------------------------|----|----|------------|
| N.º | PARITY | DESCRIPTION | C | ٧ | REMARKS |
| | | | | | |
| | 95400-67A50 | UNIT, EVAPORATR | | | |
| 1 | 95421-60A51 | .CASE, EVAPORATOR UPPER | 1 | 1 | |
| 2 | 95422-60A50 | .CASE, EVAPORATOR LOWER | 1 | 1 | |
| 3 | 95410-67A50 | .CORE, EVAPORATOR | 1 | 1 | |
| 4 | 95431-67A50 | .VALVE, EXPANSION | 1 | 1 | |
| 5 | 95461-63B70 | .THERMISTOR | 1 | 1 | |
| 6 | 95452-50F01 | .CLAMP, THERMISTOR | 1 | 1 | |
| 7 | 74133-82000 | .CLAMP, CASE | 5 | 5 | |
| 8 | 95471-60A50 | .CLAMP, PIPE | 1 | 1 | |
| 9 | 03112-04163 | .SCREW | 3 | 3 | |
| 10 | 95481-60A50 | .PACKING | 1 | 1 | |
| 11 | 95739-67A50 | .Tube, Liquid | 1 | 1 | |
| 12 | 36930-82000 | .COVER | 1 | 1 | |

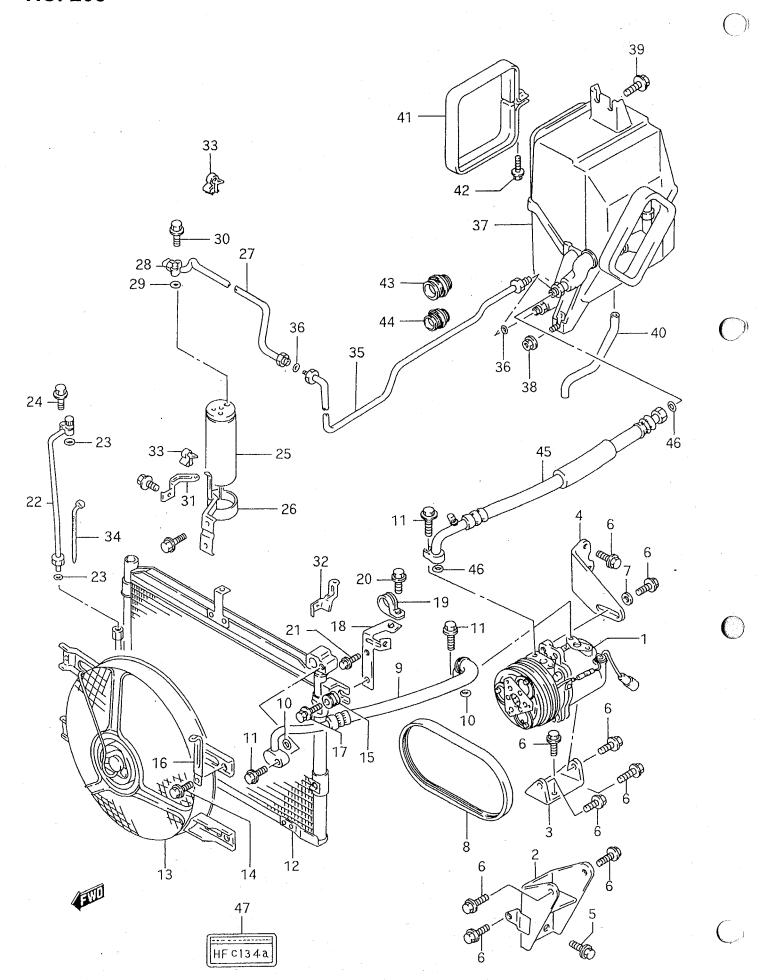

| REF. | | | Q, | TY | | |
|---------|-------------|----------------------------|----|------------|-------------|--|
| N.º | PART Nº | DESCRIPTION | С | ٧ | REMARKS | |
| | | | | | | |
| 00000 | 95000-66A01 | AIR CONDITIONER SET | | | 2 VALVE | |
| 00000 | 95000-68A00 | AIR CONDITIONER SET | | | 3DR:4 VALVE | |
| 00000 | 95000-58B00 | AIR CONDITIONER SET | | | 5DR | |
| 1 | 95200-70CB0 | COMPRESSOR & MAGNET CLUTCH | 1 | 1 | | |
| 2 | 95110-56B00 | BRACKET, COMPRESSOR | 1 | 1 | N/POWER | |
| | | | | | STEERING | |
| 3 | 95130-57B10 | BRACKET, COMPRESSOR | 1 | 1 | W/POWER | |
| | | | | | STEERING | |
| 4-1 | 95112-60A00 | STAY, COMPRESSOR | 1 | 1 | 2 VALVE | |
| 4-2 | 95120-57B00 | STAY, COMPRESSOR | 1 | 1 | 4 VALVE | |
| 5 | 09103-10209 | BOLT, BRACKET | 2 | ³ 2 | | |
| 6-1 | 01550-08203 | BOLT | 6 | 6 | 2 VALVE | |
| | | | | | N/POWER | |
| | | | | | STEERING | |
| 6-2 | 01550-08203 | BOLT | 8 | 8 | 2 VALVE | |
| | | | | | W/POWER | |
| | | | | | STEERING | |
| 6-3 | 01550-08203 | BOLT | 9 | 9 | 4 VALVE | |
| 7-1 | 09160-08093 | WASHER | 1 | 1 | 2 VALVE | |
| 7-2 | 09160-08093 | WASHER | 2 | 2 | 4 VALVE | |
| 8-1 | 95141-60G50 | V BELT (4PK840) | 1 | 1 | N/POWER | |
| | | · | | | STEERING | |
| 8-2 | 49180-60B10 | V BELT (4PK950) | 1 | 1 | W/POWER | |
| | | | | | STEERING | |
| 9-1 | 95720-67A00 | HOSE, DISCHARGE | 1 | 1 | 2 VALVE | |
| 9-2 | 95720-68A00 | HOSE, DISCHARGE | 1 | 1 | 4 VALVE | |
| 10 | 95895-50G00 | O RING | 2 | 2 | , | |
| 11 | 01550-06253 | BOLT | 3 | 3 | • | |
| | 0,000 00200 | | _ | • | | |

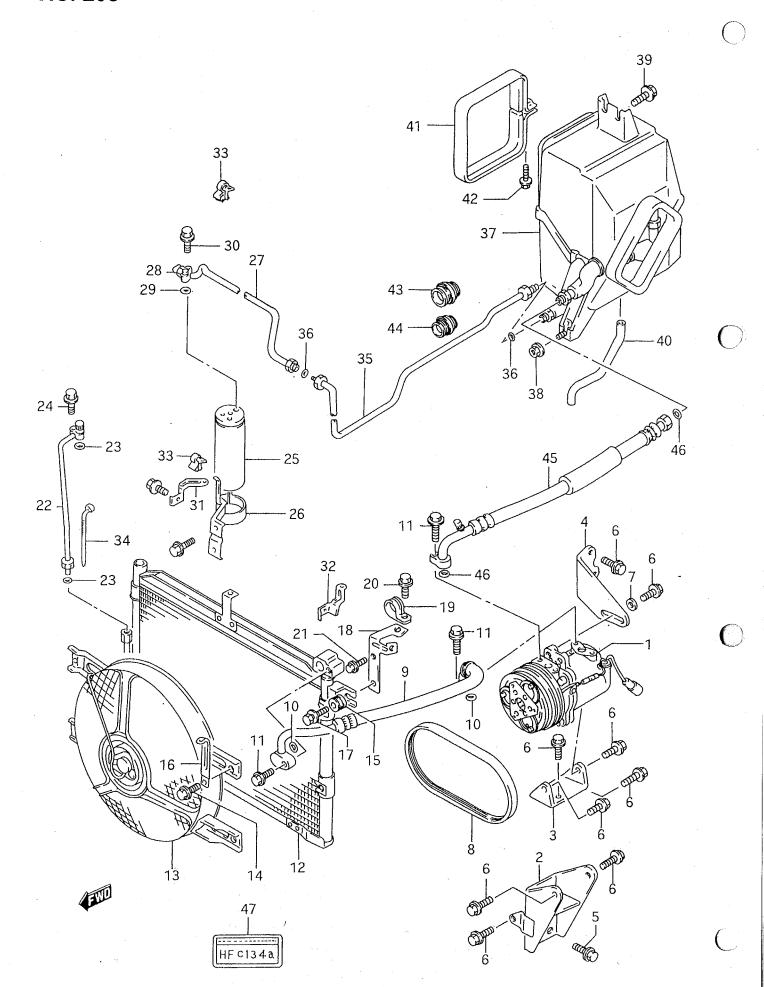


| REF. | | | Q, TY | | | |
|---------------|-------------|----------------------------|-------|----|---------|--|
| N.º | PART Nº | DESCRIPTION | C | ٧ | REMARKS | |
| | | | | | | |
| 12-1 | 95310-67A01 | CONDENSER | 1. | 1. | 3DR | |
| 12-2 | 95310-58B00 | CONDENSER | - | 1 | 5DR | |
| 13-1 | 95320-55X51 | FAN ASSY | 1 | 1 | 3DR | |
| 13-2 | 95320-57B51 | FAN ASSY | - | 1 | 5DR | |
| 14-1 | 01550-06103 | BOLT | 4 | 4 | 3DR | |
| 14-2 | 01550-06123 | BOLT | - | 4 | 5DR | |
| 15 | 95920-86400 | BUSH | - | 2 | 5DR | |
| 16-1 | 09404-06431 | CLAMP | 2 | 2 | 3DR | |
| 16-2 | 09404-06431 | CLAMP | - | 1 | 5DR | |
| 1 <i>7-</i> 1 | 01550-06123 | BOLT | 4 | 4 | 3DR | |
| 17-2 | 01550-06303 | BOLT | - | 2 | 5DR | |
| 18-1 | 95772-60A00 | STAY, HOSE CLAMP | 1 | 1 | 2 VALVE | |
| 18-2 | 95772-57B01 | STAY, HOSE CLAMP | 1 | 1 | 4 VALVE | |
| 19 | 95772-70C51 | CLAMP, DISCHARGE HOSE | 1 | 1 | | |
| 20 | 01550-06163 | BOLT | 1 | 1 | | |
| 21 | 01550-06123 | BOLT | 1 | 1 | | |
| 22 | 95733-67A00 | PIPE, RECEIVER DRYER INLET | 1 | 1 | | |
| 23 | 95891-50G00 | .O RING | 2 | 2 | | |
| 24 | 01550-06203 | BOLT | 1 | 1 | | |
| 25 | 95330-72B00 | RECEIVER DRYER | 1 | 1 | | |
| 26 | 95930-67A00 | BRACKET | 1 | 1 | | |
| 27 | 95734-67A00 | PIPE, RECEIVER OUTLET | 1 | 1 | | |
| 28 | 95526-50G10 | .SWITCH, DUAL PRESSURE | 1 | 1 | | |
| 29 | 95891-50G00 | .O RING | 1 | 1 | | |
| 30 | 01550-06353 | BOLT | 1 | 1 | | |

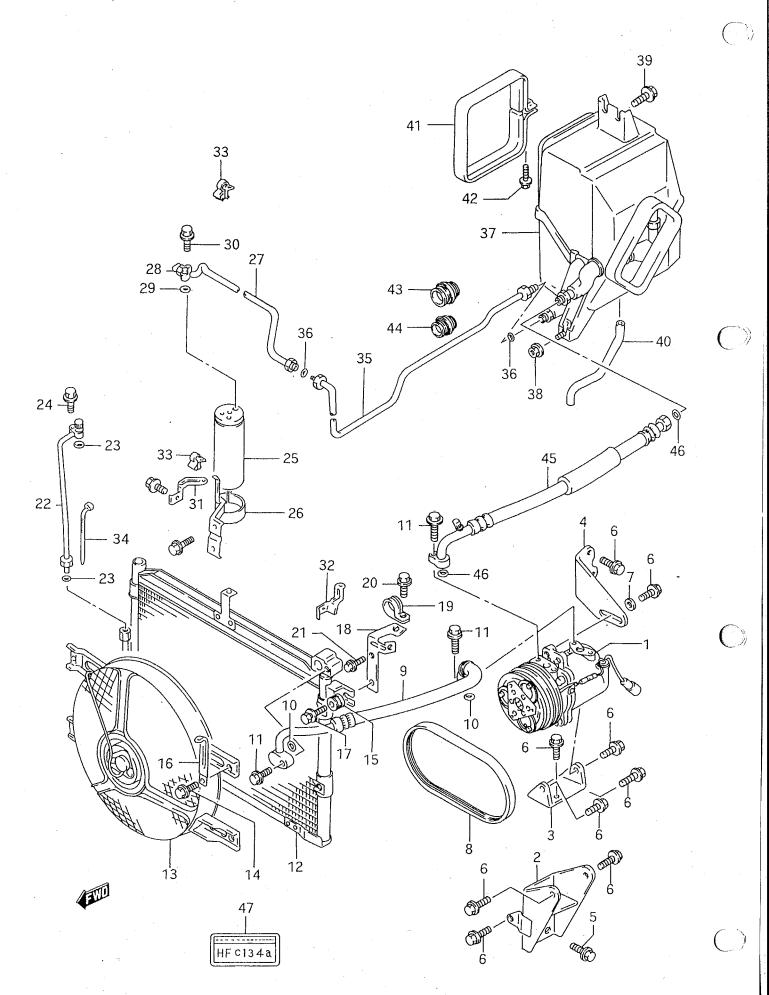

| REF. | DA DT. NIº | Q, | TY | | |
|------------|-------------|--------------------------------|-----|---|---------|
| N.º | PART Nº | DESCRIPTION | . C | ٧ | REMARKS |
| | | | | | · |
| 31 | 95781-60A00 | STAY, RECEIVER OUTLET PIPE RH | . 1 | 1 | |
| 32 | 95782-60A00 | STAY, RECEIVER OUTLET PIPE LH | 1 | 1 | |
| 33 | 09403-08406 | CLAMP | 3 | 3 | |
| 34 | 09407-14403 | CLAMP, RADIATOR RESERVOIR HOSE | 1 | 1 | 4 VALVE |
| 35 | 95732-67A01 | PIPE, EVAPORATOR INLET | 1 | 1 | |
| 36 | 95891-50G00 | .O RING | 2 | 2 | |
| 3 <i>7</i> | 95400-67A00 | UNIT, COOLING | 1 | 1 | |
| 38 | 08316-10083 | NUT | . 1 | 1 | |
| 39 | 01550-06123 | BOLT | 2 | 2 | - |
| 40 | 95480-67A00 | HOSE, DRAIN | 1 | 1 | |
| 41 | 95779-60A00 | CLAMP, EVAPORATOR | 1 | 1 | |
| 42 | 02112-35303 | SCREW | 1 | 1 | |
| 43 | 74813-82000 | GROMMET | 1. | 1 | |
| 44 | 74814-82000 | GROMMET | 2 | 2 | |
| 45 | 95710-67A00 | HOSE, SUCTION | 1 | 1 | |
| 46 | 95896-50G00 | .O RING | 2 | 2 | |
| 47 | 95955-72B00 | LABEL, REFRIGERANT | 1 | 1 | |
| | | | | | |

FIG. 204

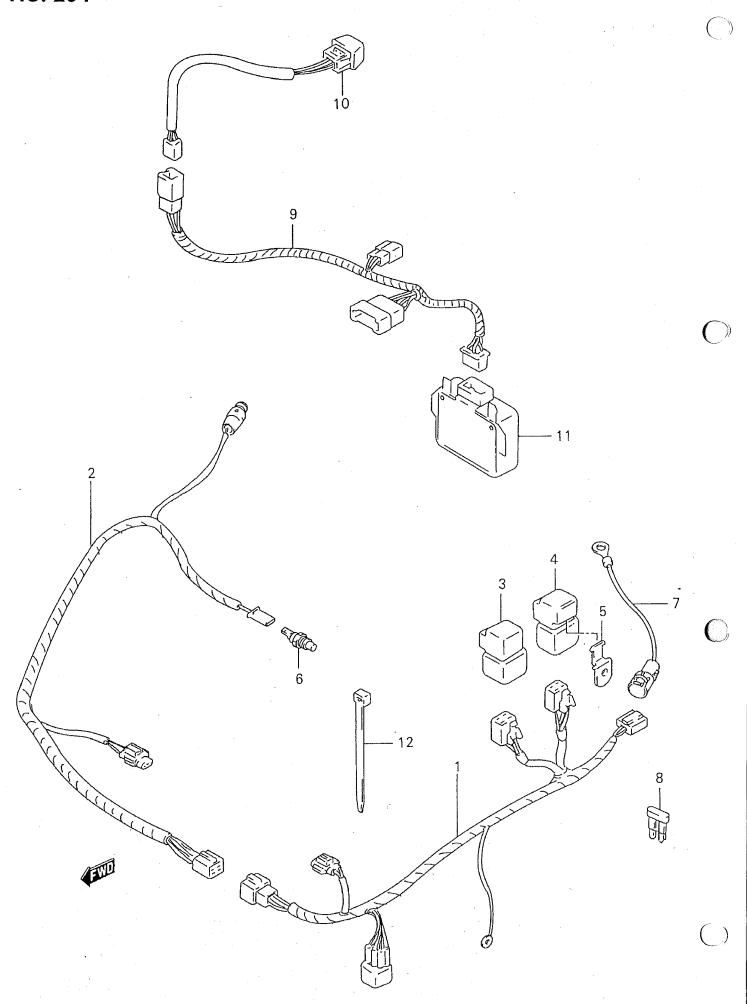

| REF. N.º | PART Nº | DESCRIPTION | Q, TY | | |
|-------------|-------------|-------------------------------|-------|----|-------------|
| | | | С | V | REMARKS |
| | | | | | |
| 1 -1 | 95584-67A00 | HARNESS, ENGINE ROOM | 1 | 1 | 2 VALVE |
| 1-2 | 95531-59B00 | HARNESS, ENGINE ROOM NO.1 | ,1 | 1 | 4 VALVE |
| 2-1 | 95533-68A00 | HARNESS, ENGINE ROOM NO.2 | 1 | 1 | 3DR:4 VALVE |
| 2-2 | 95533-59B00 | HARNESS, ENGINE ROOM NO.2 | - | 1 | 5DR |
| 3 | 95576-73A00 | RELAY, CONDENSER COOLING FAN | 7 | .1 | 2 VALVE |
| 4-1 | 38860-72G00 | RELAY, COMPRESSOR | 7 | 1 | 2 VALVE |
| 4-2 | 38860-72G00 | RELAY, COMPRESSOR | 2 | 2 | 4 VALVE |
| 5 | 95981-73A00 | BRACKET, FUSE | 1 | 1 | 2 VALVE |
| 6 | 34850-50A00 | GAUGE ASSY, WATER TEMPERATURE | 1 | 1 | |
| 7 | 95585-60A00 | FUSIBLE LINK | 1 | 1 | 2 VALVE |
| 8-1 | 09481-15101 | FUSE (15A) | 1 | 1 | 3DR:4 VALVE |
| 8-2 | 09481-25103 | FUSE (25A) | - | 1 | 5DR |
| 9 | 95581-60A12 | HARNESS, INNER | 1 | 1 | |
| 10 | 95571-86400 | SWITCH, AIR CON | 1 | 1 | |
| 11 | 95575-60A11 | CONTROLLER ASSY | 1 | 1 | |
| 12 | 09407-14403 | CLAMP | 3 | 3 | |


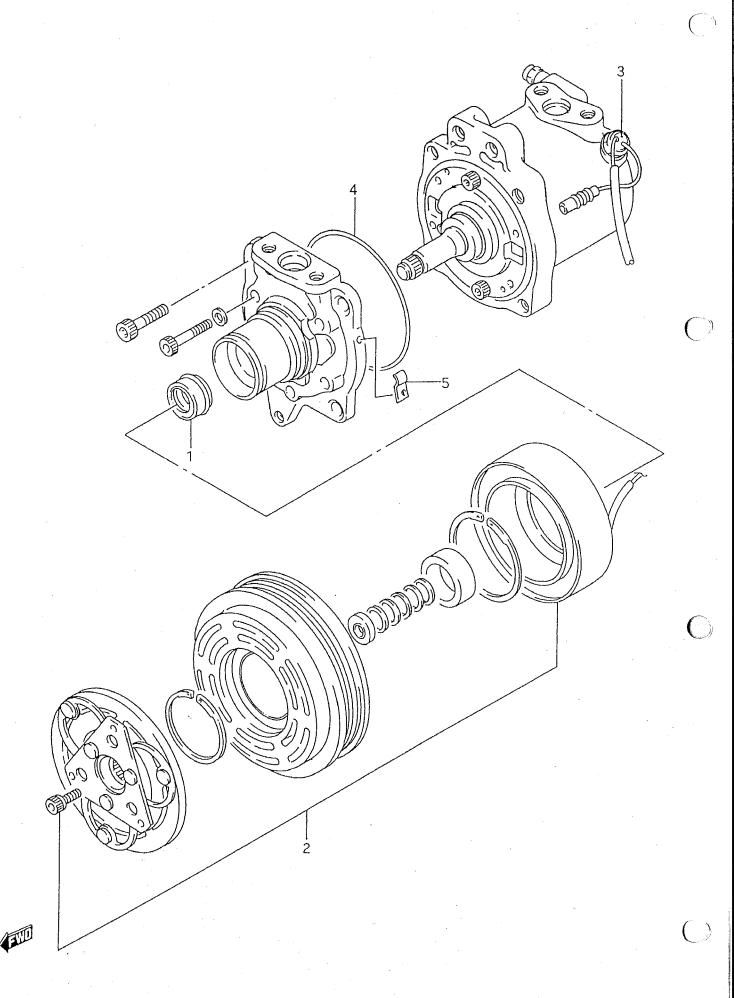


FIG. 205 (2-K-12) COMPRESSOR (RHD

| REF. N.º | PART Nº | DESCRIPTION | Q, TY | | |
|-------------|-------------|--------------------------------|-------|---|---------|
| | | | С | ٧ | REMARKS |
| | | | | | · |
| 00000 | 95200-70CB0 | COMPRESSOR & MAGNET CLUTCH | | | |
| 1 | 95261-70B00 | .SEAL, LIP TYPE | 1 | 1 | |
| 2 | 95210-64A02 | .CLUTCH, MAGNET | 1 | 1 | |
| 3 | 95527-70CA0 | .PROTECTOR, THERMAL | 1 | 1 | |
| 4 | 95262-70B00 | .O RING | 1 | 1 | |
| 5 | 95291-70B00 | .CLAMP, THERMAL PROTECTOR WIRE | 1 | 1 | |

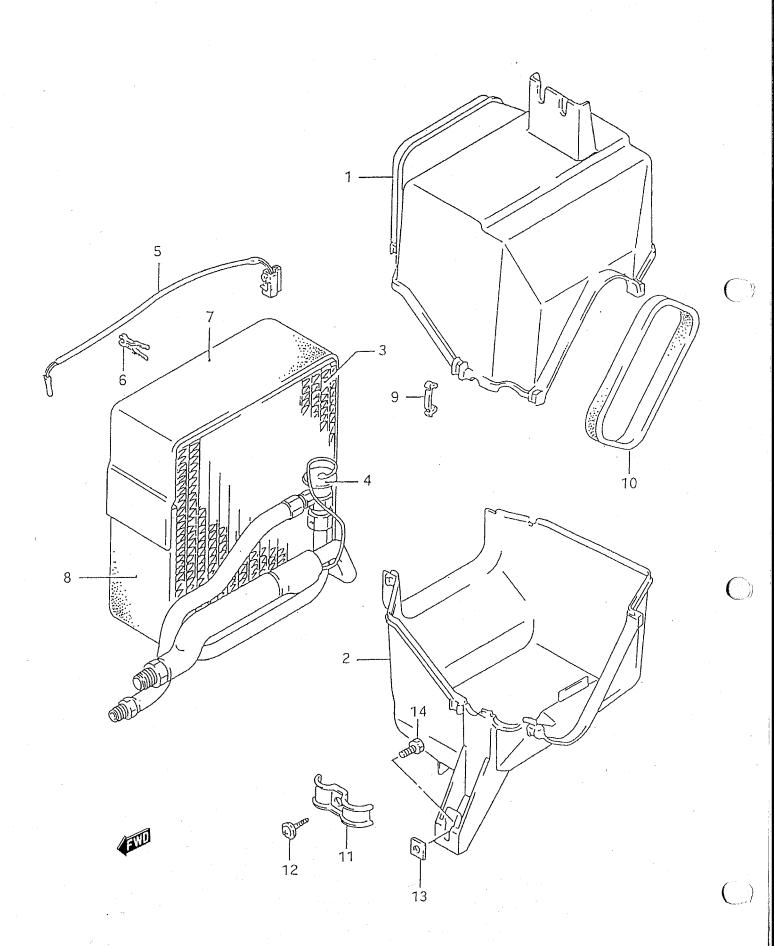

| REF. N.º | PART Nº | DESCRIPTION | Q, TY | • | |
|-------------|-------------|---------------------------|-------|---------|--|
| | | | CV | REMARKS | |
| | | | | | |
| 00000 | 95400-67A00 | UNIT, EVAPORATOR | | | |
| 1 | 95421-60A01 | .CASE, EVAPORATOR UPPER | 1 1 | | |
| 2 | 95422-60A01 | .CASE, EVAPORATOR LOWER | 1 1 | | |
| 3 | 95410-67A00 | .CORE, EVAPORATOR | 1 1 | | |
| 4 | 95431-70C50 | VALVE, EXPANSION | 1 1 | | |
| 5 | 95451-78041 | .THERMISTOR, EVAPORATOR | 1 1 | | |
| 6 | 95452-50F01 | .CLAMP, THERMISTOR | 1 1 | • | |
| 7 | 95463-60B50 | .PACKING, CORE UPPER | 1 1 | | |
| 8 | 95481-60A00 | .PACKING, EVAPORATOR | 1 1 | | |
| 9 | 74316-85500 | .CLAMP | 6 6 | | |
| 10 | 95482-60A00 | .PACKING, EVAPORATOR CASE | 1 1. | | |
| 11 | 95771-60A00 | .CLAMP, EVAPORATOR PIPE | 1 1 . | | |
| 12 | 03541-05103 | .SCREW | 1 1 | | |
| 13 | 74172-80000 | .PAD | 1 1 | | |
| 14 | 01500-08163 | .BOLT | 1 1 | | |